10-3930-231-35 P

TM 10-3930-231-35P

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

TRUCK, LIFT, FORK, GASOLINE, SOLID RUBBER TIRES, 4,000 LBS CAPACITY, 100/144 IN. LIFT

(ARMY MODEL MHE 184, CLARK MODEL C40B-1615158-100) FSN 3930-954-9311

(CLARK MODEL C40B-1615159-144)

FSN 3930-954-1303

HEADQUARTERS, DEPARTMENT OF THE ARMY

SEPTEMBER 1969

D 101. 11: 242-451

TECHNICAL MANUAL
No. 10-3930-231-35P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 26 *September* 1969

DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

TRUCK, LIFT, FORK, GASOLINE, SOLID RUBBER TIRES, 4,000 LBS CAPACITY, 100/144 IN. LIFT (ARMY MODEL MHE 184, CLARK MODEL C40B-1615158-100) FSN 3930-954-9311 (CLARK MODEL C40B-1615159-144) FSN 3930-954-1303

Current as of 5 August 1969

Paragraph Page

SECTION I. INTRODUCTION
Scope ..... 1 v
General ..... 2 v
Explanation of columns ..... 3 v
Special information ..... 4 vi
How to locate repair parts ..... 5 vi
Abbreviations ..... 6 vii
Federal supply codes for manufacturers ..... 7 vii
Recommendations for maintenance manual improvements ..... 8 viii

II. REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE
Group 01. Engine
0100 Engine assembly 1
0101 Crankcase, block, cylinder head 4
0102 Crankshaft 5
0103 Flywheel assembly 6
0104 Pistons, connecting rods 7
0105 Valves, camshafts and timing system 8
0106 Engine lubrication system 12
0108 Manifolds 15
03. Fuel System
0301 Carburetor 15
0302 Fuel pumps 19
0304 Air cleaner 21
0306 Tanks, lines, fitting, headers 22
0308 Engine speed governor and controls 23
0309 Fuel filters 25
0312 Accelerator, throttle or choke controls 25
04. Exhaust System
0401 Muffler and pipes 27

---

*This manual together with TM 10-3930-231-20P, 26 September 1969, supersedes TM 10-3930-231-35P, 26 March 1965, including C1, 10 October 1966.

342-

Group 05. Cooling System Page

0501 Radiator, evaporative cooler, or heat exchanger 28
0503 Water manifold, headers, thermostats and housing gasket 29
0504 Water pump 30
0505 Fan assembly 30

06. Electrical System

0601 Generator 31
0602 Generator regulator 35
0603 Starting motor 35
0605 Ignition components 38
0607 Instrument or engine control panel 40
0608 Miscellaneous items 41
0609 Lights 41
0610 Sending units and warning switches 42
0611 Horn 43
0612 Batteries, storage 44
0615 Radio interference suppression 45

07. Transmission

0708 Torque converter 45
0710 Transmission assembly 46
0714 Servo unit 56
0721 Coolers, pumps, motors 59

10. Front Axle

1000 Front axle assembly 63
1002 Differential 63
1003 Planetary or final drive 66

11. Rear Axle

1104 Steering, side shift and wheel leaning mechanism 66

12. Brakes

1201 Handbrakes 68
1202 Service brakes 68
1204 Hydraulic brake system 70
1206 Mechanical brake system 73

13. Wheels and Tracks

1311 Wheel assembly 74
1313 Tires, tubes 76

14. Steering

1401 Steering assembly 76
1410 Hydraulic pump assembly 81
1411 Hoses, lines, fittings 83
1412 Hydraulic cylinder 84

15. Frame, Towing Attachments and Drawbars

1501 Frame assembly 86
1502 Counterweights 87

18. Body, Cab, Hood and Hull

1806 Upholstery seats and carpets 88

24. Hydraulic Lift Components

2401 Hydraulic pump 88
2402 Hydraulic control valve 90
2403 Hydraulic control levers and linkage 94
2404 Hydraulic tilt cylinder and tilt crank 94
2405 Hydraulic mast column 97
2406 Hydraulic lines and fittings 102

76. Firefighting Equipment Components

7603 Fire Extinguishers 109

95. General Use Standardized Parts

9501 Bulk material 109

Page
Group 99. Parts Peculiar
9901 Parts peculiar with more than one application 110
SECTION III. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR DS, GS, AND DEPOT MAINTENANCE
Group 26. Tools and Test Equipment
2604 Special tools 112
SECTION IV. FEDERAL STOCK NUMBER AND REFERENCE NUMBER INDEX

SECTION I
INTRODUCTION

1. Scope

This manual lists repair parts and special tools required for the performance of direct support, general support, and depot maintenance of the forklift.

2. General

a. The repair parts list is arranged as follows:

(1) Individual parts and major assemblies are listed alphabetically by item name within the numbered functional groups.

(2) Assembly components and subassemblies are indented and listed alphabetically by item name under major assemblies.

b. This repair parts and special tools list is divided into the following sections:

(1) *Repair Parts—Section II.* A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level.

(2) *Special Tools, Test and Support Equipment—Section III.* A list of special tools, test support equipment authorized for the performance of maintenance at the direct support, general support, and depot level.

(3) *Federal Stock Number and Reference Number Index—Section IV.* A list of Federal stock numbers followed by reference numbers in ascending alphanumeric sequence cross-referenced to index number.

3. Explanation of Columns

The following provides an explanation of columns in the tabular lists in sections II and III:

a. Source, Maintenance, and Recoverability Codes (SMR), Column (1).

(1) Source Code, indicates the selection status and source for the listed item. Source codes used are:

Code	*Explanation*
P	Applied to repair parts which are stocked in or supplied from DSA/GSA or Army supply system, and authorized for use at indicated maintenance categories.
M	Applied to repair parts which are not procured or stocked but are to be manufactured at indicated maintenance categories.
A	Applied to assemblies which are not procured or stocked as such but made up of two or more units, each of which carry individual stock numbers and descriptions and are procured and stocked and can be assembled by units at indicated maintenance categories.
X	Applied to parts and assemblies which are not procured or stocked, the mortality of which is normally below that of the applicable end item, and the failure of which should result in retirement of the end item from the supply system.
X1	Applied to repair parts which are not procured or stocked, the requirement for which will be supplied by use of the next higher assembly or components.
X2	Applied to repair parts which are not stocked. The indicated maintenance category requiring such repair parts will attempt to obtain them through cannibalization; if not obtainable through cannibalization, such repair parts will be requisitioned with supporting justification through normal supply channels.
G	Applied to major assemblies that are procured with PEMA (Procurement Equipment Missile Army) funds for initial issue only, to be used as exchange assemblies at DSU and GSU maintenance level. These assemblies will not be stocked above DSU and GSU level or returned to depot supply level.

Note: Source code is not shown on common hardware items known to be readily available in Army supply channels and through local procurement.

(2) Maintenance Code, indicates the lowest category of maintenance authorized to install the listed item. The maintenance level codes are:

Code	*Explanation*
O	Organizational maintenance
F	Direct support maintenance
H	General support maintenance
D	Depot maintenance

(3) Recoverability Code, indicates whether unserviceable items should be returned for recovery or salvage. Items not coded are expendable. Recoverability codes are:

Code	*Explanation*
R	Applied to repair parts and assemblies which are economically repairable at DSU and GSU activities and normally are furnished by supply on an exchange basis.

Code	*Explanation*
T	Applied to high dollar value recoverable repair parts which are subject to special handling and are issued on an exchange basis. Such repair parts normally are repaired or overhauled at depot maintenance activities.
U	Applied to repair parts specifically selected for salvage by reclamation units because of precious metal content, critical materials, high dollar value reusable casings or castings.

(4) This column also lists, below the SMR code, an index number for each item in ascending numerical sequence, which is used to locate items in the publication when the Federal stock number and/or reference number is known.

b. Federal Stock Number, Column (2). This column indicates the Federal stock number for the item.

c. Description, Column (3). This column indicates the Federal item name and any additional description of the item required. A part number or other reference number is followed by the applicable five-digit Federal supply code for manufacturers, in parentheses. Material required for manufacture or fabrication is identified.

d. Unit of Issue, Column (4). This column indicates the unit used as a basis for issue; e.g., ea, pr, ft, yd, etc.

e. Quantity Incorporated in Unit Pack, Column (5). This column indicates the actual quantity contained in the unit pack.

f. Quantity Incorporated in Unit, Column (6). This column indicates the quantity of the item used in the functional group.

g. Thirty-Day DS/GS Maintenance Allowances, Columns (7) *and* (8).

(1) The allowance columns are divided into three subcolumns. Indicated in each subcolumn is the quantity of items authorized for the number of equipments supported. Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.

(2) The quantitative allowances for DS/GS levels of maintenance will represent initial stockage for a 30-day period for the number of equipments supported.

(3) Determination of the total quantity of parts required for maintenance of more than 100 of these equipments can be accomplished by converting the equipment quantity to a decimal factor by placing a decimal point before the next to last digit of the number to indicate hundredths, and multiplying the decimal factor by the parts quantity authorized in the 51-100 allowance column. Example, authorized allowance for 51-100 equipments is 40; for 150 equipments, multiply 40 by 1.50 or 60 parts required.

h. One-Year Allowances Per 100 *Equipments/Contingency Planning Purposes, Column* (9). This column indicates the quantity required for distribution and contingency planning purposes. The range of items indicates total quantities of all authorized items required to provide for adequate support of 100 equipments for one year.

i. Depot Maintenance Allowance Per 100 *Equipments, Column* (10). This column indicates the quantity authorized for depot maintenance of 100 equipments. Items authorized for use but not for initial stockage are identified with an asterisk in the allowance column.

j. Illustration, Column (11).

(1) *Figure number, column* (11)*(a)*. Indicates the figure number of the illustration in which the item is shown.

(2) *Item number, Column* (11)*(b)*. Indicates the callout number used to reference the item in the illustration.

4. Special Information

a. Repair parts mortality has been based on 3,000 hours of operation per year.

b. Parts which require manufacture or assembly at a category higher than that authorized for installation will indicate in the source column the higher category.

c. The following publications pertain to the forklift and its components:

TM 10-3930-231-10	Operator's Manual.
TM 10-3930-231-20	Organizational Maintenance Manual.
TM 10-3930-321-20P	Organizational Maintenance Repair Parts and Special Tool Lists.
TM 10-3930-231-35	Field and Depot Maintenance Manual.
LO 10-3930-231-20-1	Lubrication Order.

5. How to Locate Repair Parts

a. When Federal stock number or reference number is unknown:

(1) *First.* Using the table of contents, determine the functional group within which the repair parts belongs.

(2) *Second.* Find the illustration covering the functional group to which the repair part belongs.

(3) *Third.* Identify the repair part on the illustration, and note the illustration figure and item number of the repair part.

(4) *Fourth.* Using the Repair Parts Listing, find the functional group to which the repair part belongs and locate the illustration figure and item number noted on the illustration.

b. When Federal stock number or reference number is known:

(1) *First.* Using the Index of Federal Stock Numbers and Reference Numbers, find the pertinent Federal stock number or reference number. This index is in ascending alphanumeric sequence cross-referenced to an index number.

(2) *Second.* Using the Repair Parts Listing, find the index number referenced in the Index Stock Numbers and Reference Numbers.

6. Abbreviations

deg	degree(s)
dia	diameter(s)
ea	each
ft	feet (foot)
gpm	gallon per minute
grp	group
in.	inch (es)
lg	length (long)
lh	left-hand
mtg	mounting (s)
No.	number (s)
psi	pounds per square inch
rh	right-hand
thd	thread
uhf	ultra high frequency
w/	with

7. Federal Supply Codes for Manufacturers

Code	*Manufacturer*
00624	Aeroquip Corp., Aircraft Div. Jackson Plant
01276	Aeroquip Corp., Industrial Div.
05776	Barnes, W. F. and John Works Babcock and Wilcox Co., The Boiler Div.
08162	Bower Roller Bearing Div. of Federal-Mogul Corp.
11314	National Seal Div. of Federal-Mogul-Bower Bearing, Inc.
11583	Champion Spark Plug Co.
12204	Chrysler Corp.
12603	Clark Equipment Co.
13445	Cole-Hersee Co.
14351	Continental Motors Corp.
16764	Delco-Remy Div. of General Motors Corp.
18265	Donaldson Co., Inc.
19728	Prestolite Co., The
21335	Fafnir Bearing Co., The
24446	General Electric Co.
24455	General Electric Co. Lamp Div. of Consumer Products Group
24617	General Motors Corp.
33525	Kidde Walter and Co., Inc.
43334	New Departure-Hyatt Bearing Div. of General Motors Corp.
43991	Norma-Hoffman Bearings Corp.
45681	Parker-Hannifin Corp.
52788	Saginaw Steering Gear Div. of General Motors Corp.
53781	Sealed Power Corp.
56118	Sparton Corp.
59875	TRW, Inc., Accessories Div.
60038	Timken Roller Bearing Co.
60380	Torrington Co., The
61038	Vickers, Inc., Tulsa Products Div.
62983	Vickers, Inc., Div. of Sperry Rand Corp.
63477	Wagner Electric Corp., Wagner Div.
70040	AC Spark Plug Div. of General Motors Corp.
70355	Friction Materials Group American Brake Shoe Co.
70434	Anchor Coupling Co., Inc.
70523	Atwood Vacuum Machine Co.
71400	Bussmann Mfg. Div. of McGraw-Edison Co.
72902	Green Tweed and Co.
73370	Fram Corp.
73680	Garlock, Inc.
73842	Goodyear Tire and Rubber Co.
74400	Hobbs, John W. Corp.
75175	K. D. Lamp Div., Duplan Corp., The
75272	Kickhaefer Mfg. Co.
76062	MRC Bearing Service Co.
76700	Nelson Muffler Corp.
77060	Packard Electric Div. of General Motors Corp.
77449	Prehler Electrical Insulation Co.
77640	Ross Gear Div., Thompson Ramo Wooldridge, Inc.
77915	Sheller Mfg. Co.
78225	Stant Mfg. Co., Inc.
78422	Speaker, J. W. Corp.
78500	Rockwell-Standard Corp., Transmission and Axle Div.
79136	Waldes-Kohinoor, Inc.
79150	Victor Mfg. and Gasket Co.
79470	Weatherhead Co., The
79550	Whitaker Cable Corp.
79960	Bendix Corp., The
80201	Chicago Rawhide Mfg. Co.
80713	Anchor Coupling Co., Inc.
81321	Purolator Products, Inc.
81348	Federal Specifications Promulgated by General Services Administration
81349	Military Specifications Promulgated by Standardization Div., Directorate of Logistic Services DSA
95760	Protective Closures Co., Inc.
95953	Hyco, Inc.
96906	Military Standards Promulgated by Standardization Div. Directorate of Logistic Services DSA
98441	Stratoflex, Inc.
99879	Aeroquip Corp., Aircraft Div Elbeeco Plant

8. Recommendations for Maintenance Manual Improvements

Report of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to DA Publications) and forwarded direct to Commanding General, U. S. Army Mobility Equipment Command, ATTN: AMSME-MPP, 4300 Goodfellow Boulevard, St. Louis, Mo. 63120.

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
		SECTION II - REPAIR PARTS FOR DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE													
00001		GROUP 01 - ENGINE													
00002		0100 - ENGINE ASSEMBLY													
P F 00003	2805-073-2108	GASKET SET: engine overhaul F4162U127 (14351)	EA		1	2	2	5	2	2	5	55	100		
X1 00004	5330-358-5265	FELT, MECHANICAL PREFORMED: governor rocker shaft, dust G157S203 (14351)	EA		1				SEE	GRP	0308				
X1 00005	5330-327-4042	FELT, OIL GUARD: rear bearing (1) F400B251 (14351)	EA		0										
X1 00006	2805-362-2115	GASKET: cylinder head F400A336 (14351)	EA		1				SEE	GRP	0101				
X1 00007	2805-358-2587	GASKET END PLATE F400B427 (14351)	EA		1				SEE	GRP	0105				
P 0 00008	2910-459-6347	GASKET: fuel pump to crankcase 835683 (70040)	EA		1				SEE	GRP	0302				
X1 00009	2805-358-2568	GASKET: gear cover to front end plate F400B338 (14351)	EA		1				SEE	GRP	0105				
X1 00010	2805-383-8733	GASKET: idler stud cover F400B227 (14351)	EA		1				SEE	GRP	0105				
P 0 00011	2805-399-6935	GASKET: intake and exhaust manifold F400E303 (14351)	EA		1				SEE	GRP	0108				
X1 00012	2805-358-2569	GASKET: oil pan and filler block F400B442 (14351)	EA		2				SEE	GRP	0106				
P 0 00013	5330-199-5878	GASKET: oil pan drain plug WB108 (14351)	EA		1				SEE	GRP	0106				
X1 00014	2805-586-5175	GASKET: oil pan filler block F400B225 (14351)	EA		2				SEE	GRP	0106				
X1 00015	5330-190-4224	GASKET: oil pressure relief plug X365 (14351)	EA		1				SEE	GRP	0106				

(1) SMR CODE INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
		REFERENCE NO. & MFR. CODE / USABLE ON CODE				(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO.	(b) ITEM NO
		SECTION II - REPAIR PARTS FOR DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE													
00001		GROUP 01 - ENGINE													
00002		0100 - ENGINE ASSEMBLY													
P F 00003	2805-073-2108	GASKET SET: engine overhaul F4162U127 (14351)	EA		1	2	2	5	2	2	5	55	100		
X1 00004	5330-358-5265	FELT, MECHANICAL PREFORMED: governor rocker shaft, dust G157S203 (14351)	EA		1				SEE	GRP	0308				
X1 00005	5330-327-4042	FELT, OIL GUARD: rear bearing (1) F400B251 (14351)	EA		0										
X1 00006	2805-362-2115	GASKET: cylinder head F400A336 (14351)	EA		1				SEE	GRP	0101				
X1 00007	2805-358-2587	GASKET END PLATE F400B427 (14351)	EA		1				SEE	GRP	0105				
P O 00008	2910-459-6347	GASKET: fuel pump to crankcase 835683 (70040)	EA		1				SEE	GRP	0302				
X1 00009	2805-358-2568	GASKET: gear cover to front end plate F400B338 (14351)	EA		1				SEE	GRP	0105				
X1 00010	2805-383-8733	GASKET: idler stud cover F400B227 (14351)	EA		1				SEE	GRP	0105				
P O 00011	2805-399-6935	GASKET: intake and exhaust manifold F400E303 (14351)	EA		1				SEE	GRP	0108				
X1 00012	2805-358-2569	GASKET: oil pan and filler block F400B442 (14351)	EA		2				SEE	GRP	0106				
P O 00013	5330-199-5878	GASKET: oil pan drain plug WB108 (14351)	EA		1				SEE	GRP	0106				
X1 00014	2805-586-5175	GASKET: oil pan filler block F400B225 (14351)	EA		2				SEE	GRP	0106				
X1 00015	5330-190-4224	GASKET: oil pressure relief plug X365 (14351)	EA		1				SEE	GRP	0106				

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
X1 00016	5330-351-6356	GASKET: oil pump cover C400L231 (14351)	EA		1				SEE	GRP	0106				
X1 00017	2805-382-8691	GASKET: oil pump cover to strainer 17EL204 (14351)	EA		1				SEE	GRP	0106				
P F 00018	2590-384-0157	GASKET: pump adapter to front end plate F400V300 (14351)	EA		1				SEE	GRP	2401				
X1 00019	2805-268-8995	GASKET: valve chamber cover stud X334 (14351)	EA		2				SEE	GRP	0105				
X1 00020	2805-663-4356	GASKET: valve tappet chamber cover F124A201 (14351)	EA		1				SEE	GRP	0105				
P O 00021	2930-384-8402	GASKET: water outlet header C400K215 (14351)	EA		1				SEE	GRP	0105				
X1 00022	2930-371-5008	GASKET: water pump cover F400K399 (14351)	EA		1										
P O 00023	2930-384-8404	GASKET: water pump mounting F400K340 (14351)	EA		1				SEE	GRP	0504				
X1 00024	5330-353-8706	PACKING MATERIAL: rear bearing filler block F600B241 (14351)	EA		2				SEE	GRP	0106				
X1 00025	2805-382-8665	PLUG: fan drive pulley keyway C400K217 (14351)	EA		1				SEE	GRP	0102				
X1 00026	5330-526-0055	SEAL,PLAIN ENCASED: crankshaft X1555 (14351)	EA		1				SEE	GRP	0102				
X1 00027	5330-258-1332	SEAL,PLAIN ENCASED: governor rocker shaft, oil G157S202 (14351)	EA		1				SEE	GRP	0308				
X1 00028	2930-353-8897	SEAL: water pump N62K211 (14351)	EA		1										
P F 00029	2805-073-2109	GASKET SET: oil pan	EA		1	2	2	3	2	2	3	31	5		
X1 00030	2805-358-2569	GASKET: oil pan F400B442 (14351)	EA		2				SEE	GRP	0106				

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
X1 00031	2805-586-5175	GASKET: oil pan filler block F400B255 (14351)	EA		2				SEE	GRP	0106				
P 0 00032	5330-199-5878	GASKET: oil pan drain plug WB108 (14351)	EA		1				SEE	GRP	0106				
P 0 00033	2805-030-0790	GASKET SET: valve grind F162U109 (14351)	EA		1	2	4	8	2	4	8	92	5		
X1 00034	2805-286-8895	GASKET: valve chamber cover stud X334 (14351)	EA		2				SEE	GRP	0105				
X1 00035	2805-362-2115	GASKET: cylinder head F400A336 (14351)	EA		1				SEE	GRP	0101				
X1 00036	2805-663-4356	GASKET: valve tappet chamber cover F124A201 (14351)	EA		1				SEE	GRP	0105				
X2 F 00037		MOUNT: engine 326332 (12603)	EA		1									1	3
X2 F 00038		BOLT, SELF-LOCKING: engine mount 5/8 - 11 thd size, 3 1/2 in. lg. 21C1056 (12603)	EA		1	•	•	•	•	•	•	•	•	1	6
F 00039	5310-823-8803	WASHER, FLAT: engine mtg	EA		2	•	•	•	•	•	•	•	•	1	7
X2 F 00040		WASHER: mount to engine, top 5/8 in., bolt size 317760 (12603)	EA		1	•	•	•	•	•	•	•	•	1	9
X2 F 041		WASHER: mount to engine, bottom 5/8 in., bolt size 326292 (12603)	EA		1	•	•	•	•	•	•	•	•	1	8
F 00042	5310-011-7049	NUT, PLAIN, HEXAGON: engine mount	EA		2	•	•	•	•	•	•	•	•	1	5
F 00043	5305-269-2808	SCREW, CAP, HEXAGON HEAD: mount to frame	EA		2	•	•	•	•	•	•	•	•	1	1
X2 F 00044		WASHER: mount to frame 209915 (12603)	EA		1	•	•	•	•	•	•	•	•	1	2
F 00045	5310-637-9541	WASHER, LOCK: mount to frame	EA		2	•	•	•	•	•	•	•	•	1	4

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
00046		0101 - CRANKCASE, BLOCK, CYLINDER HEAD													
H 00047	5306-272-3725	BOLT,MACHINE	EA		2				*	*	*	*	*	2	26
O 00048	4730-193-0875	BUSHING, PIPE: crankcase plug valve	EA		1	*	*	*	*	*	*	*	*	2	12
X2 H 00049	2805-217-8638	CAP: crankshaft bearing, center F400B367 (14351)	EA		1									2	25
X2 H 00050	2805-382-7986	CAP: crankshaft bearing, front F400B368 (14351)	EA		1									2	37
X2 H 00051	2805-217-8639	CAP: crankshaft bearing, rear F400B366 (14351)	EA		1									2	22
P F H 00052	2805-069-2952	ENGINE BLOCK ASSEMBLY: less accessories F400A5285S (14351)	EA		1	*	*	2	*	*	2	6	5		
X1 00053	2805-362-2115	GASKET: cylinder head F400A366 (14351) (Component of GASKET SET, Stock No. 2805-073-2108 and GASKET SET, Stock No. 2805-030-0790, See Group 0100)	EA		1									2	45
P O 00054	2805-302-1799	HEAD: cylinder F162A341 (14351)	EA		1	*	*	2	*	*	2	6	4	2	46
O 00055	5310-222-7234	NUT, PLAIN, HEXAGON: mounting	EA		15	*	*	*	*	*	*	*	*	2	2
F 00056	5340-054-1406	PLUG, EXPANSION: camshaft bushing	EA		1	*	*	*	*	*	*	*	*	2	10
F 00057	5340-598-5496	PLUG, EXPANSION: cylinder core hole	EA		1	*	*	*	*	*	*	*	*	2	8
F 00058	5340-368-6691	PLUG, EXPANSION: cylinder core hole	EA		2	*	*	*	*	*	*	*	*	2	44
O 00059	4730-278-2965	PLUG, PIPE: crankcase oil header	EA		2	*	*	*	*	*	*	*	*	2	9
O 00060	4730-044-4593	PLUG, PIPE: cylinder head	EA		1	*	*	*	*	*	*	*	*	2	1
H 00061	5305-358-3477	SCREW, CAP, HEXAGON HEAD: bearing cap	EA		2				*	*	*	*	*	2	36
H 00062	5305-358-3477	SCREW, CAP, HEXAGON HEAD: bearing cap	EA		2				*	*	*	*	*	2	23
P O 00063	5307-317-3039	STUD, PLAIN: cover mounting 13XX4036 (14351)	EA		2	*	*	*	*	*	*	5	20	2	28

(1) SMR CODE INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
P F 00064	5307-317-3048	STUD, PLAIN: cover mounting 13XX1918 (14351)	EA		3	*	*	*	*	*	*	5	30	5	4
P 0 00065	5307-297-8305	STUD, PLAIN: elbow mounting X1955 (14351)	EA		2	*	*	*	*	*	*	5	20	18	15
P 0 00066	5307-214-3028	STUD, PLAIN: fuel pump 13XX1952 (14351)	EA		2	*	*	*	*	*	*	5	20	11	9
P 0 00067	5307-317-3043	STUD, PLAIN: manifold to cylinder block 13XX4200 (14351)	EA		6	*	*	*	*	*	*	5	60	9	10
P 0 00068	5307-422-6081	STUD, PLAIN: manifold to cylinder block X4256 (14351)	EA		1	*	*	*	*	*	*	5	10	9	3
P 0 00069	5307-317-3040	STUD, PLAIN: mounting 13XX19828 (14351)	EA		1	*	*	*	*	*	*	5	10	2	5
P F 00070	5307-384-8477	STUD, PLAIN: oil pump X19004C (14351)	EA		1	*	*	*	*	*	*	5	10	8	2
X2 0 00071		STUD: mounting X4730 (14351)	EA		4	*	*	*	*	*	*	*	*	2	4
P 0 00072	4820-849-1220	VALVE, PLUG: crankcase cylinder block drain 73F2 (12603)	EA		1	*	*	2	*	*	2	10	5	2	42
H 00073	5310-995-8921	WASHER, FLAT: bearing cap, center	EA		4				*	*	*	*	*	2	24
H 00074	5310-995-8921	WASHER, FLAT: bearing cap, front	EA		1				*	*	*	*	*	2	24
H 00075	5310-194-2738	WASHER, FLAT: bearing cap oil pump lug	EA		1				*	*	*	*	*		
H 00076	5310-995-8921	WASHER, FLAT: bearing cap, rear	EA		1				*	*	*	*	*	2	24
0 00077	5310-167-0822	WASHER, FLAT: mounting	EA		15	*	*	*	*	*	*	*	*	2	3
00078		0102 - CRANKSHAFT													
P H 00079	2805-217-8612	BEARING SET: crankshaft F400T230 (14351)	EA		1				*	2	2	12	100	3	6
P F 00080	2805-383-3834	BEARING, SLEEVE: crankshaft pilot f5LG202 (14351)	EA		1	*	2	2	*	2	2	12	100	3	23

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
P H 00081	2805-217-8640	CRANKSHAFT ASSEMBLY F400C503 (14351)	EA		1				*	*	2	7	20	3	24
F 00082	5315-353-8627	KEY, WOODRUFF: fan drive pulley	EA		1	*	*	*	*	*	*	*	*	3	8
X1 00083	2805-382-8665	PLUG: fan drive pulley keyway C400K217 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)	EA		1									3	13
P F 00084	2805-358-3082	PULLEY: fan drive F209K313 (14351)	EA		1	*	*	*	*	*	*	5	5	3	12
F 00085	5305-103-6891	SCREW: crankshaft pulley	EA		1	*	*	*	*	*	*	*	*	3	15
P F 00086	2805-371-4990	SLINGER: oil, crankshaft A600C204 (14351)	EA		1	*	*	*	*	*	*	5	5	3	11
F 00087	5310-842-9552	WASHER: crankshaft pulley	EA		1	*	*	*	*	*	*	*	*	3	14
00088		0103 FLYWHEEL ASSEMBLY													
X2 F 00089		BOLT, EXTERNALLY RELIEVED BODY: flywheel housing C400B226 (14351)	EA		2	*	*	*	*	*	*	*	*	2	7
F 00090	5306-281-5325	BOLT: flywheel mounting	EA		6	*	*	*	*	*	*	*	*	3	18
X2 F 00091		FLYWHEEL ASSEMBLY F400C5070 (14351)	EA		1									3	22
X2 H 00092	2805-844-6398	GEAR, SPUR: ring, flywheel F400C377 (14351)	EA		1									3	21
X2 F 00093		HOUSING, FLYWHEEL F162B505 (14351)	EA		1									2	17
F 00094	5310-012-1932	NUT: flywheel mounting, 3/8-16 thd size	EA		6	*	*	*	*	*	*	*	*	3	20
X2 F 00095	2805-382-8664	POINTER: flywheel housing mounting 13XX304A (14351)	EA		1									2	14
F 00096	5305-069-5574	SCREW, CAP, HEXAGON HEAD: flywheel housing pointer	EA		3	*	*	*	*	*	*	*	*	2	6
F 00097	5310-011-5949	WASHER,LOCK: flywheel mounting	EA		6	*	*	*	*	*	*	*	*	3	19

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
00098		0104 - PISTONS, CONNECTING RODS													
P H 00099	2805-374-9739	BEARING, SLEEVE: connecting rod MS13994-1 (96906)	EA		8				2	4	8	96	800	3	5
P H 00100	2805-516-2699	PIN, WRIST: 0.005 oversize F162A230-005 (14351)	EA		4				2	3	7	80	10		
P H 00101	2805-554-9255	PISTON SET: standard MS13957-1 (96906)	EA		4				*	2	2	12	5	3	2
P H 00102	2805-329-2067	PIN, WRIST: standard F162A230 (14351)	EA		4				*	2	2	20	5		
P H 00103	5340-374-9707	RING, RETAINING: piston pin F162A229 (14351)	EA		8				2	5	9	112	5	3	26
P H 00104	2805-554-9822	PISTON: 0.020 oversize MS13957-2 (96906)	EA		4				*	*	2	7	70		
P H 00105	2805-540-5299	PISTON: 0.040 oversize MS13957-3 (96906)	EA		4				*	*	2	7	50		
P H 00106	2805-388-6653	RING SET, PISTON: standard RSMS13957-1 (81336)	EA		4				2	2	3	31	5	3	1
P H 00107	2805-388-6654	RING SET, PISTON: 0.020 oversize RSMS13957-2 (96906)	EA		4				*	*	2	7	70		
P H 00108	2805-388-6655	RING SET, PISTON: 0.040 oversize RSMS13957-3 (81336)	EA		4				*	*	2	7	50		
P H 00109	2805-981-2512	ROD AND CAP: cylinders 1 and 3 F218D3022 (14351)	EA		2				*	2	2	12	10	3	4
P H 00110	2805-374-9710	BEARING, SLEEVE: piston pin MS13963-1 (96906)	EA		4				*	2	2	80	100	3	3
P H 00111	5306-362-2085	BOLT: connecting rod cap	EA		4				*	*	*	*	*	3	25
H 00112	5315-842-3044	PIN, COTTER: connecting rod cap	EA		4				*	*	*	*	*	3	16
H 00113	5310-302-1801	NUT, SLOTTED,HEXAGON: connecting rod bolt	EA		4				*	*	*	*	*	3	17

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
P H 00114	2805-981-2513	ROD ASSEMBLY, CONNECTING: cylinders 2 and 4 F218D3032 (14351) (Components same as ROD AND CAP, Stock No. 2805-981-2512)	EA		2				*	2	2	12	10		
00115		0105 - VALVES, CAMSHAFTS AND TIMING SYSTEM													
P O 00116	2805-012-2720	BAFFLE: valve tappet chamber drain F600A3990 (14351)	EA		2	*	*	*	*	*	*	5	5	2	18
P F 00117	3110-156-5212	BEARING, BALL, ANNULAR: idler stud X13099A (14351)	EA		1	*	*	2	*	*	2	6	10	5	25
P F 00118	3110-277-2924	BEARING, ROLLER, NEEDLE: idler stud inner F124G200 (14351)	EA		1	*	*	2	*	*	2	6	10	5	22
F 00119	5306-208-9102	BOLT, EXTERNALLY RELIEVED BODY: gear cover to crankcase	EA		1	*	*	*	*	*	*	*	*	5	12
H 00120	5306-207-8351	BOLT, MACHINE: camshaft thrust plate	EA		2				*	*	*	*	*	4	9
F 00121	5306-207-8351	BOLT, MACHINE: front end plate to crankcase	EA		1	*	*	*	*	*	*	*	*	5	15
F 00122	5306-358-3463	BOLT, MACHINE: front end plate to crankcase	EA		3	*	*	*	*	*	*	*	*	5	13
F 00123	5306-225-8507	BOLT,MACHINE: gear cover	EA		1	*	*	*	*	*	*	*	*	5	3
P F 00124	2805-024-2095	BUTTON THRUST CAMSHAFT 8PK214 (14351)	EA		1	*	*	2	*	*	2	7	25		
P H 00125	2805-601-8135	CAMSHAFT, ENGINE F400I322 (14351)	EA		1				*	*	2	7	5	4	14
P F 00126	2805-374-9746	CAP VALVE STEM F162I204 (14351)	EA		8	2	5	9	2	5	9	112	200	4	16
X2 F 00127	2805-358-2284	COVER: idler stud bearing F400B245 (14351)	EA		1									5	31
X2 F 00128		COVER: timing gear F400B5321 (14351)	EA		1									5	29
X2 O 00129		COVER: valve chamber F162A3610 (14351)	EA		1									2	15
P F 00130	2805-364-4932	DOWEL: gear cover to crankcase and front end plate D600B207 (14351)	EA		1	*	*	*	*	*	*	5	5		

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
X1 00131	2805-358-2587	GASKET END PLATE F400B427 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)		EA		1									5	20
X1 00132	2805-383-8733	GASKET: gear cover to front end plate F400B338 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)		EA		1									5	28
X1 00133	2805-383-8733	GASKET: idler stud cover F400B227 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)		EA		1									5	30
X1 00134	2805-286-8895	GASKET: valve chamber cover stud X334 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, and GASKET SET, Stock No. 2805-030-0790, See Group 0100)		EA		2									2	29
X1 00135	2805-663-4356	GASKET: valve tappet chamber cover F124A201 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, and GASKET SET, Stock No. 2805-030-0790, See Group 0100)		EA		1									2	16
X2 F 00136		GEAR ASSEMBLY: idler F209H2011 (14351)		EA		1	•	•	•	•	•	•	•	•	5	24
X1 00137		GEAR: idler F209H201 (14351)		EA		1										
X1 00138	2805-341-1541	STUD IDLER GEAR F124H200 (14351)		EA		1										
P F 00139	2805-015-3862	GEAR CAMSHAFT F209H203 (14351)		EA		1	•	•	2	•	•	2	6	5	4	10
P F 00140	2805-929-0756	GEAR, HELICAL: crankshaft, timing F600H317 (14351)		EA		1	•	•	2	•	•	2	6	5	3	10
P F 00141	2805-214-2911	GUIDE: exhaust valve stem F400I229 (14351)		EA		4	2	2	5	2	2	5	56	100	4	2

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
P F 00142	2805-097-2653	GUIDE: intake valve stem F400I230 (14351)		EA		4	2	2	5	2	2	5	56	100		
F 00143	5315-616-5525	KEY,WOODRUFF: camshaft		EA		1	*	*	*	*	*	*	*	*	4	13
F 00144	5315-059-2285	KEY,WOODRUFF: crankshaft gear		EA		1	*	*	*	*	*	*	*	*	3	7
P H 00145	2805-710-6132	KIT,BUSHING: camshaft F400T181 (14351)		EA		1				*	*	2	7	100	4	5
X1 00146	2805-397-9179	BUSHING SLEEVE: camshaft center Y400G231 (14351)		EA		1										
X1 00147	2805-422-5680	BUSHING SLEEVE: camshaft front F226G227 (14351)		EA		1										
X1 00148	2805-397-9180	BUSHING SLEEVE: camshaft rear Y400G232 (14351)		EA		1										
P F 00149	2805-305-8265	LIFTER: valve F218I2030 (14351)		EA		8	2	5	9	2	5	9	112	40	4	7
P F 00150	2805-528-6097	LOCK: valve spring retainer F162I203 (14351)		EA		16	5	9	19	5	9	19	224	160	4	6
F 00151	5310-761-6882	NUT,PLAIN,HEXAGON: cover mounting		EA		3	*	*	*	*	*	*	*	*		
F 00152	5310-782-0558	NUT,PLAIN,HEXAGON: plate		EA		1	*	*	*	*	*	*	*	*	5	2
O 00153	5310-391-3307	NUT, SLEEVE: cover stud		EA		2	*	*	*	*	*	*	*	*	2	30
F 00154	5310-842-9131	NUT, SPECIAL: camshaft gear		EA		1	*	*	*	*	*	*	*	*	4	11
F F 00155	5315-382-8675	PIN, IDLER GEAR: thrust washer to crankshaft X17033 (14351)		EA		1	*	*	2	*	*	2	7	5	5	17
P F 00156	2805-358-3134	PIN,STRAIGHT,HEADLESS: idler stud bearing cover 13XX1720 (14351)		EA		1	*	*	*	*	*	*	5	5	5	33
P H 00157	2805-362-2074	PLATE: crankshaft thrust F600G205 (14351)		EA		1				*	*	2	7	10	3	9
P F 00158	2805-710-6129	PLATE: front end F400B4330 (14351)		EA		1	*	*	*	*	*	*	5	5	5	21

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
P F 00159	2805-382-8699	PLUNGER: idler gear stud thrust F400H207 (14351)	EA		1	*	*	2	*	*	2	7	5	5	27
F 00160	5305-269-3213	SCREW, CAP, HEXAGON HEAD: front end plate	EA		2	*	*	*	*	*	*	*	*	5	11
F 00161	5305-269-3218	SCREW, CAP, HEXAGON HEAD: front filler block	EA		6	*	*	*	*	*	*	*	*	5	7
F 00162	5305-269-4511	SCREW, CAP, HEXAGON HEAD: gear cover	EA		1	*	*	*	*	*	*	*	*	5	6
F 00163	5305-291-6785	SCREW, CAP, SOCKET HEAD: front end plate	EA		2	*	*	*	*	*	*	*	*	5	16
F 00164	5305-349-1246	SCREW, CAP, SOCKET HEAD: gear cover	EA		1	*	*	*	*	*	*	*	*	5	8
X1 00165	5330-526-0055	SEAL, PLAIN ENCASED: crankshaft X1555 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)	EA		1									5	32
P H 00166	2805-382-8000	SEAT: exhaust valve F400A288-010 (14351)	EA		4				2	2	5	56	100	4	15
P F 00167	2805-382-8027	SEAT: valve spring retainer F400I228 (14351)	EA		8	2	2	5	2	2	5	56	40	4	4
P F 00168	2805-246-7612	SPRING, HELICAL, COMPRESSION: intake and exhaust valve Y400I215 (14351)	EA		8	5	10	21	5	10	21	248	200	4	3
P F 00169	5340-092-9423	SPRING: idler gear stud thrust plunger 21HM215 (14351)	EA		1	2	2	3	2	2	3	31	10	5	26
P F 00170	2805-374-9751	VALVE POPPET, ENGINE: exhaust F162I202 (14351)	EA		4	3	5	10	3	5	10	124	100	4	1
P F 00171	2805-382-8033	VALVE POPPET, ENGINE: intake F162I201 (14351)	EA		4	2	2	5	2	2	5	56	60		
F 00172	5310-188-4233	WASHER, FLAT: gear cover to crankcase front filler block	EA		2	*	*	*	*	*	*	*	*	5	10
H 00173	5310-167-0721	WASHER, LOCK: camshaft thrust plate	EA		2				*	*	*	*	*	4	8
F 00174	5310-012-0423	WASHER, LOCK: cover mounting	EA		3	*	*	*	*	*	*	*	*		
F 00175	5310-167-0721	WASHER, LOCK: front end plate	EA		4	*	*	*	*	*	*	*	*		
F 00176	5310-194-9214	WASHER, LOCK: front end plate	EA		2	*	*	*	*	*	*	*	*	5	14

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
F 00177	5310-637-9541	WASHER, LOCK: gear cover	EA		2	*	*	*	*	*	*	*	*	5	1
F 00178	5310-959-4679	WASHER, LOCK: gear cover	EA		3	*	*	*	*	*	*	*	*	5	9
P H 00179	2805-374-4172	WASHER, THRUST: camshaft Y400I203 (14351)	EA		1				*	*	2	7	25	4	12
P F 00180	2805-383-9028	WASHER, THRUST: camshaft gear F124H201 (14351)	EA		1	*	*	2	*	*	2	7	25	5	23
00181		0106 - ENGINE LUBRICATION SYSTEM													
P F 00182	2805-364-6997	BLOCK: filler, front D600B340 (14351)	EA		1	*	*	*	*	*	*	5	5	2	40
P F 00183	2805-362-2046	BLOCK: filler, rear D600B406 (14351)	EA		1	*	*	*	*	*	*	5	5	2	19
0 00184	5306-599-0474	BOLT,MACHINE: bracket mounting	EA		2	*	*	*	*	*	*	*	*	6	14
0 00185	5306-356-1605	BOLT,MACHINE: oil filter	EA		1	*	*	*	*	*	*	*	*	6	6
F 00186	5306-616-1287	BOLT,MACHINE: oil pan	EA		14	*	*	*	*	*	*	*	*	7	6
P 0 00187	2805-362-2208	BODY: oil filler 20CL2010 (14351)	EA		1	*	*	*	*	*	*	5	5	5	34
X2 0 00188		BRACKET: oil filter mounting 664970 (12603)	EA		1									6	1
P 0 00189	2910-294-1579	CAP: oil filler 20CL2020 (14351)	EA		1	*	2	2	*	2	2	12	10	5	35
0 00190	4730-278-4645	ELBOW, PIPE: block to inlet line	EA		1	*	*	*	*	*	*	*	*	6	13
0 00191	4730-287-1649	ELBOW, PIPE: outlet line to engine	EA		1	*	*	*	*	*	*	*	*	6	12
0 00192	4730-277-8273	ELBOW, PIPE TO TUBE: filter inlet and outlet	EA		2	*	*	*	*	*	*	*	*	6	9
P 0 00193	2940-456-9733	FILTER: engine oil F3CL (73370)	EA		1	*	*	*	*	*	*	5	2		
P 0 00194	2940-529-2738	FILTER ELEMENT, FLUID, PRESSURE: w/cover gasket C3 (73370)	EA		1	25	50	100	25	50	100	1200	100	6	8

242-451

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION — REFERENCE NO. & MFR. CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUSTRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
P 0 00195	5330-599-1056	WASHER, NONMETALLIC: filter cover bolt 37172 (81321)	EA		1	2	2	3	2	2	3	31	100	6	7
X1 ~~00196~~	~~2805-358-2569~~	GASKET: oil pan and filler block F400B442 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, and GASKET SET, Stock No. 2805-073-2109, See Group 0100)	EA		2									7	1
P 0 00197	5330-199-5878	GASKET: oil pan drain plug WB108 (14351)	EA		1	2	2	3	2	2	3	38	*	7	5
X1 00198	2805-586-5175	GASKET: oil pan filler block F400B255 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, and GASKET SET, Stock No. 2805-073-2109, See Group 0100)	EA		2									7	2
X1 00199	5330-190-4224	GASKET: oil pressure relief plug X365 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)	EA		1									2	32
P H 00200	2805-362-2063	GUARD,OIL: rear crankshaft bearing D600B305 (14351)	EA		1				*	*	*	5	5	2	11
P 0 00201	4720-203-6527	HOSE ASSEMBLY,RUBBER: engine to filter inlet elbow AF108-19 (80713)	EA		1				SEE	GRP	9901			6	10
P 0 00202	4720-203-6527	HOSE ASSEMBLY,RUBBER: outlet to engine elbow AF108-19 (80713)	EA		1				SEE	GRP	9901			6	11
0 00203	5310-880-7745	NUT, PLAIN, HEXAGON: bracket mounting	EA		2	*	*	*	*	*	*	*	*	6	5
0 00204	5310-880-7746	NUT, PLAIN, HEXAGON: bracket mounting	EA		2	*	*	*	*	*	*	*	*	6	2
F 00205	5310-732-0558	NUT, PLAIN, HEXAGON: oil pump	EA		1	*	*	*	*	*	*	*	*	8	4
X1 00206	5330-353-8706	PACKING MATERIAL: rear bearing filler block F600B241 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)	EA		2									2	13
P F 00207	2805-358-3053	PAN: oil F400B4450 (14351)	EA		1	*	*	*	*	*	*	5	3	7	3

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION — REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
P F 00208	2805-030-0832	PUMP ASSEMBLY: oil F600L4131 (14351)	EA		1	*	2	2	*	2	2	14	25	8	1
X1 00209	5330-351-6356	GASKET: oil pump cover C400L231 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)	EA		1									8	5
X1 00210	2805-383-8694	GASKET: oil pump cover to strainer frame 17EL204 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)	EA		1									8	6
P F 00211	2805-371-4999	STRAINER, OIL: pump D600L2120 (14351)	EA		1	*	*	2	*	*	2	10	5	8	7
0 00212	4730-293-7716	PLUG, MACHINE THREADED: oil pressure relief valve	EA		1	*	*	*	*	*	*	*	*	2	31
P 0 00213	4730-215-7390	PLUG: magnetic drain	EA		2	*	2	2	*	2	2	14	10	7	4
P 0 00214	6680-383-4118	ROD: bayonet oil D600L3000 (14351)	EA		1	*	*	*	*	*	*	5	5	2	43
F 00215	5305-273-5251	SCREW, CAP, SOCKET HEAD: filler block, front	EA		2	*	*	*	*	*	*	*	*	2	38
F 00216	5305-297-0697	SCREW, CAP, SOCKET HEAD: filler block, rear	EA		2	*	*	*	*	*	*	*	*	2	20
P F 00217	2805-246-7611	SPRING, HELICAL, COMPRESSION: oil pressure relief valve 10EL230 (14351)	EA		1	*	2	2	*	2	2	12	10	2	34
P 0 00218	2805-314-3428	SUPPORT, OIL GUAGE Y400L266 (14351)	EA		1	*	*	*	*	*	*	5	5	2	41
P F 00219	2805-535-3737	VALVE, OIL PRESSURE 15SL211 (14351)	EA		1	*	*	2	*	*	2	7	8	2	35
F 00220	5310-754-1686	WASHER, FLAT: oil pressure relief valve	EA		1	*	*	*	*	*	*	*	*	2	33
0 00221	5310-209-0965	WASHER, LOCK: bracket mounting	EA		2	*	*	*	*	*	*	*	*	6	4
0 00222	5310-407-9566	WASHER, LOCK: bracket mounting	EA		2	*	*	*	*	*	*	*	*	6	3

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
F 00223	5310-167-0721	WASHER, LOCK: filler block, front	EA		2	*	*	*	*	*	*	*	*	2	39
F 00224	5310-167-0721	WASHER, LOCK: filler block, rear	EA		2	*	*	*	*	*	*	*	*	2	21
F 00225	5310-407-9566	WASHER, LOCK: oil pan	EA		14	*	*	*	*	*	*	*	*	7	7
F 00226	5310-637-9541	WASHER, LOCK: oil pump	EA		1	*	*	*	*	*	*	*	*	8	3
00227		0108 - MANIFOLDS													
P 0 00228	2805-399-6935	GASKET: intake and exhaust manifold F400E303 (14351)	EA		1	2	4	8	2	4	8	92	*	9	1
P 0 00229	2805-705-9037	MANIFOLD ASSEMBLY: intake and exhaust F162E506 (14351)	EA		1	*	*	*	*	*	*	5	5	9	2
0 00230	5310-639-6884	NUT, PLAIN, HEXAGON: manifold mounting	EA		7	*	*	*	*	*	*	*	*	9	5
0 00231	4730-221-2136	PLUG, PIPE: intake manifold	EA		1	*	*	*	*	*	*	*	*	9	6
0 00232	4730-042-8988	PLUG, PIPE: intake manifold primer	EA		4	*	*	*	*	*	*	*	*	9	8
0 00233	5310-894-9407	WASHER, FLAT: manifold mounting	EA		3	*	*	*	*	*	*	*	*	9	4
0 00234	5310-080-6004	WASHER, FLAT: manifold mounting	EA		4	*	*	*	*	*	*	*	*	9	9
00235		GROUP 03 - FUEL SYSTEM													
00236		0301 - CARBURETOR													
P 0 R 00237	2910-983-0911	CARBURETOR, FLOAT 0-11894 (79960) (Includes components of PARTS KIT, Stock No. 2910-073-2113)	EA		1	2	2	3	2	2	3	30	10	13	20
X1 00238		BODY: throttle ER2-200 (79960)	EA		1									10	46
X1 00239		PLATE: throttle C21-185 (79960)	EA		1									10	4
X1 00240		SCREW: lever stop 46G810 (79960)	EA		1									10	42
X1 00241		SHAFT: throttle with lever C108-177-3 (79960)	EA		1									10	43

242-451

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
X1 00242		BOWL: fuel B3-116-3 (79960)		EA		1									10	13
X1 00243	2910-105-2686	BRACKET FUEL C109-60 (79960)		EA		1										
X1 00244		BRACKET: choke CR109-60 (79960)		EA		1									10	27
X1 00245	2910-105-6069	CLAMP, TUBE C110-7 (79960)		EA		1									10	26
X1 00246	5310-262-9717	NUT, PLAIN, SQUARE T21S8 (79960)		EA		1									10	28
X1 00247	5305-429-5225	SCREW, MACHINE T8S8-8 (79960)		EA		2									10	21
X1 00248	2910-569-4499	FLOAT CARBURETOR C85-115 (79960)		EA		1									10	40
X1 00249		PLATE: choke C101-68 (79960)		EA		1									10	33
X1 00250	2910-307-6816	PLUG,AIR SHUTTER C138-24 (79960)		EA		1									10	19
X1 00251	4730-788-5959	PLUG: bowl drain 444613 (24617)		EA		1									10	29
X1 00252	5305-207-1144	SCREW,MACHINE 446679 (24617)		EA		1									10	25
X1 00253		SHAFT: choke with lever C108-177-3 (79960)		EA		1									10	24
X1 00254	5340-598-7786	SPRING, HELICAL C112-6 (79960)		EA		1									10	23
X1 00255		VENTURI B38-71-21 (79960)		EA		1									10	9
X1 00256	5330-176-4123	WASHER, NONMETALLIC T56-23 (79960)		EA		1									10	38

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(b) ITEM NO
X1 00257	5330-176-4123	WASHER, NONMETALLIC T56-23 (79960)		EA		1									10	20
P 0 00258	2910-171-4268	GASKET: carburetor to manifold C141-4-6 (79960)		EA		1	2	4	8	2	4	8	92	100	10	2
P F 00259	2910-507-2040	GASKET KIT: carburetor (Includes components of PARTS KIT, Stock No. 2910-073-2113)		EA		1	2	4	8	2	4	8	90	100		
X1 00260		DISK C135-29 (79960)		EA		1										
X1 00261		GASKET C142-65 (79960)		EA		1										
X1 00262		WASHER, NONMETALLIC T56-4 (79960)		EA		1										
X1 00263		WASHER, NONMETALLIC T56-24 (79960)		EA		1										
X1 00264		WASHER, NONMETALLIC T56-23 (79960)		EA		1										
0 00265	5310-011-3111	NUT, SELF-LOCKING, HEXAGON: carburetor mtg, 5/16-18 thd size		EA		2	*	*	*	*	*	*	*	*	9	7
P F 00266	2910-073-2113	PARTS KIT: carburetor K11894 (79960)		EA		1	2	4	8	2	4	8	92	50		
X1 00267		AXLE: float C120-59 (79960)		EA		1									10	41
X1 00268		DISK: intake drain C135-29 (79960)		EA		1									10	32
X1 00269	5330-291-2942	FELT, MECHANICAL CT57-2 (79960)		EA		1									10	31
X1 00270		GASKET: fuel bowl C142-65 (79960)		EA		1									10	8
X1 00271		JET: discharge C66-100-60 (79960)		EA		1									10	17

242-451

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
							(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
X1 00272		JET: idling C55-22-12 (79960)		EA		1									10	37
X1 00273	2910-464-6725	JET, MAIN C52-7-25 (79960)		EA		1									10	11
X1 00274	2910-354-4939	JET: well vent C77-18-21 (79960)		EA		1									10	10
X1 00275	2910-395-6810	NEEDLE: idle adjusting C46-54 (79960)		EA		1									10	6
X1 00276	2910-105-2684	PLUG COCK: fuel inlet CT91-3 (79960)		EA		1									10	36
X1 00277	2910-360-4548	PLUG: shaft hole CR37-1X1 (79960)		EA		1									10	1
X1 00278	2910-360-4548	PLUG: shaft hole CR37-1X1 (79960)		EA		1									10	7
X1 00279	2910-360-4549	RETAINER, PACKING: choke shaft C131-4X2 (79960)		EA		1									10	30
X1 00280		RETAINER: throttle shaft C116-2X2 (79960)		EA		1									10	44
X1 00281		SCREW: choke lever swivel 46G807 (79960)		EA		1									10	22
X1 00282		SCREW: choke plate T315S5-4 (79960)		EA		1									10	34
X1 00283		SCREW: fuel bowl 41G1210 (79960)		EA		4									10	15
X1 00284		SCREW: throttle plate T315S5-4 (79960)		EA		1									10	3
X1 00285		SEAL: throttle shaft C148-9 (79960)		EA		1									10	45
X1 00286	5340-348-6620	SPRING: adjusting needle C111-9 (79960)		EA		1									10	5

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7)(b) 21-50	(7)(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8)(b) 21-50	(8)(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11)(b) ITEM NO
X1 00287	2910-354-4946	VALVE C81-1-35 (79960)	EA		1									10	39
X1 00288	5310-836-2458	WASHER, LOCK: choke plate screw T41-5 (24617)	EA		1									10	35
X1 00289	5310-285-7037	WASHER, LOCK: fuel bowl No. 12 screw 121744 (24617)	EA		4									10	14
X1 00290	5330-127-2231	WASHER, NONMETALLIC: discharge jet T56-12 (79960)	EA		1									10	18
X1 00291	5330-291-9923	WASHER, NONMETALLIC: discharge jet T56-4 (79960)	EA		1									10	16
X1 00292	5330-358-5683	WASHER, NONMETALLIC: main jet T56-24 (79960)	EA		1									10	12
X1 00293	5330-176-4123	WASHER, NONMETALLIC: passage plug T56-23 (79960)	EA		1										
P O 00294	5307-422-9627	STUD, PLAIN: carburetor to manifold	EA		1	*	*	*	*	*	*	5	10	10	47
P O 00295	5307-383-9306	STUD, PLAIN: carburetor to manifold	EA		1	*	*	*	*	*	*	5	10		
00296		0302 - FUEL PUMP													
P O 00297	2910-459-6347	GASKET: fuel pump to crankcase (Component of GASKET SET,Stock No.[illegible],See Group [illegible]) 835683 (70040)	EA		1	2	4	8	2	4	8	92	*	11	10
O 298	5310-880-7744	NUT, PLAIN, HEXAGON: mounting	EA		2	*	*	*	*	*	*	*	*	11	7
[illegible] 00299	2910-358-5057	PUMP, FUEL 5590699 (70040)	EA		1	2	4	8	2	4	8	92	75	13	18
X1 00300	2910-364-6863	ARM: rocker 1521361 (70040)	EA		1										
X1 00301	2910-382-8756	BOOT 1521424 (70040)	EA		1									11	6
X1 00302	2910-326-5128	COVER AND VALVE 5592956 (70040)	EA		1										
X1 00303		SCREW: cover and valve [illegible] (70040)	EA		6										

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
X1 00304	2910-383-4243	DIAPHRAGM FUEL 1522058 (70040)		EA		1										
X1 00305	2910-290-8423	GASKET: cover mounting screw 5590046 (70040)		EA		1									11	2
P 0 00306	2910-290-8424	GASKET: cover 5590044 (70040)		EA		1	*	2	2	*	2	2	14	25	11	4
X1 00307	2910-202-2458	GASKET: fuel pump drain plug 851297 (70040)		EA		1										
X1 00308	2910-328-9370	GASKET 5591830 (70040)		EA		1										
X1 00309		LINK: rocker arm 856108 (70040)		EA		1										
X1 00310	5315-360-8582	PIN: rocker arm 1521287 (70040)		EA		1										
X1 00311	2910-360-4535	PLATE 1521475 (70040)		EA		1									11	3
X1 00312	5305-068-0505	BOLT,MACHINE: plate 1537405 (70040)		EA		1									11	1
X1 00313	5305-360-4539	SCREW,MACHINE 1521612 (70040)		EA		1										
X1 00314	5340-254-1372	SPRING, HELICAL, COMPRESSION: rocker arm 855906 (70040)		EA		1										
X1 00315		SPRING: diaphragm 1538227 (70040)		EA		1										
X1 00316	2910-474-6457	STRAINER,FUEL 1521479 (70040)		EA		1									11	5
X1 00317	2910-358-5632	VALVE WITH GAGE 5593866 (70040)		EA		2										
X1 00318	5310-282-0541	WASHER,FLAT: rocker arm pin 1521288 (70040)		EA		2										

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
0 00319	5310-959-4679	WASHER, LOCK: mounting	EA		2	*	*	*	*	*	*	*	*	11	8
00320		0304 - AIR CLEANER													
X2 0 00321		AIR CLEANER, INTAKE 6063E21 (18265)	EA		1									12	1
X1 00322		BODY ASSEMBLY: air cleaner P8242 (18265)	EA		1										
X1 00323	2940-604-7793	CUP ASSEMBLY: oil P7409 (18265)	EA		1										
X1 00324	5975-656-7401	CLAMP RIM CLENCHING P2706 (18265)	EA		1										
0 00325	5306-225-9087	BOLT, MACHINE: clamp mounting	EA		2	*	*	*	*	*	*	*	*	12	13
X2 0 00326		BRACKET: air cleaner mounting 329809 (12603)	EA		1									12	10
0 00327	4730-467-3514	CLAMP: air cleaner to hose, adjustable, 1 in. to 3 in.	EA		1	*	*	*	*	*	*	*	*	12	2
0 00328	4730-467-3514	CLAMP: carburetor air cleaner hose, adjustable, 1 in. to 3 in.	EA		1	*	*	*	*	*	*	*	*	12	12
0 00329	4730-467-3514	CLAMP: hose to tube, adjustable, 1 in. to 3 in.	EA		2	*	*	*	*	*	*	*	*	12	4
0 00330	5340-533-1162	CLAMP, LOOP: air cleaner body	EA		1	*	*	*	*	*	*	*	*	12	14
P 0 00331	3930-069-3565	HOSE: air cleaner to tube 329810 (12603)	EA		1	*	2	2	*	2	2	14	25	12	3
P 0 00332	2910-915-2474	HOSE, CARBURETOR 329808 (12603)	EA		1	*	2	2	*	2	2	14	25	12	11
0 00333	5310-880-7745	NUT, PLAIN, HEXAGON: bracket	EA		2	*	*	*	*	*	*	*	*	12	8
0 00334	5310-880-7746	NUT, PLAIN, HEXAGON: clamp mounting	EA		2	*	*	*	*	*	*	*	*	12	7
P 0 00335	3930-078-2917	TUBE: air cleaner to carburetor hose 329812 (12603)	EA		1	*	*	*	*	*	*	5	5	12	5
0 00336	5310-209-0965	WASHER, LOCK: bracket	EA		2	*	*	*	*	*	*	*	*	12	9

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
0 00337	5310-407-9566	WASHER, LOCK: clamp mounting	EA		2	*	*	*	*	*	*	*	*	12	6
00338		0306 - TANKS, LINES, FITTINGS, HEADERS													
X2 0 00339		ADAPTER: tank fitting to valve 674850 (12603)	EA		1	*	*	*	*	*	*	*	*	13	10
P 0 00340	2910-587-5526	CAP, FUEL TANK 793560 (12603)	EA		1	*	*	2	*	*	2	6	10	13	1
P 0 00341	4730-288-9440	ELBOW, PIPE TO TUBE: carburetor inlet 49X5 (79470)	EA		2	*	*	*	*	*	*	5	10	13	15
X2 0 00342		ELBOW: fuel line to pump and pump outlet 730618 (12603)	EA		2	*	*	*	*	*	*	*	*	13	17
P 0 00343	2805-710-6126	ELBOW STREET: valve to filter 662645 (12603)	EA		1	*	*	*	*	*	*	5	5	13	13
MF 0 00344		HOSE ASSEMBLY: fuel filter to fuel pump 755854 (01276) MANUFACTURE FROM:	EA		1									13	16
P F 00345	4730-838-3555	ADAPTER, STRAIGHT, PIPE TO TUBE 4738-2-4B (00624)	EA		1				SEE	GRP	9901				
P F 00346	4730-073-2151	ADAPTER, STRAIGHT, PIPE TO TUBE 4797-5-4B (01276)	EA		1				SEE	GRP	9901				
P F 00347	4720-274-1157	HOSE, RUBBER: bulk (17 in. required) 1525-4 (00624)	FT						SEE	GRP	9501				
MF 0 00348		HOSE ASSEMBLY: fuel pump to carburetor 675632 (00624) MANUFACTURE FROM:	EA		1									13	19
P F 00349	4730-838-3555	ADAPTER, STRAIGHT, PIPE TO TUBE 4738-2-4B (00624)	EA		1				SEE	GRP	9901				
P F 00350	4730-073-2151	ADAPTER, STRAIGHT, PIPE TO TUBE 4797-5-4B (00624)	EA		1				SEE	GRP	9901				
P F 00351	4720-274-1157	HOSE,RUBBER: bulk (14 in. required) 1525-4 (00624)	FT						SEE	GRP	9501				

(1) SMR CODE INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(b) ITEM NO
MF 0 00352	2910-914-2732	LINE,FUEL 729213 (12603) MANUFACTURE FROM:		EA		1									13	11
P F 00353	4730-838-3555	ADAPTER, STRAIGHT, PIPE TO HOSE 4738-2-4B (00624)		EA		1				SEE	GRP	9901				
P F 00354	4730-073-2151	ADAPTER, STRAIGHT, TUBE TO HOSE 4797-5-4B (00624)		EA		1				SEE	GRP	9901				
P F 00355	4720-274-1157	HOSE, RUBBER (10 in. required) 1525-4 (00624)		FT						SEE	GRP	9501				
F 00356	5310-791-7740	NUT, SPECIAL: well, 5/16-18 thd size		EA		1	*	*	*	*	*	*	*	*		
0 00357	4730-044-4660	PLUG: gas tank drain		EA		1	*	*	*	*	*	*	*	*	13	9
P 0 00358	4820-359-4050	RING: cap to frame 25K40116 (12603)		EA		1	*	*	*	*	*	*	5	5	13	2
F 00359	5305-103-3036	SCREW: well, 5/16-18 thd size X 3/4 in.		EA		2	*	*	*	*	*	*	*	*		
P 0 00360	3930-069-3626	SEAL: gas filler 733011 (12603)		EA		1	*	*	*	*	*	*	5	25	13	3
X2 F 00361		SPACER: filler well 616781 (12603)		EA		2										
X2 0 00362		VALVE: fuel 668988 (12603)		EA		1	*	*	*	*	*	*	*	*	13	12
F 00363	5310-012-0214	WASHER, LOCK: well		EA		2	*	*	*	*	*	*	*	*		
F 00364	5310-187-0145	WASHER: well		EA		2	*	*	*	*	*	*	*	*		
X2 F 00365		WELL: gas tank filler 749112 (12603)		EA		1										
00366		0308 - ENGINE SPEED GOVERNOR AND CONTROLS														
X2 0 00367		ANCHOR: governor spring F400S347 (14351)		EA		1									14	14
P F 00368	2805-528-5886	BEARING, ROLLER, NEEDLE: governor rocker shaft H260S201 (14351)		EA		2	*	2	2	*	2	2	12	20	14	5

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
0 00369	5306-753-4009	BOLT, EYE: governor spring adjusting	EA		1	•	•	•	•	•	•	•	•	14	9
X1 00370	5330-358-5265	FELT, PREFORMED: governor rocker shaft, dust G157S203 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)	EA		1									14	7
P F R 00371	2805-358-4680	GOVERNOR ASSEMBLY F400S3480 (14351)	EA		1	2	3	5	2	3	5	60	10		
X1 00372	2805-358-4631	DRIVE, GOVERNOR Z120S2220 (14351)	EA		1									14	1
X1 00373		SHAFT AND RACE: upper F400S3330 (14351)	EA		1									14	17
0 00374	5310-732-0558	NUT, PLAIN, HEXAGON: anchor mounting	EA		1	•	•	•	•	•	•	•	•	14	11
F 00375	5310-768-0319	NUT, PLAIN, HEXAGON: bumper spring screw	EA		1	•	•	•	•	•	•	•	•	14	3
0 00376	5310-768-0319	NUT, PLAIN, HEXAGON: spring adjusting bolt	EA		2	•	•	•	•	•	•	•	•	14	8
0 00377	5305-269-3213	SCREW, CAP, HEXAGON HEAD: anchor mounting	EA		1	•	•	•	•	•	•	•	•	14	13
0 00378	5305-269-3211	SCREW, CAP, HEXAGON HEAD: anchor mounting	EA		1	•	•	•	•	•	•	•	•	14	15
F 00379	5306-709-0813	SCREW: governor bumper, 1/4-28 thd size	EA		1	•	•	•	•	•	•	•	•	14	4
X1 00380	5330-285-1332	SEAL, PLAIN, ENCASED: governor rocker shaft G157S202 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)	EA		1									14	6
P F 00381	2805-326-4858	SHAFT LEVER AND ARM: governor F400S4140 (14351)	EA		1	•	•	•	•	•	•	5	5	14	16
P 0 00382	2805-321-2651	SPRING, HELICAL, COMPRESSION: governor Y112S208 (14351)	EA		1	•	2	2	•	2	2	12	10	14	2
P F 00383	5340-358-5269	SPRING, HELICAL, COMPRESSION: governor bumper D600S209 (14351)	EA		1	•	2	2	•	2	2	12	10	14	12
0 00384	5310-637-9541	WASHER, LOCK: anchor mounting	EA		1	•	•	•	•	•	•	•	•	14	12

242-451

(1) SMR CODE INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
00385		0309 - FUEL FILTERS													
C 0 00386		FILTER, FLUID, PRESSURE 854336 (70040)	EA		1	•	•	•	•	•	•	•	•	13	14
P 0 00387	2910-358-4283	BAIL AND SCREW ASSEMBLY 5590152 (70040)	EA		1	•	•	•	•	•	•	5	5	15	5
P 0 00388	2910-358-4289	BOWL: fuel 1537710 (70040)	EA		1	•	•	•	•	•	•	5	5	15	4
P 0 00389	2910-652-4446	FILTER ELEMENT, FLUID, PRESSURE 854347 (70040)	EA		1	•	•	2	•	•	2	7	100	15	2
P 0 00390	2910-073-2118	GASKET: filter element 854475 (70040)	EA		1	2	2	3	2	2	3	31	100	15	1
P 0 00391	2910-594-2293	GASKET: bowl 854389 (70040)	EA		1	13	25	50	13	25	50	600	100	15	3
00392		0312 - ACCELERATOR, THROTTLE OR CHOKE CONTROLS													
X2 0 00393		BELLCRANK 664978 (12603)	EA		1									16	13
X2 0 00394		BOLT, MACHINE: accelerator pedal stop, 5/16-18 thd size by 1-1/2 2C524 (12603)	EA		1	•	•	•	•	•	•	•	•	16	23
0 00395	5306-104-2831	BOLT, MACHINE: bellcrank, bracket, 5/16-24 thd size by 5/8 in.	EA		2	•	•	•	•	•	•	•	•	16	9
0 00396	5306-104-2831	BOLT, MACHINE: spring bracket, 5/16-24 thd size by 5/8 in.	EA		2	•	•	•	•	•	•	•	•	16	39
X2 0 00397		BRACKET: bellcrank pivot 674906 (12603)	EA		1									16	11
P 0 00398	2540-772-5294	BRACKET: pedal mounting 664948 (12603)	EA		1	•	•	•	•	•	•	5	5	16	28
X2 0 00399		BRACKET: spring 664982 (12603)	EA		1									16	41
P 0 00400	2590-679-6729	CHOKE 8356 (79470)	EA		1	•	•	2	•	•	2	7	20	16	36

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE · USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
X2 0 00401		CROSS SHAFT 664980 (12603)	EA		1									16	16
0 00402	5310-853-9335	NUT, PLAIN, HEXAGON: accelerator pedal stop	EA		2	*	*	*	*	*	*	*	*	16	24
0 00403	5310-012-2166	NUT, PLAIN, HEXAGON: pedal mounting	EA		2	*	*	*	*	*	*	*	*	16	26
0 00404	5310-880-7744	NUT, PLAIN, HEXAGON: pedal mounting	EA		1	*	*	*	*	*	*	*	*	16	22
0 00405	5310-768-0319	NUT, PLAIN, HEXAGON: yoke	EA		3	*	*	*	*	*	*	*	*	16	4
0 00406	5310-842-9220	NUT, SPECIAL: choke, 3/8-24 thd size	EA		1	*	*	*	*	*	*	*	*	16	33
P 0 00407	2540-771-6993	PEDAL, CONTROL: accelerator 664983 (12603)	EA		1	*	*	*	*	*	*	5	5	16	32
0 00408	5315-791-9113	PIN, CLEVIS: accelerator slip rod and governor to carburetor rod	EA		1	*	*	*	*	*	*	*	*	16	3
0 00409	5315-839-5820	PIN, COTTER: accelerator slip rod	EA		1	*	*	*	*	*	*	*	*	16	12
0 00410	5315-839-2325	PIN, COTTER: bellcrank	EA		1	*	*	*	*	*	*	*	*	16	7
0 00411	5315-839-2325	PIN, COTTER: cross shaft	EA		1	*	*	*	*	*	*	*	*	16	15
0 00412	5315-816-1794	PIN, COTTER: pedal mounting	EA		1	*	*	*	*	*	*	*	*	16	30
0 00413	5315-839-2325	PIN, COTTER: yoke	EA		3	*	*	*	*	*	*	*	*	16	2
0 00414	5315-358-5055	PIN: hinge	EA		1	*	*	*	*	*	*	*	*	16	31
0 00415	5315-013-8082	PIN, STRAIGHT, HEADED: bellcrank	EA		1	*	*	*	*	*	*	*	*	16	37
0 00416	5315-845-4232	PIN, STRAIGHT, HEADED: yoke	EA		2	*	*	*	*	*	*	*	*	16	1
X2 0 00417		ROLLER: pedal 316448 (12603)	EA		1									16	20
P 0 00418	3930-069-3630	ROD: accelerator bellcrank to cross shaft 787102 (12603)	EA		1	*	*	*	*	*	*	5	5	16	14
X2 0 00419		ROD: accelerator slip 664975 (12603)	EA		1									16	5

242-451

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
X2 0 00420		ROD: governor to carburetor 1615474 (12603)	EA		1									16	42
0 00421	5305-543-5962	SCREW, CAP, HEXAGON HEAD: cross shaft, 1/4-28 thd size by 1/2 in.	EA		2	*	*	*	*	*	*	*	*	16	17
0 00422	5305-068-0505	SCREW, CAP, HEXAGON HEAD: pedal mounting	EA		2	*	*	*	*	*	*	*	*	16	29
P 0 00423	5340-027-0982	SPACER, SPECIAL: accelerator pedal roller 742895 (12603)	EA		1	*	*	*	*	*	*	5	5	16	19
X2 0 00424		SPRING: accelerator return 725784 (12603)	EA		1	*	*	*	*	*	*	*	*	16	38
X2 0 00425		TUBE: slip 664976 (12603)	EA		1									16	6
X2 0 00426		WASHER: bellcrank 616776 (12603)	EA		1									16	8
0 00427	5310-703-2100	WASHER, FLAT: choke, 3/8 in.	EA		1	*	*	*	*	*	*	*	*	16	35
0 00428	5310-407-9566	WASHER, LOCK: accelerator pedal stop	EA		1	*	*	*	*	*	*	*	*	16	25
0 00429	5310-407-9566	WASHER, LOCK: accelerator pedal roller	EA		1	*	*	*	*	*	*	*	*	16	21
0 00430	5310-407-9566	WASHER, LOCK: bellcrank pivot bracket	EA		2	*	*	*	*	*	*	*	*	16	10
0 00431	5310-054-1844	WASHER, LOCK: choke	EA		1	*	*	*	*	*	*	*	*	16	34
0 00432	5310-637-9541	WASHER, LOCK: cross shaft	EA		2	*	*	*	*	*	*	*	*	16	18
0 00433	5310-582-5965	WASHER, LOCK: pedal mounting	EA		2	*	*	*	*	*	*	*	*	16	27
0 00434	5310-407-9566	WASHER, LOCK: spring bracket	EA		2	*	*	*	*	*	*	*	*	16	40
00435		GROUP 04 - EXHAUST SYSTEM													
00436		0401 - MUFFLER AND PIPES													
X2 0 00437		BAFFLE: pipe to manifold 737318 (12603)	EA		1										
X2 0 00438		BRACKET ASSEMBLY: muffler 753757 (12603)	EA		1									17	8

242-451

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
0 00439	5306-992-0439	BOLT,U: pipe to muffler	EA		2	*	*	*	*	*	*	*	*	17	4
X2 0 00440		CLAMP 730622 (12603)	EA		1									17	16
P 0 00441	2990-713-2917	CLAMP: pipe to manifold flange 710706 (12603)	EA		1	*	*	*	*	*	*	5	5	17	15
X2 0 00442		FLANGE: exhaust pipe to manifold 664923 (12603)	EA		1	*	*	*	*	*	*	*	*	17	13
P 0 00443	2990-073-2119	GASKET: manifold to flange 5280CK (79150)	EA		1	2	4	8	2	4	8	92	100	17	12
P 0 00444	2990-848-5356	MANIFOLD 664924 (12603)	EA		1	*	*	*	*	*	*	5	5	17	1
P 0 00445	2990-983-4230	MUFFLER, EXHAUST T5557 (76700)	EA		1	*	2	2	*	2	2	14	20	17	2
0 00446	4730-695-0095	NUT, PACKING, FLANGE	EA		2	*	*	*	*	*	*	*	*	17	14
0 00447	5310-761-6882	NUT, PLAIN, HEXAGON: muffler clamp mounting	EA		2	*	*	*	*	*	*	*	*	17	10
0 00448	5310-050-3383	NUT, SELF-LOCKING, HEXAGON: bracket mounting, 3/8-24 thd size	EA		2	*	*	*	*	*	*	*	*	17	7
P 0 00449	2990-983-4229	PIPE, EXHAUST 711613 (12603)	EA		1	*	2	2	*	2	2	14	20	17	3
0 00450	5305-018-1648	SCREW, CAP, HEXAGON HEAD: bracket mounting, 3/8-24 thd size by 2 in.	EA		2	*	*	*	*	*	*	*	*	17	5
P 0 00451	5307-358-5845	STUD, PLAIN: flange mounting 602428 (12603)	EA		2	*	*	*	*	*	*	5	20	17	11
0 00452	5310-637-9541	WASHER, LOCK: bracket mounting	EA		2	*	*	*	*	*	*	*	*	17	6
0 00453	5310-637-9541	WASHER, LOCK: muffler clamp mounting	EA		2	*	*	*	*	*	*	*	*	17	9
00454		GROUP 05 - COOLING SYSTEM													
00455		0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER													
P 0 00456	4520-[illegible]-3780	CAP, RADIATOR AAX0418 (78225)	EA		1	*	*	2	*	*	2	10	10	18	4

(1) SMR CODE INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
							(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
0 00457	5310-011-7049	NUT, PLAIN, HEXAGON: radiator mounting		EA		4	*	*	*	*	*	*	*	*	18	9
X2 0 00458		PAD: mounting 305049 (12603)		EA		8									18	5
C O R 00459		RADIATOR 317795 (12603)		EA		1	*	*	*	*	*	*	*	*	18	3
0 00460	5305-846-3875	SCREW, CAP, HEXAGON HEAD: mounting		EA		4	*	*	*	*	*	*	*	*	18	7
0 00461	5310-698-4460	WASHER: mounting		EA		8	*	*	*	*	*	*	*	*	18	6
0 00462	5310-637-9541	WASHER, LOCK: mounting		EA		4	*	*	*	*	*	*	*	*	18	8
00463		0503 - WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKET														
P 0 00464	6620-382-8827	ADAPTER: thermostat F218K202 (14351)		EA		1	*	*	*	*	*	*	5	5	18	17
0 00465	4730-467-3514	CLAMP: adjustable		EA		4	*	*	*	*	*	*	*	*	18	2
P 0 00466	4820-849-1220	COCK, DRAIN: radiator 73F2 (12603)		EA		1	*	*	2	*	*	2	7	5	18	12
P 0 00467	4730-221-6215	ELBOW, PIPE TO TUBE: water recirculating tube, compression		EA		1	*	*	*	*	*	*	5	5	18	14
C 0 00468		ELBOW: water cylinder outlet F400K425 (14351)		EA		1	*	*	*	*	*	*	*	*	18	19
P 0 00469	2930-384-8402	GASKET, PIPE TO TUBE: water outlet header C400K215 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)		EA		1	2	2	3	2	2	3	31	5	18	18
P 0 00470	2930-073-2125	HOSE, PREFORMED: radiator inlet 748536 (12603)		EA		1	*	*	2	*	*	2	7	100	18	1
P 0 00471	2930-073-2126	HOSE, PREFORMED: radiator outlet 664735 (12603)		EA		1	*	*	2	*	*	2	7	100	18	11
0 00472	5310-880-7744	NUT, PLAIN, HEXAGON: elbow mounting		EA		2	*	*	*	*	*	*	*	*	18	21
P 0 00473	6620-605-1177	THERMOSTAT, FLOW CONTROL G157K214 (14351)		EA		1	2	2	4	2	2	4	46	50	18	16

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
C 0 00474		TUBE ASSEMBLY: water recirculating F162K2930 (14351)	EA		1	*	*	*	*	*	*	*	*	18	13
0 00475	5310-959-4679	WASHER, LOCK: elbow mounting	EA		2	*	*	*	*	*	*	*	*	18	20
00476		0504 - WATER PUMP													
0 00477	5306-358-5907	BOLT, MACHINE: water pump mounting	EA		1	*	*	*	*	*	*	*	*	19	7
P 0 00478	2930-384-8404	GASKET: water pump mounting F400K340 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)	EA		1	2	2	5	2	2	5	55	10	19	1
X2 0 00479		HUB: fan pulley F226K358 (14351)	EA		1									19	3
P 0 00480	2930-073-2122	PUMP ASSEMBLY: water F162K36519 (14351)	EA		1	2	2	3	2	2	3	31	10	19	2
0 00481	5305-018-0129	SCREW, CAP, HEXAGON HEAD: water pump mounting	EA		2	*	*	*	*	*	*	*	*	19	10
0 00482	5305-269-3218	SCREW, CAP, HEXAGON HEAD: water pump mounting	EA		1	*	*	*	*	*	*	*	*	19	9
0 00483	5310-188-4233	WASHER, FLAT: water pump mounting	EA		1	*	*	*	*	*	*	*	*	19	11
0 00484	5310-637-9541	WASHER, LOCK: water pump mounting	EA		3	*	*	*	*	*	*	*	*	19	8
00485		0505 - FAN ASSEMBLY													
P 0 00486	3030-983-2873	BELT SET, V: fan, 2 belts 453HMS2 (73842)	EA		1	2	4	8	2	4	8	92	50		
P 0 00487	2930-628-4287	BLADE, FAN 650736 (12603)	EA		1	*	*	*	*	*	*	5	5	19	4
0 00488	5306-616-1287	BOLT, MACHINE: fan blade	EA		4	*	*	*	*	*	*	*	*	19	6
0 00489	5310-407-9566	WASHER, LOCK: fan blade	EA		4	*	*	*	*	*	*	*	*	19	5

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
00490		GROUP 06 - ELECTRICAL SYSTEM													
00491		0601 - GENERATOR													
X2 0 00492		BRACKET 785995 (12603)	EA		1									20	17
C 0 00493		BOLT, MACHINE: generator to bracket, 5/16-18 thd size, 1 1/8 in. lg 2C518 (12603)	EA		2	*	*	*	*	*	*	*	*	20	23
0 00494	5306-225-8497	BOLT, MACHINE: strap to generator	EA		1	*	*	*	*	*	*	*	*	20	7
P O R 00495	2920-073-2128	GENERATOR, ENGINE ACCESSORY 1102335 (16764)	EA		1	2	2	3	2	2	3	31	10		
X1 00496		ARMATURE 1958538 (16764)	EA		1									20	29
X1 00497	5977-918-5576	ARM, ELECTRICAL 1944373 (16764)	EA		2										
P F 00498	3110-100-2363	BEARING, BALL, ANNULAR: commutator end 904751 (16764)	EA		1	2	2	3	2	2	3	31	20	20	8
P F 00499	3110-151-8140	BEARING, BALL, ANNULAR: drive end 954378 (16764)	EA		1	2	2	3	2	2	3	31	20	20	14
P F 00500	2920-288-3779	BEARING, SLEEVE 1914198 (16764)	EA		1	2	2	3	2	2	3	31	20		
X1 00501		BOLT, THRU 1886685 (16764)	EA		2										
P F 00502	5977-730-7586	BRUSH, ELECTRICAL: generator 1946405 (16764)	EA		2	6	13	25	6	13	25	302	180	20	13
X1 00503		CLAMP, RETAINER: commutator end bearing 872358 (12603)	EA		1										
X1 00504		COIL, SET, FIELD 878705 (12603)	EA		1										

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION — REFERENCE NO. & MFR. CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
X1 00505	4730-278-5754	CUP, OIL LUBRICATING 453355 (16764)		EA		1										
X1 00506	4730-278-5758	CUP, OIL LUBRICATING 1880641 (16764)		EA		1										
X1 00507	6150-284-1369	END BELL, ELECTRICAL 1903862 (16764)		EA		1									20	27
X1 00508	2930-848-3218	FAN: generator 1944437 (16764)		EA		1									20	24
X1 00509		FRAME ASSEMBLY: commutator end 1958536 (16764)		EA		1									20	9
X1 00510	2920-358-7089	GASKET 819105 (16764)		EA		1										
X1 00511	5330-684-3123	GASKET, PLATE: ball bearing retainer 1934458 (16764)		EA		1										
X1 00512	2920-673-7189	HOLDER, BRUSH: ground 878710 (12603)		EA		1										
X1 00513	5977-628-7457	HOLDER, BRUSH: insulated 878711 (12603)		EA		1										
X1 00514	5970-633-6537	INSULATOR BUSHING: armature terminal 871538 (12603)		EA		1										
X1 00515	5970-501-2328	INSULATOR BUSHING: field terminal 1885090 (16764)		EA		2										
X1 00516	5970-358-7312	INSULATOR FIELD COIL 1912073 (16764)		EA		2										
X1 00517	5315-105-4082	KEY: fan 124545 (16764)		EA		1									20	26
X1 00518	5940-020-0346	LUG, TERMINAL 200346 (16764)		EA		1										
X1 00519	5310-012-1734	NUT, PLAIN, HEXAGON: terminal stud 121743 (16764)		EA		4										

242-151

242-451

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO. & MFR. CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
X1 00520	5315-298-4077	PIN, STRAIGHT, HEADLESS 809062 (16764)		EA		1										
X1 00521	5315-011-0409	PIN, STRAIGHT, HEADLESS 809593 (16764)		EA		1										
X1 00522	2920-732-3714	PLATE, RETAINER: ball bearing 1934457 (16764)		EA		1									20	28
X1 00523	5305-105-1207	SCREW 1914580 (16764)		EA		3									20	16
X1 00524	5305-269-3214	SCREW, CAP, HEXAGON: adjusting strap to water pump body 10624 (12603)		EA		1										
X1 00525	5305-208-6291	SCREW, MACHINE 1913960 (16764)		EA		2										
X1 00526		SCREW, MACHINE: field frame 225577 (16764)		EA		1										
X1 00527	5305-104-5250	SCREW, MACHINE: fillister head No. 6-32 thd size, 1/4 in. lg 454458 (16764)		EA		2									20	10
X1 00528		SHOE, POLE 859373 (12603)		EA		2										
P F 00529	2920-249-8283	SPRING, HELICAL: brush 1916324 (16764)		EA		2	2	2	3	2	2	3	40	100	20	12
X1 00530		STUD: terminal 1923056 (16764)		EA		1										
X1 00531	5940-651-7868	TERMINAL,STUD: armature 878703 (12603)		EA		1										
X1 00532	5310-274-7861	WASHER, FLAT 1914213 (16764)		EA		1										
X1 00533	5310-362-6765	WASHER, FLAT: terminal stud 1914583 (16764)		EA		2										
X1 00534	5310-407-9566	WASHER, LOCK 120214 (24617)		EA		2										

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
X1 00535	5310-734-8749	WASHER, LOCK 1914123 (16764)	EA		3									20	15
X1 00536		WASHER, LOCK: brush screw, No. 6 453289 (16764)	EA		2									20	11
X1 00537	5310-045-3294	WASHER, LOCK: field frame 453294 (16764)	EA		1										
X1 00538	5310-276-2946	WASHER, LOCK: terminal stud 1914579 (16764)	EA		4										
X1 00539	5330-171-3619 •	WASHER, NONMETALLIC 809961 (16764)	EA		1										
X1 00540	5330-171-7573	WASHER, NONMETALLIC: terminal stud 1914194 (16764)	EA		1										
0 00541	5310-880-7746	NUT, PLAIN, HEXAGON: generator to bracket	EA		2	*	*	*	*	*	*	*	*	20	22
0 00542	5310-732-0558	NUT, PLAIN, HEXAGON: mounting, bracket	EA		4	*	*	*	*	*	*	*	*	20	18
0 00543	5310-222-7255	NUT, PLAIN, HEXAGON: pulley	EA		1	*	*	*	*	*	*	*	*		
P 0 00544	2920-696-4270	PULLEY: generator F209M308 (14351)	EA		1	*	*	*	*	*	*	5	5	20	25
0 00545	5305-269-3214	SCREW, CAP, HEXAGON HEAD: strap adjusting, 3/8-16 thd size, 1-1/4 in. lg	EA		1	*	*	*	*	*	*	*	*	20	1
X2 0 00546		SPACER: adjusting strap 658160 (12603)	EA		1									20	3
P 0 00547	3930-886-2469	STRAP: adjusting 733037 (12603)	EA		1	*	*	*	*	*	*	5	5	20	4
X2 0 00548		STUD, PLAIN: mounting bracket, generator 13XX4228 (14351)	EA		4	*	*	*	*	*	*	*	*	20	21
0 00549	5310-044-6548	WASHER, FLAT: strap to generator	EA		1	*	*	*	*	*	*	*	*	20	5
0 00550	5310-017-3128	WASHER, LOCK: mounting, bracket 3/8 in.	EA		4	*	*	*	*	*	*	*	*	20	19

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION — REFERENCE NO. & MFR. CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
0 00551	5310-422-8265	WASHER, LOCK: pulley	EA		1	*	*	*	*	*	*	*	*		
0 00552	5310-637-9541	WASHER, LOCK: strap mounting	EA		1	*	*	*	*	*	*	*	*	20	2
0 00553	5310-407-9566	WASHER, LOCK: strap to generator	EA		3	*	*	*	*	*	*	*	*	20	6
0 00554	5310-710-6128	WASHER, PLAIN: mounting, bracket, 13/32 in.	EA		4	*	*	*	*	*	*	*	*	20	20
00555		0602 - GENERATOR REGULATOR													
0 00556	5310-768-0319	NUT, PLAIN, HEXAGON: mounting	EA		3	*	*	*	*	*	*	*	*	21	3
P 0 00557	2920-585-9859	REGULATOR, ENGINE, GENERATOR 1118932 (16764)	EA		1	2	2	4	2	2	4	46	20	21	2
0 00558	5305-022-3640	SCREW, CAP, HEXAGON HEAD: mounting, 1/4-28 thd size by 7/8 in.	EA		3	*	*	*	*	*	*	*	*	21	1
X2 0 00559		SHIELD: voltage regulator cover 768387 (12603)	EA		1										
0 00560	5310-637-9541	WASHER, LOCK: mounting	EA		3	*	*	*	*	*	*	*	*	21	4
00561		0603 - STARTING MOTOR													
P 0 00562	2920-064-7746	RELAY, SOLENIOD, ENGINE, STARTER, ELECTRIC 1114302 (16764)	EA		1	2	2	3	2	2	3	31	20	22	1
0 00563	5305-269-3212	SCREW, CAP, HEXAGON HEAD: starter mounting	EA		3	*	*	*	*	*	*	*	*	22	13
0 00564	5305-543-4302	SCREW, MACHINE: fillister head	EA		2	*	*	*	*	*	*	*	*	22	3
0 R 00565	2920-064-7737	STARTER, ENGINE, ELECTRICAL 1107244 (16764)	EA		1	*	2	2	*	2	2	14	10		
X1 00566		ARMATURE 1958222 (16764)	EA		1									22	15
X1 00567	5306-879-4603	BOLT, EXTERNALLY RELIEVED 1939970 (16764)	EA		2									22	8
P F 00568	5977-337-8112	BRUSH, CONTACT: starter 1906945 (16764)	EA		4	4	8	15	4	8	15	184	200	22	4

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(b) ITEM NO
X1 00569		COIL ASSEMBLY: field 1943529 (16764)		EA		1										
P F 00570	2920-064-7745	DRIVE, ENGINE, ELECTRICAL 1946306 (16764)		EA		1	*	*	2	*	*	2	10	20	22	10
X1 00571	5306-879-4602	BOLT, SHOLDERED 1941110 (16764)		EA		1										
X1 00572	2920-741-9792	LEVER ASSEMBLY 1941115 (16764)		EA		1										
X1 00573	5310-042-6894	NUT, PLAIN, HEXAGON 1941097 (16764)		EA		1										
X1 00574	5315-800-6936	PIN, SPRING 1941114 (16764)		EA		1										
X1 00575	2920-841-3254	PLUNGER, SOLENOID 1941113 (16764)		EA		1										
X1 00576	2920-855-8625	SPRING, HELICAL, COMPRESSION 1940974 (16764)		EA		1										
P F 00577	2920-841-8289	END BELL: commutator 1941109 (16764)		EA		1	*	*	2	*	*	2	5	20	22	9
X1 00578		GROMMET 1933765 (16764)		EA		1										
X1 00579	5977-675-1765	[illegible], BRUSH 1926618 (16764)		EA		2										
X1 00580	5977-893-0088	HOLDER, ELECTRICAL 1940477 (16764)		EA		2										
X1 00581		HOUSING, DRIVE 1958220 (16764)		EA		1									22	14
P F 00582	3120-661-6764	BUSHING, SLEEVE 1839345 (16764)		EA		1	*	*	2	*	*	2	7	20	22	11
X1 00583	5970-782-7249	INSULATOR PLATE 1940467 (16764)		EA		4										

242-451

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(b) ITEM NO
X1 00584	2920-010-2126	LEAD ASSEMBLY: brush 1940478 (16764)	EA		1										
X1 00585	5310-934-9758	NUT, PLAIN, HEXAGON: No. 10-24 thd size 120361 (24617)	EA		2										
X1 00586	5315-010-2125	PIN, STRAIGHT, HEADED: brush 1940474 (16764)	EA		1										
X1 00587	5315-276-4778	PIN, STRAIGHT, HEADLESS 1914843 (16764)	EA		1										
X1 00588	5340-804-9666	RING, RETAINING 1928022 (16764)	EA		1										
X1 00589	5305-989-5627	SCREW, MACHINE 274738 (16764)	EA		2										
X1 00590	5305-208-6291	SCREW, MACHINE 1913960 (16764)	EA		4										
X1 00591	5305-989-0839	SCREW, MACHINE: field lead to ground 1949653 (16764)	EA		1										
X1 00592	5305-855-0974	SCREW, TAPPING, THREAD 1926648 (16764)	EA		4									22	5
X1 00593		SHOE, POLE 1940469 (16764)	EA		4										
P F 00594	5977-776-9967	SPRING, BRUSH 1940475 (16764)	EA		4	2	2	3	2	2	3	40	100	22	6
X1 00595	2920-075-4759	SPRING, HELICAL 1958224 (16764)	EA		1										
X1 00596	2920-775-6242	STOP: pinion 1928021 (16764)	EA		1										
X1 00597		SUPPORT ASSEMBLY: brush holder 1941045 (16764)	EA		2										
X1 00598	5310-904-0923	WASHER, FLAT 1928023 (16764)	EA		1										

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO. & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(b) ITEM NO
X1 00599	5310-407-9566	WASHER, LOCK 120214 (24617)	EA		1										
X1 00600	5310-527-3288	WASHER, LOCK: field lead to ground, 5/8 in. 121801 (24617)	EA		1										
X1 00601	5310-734-8749	WASHER, LOCK: thru bolt, No. 10 1914123 (16764)	EA		2									22	7
X1 00602	5330-291-4639	WASHER, NONMETALLIC 818265 (16764)	EA		1										
0 00603	5310-637-9541	WASHER, LOCK: solenoid mounting, No. 14	EA		2	*	*	*	*	*	*	*	*	22	2
0 00604	5310-637-9541	WASHER, LOCK: starting mounting	EA		3	*	*	*	*	*	*	*	*	22	12
00605		0605 - IGNITION COMPONENTS													
0 00606	5306-225-9086	BOLT, MACHINE	EA		2	*	*	*	*	*	*	*	*	23	12
P 0 00607	2920-038-4447	COIL, IGNITION 1115043 (16764)	EA		1	2	2	3	2	2	3	31	15	23	9
P 0 00608	2920-358-7028	DISTRIBUTOR, IGNITION SYSTEM 1112604 (16764)	EA		1	2	2	3	2	2	3	30	5	24	
P 0 00609	2920-294-3895	CAP, IGNITION, DISTRIBUTOR 824735 (16764)	EA		1	2	3	5	2	3	5	60	50	24	1
P 0 00610	2920-510-5338	CAPACITOR, FIXED, PAPER, DIELECTRIC 1952331 (16764)	EA		1	6	13	25	6	13	25	300	100	24	6
P 0 00611	2920-294-3389	CONTACT SET, DISTRIBUTOR 1911119 (16764)	EA		1	6	13	25	6	13	25	300	100	24	5
P 0 00612	2920-640-7232	ROTOR, IGNITION 820445 (16764)	EA		1	3	6	11	3	6	11	132	100	24	2
0 00613	5305-207-5344	SCREW, MACHINE: contact set	EA		1	*	*	*	*	*	*	*	*	24	4
P 0 00614	2920-917-5590	SEAL, DISTRIBUTOR 1952331 (16764)	EA		1	*	*	*	*	*	*	5	100	24	3

242-151

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION — REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
P 0 00615	5975-951-8272	NIPPLE, ELECTRICAL CABLE: spark plug and coil wire 1913635 (16764)	EA		6				SEE	GRP	9901			23	2
0 00616	5310-880-7746	NUT, PLAIN, HEXAGON: coil mounting	EA		2	*	*	*	*	*	*	*	*	23	8
P 0 00617	2920-293-5219	SPARK PLUG: resistor type unshielded XD16 (11583)	EA		4	48	101	201	48	101	201	2400	400	23	5
P 0 00618	2520-594-3075	GASKET: spark plug A672 (11583)	EA		4	13	25	50	13	25	50	600	*	23	6
0 00619	5310-407-9566	WASHER, LOCK: coil mounting	EA		2	*	*	*	*	*	*	*	*	23	11
MF 0 00620	2920-846-4413	WIRE ASSEMBLY: coil to distributor 717993 (12603) MANUFACTURE FROM:	EA		1										
P F 00621	5940-500-6905	CLIP: coil wire	EA		2				SEE	GRP	9901				
P F 00622	5940-272-2171	FERRULE, ELECTRICAL, CONDUCTOR: coil wire, distributor end 802 (79550)	EA		2	2	3	5	2	3	5	62	50		
P F 00623	5975-951-8272	NIPPLE: coil wire 1913625 (16764)	EA		1				SEE	GRP	9901				
X2 0 00624		SUPPRESSOR: coil to distributor 300483 (19728)	EA		1	*	*	*	*	*	*	*	*		7
P F 00625	6145-845-1861	WIRE, ELECTRICAL (12 in. required)	FT						SEE	GRP	9501				
MF 0 00626	2920-848-2208	WIRE ASSEMBLY: ignition wire, spark plug to distributor 717996 (12603) MANUFACTURE FROM:	EA		4									23	3
P F 00627	5940-272-2175	CLIP, ELECTRICAL: ignition wire, spark plug end 824 (79550)	EA		4	3	6	13	3	6	13	155	100	23	4
P F 00628	5940-500-6905	CLIP, ELECTRICAL: ignition wire, distributor end	EA		4				SEE	GRP	9901				
P F 00629	5940-272-2171	FERRULE, ELECTRICAL, CONDUCTOR: ignition wire, distributor end 802 (79550)	EA		4	3	6	13	3	6	13	155	100	23	1

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
P F 00630 00631	6145-845-1861	WIRE, ELECTRICAL (4 Ft. required for each WIRE)	FT						SEE	GRP	9501				
		0607 - INSTRUMENT OR ENGINE CONTROL PANEL													
P 0 00632	6625-075-4763	AMMETER 506519 (70040)	EA		1	*	*	2	*	*	2	10	20	25	2
0 00633	5305-068-0500	BOLT, MACHINE: control panel	EA		8	*	*	*	*	*	*	*	*	25	13
P 0 00634	6620-776-9962	GAGE, PRESSURE, DIAL INDICATING: oil 1509326 (70040)	EA		1	*	*	2	*	*	2	10	20	25	17
P 0 00635	2920-217-9112	GASKET: time totalizing meter 648566 (12603)	EA		2	*	*	2	*	*	2	10	100	25	15
C F 00636		HARNESS: dash 1615289 (12603)	EA		1	*	*	*	*	*	*	*	10	25	12
C F 00637		HARNESS: engine 797550 (12603)	EA		1	*	*	*	*	*	*	*	10	25	11
P 0 00638	6680-778-6312	INDICATOR, LIQUID QUANTITY: fuel 1518587 (70040)	EA		1	*	*	2	*	*	2	10	20	25	1
P 0 00639	6685-776-9964	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE: engine 1513282 (70040)	EA		1	*	*	2	*	*	2	10	20	25	8
P 0 00640	6240-012-7934	LAMP, INCANDESCENT: transmission temperature warning 57 (24455)	EA		1	2	2	4	2	2	4	53	20	25	3
P 0 00641	6620-773-9418	LIGHT TEMPERATURE: transmission warning PL21-101 (13445)	EA		1	*	*	*	*	*	*	5	5	25	4
P 0 00642	6645-836-1985	METER, TIME TOTALIZING MI961 (74400)	EA		1	*	*	2	*	*	2	10	20	25	14
P 0 00643	5340-217-9234	SPACER, RING, TIME TOTALIZING METER	EA		1	*	*	*	*	*	*	5	5	25	16
P 0 00644	2920-064-7750	SWITCH: ignition X35187 (16764)	EA		1	*	*	2	*	*	2	10	20	25	9
P 0 00645	5930-581-6526	SWITCH, PUSH-PULL: headlamp 5050 (13445)	EA		1	*	*	2	*	*	2	10	20	25	7
0 00646	5310-637-9541	WASHER, LOCK: control panel bolt	EA		8	*	*	*	*	*	*	*	*		

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO. & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
00647		0608 - MISCELLANEOUS ITEMS													
X2 0 00648		FUSEHOLDER 885894 (12603)	EA		1	*	*	*	*	*	*	*	*	25	6
P 0 00649	5920-280-4007	FUSE, CARTRIDGE SFE14 (71400)	EA		1	2	2	4	2	2	4	46	20	25	5
P 0 00650	5930-073-2135	SWITCH: neutral starting 9162 (13445)	EA		1	*	*	2	*	*	2	10	20	[illegible]	1
P 0 00651	5930-679-9956	SWITCH: pressure, stoplight 620313 (12603)	EA		1	*	2	2	*	2	2	14	20		
00652		0609 - LIGHTS													
X2 0 00653		BRACKET: headlight mounting BP1061-334-1 (78422)	EA		1										
0 00654	5340-391-3827	CLIP: wire to front cowl mounting bolt	EA		1	*	*	*	*	*	*	*	*		
0 00655	5340-164-2772	CLIP: wire to upright	EA		2	*	*	*	*	*	*	*	*		
X2 0 00656		CONNECTOR: headlight wire to harness 2962646 (77060)	EA		1	*	*	*	*	*	*	*	*		
P 0 00657	6620-774-4704	HEADLAMP: standard light KD860T12 (75175)	EA		1	*	*	*	*	*	*	5	10	26	1
P 0 00658	6240-809-4977	LAMP, INCANDESCENT: standard headlight, sealed beam 4412 (24446)	EA		1	2	2	4	2	2	4	44	20		
P 0 00659	6240-946-4802	LAMP: incandescent, original headlight 4422 (24455)	EA		1	2	2	4	2	2	4	44	20	26	2
X2 0 00660		LIGHT: stop and taillight 165749 (12603)	EA		1	*	*	*	*	*	*	*	10	27	1
P 0 00661	6240-155-7900	LAMP, INCANDESCENT: stop and taillight 1176 (24455)	EA		1	2	2	4	2	2	4	44	20	27	2
X2 0 00662		LOOM: light to stoplight switch, taillight to harness 105CAWG4 (77449)	EA		2	*	*	*	*	*	*	*	*		

242-451

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION — REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
X2 0 00663	5310-880-7744	NUT, PLAIN, HEXAGON: bracket mounting	EA		4	*	*	*	*	*	*	*	*		
X2 0 00664		SPACER: stud to headlamp 1302145 (12603)	EA		4	*	*	*	*	*	*	*	*		
X2 0 00665		STUD: headlamp to upright 1302141 (12603)	EA		4	*	*	*	*	*	*	*	*		
X2 0 00666		TERMINAL: headlight wire 2962447 (77060)	EA		1	*	*	*	*	*	*	*	*		
X2 0 00667		WASHER: headlamp to spacer 664403 (12603)	EA		3	*	*	*	*	*	*	*	*		
X2 0 00668	5310-407-9566	WASHER, LOCK: bracket mounting	EA		4	*	*	*	*	*	*	*	*		
X2 0 00669		WIRE: light to stoplight switch 675804 (12603)	EA		1	*	*	*	*	*	*	*	*		
X2 0 00670		WIRE: taillight to harness 743156 (12603)	EA		1	*	*	*	*	*	*	*	*		
00671		0610 - SENDING UNITS AND WARNING SWITCHES													
P 0 00672	5330-449-6532	GASKET: liquid quantity transmitter 627982 (12603)	EA		1	*	*	2	*	*	2	10	100	13	4
X2 0 00673		NUT, PLAIN, HEXAGON: No. 10-24 14D10J (12603)	EA		1	*	*	*	*	*	*	*	*	13	5
X2 0 00674		SCREW: No. 10-24 784071 (12603)	EA		5	*	*	*	*	*	*	*	*	13	8
P 0 00675	5930-857-1066	SWITCH: time totalizing meter M1670 (74400)	EA		1	*	*	2	*	*	2	10	20	25	10
P 0 00676	6680-073-2132	TRANSMITTER, LIQUID QUANTITY: fuel gage, tank unit 667411 (12603)	EA		1	*	*	2	*	*	2	10	20	13	7
P 0 00677	6685-776-9965	TRANSMITTER, TEMPERATURE, ELECTRICAL RESISTANCE: engine water 880858 (12603)	EA		1	*	*	2	*	*	2	10	20	2	27
P 0 00678	6685-776-9968	TRANSMITTER, TEMPERATURE, ELECTRICAL RESISTANCE: transmission 1513314 (70040)	EA		1	*	*	2	*	*	2	10	20	8	11

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
0 00679	5310-527-3288	WASHER, LOCK: No. 10	EA		1	*	*	*	*	*	*	*	*	13	6
00680		0611 - HORN													
0 00681	5306-753-4310	BOLT, MACHINE: horn mounting	EA		1	*	*	*	*	*	*	*	*	28	1
P 0 00682	5977-578-6495	BRUSH, ELECTRICAL 1998757 (52788)	EA		1	*	*	*	*	*	*	5	10		
P F 00683	2530-101-1701	BUTTON HORN 5670205 (52788)	EA		1	*	*	*	*	*	*	5	5	47	51
X2 0 00684		CABLE ASSEMBLY: with contact 871034 (12603)	EA		1	*	*	*	*	*	*	*	*	47	54
P F 00685	2590-374-0826	CONTACT, ELECTRICAL 029031 (77640)	EA		1	*	*	2	*	*	2	6	10	47	53
P 0 00686	2530-358-6665	COVER: horn connector 268298 (52788)	EA		1	*	*	2	*	*	2	6	10		
P F 00687	2540-215-4048	CUP: contact 029037 (77640)	EA		1	*	*	*	*	*	*	5	5	47	50
X2 0 00688		FERRULE: insulating 873966 (12603)	EA		1	*	*	*	*	*	*	*	*	47	55
P 0 00689	2590-771-5622	HORN, ELECTRICAL RC3612 (56118)	EA		1	*	*	2	*	*	2	6	10	28	3
0 00690	5310-761-6882	NUT, PLAIN, HEXAGON: horn relay	EA		1	*	*	*	*	*	*	*	*	28	7
X2 0 00691		PLATE 664833 (12603)	EA		1	*	*	*	*	*	*	*	*	47	48
P 0 00692	5945-665-9895	RELAY, ARMATURE: horn 1116858 (16764)	EA		1	*	*	2	*	*	2	7	5	28	5
0 00693	5305-068-0510	SCREW, MACHINE: horn relay	EA		1	*	*	*	*	*	*	*	*	28	4
0 00694	5305-900-3253	SCREW, MACHINE: mounting bracket	EA		2	*	*	*	*	*	*	*	*		

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
0 00695	5305-854-6690	SCREW, TAPPING, THREAD FORMING	EA		3	*	*	*	*	*	*	*	*	47	49
P F 00696	2590-253-7229	SPRING, HELICAL: horn button 401081 (77640)	EA		1	*	*	*	*	*	*	5	5	47	52
P F 00697	2530-882-5590	SPRING: horn contact 5670219 (52788)	EA		1	*	*	*	*	*	*	5	5	47	56
0 00698	5310-407-9566	WASHER, LOCK: horn mounting	EA		1	*	*	*	*	*	*	*	*	28	2
0 00699	5310-637-9541	WASHER, LOCK: horn relay	EA		1	*	*	*	*	*	*	*	*	28	6
0 00700	5310-527-3288	WASHER, LOCK: mounting bracket	EA		2	*	*	*	*	*	*	*	*		
P F 00701	5310-842-9822	WASHER, SPECIAL	EA		1	*	*	*	*	*	*	5	5	47	57
00702		0612 - BATTERIES, STORAGE													
P 0 00703	6140-264-5446	BATTERY, STORAGE: long battery WBE131EAMEND1TYPE3EE ( )	EA		1	2	2	3	2	2	3	31	15	29	7
·2 0 00704		CABLE, BATTERY: solenoid to battery 1304266 (12603)	EA		1	*	*	*	*	*	*	*	25	29	·
P 0 00705	3930-066-5544	CABLE, BATTERY: starter mounting bolt to battery (12603)	EA		1	*	*	2	*	*	2	7	25	29	6
X2 0 00706		CLAMP: battery cables to box 31H27 (12603)	EA		1										
P 0 00707	6140-799-7733	CLAMP, BATTERY, HOLDDOWN 665138 (12603)	EA		1	*	*	*	*	*	*	5	5	29	4
0 00708	5310-012-0368	NUT, PLAIN, HEXAGON: battery holddown clamp	EA		6	*	*	*	*	*	*	*	*	29	1
0 00709	5310-891-1709	NUT, PLAIN, HEXAGON: 5/16-18 thd size	EA		1	*	*	*	*	*	*	*	*		
P 0 00710	6140-164-2966	PAD, BATTERY 667432 (12603)	EA		1	*	*	*	*	*	*	5	5		
·2 0 00711		PAD, BATTERY 668772 (12603)	EA		4	*	*	*	*	*	*	*	20		

best copy available

best copy available

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
X2 O 00712		STUD: battery holddown clamp 713405 (12603)	EA		2									29	9
P O 00713	6810-249-9354	SULFURIC ACID, ELECTROLYTE OS801 (81348)	GAL			2	2	3	2	2	3	31	15		
X2 O 00714		TRAY: battery 745991 (12603)	EA		1									29	8
O 00715	5310-187-0145	WASHER, FLAT: battery holddown clamp, 5/16 in.	EA		2	*	*	*	*	*	*	*	*	29	3
O 00716	5310-407-9566	WASHER, LOCK: battery holddown clamp	EA		4	*	*	*	*	*	*	*	*	29	2
O 00717	5310-791-8092	WASHER, SPECIAL	EA		1	*	*	*	*	*	*	*	*		
00718		0615 - RADIO INTERFERENCE SUPPRESSION													
P O 00719	5910-050-2023	CAPACITOR, FIXED, PAPER, DIELECTRIC 1907136 (16764)	EA		4	3	5	10	3	5	10	124	80	23	10
P O 00720	5905-710-5363	RESISTOR: coil to distributor wire 734680 (2603)	EA		1	2	2	3	2	2	3	31	20		
00721		GROUP 07 - TRANSMISSION													
00722		0708 - TORQUE CONVERTER													
X2 O 00723		CONVERTER: torque 224375 (12603)	EA		1	*	*	*	*	*	*	*	*	31	1
X2 O 00724		BOLT: drive plate to flywheel 772964 (12603)	EA		6	*	*	*	*	*	*	*	*	31	5
P F 00725	5306-833-9055	BOLT, SPECIAL: plate to converter	EA		6	*	*	*	*	*	*	5	5	31	4
X2 F 00726		PLATE: drive 224338 (12603)	EA		1									31	2
X2 F 00727		PLATE: drive and reinforcing 224339 (12603)	EA		1									31	3
X2 H 00728		WASHER: drive plate to flywheel bolt 757892 (12603)	EA		6										

242-451

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
H 00729	5310-637-9541	WASHER, LOCK: torque converter housing to flywheel housing	EA		12				*	*	*	*	*		
00730		0710 - TRANSMISSION ASSEMBLY													
X2 F 00731		BALL JOINT: forward and reverse rod assembly 1301361 (12603)	EA		1	*	*	*	*	*	*	*	*	30	13
X2 F 00732		BRACKET: upper lever 335351 (12603)	EA		1										7
X2 F 00733		BRACKET: w/bushing, direction rod lower 664987 (12603)	EA		1									30	23
P F 00734	3120-661-4286	BUSHING: direction rod lower bracket A694-3 (12204)	EA		1	*	*	*	*	*	*	5	10	30	24
X2 F 00735		BUSHING: upper bracket, directional lever 665687 (12603)	EA		1	*	*	*	*	*	*	*	*	30	5
P F 00736	3930-886-2412	BUSHING: upper bracket, directional lever A1084-4 (12603)	EA		1	*	*	*	*	*	*	5	10	30	6
X2 F 00737		CAP: upper bracket, directional lever 335352 (12603)	EA		1									30	8
X2 F 00738		CLEVIS: forward and reverse rod assembly 235204 (12603)	EA		1									30	18
P F 00739	3930-886-2410	COLLAR: spring pin 658336 (12603)	EA		1	*	*	*	*	*	*	5	5	30	10
P F 00740	5355-765-5628	KNOB: control 653785 (12603)	EA		1				SEE	GRP	9901			30	4
X2 F 00741		LEVER: direction control 1615703 (12603)	EA		1									30	1
F 00742	5310-853-9535	NUT, PLAIN, HEXAGON: forward and reverse control lever	EA		1	*	*	*	*	*	*	*	*	30	16
F 00743	5310-853-9535	NUT, PLAIN, HEXAGON: forward and reverse rod	EA		1	*	*	*	*	*	*	*	*	30	14
F 00744	5310-167-1304	NUT, PLAIN, HEXAGON: transmission to axle adapter, 1/2-20	EA		9	*	*	*	*	*	*	*	*	34	24

42-451

(1) SMR CODE INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
F 00745	5315-839-2326	PIN, COTTER: forward and reverse rod assembly	EA		1	*	*	*	*	*	*	*	*	30	21
F 00746	5315-844-5836	PIN, SPRING: directional control lever	EA		1	*	*	*	*	*	*	*	*	30	2
F 00747	5315-839-8362	PIN, STRAIGHT, HEADED: forward and reverse rod assembly	EA		1	*	*	*	*	*	*	*	*	30	19
X2 F 00748		ROD: forward and reverse 664991 (12603)	EA		1									30	17
X2 F 00749		ROD: forward and reverse control lever 335672 (12603)	EA		1									30	12
F 00750	5305-068-0505	SCREW, CAP, HEXAGON HEAD: direction rod lower bracket	EA		2	*	*	*	*	*	*	*	*	30	20
F 00751	5305-225-7773	SCREW, CAP, SOCKET HEAD: directional lever cap, 1/4-28 thd size by 5/8 in.	EA		4	*	*	*	*	*	*	*	*	30	9
F 00752	5305-723-9387	SETSCREW	EA		1	*	*	*	*	*	*	*	*	30	11
P F R 00753	3930-933-3762	TRANSMISSION ASSEMBLY 281028 (12603)	EA		1	*	*	2	*	*	2	6	5		
X2 F 00754		ARM AND SHAFT ASSEMBLY: brake operating 222422 (12603)	EA		1									33	8
P H 00755	3110-887-5524	BALL, BEARING: oil pressure relief 147493 (24617)	EA		1				*	*	2	6	10	32	62
P H 00756	3110-151-6680	BEARING, BALL, ANNULAR: directional selector locating 207WG (21335)	EA		2				*	2	2	12	20	32	110
P H 00757	3110-144-8534	BEARING, BALL, ANNULAR: directional selector shaft 207S (76062)	EA		1				SEE	GRP	9901			32	77
P H 00758	3110-144-8534	BEARING, BALL, ANNULAR: directional selector shaft 207S (76062)	EA		1				SEE	GRP	9901			32	24
P H 00759	3110-155-6179	BEARING: main gear drive 43209 (43334)	EA		1				*	*	2	6	10	32	54
F 00760	5306-042-3570	BOLT ASSEMBLED WASHER: oil sump cover	EA		10	*	*	*	*	*	*	*	*	32	91
P F 00761	2520-983-4232	BRAKE SHOE, EXTERNALLY ACTUATED: w/linings A722H1214 (78500)	EA		1	2	2	2	2	2	2	15	50	33	1

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
X2 H 00762		CAP: rear bearing, directional selector 222423 (12603)	EA		2									32	105
X2 H 00763		CASE: transmission 222493 (12603)	EA		1									32	7
P H 00764	3110-587-6376	CONE AND ROLLERS, TAPERED: bearing, pinion shaft front HM88547 (60038)	EA		1				*	*	2	6	10	32	73
P H 00765	3110-765-1213	CONE AND ROLLERS, TAPERED: bearing, pinion shaft rear HM89449 (60038)	EA		1				*	*	2	6	10	32	101
X2 F 00766		COVER: oil sump 220760 (12603)	EA		1									32	93
P H 00767	3110-587-6404	CUP, TAPERED ROLLER: bearing, pinion shaft front HM88511 (60038)	EA		1				*	*	2	6	10	32	74
P H 00768	3110-321-7247	CUP, TAPERED ROLLER: bearing, pinion shaft rear HM89411 (60038)	EA		1				*	*	2	6	10	32	102
P H 00769	2520-848-2595	DISK, OUTER: directional selector 222605 (12603)	EA		4				SEE	GRP	9901			32	85
P H 00770	2520-848-2595	DISK, OUTER: directional selector 222605 (12603)	EA		4				SEE	GRP	9901			32	14
X2 H 00771		DRUM AND HUB: directional selector 222387 (12603)	EA		1									32	89
X2 H 00772		DRUM AND HUB: directional selector 222388 (12603)	EA		1									32	10
X2 H 00773		DRUM: hand brake 222399 (12603)	EA		1									32	70
X2 O 00774		GASKET: bearing cap 220557 (12603)	EA		2				*	*	*	*	200	32	107
P H 00775	2520-587-5580	GASKET: oil pump cover plate 220561 (12603)	EA		1				*	2	2	12	100	32	38
P H 00776	2520-587-6281	GASKET: oil sump cover 220584 (12603)	EA		2				2	2	2	24	200	32	95

242-051

242-J51

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
X2 H 00777		GEAR AND BUSHING 222424 (12603)		EA		1				SEE	GRP	9901			32	79
X2 H 00778		GEAR AND BUSHING 222424 (12603)		EA		1				SEE	GRP	9901			32	21
P H 00779	2520-781-4549	GEAR DRIVE 208791 (12603)		EA		1				*	*	*	5	5	32	60
P H 00780	4320-781-4553	GEAR, DRIVEN 220854 (12603)		EA		1				*	*	*	5	5	32	42
X2 H 00781		GEAR: main drive 220600 (12603)		EA		1				*	*	*	*	*	32	50
X2 H 00782		GEAR: pinion shaft 220655 (12603)		EA		1				*	*	*	*	*	32	98
X2 F 00783		HOUSING, BRAKE 222461 (12603)		EA		1									33	18
X2 H 00784		HOUSING: converter 222492 (12603)		EA		1									32	53
X2 H 00785		KEY: oil pump gear 7J1005 (12603)		EA		1				*	*	*	*	*	32	43
H 00786	5315-616-5520	KEY, WOODRUFF: brake drum		EA		1				*	*	*	*	*	32	103
X2 F 00787		LEVER, CAM 222459 (12603)		EA		1									33	13
X2 H 00788		NUT: bearing retaining 208762 (12603)		EA		2				*	*	*	*	*	32	109
X2 F 00789		NUT: draw rod sleeve, hand brake 222515 (12603)		EA		1									33	14
F 00790	5310-167-1304	NUT, PLAIN, HEXAGON: transmission to axle, adapter		EA		9	*	*	*	*	*	*	*	*	34	24
H 00791	5310-383-4675	NUT, SLOTTED, HEXAGON: brake drum		EA		1				*	*	*	*	*	32	69
P H 00792	5330-350-9013	PACKING, PREFORMED: bearing cap 25K30016 (12603)		EA		2				SEE	GRP	9901			32	108

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUSTRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
P H 00793	5330-350-9013	PACKING, PREFORMED: converter housing to transmission 25K30016 (12603)	EA		2				SEE	GRP	9901			32	49
P H 00794	5330-972-8204	PACKING, PREFORMED: converter housing to transmission, rear 600580 (11314)	EA		1				*	2	2	12	100	32	52
P H 00795	5330-776-0580	PACKING, PREFORMED: oil passage 25K30020 (12603)	EA		1				*	2	2	12	100	32	61
P H 00796	5330-350-9013	PACKING, PREFORMED: oil pump gear cover plate 25K30016 (12603)	EA		2				SEE	GRP	9901			32	41
P H 00797	4820-359-4054	PACKING, PREFORMED: pinion shaft front bearing spacer 25K40100 (12603)	EA		1				*	2	2	12	100	32	72
P H 00798	5330-791-8261	PACKING WITH RETAINER: oil pressure relief 221023 (12603)	EA		1				*	2	2	12	100	32	66
X2 F 00799		PIN: cam lever 222510 (12603)	EA		1									[illegible]	15
H 00800	5315-013-7214	PIN, COTTER: brake drum nut	EA		1				*	*	*	*	*	32	68
F 00801	5315-012-1222	PIN, COTTER: parking brake draw rod	EA		1	*	*	*	*	*	*	*	*	[illegible]	6
H 00802	5315-072-6703	PIN, STRAIGHT, HEADLESS: housing to case	EA		1				*	*	*	*	*		
X2 H 00803		PISTON: directional selector 222390 (12603)	EA		1				SEE	GRP	9901			32	86
X2 H 00804		PISTON: directional selector 222390 (12603)	EA		1				SEE	GRP	9901			32	13
X2 H 00805		PLATE ASSEMBLY: oil pump gear cover, w/oil seal and relief plug seat 221938 (12603)	EA		1									32	36
P H 00806	2530-300-0856	SEAL: oil pump gear cover plate 221192 (12603)	EA		1				*	2	2	12	100	32	37
X2 H 00807		PLATE: end, directional selector disk 220137 (12603)	EA		1				SEE	GRP	9901			32	82

242-451

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
X2 H 00808		PLATE: end, directional selector disk 220137 (12603)	EA		1				SEE	GRP	9901			32	17
X2 H 00809		PLATE: oil pump retainer 220563 (12603)	EA		1									32	44
X2 F 00810		PLUG, BUTTON: valve lever hole 730335 (12603)	EA		1	*	*	*	*	*	*	*	*	30	
X2 H 00811		PLUG: oil pressure relief 208784 (12603)	EA		1				*	*	*	*	*	32	67
X2 O 00812		PLUG: oil sump drain, magnetic 104274 (12603)	EA			*	*	*	*	*	*	*	*	32	30
H 00813	4730-019-9566	PLUG, PIPE: bearing cap	EA		2				*	*	*	*	*	32	106
H 00814	4730-044-4687	PLUG, PIPE: oil pump gear cover plate	EA		1				*	*	*	*	*	32	35
P H 00815	2520-587-5579	RING: directional selector, piston, inner 222494 (12603)	EA		1				*	*	*	5	5	34	11
P H 00816	2520-587-5575	RING: directional selector, piston, outer 220618 (12603)	EA		1				SEE	GRP	9901			32	[illegible]
P H 00817	2520-587-5575	RING: directional selector, piston, outer 220618 (12603)	EA		1				SEE	GRP	9901			32	37
X2 H 00818		RING: main drive, gear oil seal 3CK35 (53781)	EA		2				*	*	*	*	*	32	57
P H 00819	2520-713-3752	RING: main drive, gear locating 224052 (12603)	EA		1				*	*	*	5	5	32	55
P H 00820	2520-620-6111	RING, OIL SEAL, PUMP: directional selector rear bearing cap, forward selector and reverse selector 209781 (12603)	EA		2				*	*	*	5	10	32	19
X2 F 00821	5340-422-7302	RING, RETAINER: arm and shaft washer 224047 (12603)	EA		2									33	10
X2 H 00822		RING, RETAINING: directional selector shaft bearing, froward selector and reverse selector 208761 (12603)	EA		2				*	*	*	*	*	32	25

242-

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
P H 00823	5340-844-0074	RING, RETAINING: directional selector shaft gear, forward selector and reverse selector 224109 (12603)	EA		2				*	*	*	5	10	32	8
P H 00824	5340-844-0073	RING, RETAINING: end plate 223946 (12603)	EA		1				SEE	GRP	9901			32	81
F H 00825	5340-844-0073	RING, RETAINING: end plate 223946 (12603)	EA		1				SEE	GRP	9901			32	18
P H 00826	5340-439-4147	RING, RETAINING: oil pump gear 224095 (12603)	EA		1				*	*	*	5	10	32	39
X2 H 00827		RING, RETAINING: pinion shaft front bearing 223891 (12603)	EA		1				*	*	*	*	*	32	75
P H 00828	5340-845-8939	RING, RETAINING: rear bearing, locating 223968 (12603)	EA		1				*	*	*	5	10	32	100
X2 F 00829		ROD, DRAW: v, brake 222458 (12603)	EA		1										11
X2 F 00830		SCREEN: oil sump 220586 (12603)	EA		1	*	*	*	*	*	*	*	*	32	94
F 00831	5305-021-3825	SCREW, CAP, HEXAGON HEAD: brake housing	EA		2	*	*	*	*	*	*	*	*		16
H 00832	5305-045-1988	SCREW, CAP, HEXAGON HEAD: converter housing to transmission	EA		14				*	*	*	*	*	32	47
H 00833	5305-050-1076	SCREW, CAP, HEXAGON HEAD: converter housing to transmission	EA		1				*	*	*	*	*		
H 00834	5305-269-3218	SCREW, CAP, HEXAGON HEAD: oil pump gear cover	EA		1				*	*	*	*	*		
H 00835	5305-269-3211	SCREW, CAP, HEXAGON HEAD: oil pump gear cover	EA		8				*	*	*	*	*	32	65
H 00836	5305-068-0501	SCREW, CAP, HEXAGON HEAD: oil pump retainer plate	EA		1				*	*	*	*	*	32	46
F 00837	5305-269-3213	SCREW, CAP, HEXAGON HEAD: torque converter housing	EA		12	*	*	*	*	*	*	*	*		
H 00838	5305-053-8993	SCREW, CAP, HEXAGON HEAD: transmission to axle adapter	EA		6				*	*	*	*	*		12
H 00839	5305-269-3211	SCREW, CAP, HEXAGON HEAD: rear bearing cap	EA		8				*	*	*	*	*	32	104

242-451

best copy available

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
H 00840	5305-164-0938	SCREW, PISTON TILT	EA		5				*	*	*	*	*	32	59
P H 00841	2520-587-5563	SEAL: converter housing to transmission, front 220556 (12603)	EA		1				*	2	2	12	100	32	51
X2 H 00842		SEAL: directional selector, piston, inner 224494 (12603)	EA		1				*	*	*	*	100	32	88
X2 H 00843		SEAL: oil, directional selector shaft 284W2T8 (80201)	EA		1				*	*	*	*	100	32	76
P H 00844	5330-587-5568	SEAL, PLAIN, ENCASED: oil, directional selector shaft 480452R (11314)	EA		1				*	2	2	12	100	32	26
P H 00845	5330-587-5892	SEAL, PLAIN, ENCASED: pinion shaft front bearing 286W124T8 (80201)	EA		1				*	2	2	12	100	32	71
P H 00846	3930-848-3229	SELECTOR ASSEMBLY: reverse directional 222501 (12603)	EA		1				*	*	*	5	5		
P H 00847	2520-900-6878	SELECTOR DISK: directional selector, inner 222391 (12603)	EA		4				SEE	GRP	9901			32	84
P H 00848	2520-900-6878	SELECTOR DISK: directional selector, inner 222391 (12603)	EA		4				SEE	GRP	9901			32	15
X2 H 00849		SELECTOR: forward directional 222503 (12603)	EA		1										
X2 H 00850		SHAFT: directional selector, forward and reverse selector 220612 (12603)	EA		2									32	22
X2 H 00851		SHIM: main drive gear bearing 220580 (12603)	EA		1				*	*	*	*	*	32	56
X2 H 00852		SHIM: pinion, shaft front bearing, .002 in. 220769 (12603)	EA		1				*	*	*	*	*	32	96
X2 H 00853		SHIM: pinion, shaft front bearing, .004 in. 220566 (12603)	EA		1				*	*	*	*	*		
X2 H 00854		SHIM: pinion, shaft front bearing, .007 in. 220567 (12603)	EA		1				*	*	*	*	*		

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(b) ITEM NO
X2 H 00855		SHIM: pinion, shaft front bearing .010 in. 220568 (12603)		EA		1				*	*	*	*	*		
X2 H 00856		SHIM: transmission to axle adapter 221017 (12603)		EA		1				*	*	*	*	*	32	111
X2 H 00857		SHIM: transmission to axle adapter 221018 (12603)		EA		1				*	*	*	*	*		
X2 H 00858		SHIM: transmission to axle adapter 221019 (12603)		EA		1				*	*	*	*	*		
X2 F 00859		SLEEVE: parking brake draw rod 222514 (12603)		EA		1									33	12
X2 H 00860		SPACER: directional selector, forward and reverse selector 220657 (12603)		EA		2									32	9
X2 H 00861		SPACER: directional selector, shaft 208761 (12603)		EA		1									32	23
X2 H 00862		SPACER: directional selector, shaft 208761 (12603)		EA		1									32	78
X2 H 00863		SPACER: pinion, shaft gear 220652 (12603)		EA		1									32	99
X2 F 00864		SPRING: cam lever release 222585 (12603)		EA		1									[illegible]	3
X2 F 00865		SPRING, CLIP 224801 (12603)		EA		1									33	2
P H 00866	2520-848-2594	SPRING: disk release 220136 (12603)		EA		1				SEE	GRP	9901			32	83
P H 00867	2520-848-2594	SPRING: disk release 220136 (12603)		EA		1				SEE	GRP	9901			32	16
X2 H 00868		SPRING: oil pressure relief 223612 (12603)		EA		1									32	63
X2 F 00869		STUD: spring anchor 222586 (12603)		EA		1									[illegible]	5

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO & MFR CODE	(3) USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
X2 H 00870		SUPPORT: stator w/bushing 2200558 (12603)		EA		1									32	58
X2 F 00871		WASHER: arm and shaft 616827 (12603)		EA		2									33	9
F 00872	5310-595-9816	WASHER, FLAT: parking brake draw rod		EA		1	•	•	•	•	•	•	•	•	33	7
F 00873	5310-807-5254	WASHER, LOCK		EA		1	•	•	•	•	•	•	•	•	33	4
F 00874	5310-012-0384	WASHER, LOCK: brake housing screw		EA		2	•	•	•	•	•	•	•	•	33	17
H 00875	5310-109-0965	WASHER, LOCK: converter housing to transmission		EA		15				•	•	•	•	•	32	48
H 00876	5310-774-7308	WASHER, LOCK: oil pump gear cover		EA		9				•	•	•	•	•	32	64
H 00877	5310-774-7308	WASHER, LOCK: oil pump retainer plate		EA		1				•	•	•	•	•	32	45
F 00878	5310-637-9541	WASHER, LOCK: oil sump cover		EA		10	•	•	•	•	•	•	•	•	32	92
H 00879	5310-774-7308	WASHER, LOCK: ar bearing cap		EA		8				•	•	•	•	•		
H 00880	5310-584-5272	WASHER, LO. mission to axle adapter		EA		6				•	•	•	•	•	34	11
H 00881	5310-587-5272	WASHER, LOCK: ransmission to axle adapter		EA		15				•	•	•	•	•	34	23
X2 H 00882		WASHER: oil pump shaft 220708 (12603)		EA		1				•	•	•	•	•	32	40
X2 H 00883		WASHER: pinion, shaft bearing spacer 222419 (12603)		EA		1				•	•	•	•	•	32	97
X2 H 00884		WASHER, THRUST: directional selector shaft 220620 (12603)		EA		1				SEE	GRP	9901			32	20
X2 H 00885		WASHER, THRUST: directional selector shaft 220620 (12603)		EA		1				SEE	GRP	9901			32	80
P F 00886	3930-886-2442	WASHER: forward and reverse control lever rod 666921 (12603)		EA		1	•	•	•	•	•	•	5	5	30	25
F 00887	5310-637-9541	WASHER, LOCK: direction rod lower bracket		EA		2	•	•	•	•	•	•	•	•	30	22
F 00888	5310-407-9566	WASHER, LOCK: forward and reverse control lever		EA		1	•	•	•	•	•	•	•	•	30	15

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
P F 00889	3930-886-2402	WASHER, THRUST: control lever 712716 (12603)	EA		1	*	*	*	*	*	*	5	5	30	26
00890		0714 - SERVO UNIT													
F 00891	5305-069-5574	SCREW, CAP, HEXAGON HEAD: control valve mounting	EA		5	*	*	*	*	*	*	*	*	32	3
F 00892	5305-069-5574	SCREW, CAP, HEXAGON HEAD: control valve mounting	EA		1	*	*	*	*	*	*	*	*	32	4
P F R 00893	2520-883-7695	VALVE ASSEMBLY 224505 (12603)	EA		1	*	*	*	*	*	*	5	5	32	1
X2 F 00894		ARM: inching, inner 220828 (12603)	EA		1									35	45
X2 F 00895		ARM: inching valve, outer 222480 (12603)	EA		1									35	6
X2 F 00896		ARM: inner, selector 222482 (12603)	EA		1									35	43
X2 F 00897		ARM: outer, selector 733687 (12603)	EA		1									35	2
P F 00898	3110-100-6149	BALL, BEARING: check 10J06 (12603)	EA		1				SEE	GRP	9901			35	23
P F 00899	3110-198-2829	BALL, BEARING: check valve 10J12 (12603)	EA		1				SEE	GRP	9901			35	13
P F 00900	3110-198-2829	BALL, BEARING: selector valve, detent 10J12 (12603)	EA		1				SEE	GEP	9901			35	35
P F 00901	2520-066-2285	BUSHING, CONTROL 220697 (12603)	EA		2	*	*	*	*	*	*	5	20		
Y2 F 00902		BUSHING: reducing 208786 (12603)	EA		1	*	*	*	*	*	*	*	*	35	19
X1 00903		COVER: control 223823 (12603)	EA		1									35	47
P F 00904	2530-255-9669	CUP: piston inching valve FC4158 (63477)	EA		1	*	*	*	*	*	*	5	5	35	17

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
P F 00905	2520-073-2134	GASKET: control valve 220623 (12603)		EA		1	•	2	2	•	2	2	13	100	32	6
P F 00906	2530-466-8624	GASKET: check valve 613750 (12603)		EA		1				SEE	GRP	9901			35	21
X1 00907		HOUSING ASSEMBLY: control valve 223821 (12603)		EA		1									35	44
F 00908	5310-768-0319	NUT, PLAIN, HEXAGON: clamp screw		EA		2	•	•	•	•	•	•	•	•	35	9
P F 00909	5330-350-9013	PACKING, PREFORMED: oil passage 25K30016 (12603)		EA		2				SEE	GRP	9901			35	36
F 00910	5315-839-2325	PIN, COTTER: outer, arm		EA		2	•	•	•	•	•	•	•	•	35	41
F 00911	5315-839-2325	PIN, COTTER: outer, arm		EA		1	•	•	•	•	•	•	•	•	35	10
F 00912	5315-893-5934	PIN, HEADED: selector valve clevis		EA		1	•	•	•	•	•	•	•	•	35	42
X2 F 00913		PIN, inching valve rod 209968 (12603)		EA		1	•	•	•	•	•	•	•	•	35	25
X2 F 00914		PIN: outer arm 222490 (12603)		EA		1	•	•	•	•	•	•	•	•	35	7
X2 F 00915		PIN, SPRING: inching valve sleeve retainer 713623 (12603)		EA		1	•	•	•	•	•	•	•	•	35	39
X2 F 00916		PISTON: inching valve 223816 (12603)		EA		1	•	•	•	•	•	•	•	•	35	16
X2 F 00917		PLUG: check ball 222698 (12603)		EA		1	•	•	•	•	•	•	•	•	35	11
X2 F 00918		PLUG: check valve 222675 (12603)		EA		1	•	•	•	•	•	•	•	•	35	20
F 00919	4730-044-4691	PLUG: oil passage		EA		1	•	•	•	•	•	•	•	•	35	37
F 00920	4730-044-4854	PLUG: oil passage		EA		1	•	•	•	•	•	•	•	•	35	33
F 00921	4730-044-4849	PLUG: oil passage		EA		1	•	•	•	•	•	•	•	•	35	29

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
F 00922	4730-044-4854	PLUG, PIPE: oil passage	EA		4	*	*	*	*	*	*	*	*	35	24
P F 00923	5340-714-5255	RING, RETAINING: washer 223944 (12603)	EA		1	*	*	*	*	*	*	5	5	35	51
P F 00924	5340-439-8147	RING, RETAINING: washer 224095 (12603)	EA		1	*	*	*	*	*	*	5	5	35	50
X2 F 00925		ROD: inching valve 223818 (12603)	EA		1									35	26
F 00926	5305-267-8976	SCREW, CAP, HEXAGON HEAD: clamp	EA		1	*	*	*	*	*	*	*	*	35	5
F 00927	5305-267-8975	SCREW, CAP, HEXAGON HEAD: selector	EA		1	*	*	*	*	*	*	*	*	35	4
F 00928	5305-269-3214	SCREW, CAP, HEXAGON HEAD: valve attaching	EA		3	*	*	*	*	*	*	*	*	35	31
F 00929	5305-269-3213	SCREW, CAP, HEXAGON HEAD: valve attaching	EA		1	*	*	*	*	*	*	*	*	35	32
P F 00930	5330-811-0589	SEAL, PLAIN, ENCASED: reducing bushing 7000-7-8 (45681)	EA		1	*	2	2	*	2	2	14	100	35	18
P F 00931	5330-558-0721	SEAL, PLAIN, ENCASED: shaft 71X7013 (73680)	EA		2	2	2	2	2	2	2	28	200	35	48
C F 00932		SLEEVE: inching valve 223812 (12603)	EA		1	*	*	*	*	*	*	*	*	35	38
X2 F 00933		SPACER: inching arm 220891 (12603)	EA		1									35	46
P F 00934	2520-831-2465	SPRING, HELICAL, COMPRESSION: check valve 790844 (12603)	EA		1	*	*	*	*	*	*	5	10	35	22
P F 00935	2520-152-8363	SPRING, HELICAL, COMPRESSION: selector valve detent 203647 (12603)	EA		1	*	*	*	*	*	*	5	10	35	34
X2 F 00936		SPRING: inching valve 223815 (12603)	EA		1	*	*	*	*	*	*	*	10	35	27
X2 F 00937		SPRING: piston return 222583 (12603)	EA		1	*	*	*	*	*	*	*	10	35	15
X2 F 00938		VALVE: inching 223813 (12603)	EA		1	*	*	*	*	*	*	*	*	35	28

242-451

best copy available

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO.	(b) ITEM NO
X2 F 00939		VALVE: selector 209959 (12603)	EA		1	*	*	*	*	*	*	*	*	35	40
X2 F 00940		WASHER: check ball plug 222981 (12603)	EA		1	*	*	*	*	*	*	*	*	35	12
X2 F 00941		WASHER: piston 222587 (12603)	EA		1	*	*	*	*	*	*	*	*	35	14
X2 F 00942		WASHER: shaft 209961 (12603)	EA		1	*	*	*	*	*	*	*	*	35	49
F 00943	5310-637-9541	WASHER, LOCK: clamp screw	EA		1	*	*	*	*	*	*	*	*	35 35	8 3
F 00944	5310-774-7308	WASHER, LOCK: valve attaching screws	EA		4	*	*	*	*	*	*	*	*	35	30
F 00945	5310-550-3503	WASHER, LOCK: control valve	EA		1	*	*	*	*	*	*	*	*	32	5
F 00946	5310-209-0965	WASHER, LOCK: control valve mounting	EA		5	*	*	*	*	*	*	*	*	32	2
00947		0721 - COOLERS, PUMPS, MOTORS													
0 00948	5306-225-9084	BOLT, MACHINE: clamp	EA		1	*	*	*	*	*	*	*	*	38	8
0 00949	5306-225-9087	BOLT, MACHINE: filter to bracket	EA		2	*	*	*	*	*	*	*	*	37	5
X2 0 00950		CLAMP: radiator to converter hose, SAE size 12 17H12 (12603)	EA		1	*	*	*	*	*	*	*	*	38	1
X2 0 00951		ELBOW: converter inlet, out 659977 (12603)	EA		2	*	*	*	*	*	*	*	*	38	10
0 00952	4730-277-8268	ELBOW: oil filter outlet, 45 degree	EA		1	*	*	*	*	*	*	*	*	38	4
0 00953	4730-277-8268	ELBOW, PIPE TO TUBE: converter outlet radiator (lh), radiator (rh)	EA		4	*	*	*	*	*	*	*	*	38	3
0 00954	4730-711-6295	ELBOW, PIPE TO TUBE: oil filter inlet	EA		1	*	*	*	*	*	*	*	*		
X2 0 00955		FILTER ASSEMBLY: transmission oil FHIPLOE (73370)	EA		1									38	6
X1 00956		BODY: filter · 106880 (73370)	EA		1									37	3

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(b) ITEM NO
X1 00957		COVER: filter 1612 (73370)	EA		1									37	11
P 0 00958	2940-580-6302	FILTER ELEMENT, FILTER PRESSURE CHIPL (73370)	EA		1	4	8	16	4	8	16	192	100	37	8
X1 00959	4310-988-0965	GASKET: filter cover 106885 (73370)	EA		1									37	10
X1 00960		SCREW: filter cover mounting 871970 (73370)	EA		1									37	1
X1 00961		SPRING: w/retainer 1011 (73370)	EA		1									37	9
0 00962	5310-262-3000	WASHER, FLAT: cover screw	EA		1	*	*	*	*	*	*	*	*	37	2
P 0 00963	2930-728-7744	FITTING, HOSE: filter to converter inlet hose, radiator to converter hose, radiator to filter inlet hose 663263 (12603)	EA		6	*	*	*	*	*	*	5	30		
MF 0 00964		HOSE ASSEMBLY: filter to converter inlet, 40 in. 1-2-40 (12603) MANUFACTURE FROM:	EA		1									38	7
P F 00965	4730-542-2807	ADAPTER, STRAIGHT, TUBE TO HOSE: swivel, 1/2 in. tube by 1/2 in. hose 4797-8B (01276)	EA		2				SEE	GRP	9901				
P F 00966	4720-274-1156	HOSE, RUBBER: bulk (40 in. required) 1525-8 (00624)	FT						SEE	GRP	9501				
MF 0 00967		HOSE ASSEMBLY: radiator to converter, 34 in. 1-2-34 (12603) MANUFACTURE FROM:	EA		1									38	2
P F 00968	4730-542-2807	ADAPTER, STRAIGHT, TUBE TO HOSE: swivel, 1/2 in. tube to 1/2 in. hose 4797-8B (01276)	EA		2				SEE	GRP	9901				
P F 00969	4720-274-1156	HOSE, RUBBER: bulk (34 in. required) 1525-8 (00624)	FT						SEE	GRP	9501				

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
MF 0 00970		HOSE ASSEMBLY: radiator to filter inlet, 15 in. 1-2-15 (12603) MANUFACTURE FROM:	EA		1									38	5
P F 00971	4730-542-2807	ADAPTER, STRAIGHT, TUBE TO HOSE: swivel hose 4797-8B (01276)	EA		2				SEE	GRP	9901				
P F 00972	4720-274-1156	HOSE, RUBBER: bulk (15 in. required) 1525-8 (00624)	FT						SEE	GRP	9501				
0 00973	5310-407-9566	NUT, PLAIN, HEXAGON: filter to bracket	EA		2	*	*	*	*	*	*	*	*	37	7
X2 0 00974		PIN: neutral starting switch 222483 (12603)	EA		1	*	*	*	*	*	*	*	*	35	52
X2 H 00975		PUMP ASSEMBLY: transmission oil 220727 (05776)	EA		1										
P H 00976	2990-768-5352	BEARING, ROLLER, NEEDLE: oil pump gear shaft PA8542 (05776)	EA		4				*	2	2	20	40	36	4
H 00977	5306-225-8494	BOLT, MACHINE: retainer to pump	EA		2				*	*	*	*	*	36	9
X1 00978		CAP: end, oil pump housing GC1174 (05776)	EA		1									36	3
X1 00979		GEAR: drive, oil pump GC4506I (05776)	EA		1									36	13
X1 00980		GEAR: driven, oil pump GC4508I (05776)	EA		1									36	7
X1 00981		HOUSING: oil pump GC1173I (05776)	EA		1									36	8
X2 0 00982		KEY, WOODRUFF PA7510 (05776)	EA		1				*	*	*	*	*	36	14
X1 00983		PIN: shear, oil pump driven gear GC3562 (05776)	EA		1									36	2
X1 00984		PIN, DOWEL: cap to housing PA4949 (05776)	EA		2									36	5
H 00985	4730-044-5671	PLUG, PIPE: housing 1/8 in.	EA		1				*	*	*	*	*	36	11

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
P H 00986	5340-803-7309	RING, RETAINING: gear GC219 (05776)	EA		2				•	•	•	5	10	36	12
X2 H 00987		RING, RETAINING: gear GC1448 (05776)	EA		2				•	•	•	•	•	36	6
X2 H 00988		SCREW, MACHINE: cap to bearing 871153 (05776)	EA		4									36	16
X1 00989		SHAFT: drive, oil pump GC1172I (05776)	EA		1									36	17
X1 00990		SHAFT: idler, oil pump housing GC1430I1 (05776)	EA		1									36	1
X1 00991		SPACER: oil pump drive gear GC1549 (05776)	EA		1									36	15
H 00992	5310-167-0721	WASHER, LOCK: retainer to pump	EA		2				•	•	•	•	•	36	10
X2 O 00993		STRAP: filter mounting 100366 (73370)	EA		1									37	4
O 00994	4730-249-2028	TEE	EA		1	•	•	•	•	•	•	•	•	39	12
X2 H 00995		VALVE: pressure regualtor, 125 to 150 psi, 6.5 gpm 220592 (12603)	EA		1				•	•	•	•	•		
X2 H 00996		PIN: pressure regulator 220940 (12603)	EA		1				•	•	•	•	•	33	32
X2 H 00997		PLUG: pressure regulator 220766 (12603)	EA		1				•	•	•	•	•	33	27
X2 H 00998		REGULATOR: pressure 220114 (12603)	EA		1				•	•	•	•	•	33	30
P H 00999	2520-587-5671	SEAL: pressure regulator sealing, steel 220596 (12603)	EA		3				•	2	2	18	300	33	34
P H 01000	5340-061-8531	SPRING: pressure regulator 220594 (12603)	EA		1				•	•	•	5	10	33	29

242-451

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
X2 H 01001		STOP: pressure regulator 220605 (12603)	EA		1				*	*	*	*	*	33	31
X2 H 01002		WASHER: pressure regulator 220107 (12603)	EA		1				*	*	*	*	*	33	28
X2 H 01003		WASHER: pressure regulator 220595 (12603)	EA		1				*	*	*	*	*	33	33
0 01004	5310-027-2342	WASHER: neutral starting switch	EA		1	*	*	*	*	*	*	*	*	35	53
0 01005	5310-407-9566	WASHER, LOCK: clamp	EA		1	*	*	*	*	*	*	*	*	39	9
0 01006	5310-407-9566	WASHER, LOCK: filter to bracket	EA		2	*	*	*	*	*	*	*	*	37	6
01007		GROUP 10 - FRONT AXLE													
01008		1000 - FRONT AXLE ASSEMBLY													
P 0 01009	5306-072-6724	BOLT: spindle, special	EA		12	2	2	2	2	2	2	24	60	39	12
P 0 01010	3110-227-4058	CONE AND ROLLERS, TAPERED ROLLER BEARING: inner 3781 (60038)	EA		2	*	2	2	*	2	2	14	20	39	31
P 0 01011	3110-100-0376	CUP, TAPERED ROLLER BEARING: inner 3720 (60038)	EA		2	*	2	2	*	2	2	14	20	39	30
P 0 01012	2520-072-6723	SPINDLE 107219 (12603)	EA		2	*	*	*	*	*	*	5	5	39	10
0 01013	5310-843-0647	WASHER, LOCK: spindle	EA		12	*	*	*	*	*	*	*	*	39	11
01014		1002 - DIFFERENTIAL													
X2 F 01015		BOLT, SHOULDER: axle ring to frame, 1-14 thd size, 3-3/4 in. lg 667108 (12603)	EA		2	*	*	*	*	*	*	*	*	34	34
P H R 01016	2520-300-0861	DIFFERENTIAL DRIVING ASSEMBLY 301140 (12603)	EA		1				*	*	*	5	5		
H 01017	5306-072-6714	BOLT: ring gear	EA		8				*	*	*	*	*	34	33
P H 01018	2520-983-4231	CARRIER BEARING: differential bearing 220564 (12603)	EA		2				*	*	*	5	5	34	2

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
X2 H 01019		CASE: differential 224850 (12603)	EA		1									34	30
P H 01020	3110-100-0526	CUP, TAPERED ROLLER BEARING: differential 16284 (60038)	EA		2				*	2	2	14	20	34	5
P H 01021	3110-100-3165	CONE AND ROLLERS, TAPERED ROLLER BEARING: differential 16150 (60038)	EA		2				*	2	2	14	20	34	6
X2 O 01022		DIPSTICK: axle adapter 222435 (12603)	EA		1									34	8
P H 01023	2520-072-6713	GEAR, HELICAL: pinion 224869 (12603)	EA		2				*	*	*	5	10	34	29
P H 01024	2520-072-6712	GEAR, HELICAL: side 200024 (12603)	EA		2				*	*	*	5	10	34	27
P H 01025	2520-883-7698	GEAR SET, TRANSMISSION: ring gear and pinion 800855 (12603)	EA		1				*	*	*	[illegible]	[illegible]	34	25
X2 H 01026		HOUSING: axle 222469 (12603)	EA		1									34	13
X2 H 01027	5310-732-0559	NUT, PLAIN, HEXAGON: bearing carrier stud	EA		8				*	*	*	*	*	34	15
P H 01028	5330-231-4107	PACKING, PREFORMED: bearing carrier 25K40308 (12603)	EA		2				*	2	2	14	200	34	3
X2 H 01029		PIN: pinion 200027 (12603)	EA		1				*	*	*	*	5	34	32
X2 H 01030		PIN: pinion, pin lock 200028 (12603)	EA		1				*	*	*	*	5	34	31
P O 01031	4730-359-3872	PLUG: drain, magnetic 704518 (12603)	EA		1	*	*	*	*	*	*	5	5	34	21
X2 O 01032		PLUG: inspection 222418 (12603)	EA		1	*	*	*	*	*	*	*	*	34	10
X2 H 01033		SEAL: bearing carrier 508797 (80201)	EA		2				*	*	*	*	200	34	4

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION — REFERENCE NO. & MFR. CODE	(3) USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
P H 01034	2520-072-6698	SHIM: bearing carrier 205890 (12603)		EA		2				*	*	*	5	10	34	7
P H 01035	2520-072-6699	SHIM: bearing carrier 205891 (12603)		EA		2				*	*	*	5	10		
P H 01036	5307-072-6701	STUD: bearing carrier		EA		8				*	*	*	5	80	34	14
C H 01037		STUD: transmission to axle adapter 206770 (12603)		EA		9				*	*	*	*	*	34	22
X2 O 01038		TUBE: dipstick 222436 (12603)		EA		1									34	9
X2 H 01039		WASHER, THRUST: pinion, gear 215880 (12603)		EA		2				*	*	*	*	*	34	28
X2 H 01040		WASHER, THRUST: side gear 215881 (12603)		EA		2				*	*	*	*	*	34	26
F 01041	5310-732-0560	NUT: axle end to adapter		EA		10	*	*	*	*	*	*	*	*		
F 01042	5310-045-1425	NUT: axle ring to frame		EA		4	*	*	*	*	*	*	*	*	34	20
F 01043	5310-021-7216	NUT, PLAIN, HEXAGON: axle ring to frame		EA		2	*	*	*	*	*	*	*	*	34	18
X2 F 01044		RING: axle, lh 665120 (12603)		EA		1									34	1
X2 F 01045		RING: axle, rh 665119 (12603)		EA		1									34	16
F 01046	5305-042-6417	SCREW, CAP, HEXAGON HEAD: axle end to adapter		EA		10	*	*	*	*	*	*	*	*		
F 01047	5305-926-1813	SCREW, CAP, HEXAGON HEAD: axle ring to frame		EA		4	*	*	*	*	*	*	*	*	34	17
X2 F 01048		STUD: axle end to adapter 663983 (12603)		EA		10	*	*	*	*	*	*	*	*		
F 01049	5310-584-5272	WASHER, LOCK: axle end to adapter		EA		20	*	*	*	*	*	*	*	*		
F 01050	5310-584-7889	WASHER, LOCK: axle ring to frame		EA		2		*	*	*	*	*	*	*	34	19

(1) SMR CODE INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
01051		1003 - PLANETARY OR FINAL DRIVE													
P 0 01052	3110-155-6699	BEARING, BALL, ANNULAR: pinion, shaft MT208 (43991)	EA		2	*	2	2	*	2	2	14	20	39	21
P 0 01053	5340-803-9981	RING, RETAINING: pinion, shaft bearing 5100-150 (79136)	EA		2				SEE	GRP	9901			39	20
0 01054	5305-269-3208	SCREW, CAP, HEXAGON HEAD: bearing retaining	EA		4	*	*	*	*	*	*	*	*	39	27
P 0 01055	5330-733-2992	SEAL, PLAIN, ENCASED: pinion, shaft 266W118MI (80201)	EA		2	2	2	2	2	2	2	24	200	39	19
P 0 01056	5330-876-9494	SEAL, PLAIN, ENCASED: pinion, support 27571-5306 (73680)	EA		2	2	2	2	2	2	2	24	200	39	18
P 0 01057	2520-876-2781	SHAFT, GEAR 107218 (12603)	EA		2	*	*	*	*	*	*	5	10	39	22
X2 0 01058		SUPPORT: spindle 881558 (12603)	EA		2									39	17
P 0 01059	2520-072-6732	VENT: axle end 110381 (12603)	EA		2	*	*	*	*	*	*	5	5		
0 01060	5310-843-0588	WASHER, PLAIN: bearing retaining	EA		4	*	*	*	*	*	*	*	*	39	28
01061		GROUP 11 - REAR AXLE													
01062		1104 - STEERING, SIDESHIFT AND WHEEL LEANING MECHANISM													
X2 F 01063		AXLE: center, steering axle 108794 (12603)	EA		1									40	33
P F 01064	3110-157-0542	BEARING: knuckle pin 654389 (12603)	EA		4	2	2	2	2	2	2	24	80	40	7
P F 01065	2530-883-7704	PIN: spider 108796 (12603)	EA		1	*	*	*	*	*	*	5	5	40	37
P F 01066	3110-736-1105	BEARING, ROLLER, NEEDLE: spider B2020 (60380)	EA		1	*	*	2	*	*	2	7	20	40	2
P F 01067	3110-117-0757	BEARING, ROLLER, THRUST: steering knuckle T113 (60038)	EA		2	*	2	2	*	2	2	14	40	40	13

24 2-451

best copy available

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
							(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
P F 01068	2530-073-2158	BLOCK: axle mounting 329676 (12603)		EA		2	*	*	*	*	*	*	5	10	40	8
0 01069	4730-172-0028	FITTING, LUBRICATION: knuckle pin		EA		4	*	*	*	*	*	*	*	*	40	4
P F 01070	2530-375-0747	GASKET: spider bearing 103884 (12603)		EA		2	2	2	2	2	2	2	24	200	40	6
P F 01071	5315-073-2156	KEY: steering knuckle draw		EA		2	*	2	2	*	2	2	12	10	40	26
0 01072	5310-045-1523	NUT, PLAIN, HEXAGON: steering, stop, screw		EA		2	*	*	*	*	*	*	*	*	40	34
F 01073	5310-957-0789	NUT, SLOTTED, HEXAGON: steering		EA		2	*	*	*	*	*	*	*	*	40	9
F 01074	5315-013-7214	PIN, COTTER: steering		EA		2	*	*	*	*	*	*	*	*	40	10
P F 01075	5315-375-0735	PIN: steering, knuckle 103890 (12603)		EA		2	*	2	2	*	2	2	12	40	40	32
P F 01076	5340-010-3896	PLUG, EXPANSION X2216 (14351)		EA		2	*	*	*	*	*	*	5	20	40	5
P F 01077	5340-072-9465	RING, RETAINING: spider, pin, snap 100202 (12603)		EA		1	*	*	*	*	*	*	5	5		
F 01078	5305-959-7121	SCREW, CAP, HEXAGON HEAD: steering		EA		4	*	*	*	*	*	*	*	*	40	12
0 01079	5305-058-5018	SETSCREW: steering, stop		EA		2	*	*	*	*	*	*	*	*	40	35
P F 01080	2530-358-9654	SHIM: steering, knuckle 100194 (12603)		EA		2	*	*	*	*	*	*	5	10	40	30
X2 F 01081		SPIDER: steering, axle 107137 (12603)		EA		1	*	*	*	*	*	*	*	*	40	39
P F 01082	2530-883-7700	SPINDLE, WHEEL, NONDRIVING: steering, lh 108798 (12603)		EA		1	*	*	*	*	*	*	5	5	40	36
P F 01083	2530-883-7702	SPINDLE, WHEEL, NONDRIVING: steering, rh 108797 (12603)		EA		1	*	*	*	*	*	*	5	5	40	31
P F 01084	5307-164-3531	STUD, BALL: drag, link		EA		1		*	*	*	*	*	5	5	40	3

242-451

S

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
F 01085	5310-073-2159	WASHER: axle, mounting	EA		2	*	*	*	*	*	*	*	*	40	38
F 01086	5310-711-2297	WASHER, FLAT: steering knuckle	EA		4	*	*	*	*	*	*	*	*	40	29
F 01087	5310-820-6653	WASHER, LOCK: steering	EA		4	*	*	*	*	*	*	*	*	40	11
P F 01088	2530-375-0751	WASHER, THRUST: spider thrust 103951 (12603)	EA		2	*	2	2	*	2	2	14	20	40	1
01089		GROUP 12 - BRAKES													
01090		1201 - HAND BRAKE													
P 0 01091	2530-930-4586	BRAKE ASSEMBLY: parking 16633 (70523)	EA		1	*	*	*	*	*	*	5	5	42	1
X2 0 01092		LEVER ASSEMBLY: parking brake to transmission 329789 (12603)	EA		1									42	4
X2 0 01093		NUT: sheet spring 763532 (12603)	EA		1	*	*	*	*	*	*	*	*	42	6
X2 0 01094		PIN: brake unit to brake lever 1302605 (12603)	EA		1	*	*	*	*	*	*	*	*	42	3
X2 0 01095		PIN: pivot, front hood to brake unit 771886 (12603)	EA		1	*	*	*	*	*	*	*	*	42	7
X2 0 01096		PIN, COTTER: hairpin, lever, retaining 757153 (12603)	EA		1	*	*	*	*	*	*	*	*	42	5
X2 0 01097		PIN, COTTER: hairpin, type 391599 (12603)	EA		2	*	*	*	*	*	*	*	*	42	2
X2 01098		1202 - SERVICE BRAKES													
X2 0 01099		BOLT: mounting, special 107334 (12603)	EA		4	*	*	*	*	*	*	*	*	43	15
0 01100	5306-298-1414	BOLT, MACHINE: anchor, block	EA		4	*	*	*	*	*	*	*	*	43	19
X2 0 01101		BRAKE ASSEMBLY: service 108130 (12603)	EA		2									39	16

242 451

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(b) ITEM NO
X2 0 01102		ARM: adjuster, reaction 107312 (12603)		EA		4	*	*	*	*	*	*	*	*	43	22
X2 0 01103		BLOCK: anchor 107324 (12603)		EA		2									43	27
P 0 01104	2530-072-6738	CUP: retainer, spring 107330 (12603)		EA		8	*	*	*	*	*	*	5	40	43	30
X2 0 01105		DISK: brake 107311 (12603)		EA		2									43	6
X2 0 01106		KEY: shoe, anchor 107325 (12603)		EA		4	*	*	*	*	*	*	*	*	43	26
P F 01107	2530-073-2140	LINING: with adhesive 693-539 (70355)		EA		4	6	12	25	6	12	25	296	400	43	25
P 0 01108	2530-072-6736	PIN, BRAKE SHOE 107327 (12603)		EA		4	*	*	*	*	*	*	5	20	43	18
X2 0 01109		SHIELD: dust 107806 (12603)		EA		2									43	10
P 0 R 01110	2530-976-3331	SHOE ASSEMBLY, BRAKE 107317 (12603)		EA		4	2	2	4	2	2	4	48	20	43	28
X2 0 01111		SPRING: dust, shield 107783 (12603)		EA		2	*	*	*	*	*	*	*	*	43	9
P 0 01112	5340-072-6737	SPRING, HELICAL, COMPRESSION: guide pin 107328 (12603)		EA		4	2	2	2	2	2	2	24	40	43	31
P 0 01113	5340-072-6734	SPRING, HELICAL, EXTENSION: brake shoe, return 107323 (12603)		EA		4	2	2	2	2	2	2	24	40	43	29
0 01114	5310-680-5384	NUT, SLOTTED, HEXAGON: arm mounting, bolt		EA		4	*	*	*	*	*	*	*	*	43	23
X2 0 01115		PIN: mounting, bolt nut 664131 (12603)		EA		4	*	*	*	*	*	*	*	*	43	24
X2 0 01116		WASHER: adjusting bolt, special 107315 (12603)		EA		4	*	*	*	*	*	*	*	*	43	16

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
X2 0 01117		WASHER: adjusting bolt, special 107313 (12603)	EA		4	*	*	*	*	*	*	*	*	43	17
X2 0 01118		WASHER: index, special 107403 (12603)	EA		8	*	*	*	*	*	*	*	*	43	21
0 01119	5310-209-0965	WASHER, LOCK: anchor block	EA		4	*	*	*	*	*	*	*	*	43	20
01120		1204 - HYDRAULIC BRAKE SYSTEM													
P 0 R 01121	2530-170-1899	CYLINDER ASSEMBLY, HYDRAULIC BRAKE, MASTER FE1476 (63477) (Includes components of PARTS KIT, Stock No. 2530-383-9885)	EA		1	*	*	2	*	*	2	7	10	44	7
P 0 01122	4730-737-5440	BOLT, FLUID PASSAGE	EA		1	*	*	*	*	*	*	5	5	44	6
P 0 01123	2530-343-8161	CAP: fuller FC12103 (63477)	EA		1	*	*	*	*	*	*	5	5	44	1
0 01124	4730-359-0440	FITTING: outlet	EA		1	*	*	*	*	*	*	*	*	44	4
P 0 01125	2530-843-5143	GASKET: fitting bolt FC603 (63477)	EA		1	*	*	*	*	*	*	*	*	44	5
P 0 01126	2530-466-8624	GASKET: outlet fitting 613750 (12603)	EA		1				SEE	GRP	9901			44	3
0 01127	5310-835-2036	NUT, PLAIN, HEXAGON: yoke stud	EA		2	*	*	*	*	*	*	*	*	44	15
P F 01128	5340-353-2994	RING, RETAINING: large FC2931 (63477)	EA		1	*	*	*	*	*	*	5	5	44	19
P F 01129	5340-282-0060	RING, RETAINING: small FC939 (63477)	EA		1	*	*	*	*	*	*	5	5	44	12
X2 0 01130		ROD: push, piston FC4515 (63477)	EA		1	*	*	*	*	*	*	*	*	44	13
X2 0 01131		STUD: master cylinder to yoke 648521 (12603)	EA		1	*	*	*	*	*	*	*	*	44	14
F 01132	5310-595-9867	WASHER, FLAT: piston stop	EA		1	*	*	*	*	*	*	*	*	44	21

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
P O 01133	5330-291-6658	WASHER, NONMETALLIC: filler FC6019 (63477)	EA		1	*	*	2	*	*	2	10	100	44	2
X2 01134		YOKE: rod to pedal 664901 (12603)	EA		1	*	*	*	*	*	*	*	*	44	16
P O R 01135	2530-876-9629	CYLINDER ASSEMBLY, HYDRAULIC BRAKE, WHEEL FD22902 (63477) (Includes components of PARTS KIT, Stock No. 2530-737-2340)	EA		2	*	2	2	*	2	2	14	20	43	5
X2 F 01136		BOLT, FLUID PASSAGE: wheel cylinder fitting FC24199 (63477)	EA		2	*	*	*	*	*	*	*	*	43	12
P O 01137	2520-273-8492	FITTING: wheel cylinder FC2400 (63477)	EA		2	*	*	*	*	*	*	5	5	43	14
P O 01138	5330-737-2312	GASKET: wheel cylinder fitting FC1511 (63477)	EA		4	2	2	4	2	2	4	48	400	43	13
X1 01139		PISTON: wheel cylinder FC16148 (63477)	EA		4									43	2
X2 O 01140		SCREW: wheel cylinder bleeder FC21476 (63477)	EA		2	*	*	*	*	*	*	*	*	43	11
O 01141	5305-559-9202	SCREW, CAP, HEXAGON HEAD: wheel cylinder	EA		4	*	*	*	*	*	*	*	*	43	8
P F 01142	5340-359-0980	SPRING: piston return 11111 (63477)	EA		1	*	*	*	*	*	*	5	10	44	24
P F 01143	5340-164-3549	SPRING: wheel cylinder FC3024 (63477)	EA		2	*	*	*	*	*	*	5	20	43	4
O 01144	5310-637-9541	WASHER, LOCK: wheel cylinder	EA		4	*	*	*	*	*	*	*	*	43	7
X2 F 01145		WIRE, LOCK: piston stop plate FC2927 (63477)	EA		1	*	*	*	*	*	*	*	*	44	20
O 01146	4730-277-8269	ELBOW, PIPE TO TUBE: inching valve inlet and outlet	EA		2	*	*	*	*	*	*	*	*	45	10
MF O 01147		LINE ASSEMBLY: brake inching valve to tee 733229 (12603) MANUFACTURE FROM:	EA		1									45	5

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO.	(11) (b) ITEM NO
F 01148	4730-278-5551	INVERTED NUT, TUBE COUPLING: 3/16 in. tube, 3/8 in. - 24 unf	EA		2	*	*	*	*	*	*	*	*	45	4
P F 01149	4710-277-5527	TUBE: copper (23-1/2 in. lg. required)							SEE	GRP	9501				
MF O 01150		LINE ASSEMBLY: brake, lh wheel cylinder to tee 717787 (12603) MANUFACTURE FROM:	EA		1									45	1
F 01151	4730-278-5551	INVERTED NUT, TUBE COUPLING: 3/16 in. tube, 3/8-24 unf	EA		2	*	*	*	*	*	*	*	*	45	2
P F 01152	4710-277-5527	TUBE: copper (22-1/2 in. lg. required)							SEE	GRP	9501				
MF O 01153		LINE ASSEMBLY: brake, master cylinder to inching valve 733255 (12603) MANUFACTURE FROM:	EA		1									45	7
F 01154	4730-278-5551	INVERTED NUT, TUBE COUPLING: 3/16 in. tube, 3/8 in.-24 unf	EA		2	*	*	*	*	*	*	*	*	45	8
P F 01155	4710-277-5527	TUBE: copper (21 in. lg. required)							SEE	GRP	9501				
MF O 01156		LINE ASSEMBLY: brake, rh wheel cylinder to tee 717788 (12603) MANUFACTURE FROM:	EA		1									45	9
F 01157	4730-278-5551	INVERTED NUT, TUBE COUPLING: 3/16 in. tube, 3/8 in.-24 unf	EA		2	*	*	*	*	*	*	*	*	45	6
P F 01158	4710-277-5527	TUBE: copper (12-1/2 in. lg. required)							SEE	GRP	9501				
O 01159	5310-012-1932	NUT, PLAIN, HEXAGON: master cylinder mounting	EA		3	*	*	*	*	*	*	*	*	44	10
P F 01160	2530-383-9885	PARTS KIT, HYDRAULIC BRAKE MASTER CYLINDER ASSEMBLY FC5394 (63477)	EA		1	*	2	2	*	2	2	14	90		
X1 01161	2530-353-2993	BELLOWS, RUBBER: master cylinder FC2930 (63477)	EA		1									44	11
X1 01162	2530-537-0772	CUP, HYDRAULIC BRAKE FD2108 (63477)	EA		1									44	23

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO.	(b) ITEM NO
X1 01163		PISTON FC11143 (63477)	EA		1									44	22
X1 01164	2530-566-7785	VALVE ASSEMBLY DISCHARGE FC14422 (63477)	EA		1									44	25
P 0 01165	2530-737-2340	PARTS KIT, HYDRAULIC BRAKE WHEEL, CYLINDER ASSEMBLY FC5381 (63477)	EA		2	2	2	4	2	2	4	44	180		
X1 01166		BOOT FC13090 (63477)	EA		2									43	1
X1 01167	2530-273-8495	CUP FC1499 (63477)	EA		2									43	3
0 01168	5315-816-1794	PIN, COTTER: yoke pin	EA		1	•	•	•	•	•	•	•	•	44	17
X2 0 01169		PIN, STRAIGHT HEAD: yoke 4F07115 (12603)	EA		1	•	•	•	•	•	•	•	•	44	18
0 01170	5305-018-1639	SCREW, CAP, HEXAGON HEAD: master cylinder mounting	EA		3	•	•	•	•	•	•	•	•	44	8
X2 0 01171		TEE: brake 671945 (12603)	EA		1	•	•	•	•	•	•	•	•	45	3
0 01172	5310-637-9541	WASHER, LOCK: master cylinder mounting	EA		3	•	•	•	•	•	•	•	•	44	9
01173		1206 - MECHANICAL BRAKE SYSTEM													
X2 F 01174		ARM: brake pedal, with pad 1615327 (12603)	EA		1									46	1
X2 F 01175		BEARING: needle 654385 (12603)	EA		2	•	•	•	•	•	•	•	•	46	4
P 0 01176	4730-050-4203	FITTING, LUBRICATION: straight MS15001-1 (96906)	EA		1	•	2	2	•	2	2	14	10	46	3
X2 F 01177		PIN: brake pedal, pivot 723192 (12603)	EA		1	•	•	•	•	•	•	•	•	46	6
X2 F 01178		PIN: brake pedal, pivot pin 664131 (12603)	EA		1	•	•	•	•	•	•	•	•	46	2

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
X2 0 01179		PLUG, BUTTON: brake pedal lever, lubrication fitting access 637739 (12603)	EA		1										
X2 0 01180		SPRING: pedal, return 749115 (12603)	EA		1	*	*	*	*	*	*	*	*	46	5
01181		GROUP 13 - WHEELS AND TRACKS													
01182		1311 - WHEEL ASSEMBLY													
P 0 01183	5306-709-2123	BOLT: wheel mounting, drive 101362 (12603)	EA		10	2	3	5	2	3	5	60	50	39	29
P 0 01184	5306-072-9450	BOLT: wheel mounting, steering 741556 (12603)	EA		12	2	3	6	2	3	6	72	60	41	3
X2 0 01185		BRAKE DRUM 107224 (12603)	EA		2	*	*	*	*	*	*	*	*	39	13
X2 0 01186	2530-164-3568	CAP: axle, end 104595 (12603)	EA		2									39	1
X2 0 01187	2530-164-3568	CAP: hub 104595 (12603)	EA		2									41	11
P 0 01188	3110-100-3553	CONE AND ROLLERS, TAPERED ROLLER BEARING: inner 26882 (60038)	EA		2	*	2	2	*	2	2	20	20	41	6
P 0 01189	3110-198-2169	CONE AND ROLLERS, TAPERED ROLLER BEARING: outer 15123 (60038)	EA		2	*	2	2	*	2	2	20	20	41	10
P 0 01190	3110-100-0747	CONE AND ROLLERS, TAPERED ROLLER BEARING: outer 2793 (60038)	EA		2	*	2	2	*	2	2	20	20	39	4
P 0 01191	3110-100-0359	CUP, TAPERED ROLLER BEARING: outer BRG3044 (60038)	EA		2	*	2	2	*	2	2	20	20	39	5
X2 0 01192		HUB ASSEMBLY: front drive, axle 109157 (12603)	EA		2	*	*	*	*	*	*	*	*	39	6
P 0 01193	2520-072-6721	GEAR, RING: hub assembly 108829 (12603)	EA		1	*	*	*	*	*	*	5	5	39	7
0 01194	5305-782-9495	SCREW, CAP, HEXAGON HEAD: hub assembly	EA		12	*	*	*	*	*	*	*	*	39	9

242-451

best copy available

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION		(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
		REFERENCE NO. & MFR. CODE	USABLE ON CODE				(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
0 01195	5310-018-0447	WASHER, LOCK: hub, assembly		EA		12	*	*	*	*	*	*	*	*	39	8
X2 0 01196		HUB ASSEMBLY: steering, axle 107237 (12603)		EA		2	*	*	*	*	*	*	*	*	41	8
P 0 01197	3110-100-0556	CUP, TAPERED ROLLER BEARING: inner 26822 (60038)		EA		2	*	2	2	*	2	2	20	20	41	7
P 0 01198	3110-198-2170	CUP, TAPERED ROLLER BEARING: outer 15245 (08162)		EA		2	*	2	2	*	2	2	20	20	41	9
P 0 01199	5310-391-3586	NUT, CONE SEAT, HEXAGON: wheel mounting 101364 (12603)		EA		10	2	3	5	2	3	5	60	50	39	26
0 01200	5310-383-4677	NUT, SLOTTED, HEXAGON: spindle		EA		2	*	*	*	*	*	*	*	*	39	2
0 01201	5310-383-4677	NUT, SLOTTED, HEXAGON: steering, knuckle		EA		2	*	*	*	*	*	*	*	*	40	27
0 01202	5315-013-7214	PIN, COTTER: spindle		EA		2	*	*	*	*	*	*	*	*	39	25
0 01203	5315-839-5822	PIN, COTTER: steering, knuckle		EA		2	*	*	*	*	*	*	*	*	40	28
P 0 01204	5340-803-9981	RING, RETAINING: brake drum 5100-150 (79136)		EA		4				SEE	GRP	9901			39	14
X2 0 01205		SCREW: brake mounting 109975 (12603)		EA		12	*	*	*	*	*	*	*	*	39	15
0 01206	5305-269-3209	SCREW, CAP, HEXAGON HEAD: cap		EA		8	*	*	*	*	*	*	*	*	41	12
0 01207	5310-269-3209	SCREW, CAP, HEXAGON HEAD: cap to hub		EA		8	*	*	*	*	*	*	*	*	39	23
P 0 01208	5330-298-0654	SEAL, PLAIN, ENCASED 103861 (12603)		EA		2	2	3	5	2	3	5	62	200	41	5
0 01209	5310-512-2082	WASHER, FLAT: spindle		EA		2	*	*	*	*	*	*	*	*	39	3
0 01210	5310-012-0381	WASHER, LOCK: cap		EA		8	*	*	*	*	*	*	*	*	41	4
0 01211	5310-637-9541	WASHER, LOCK: cap to hub		EA		8	*	*	*	*	*	*	*	*	39	24
X2 0 01212	3930-069-3627	WHEEL: drive, axle 746081 (12603)		EA		2									41	14

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
X1 01213		WHEEL: drive, axle 109160 (12603)	EA		2										
P H 01214	2610-849-0612	TIRE, DRIVE 625568 (12603)	EA		2				SEE	GRP	1313				
X2 0 01215		WHEEL AND TIRE: steering, axle 664852 (12603)	EA		2									41	2
X1 01216		WHEEL: steering, axle 107141 (12603)	EA		2										
P H 01217	2610-849-0609	TIRE, SOLID, RUBBER 665106 (12603)	EA		2				SEE	GRP	1313				
01218		1313 - TIRES, TUBES													
P H 01219	2610-849-0612	TIRE, DRIVE 625568 (12603)	EA		2				•	•	2	7	50	41	13
P H 01220	2610-849-0609	TIRE, SOLID, RUBBER 665106 (12603)	EA		2				•	•	2	7	50	41	1
01221		GROUP 14 - STEERING													
01222		1401 - STEERING ASSEMBLY													
X2 0 01223		BOLT, U: steering, column 317453 (12603)	EA		1	•	•	•	•	•	•	•	•	47	13
X2 0 01224		CAGE: ball, socket, shield 635448 (12603)	EA		2	•	•	•	•	•	•	•	•	49	12
P 0 01225	2530-359-1473	CUSHION, STEERING COLUMN 617961 (12603)	EA		1	•	•	•	•	•	•	5	20	47	14
0 01226	4730-054-7608	FITTING: lubrication, tie rod	EA		2	•	•	•	•	•	•	•	•	40	25
0 01227	4730-050-4203	FITTING, LUBRICATING: front drag link	EA		1	•	•	•	•	•	•	•	•	48	7
0 01228	4730-891-7059	FITTING, LUBRICATING: tie rod	EA		2	•	•	•	•	•	•	•	•	40	22
0 01229	4730-019-1452	FITTING: lubrication, rear, drag link	EA		1	•	•	•	•	•	•	•	•	48	19

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
X2 0 01230		INSULATOR: cylinder to frame 1614023 (12603)		EA		2	*	*	*	*	*	*	*	*	48	3
X2 0 01231		LINK, DRAG: front assembly 1619241 (12603)		EA		1	*	*	*	*	*	*	*	5		
P 0 01232	4730-384-8763	PLUG, MACHINE, THREAD: adjustable end 16DP6 (59875)		EA		1				SEE	GRP	9901			49	10
X1 01233		ROD: drag link, front 1619242 (12603)		EA		1									49	6
P 0 01234	2530-311-9644	SEAT, BALL, SOCKET 16DB29 (59875)		EA		2	*	*	*	*	*	*	5	20	49	9
X2 0 01235		LINK, DRAG: rear assembly 1615764 (12603)		EA		1	*	*	*	*	*	*	*	5		
0 01236	5310-021-9760	NUT, PLAIN, HEXAGON: adjustable end		EA		1	*	*	*	*	*	*	*	*	49	15
P 0 01237	4730-384-8763	PLUG, MACHINE, THREAD: adjustable socket 16DP6 (59875)		EA		1				SEE	GRP	9901			49	18
X1 01238		ROD: drag link, rear 1615529 (12603)		EA		1									49	14
P 0 01239	2530-217-9725	SEAT: adjustable socket 106330 (12603)		EA		2	*	*	*	*	*	*	5	20	48	17
C 0 01240		SOCKET: adjustable end 733101 (12603)		EA		1	*	*	*	*	*	*	*	*	48	16
X2 0 01241		NUT: cylinder to frame X1824 (14351)		EA		1	*	*	*	*	*	*	*	*	48	2
F 01242	5310-012-1932	NUT, PLAIN, HEXAGON: pitman arm stop		EA		2	*	*	*	*	*	*	*	*	47	9
0 01243	5310-012-4934	NUT, PLAIN, HEXAGON: power steering to frame		EA		2	*	*	*	*	*	*	*	*	48	1
0 01244	5310-880-7744	NUT, PLAIN, HEXAGON: steering column		EA		2	*	*	*	*	*	*	*	*	47	16
F 01245	5310-791-7640	NUT, SPECIAL: steering gear support		EA		1	*	*	*	*	*	*	*	*	47	5

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
0 01246	5315-298-1480	PIN, COTTER: front link end to cylinder	EA		1	*	*	*	*	*	*	*	*	48	13
0 01247	5315-013-7238	PIN, COTTER: plug locking	EA		2	*	*	*	*	*	*	*	*	48	8
0 01248	5315-839-5822	PIN, COTTER: tie rod	EA		4	*	*	*	*	*	*	*	*	40	15
F 01249	5305-057-1100	SCREW, CAP, HEXAGON HEAD: steering gear support	EA		1	*	*	*	*	*	*	*	*	47	8
X2 F 01250	5305-762-6041	SCREW, CAP, HEXAGON HEAD: steering gear support, 3/4-16 X 2 1/2 grade 8	EA		1	*	*	*	*	*	*	*	*		
F 01251	5305-725-4183	SCREW, CAP, SOCKET HEAD: steering gear support	EA		1	*	*	*	*	*	*	*	*	47	11
F 01252	5305-207-4420	SETSCREW: pitman arm stop	EA		2	*	*	*	*	*	*	*	*	47	10
X2 0 01253		SHIELD: ball socket 635451 (12603)	EA		2	*	*	*	*	*	*	*	*	48	11
X2 F 01254		SPACER: pitman arm 1615317 (12603)	EA		1									47	12
P F R 01255	2530-014-6804	STEERING GEAR 8670205 (52788)	EA		1	*	*	*	*	*	*	3	3		
P F 01256	2520-215-1019	ADAPTER BEARING 5662829 (52788)	EA		1	*	*	*	*	*	*	5	5	47	43
P F 01257	2530-164-3573	ADJUSTER: lash 266678 (52788)	EA		1	*	*	*	*	*	*	5	5	47	36
P F 01258	2530-152-8453	ADJUSTER: thrust 267689 (52788)	EA		1	*	*	*	*	*	*	5	5	47	30
X2 F 01259		ARM: pitman 5670281 (52788)	EA		1	*	*	*	*	*	*	*	5	47	25
P F 01260	3110-807-3185	BEARING, BALL STEERING 871035 (12603)	EA		1	*	*	2	*	*	2	6	10	47	45
P H 01261	2530-375-0954	BEARING, SLEEVE: pitman shaft 267102 (52788)	EA		2				*	2	2	12	20	47	20
P F 01262	2530-737-3552	BEARING, SLEEVE: side cover 266034 (52788)	EA		1	*	*	2	*	*	2	7	10	47	42

(1) SMR CODE INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
P H 01263	2530-152-8458	COVER: thrust 267690 (52788)		EA		1				*	*	*	5	5	47	27
X2 F 01264	2530-499-9263	COVER ASSEMBLY: side 267387 (52788)		EA		1									47	38
P H 01265	2530-164-3580	GASKET: side cover 266674 (52788)		EA		1				*	*	2	10	100	47	35
P H 01266	2530-384-8776	GASKET: thrust cover 266052 (52788)		EA		1				*	*	2	10	100	47	32
X1 01267		HOUSING 5670212 (52788)		EA		1									47	58
F 01268	5310-297-3250	NUT, PLAIN, HEXAGON: lash adjuster		EA		1	*	*	*	*	*	*	*	*	47	41
F 01269	5310-700-0667	NUT, PLAIN, HEXAGON: pitman arm		EA		1	*	*	*	*	*	*	*	*	47	24
F 01270	5310-384-8807	NUT, PLAIN, HEXAGON: thrust adjusting		EA		1	*	*	*	*	*	*	*	*	47	31
F 01271	5310-842-9169	NUT, SPECAIL: handwheel		EA		1	*	*	*	*	*	*	*	*	47	1
F 01272	5310-791-8300	NUT, SPECIAL: steering gear to support		EA		1	*	*	*	*	*	*	*	*	47	17
F 01273	4730-010-3867	PLUG, PIPE: filler, 3/8 in.		EA		1	*	*	*	*	*	*	*	*	47	33
P H 01274	3110-191-0490	RETAINER AND ROLLERS, BEARING: thrust 179291 (52788)		EA		1				*	*	2	7	10	47	26
P H 01275	2530-276-8676	RETAINER, PACKING: pitman arm 262156 (52788)		EA		1				*	*	*	5	5	47	22
P F 01276	3110-159-1359	RING, BEARING, OUTER: thrust 179290 (52788)		EA		1	*	*	2	*	*	2	7	10	47	2
F 01277	5305-269-3209	SCREW, CAP, HEXAGON HEAD: side cover		EA		3	*	*	*	*	*	*	*	*	47	39
F 01278	5305-226-7768	SCREW, CAP, HEXAGON HEAD: steering gear to support		EA		1	*	*	*	*	*	*	*	*	47	19
H 01279	5305-269-3211	SCREW, CAP, HEXAGON HEAD: thrust cover		EA		4				*	*	*	*	*	47	29
X2 H 01280		SHAFT AND GEAR: pitman 873970 (12603)		EA		1				*	*	*	*	*	47	34

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
P H 01281	2530-929-5332	SHAFT ASSEMBLY: w/ball nut and contact terminal 5670215 (52788)	EA		1				•	•	•	5	5	47	3
P F 01282	2530-098-2201	SHIM PACKAGE: lash adjuster 605142 (52788)	EA		1	•	•	•	•	•	•	5	10	47	37
P F 01283	2530-073-2166	SPRING: upper bearing 871038 (12603)	EA		1	•	2	2	•	2	2	12	10	47	46
P F 01284	2530-010-2477	STEERING WHEEL 2609 (77915)	EA		1	•	•	•	•	•	•	5	5	47	47
F 01285	5310-359-1938	WASHER, FLAT: upper bearing	EA		1	•	•	•	•	•	•	•	•	47	44
F 01286	5310-754-2005	WASHER, LOCK: pitman arm	EA		1	•	•	•	•	•	•	•	•	47	23
F 01287	5310-637-9541	WASHER, LOCK: side cover	EA		3	•	•	•	•	•	•	•	•	47	40
F 01288	5310-791-7967	WASHER, LOCK: steering gear to support	EA		1	•	•	•	•	•	•	•	•	47	18
H 01289	5310-637-9541	WASHER, LOCK: thrust cover	EA		4				•	•	•	•	•	47	28
P H 01290	5330-359-1698	WASHER, NONMETALLIC: pitman arm 270289 (52788)	EA		1				•	•	2	6	100	47	21
X2 F 01291		SUPPORT: steering gear 1611621 (12603)	EA		1									47	4
X2 0 01292		TIE ROD ASSEMBLY: rh and lh 107135 (12603)	EA		2	•	•	•	•	•	•	•	20	40	21
P 0 01293	5340-375-0966	CLAMP, LOOP: tie rod 103404 (12603)	EA		4	•	•	•	•	•	•	5	5	40	20
P 0 01294	2530-375-0965	CUP: tie rod ball 111563 (12603)	EA		4	2	2	2	2	2	2	24	40	40	16
P 0 01295	2530-359-1529	END ASSEMBLY: lh 103406 (12603)	EA		2	•	2	2	•	2	2	14	20	40	17
P 0 01296	2530-359-1528	END ASSEMBLY: rh 103405 (12603)	EA		2	•	2	2	•	2	2	14	20	40	23

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION — REFERENCE NO. & MFR. CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
0 01297	5310-012-0370	NUT, PLAIN, HEXAGON: clamp	EA		4	•	•	•	•	•	•	•	•	40	18
0 01298	5310-359-1665	NUT, SLOTTED, HEXAGON: tie rod end bolt	EA		4	•	•	•	•	•	•	•	•	40	14
X1 01299		ROD: tie rod NSS (12603)	EA		1										
0 01300	5305-021-7043	SCREW, CAP, HEXAGON HEAD: clamp	EA		4	•	•	•	•	•	•	•	•	40	24
0 01301	5310-209-0965	WASHER, LOCK: clamp	EA		4	•	•	•	•	•	•	•	•	40	19
0 01302	5310-628-3952	WASHER: cylinder to frame	EA		2	•	•	•	•	•	•	•	•	48	4
F 01303	5310-698-4460	WASHER: steering gear	EA		1	•	•	•	•	•	•	•	•	47	7
0 01304	5310-167-0721	WASHER, LOCK: steering column	EA		2	•	•	•	•	•	•	•	•	47	15
F 01305	5310-584-7888	WASHER, LOCK: steering gear support	EA		1	•	•	•	•	•	•	•	•	47	6
01306		1410 - HYDRAULIC PUMP ASSEMBLY													
P F 01307	3930-073-2143	PARTS KIT: pump 922637 (62983)	EA		1	•	•	2	•	•	2	10	100		
X1 01308		RING 922637-2 (62983)	EA		1									49	11
X1 01309		ROTOR 922637-3 (62983)	EA		1									49	12
X1 01310		VANE 922637-1 (62983)	EA		10									49	13
P O R 01311	3930-078-2884	PUMP: power steering 797545 (12603) (Includes components of SEAL KIT, Stock No. 3930-073-2142 and PARTS KIT, Stock No. 3930-073-2143)	EA		1	•	2	2	•	2	2	12	10		
X2 F 01312		ADAPTER: pump reservoir 240431 (62983)	EA		1									49	15
X2 F 01313		PIN: relief valve plug 15J2020 (12603)	EA		1	•	•	•	•	•	•	•	•	49	3

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION — REFERENCE NO. & MFR. CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION	
							(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO.	(b) ITEM NO.
X2 F 01314		PIN: ring 217308 (62983)		EA		2	•	•	•	•	•	•	•	•	49	10
P F 01315	2530-986-7594	PLATE PUMP PRESSURE 213987 (62983)		EA		1	•	•	•	•	•	•	3	3	49	9
F 01316	5305-269-3211	SCREW, CAP, HEXAGON HEAD: pumping mounting		EA		2	•	•	•	•	•	•	•	•	49	17
X2 F 01317		SHAFT: power steering pump 225247 (62983)		EA		1	•	•	•	•	•	•	•	•	49	19
P F 01318	2530-986-7595	SPRING, HELICAL, COMPRESSION: pressure plate 245507 (62983)		EA		1	•	2	2	•	2	2	12	10	49	8
X2 F 01319		SPRING: valve subassembly B3226-86 (95953)		EA		1	•	•	•	•	•	•	•	•	49	7
P F 01320	2530-755-0381	VALVE: power steering, pump 232796 (62983)		EA		1	•	•	•	•	•	•	5	5	49	6
X2 F 01321		RESERVOIR 239434 (62983)		EA		1									49	22
P O 01322	2530-764-6604	CAP, OIL, RESERVOIR 239457 (62983)		EA		1	•	•	•	•	•	•	5	5	49	1
F 01323	5305-983-5338	SCREW, CAP, HEXAGON HEAD: cover		EA		4	•	•	•	•	•	•	•	•	49	2
P F 01324	3930-073-2142	SEAL KIT 922709 (62983)		EA		1	•	•	2	•	•	2	10	100		
X1 01325		PACKING, PREFORMED: adapter 922709-1 (62983)		EA		1									49	14
X1 01326		PACKING, PREFORMED: adapter 922709-2 (62983)		EA		1									49	16
X1 01327		PACKING, PREFORMED: body 922709-3 (62983)		EA		1									49	21
X1 01328		PACKING, PREFORMED: body 922709-4 (62983)		EA		1									49	20

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE · USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) TEM NO
X1 01329		PACKING, PREFORMED: plug 922709-5 (62983)	EA		1									49	5
X1 01330	3930-974-1947	PLUG, PUMP ASSEMBLY 175049 (62983)	EA		1									49	4
X1 01331		SEAL: shaft 922709-6 (62983)	EA		1									49	18
01332		1411 - HOSES, LINES, FITTINGS													
X2 0 01333		CLAMP: return line to pump, SAE type, .770 in., dia 17H12 (12603)	EA		1	•	•	•	•	•	•	•	•	50	6
P 0 01334	4730-010-0597	CONNECTOR, FITTING: cylinder return port, 1/2 in. tube by 3/4-16 unf 15K6 (12603)	EA		1	•	•	•	•	•	•	5	5	50	1
P 0 01335	4730-852-4065	ELBOW FITTING: swivel, 1/2 in. tube, 3/4-16 unf 12K6 (12603)	EA		1	•	•	•	•	•	•	5	5	50	4
P 0 01336	4730-765-5711	ELBOW, TUBE TO BOSS: pressure line, 1/2 in., tube by 3/4-16 unf 18K6 (12603)	EA		1	•	•	•	•	•	•	5	5		
P 0 01337	4730-674-6836	ELBOW, TUBE TO HOSE: pump pressure port 17K6 (12603)	EA		1	•	•	•	•	•	•	5	5	50	8
C 0 01338		FITTING: return line 8PFJS (99879)	EA		1	•	•	•	•	•	•	•	5		
MF 0 01339		HOSE ASSEMBLY: steering pump, return line 6F8FJS34 (70434) MANUFACTURE FROM:	EA		1									50	3
P F 01340	4730-542-2807	ADAPTER: swivel 4797-8B (01276)	EA		1				SEE	GRP	9901			50	2
P F 01341	4720-274-1156	HOSE, RUBBER: bulk (30 in. required) 1525-8 (00624)	FT						SEE	GRP	9501				
MF 0 01342		HOSE, RUBBER: pressure line 660407 (12603) MANUFACTURE FROM:	EA		1									50	7

242-[illegible]1

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a) FIG NO	(b) ITEM NO
						1-20	21-50	51-100	1-20	21-50	51-100				
P F 01343	4730-897-6271	ADAPTER, STRAIGHT, TUBE TO HOSE: swivel 4411-8 (00624)	EA		2	*	*	*	*	*	*	5	10	50	5
P F 01344	4720-067-0454	HOSE, RUBBER: bulk (31 in. required) 1503-8 (00624)	FT						SEE	GRP	9501				
01345		1412 - HYDRAULIC CYLINDER													
P O 01346	2530-940-7854	BOOT, DUST 134070 (12603)	EA		1	*	*	*	*	*	*	5	10	51	18
P O R 01347	3930-069-3536	CYLINDER: power steering 137782 (12603) (Includes components of SEAL KIT, Stock No. 3930-073-2144 and (12603) 136801)	EA		1	*	*	*	*	*	*	5	5		
P F 01348	2520-833-8959	BALL BEARING: 3/16 in. 10J06 (12603)	EA		1				SEE	GRP	9901			51	26
F 01349	5305-893-6610	BOLT: control ball stud housing mounting, 3/8-24 thd size, 5-1/4 in. lg	EA		4	*	*	*	*	*	*	*	*	51	22
F 01350	5306-208-5080	BOLT, MACHINE: control ball stud housing	EA		1	*	*	*	*	*	*	*	*	51	24
X1 01351	2530-226-1922	CYLINDER POWER STEERING 137806 (12603)	EA		1									43	5
F 01352	4730-279-0354	FITTING, LUBRICATION: hydraulic cylinder	EA		1	*	*	*	*	*	*	*	*	51	25
P F 01353	2530-266-1168	HOUSING CYLINDER: control ball stud 134269 (12603)	EA		1	*	*	*	*	*	*	5	5	51	16
P F 01354	5340-842-7655	LOCK, SPECIAL 134078 (12603)	EA		1	*	*	*	*	*	*	5	5		
F 01355	5310-012-1932	NUT, PLAIN, HEXAGON: control ball stud housing	EA		1	*	*	*	*	*	*	*	*	51	20
F 01356	5310-221-4695	NUT, SELF-LOCKING, HEXAGON: thru bolt	EA		1	*	*	*	*	*	*	*	*	51	4
P F 01357	2530-019-2265	PLUG, ADJUSTING BALL 134056 (12603)	EA		1	*	*	*	*	*	*	5	5	51	23
P F 01358	2530-226-8403	PLUG, CHECK, BALL 134455 (12603)	EA		1	*	*	*	*	*	*	5	5	51	27

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
F 01359	4730-018-9566	PLUG, PIPE: valve body	EA		3	*	*	*	*	*	*	*	*		
F 01360	4730-019-1202	PLUG, VALVE BODY	EA		1	*	*	*	*	*	*	*	*	51	1
C F 01361		SCREW, CAP, HEXAGON HEAD: inner, control 5/16-24 thd size, 5-5/16 in. lg 18C584 (12603)	EA		1	*	*	*	*	*	*	*	*	51	12
P F 01362	2530-930-6386	SEAT, BALL, SOCKET 134055 (12603)	EA		2	*	*	*	*	*	*	5	10	51	15
P F 01363	2530-019-2260	SLEEVE, BALL, STUD: inner, control 134054 (12603)	EA		1	*	*	*	*	*	*	5	5	51	11
P F 01364	2530-226-8404	SPACER, STEERING CYLINDER 134057 (12603)	EA		1	*	*	*	*	*	*	5	5	51	13
P F 01365	2530-226-1301	SPACER, STOP, STEERING 134059 (12603)	EA		1	*	*	*	*	*	*	5	5	51	9
X2 F 01366		SPOOL, VALVE 134430 (12603)	EA		1									51	29
P F 01367	5340-927-4863	SPRING, SPECIAL: centering 134119 (12603)	EA		1	*	*	2	*	*	2	6	10	51	10
P F 01368	2530-226-1267	WASHER, CENTERING SPRING 134060 (12603)	EA		2	*	*	*	*	*	*	5	10	51	8
F 01369	5310-637-9541	WASHER, LOCK: control ball stud housing screw	EA		1	*	*	*	*	*	*	*	*	51	21
F 01370	5310-088-6572	WASHER, SPECIAL: ball stud	EA		1	*	*	*	*	*	*	*	*	51	14
0 01371	5310-813-0407	NUT, SLOTTED, HEXAGON: stud	EA		1	*	*	*	*	*	*	*	*	51	19
P F 01372	3930-073-2144	SEAL KIT: piston rod 136802 (12603)	EA		1	*	2	2	*	2	2	12	100	51	6
X1 01373		RETAINER: seal 134038 (12603)	EA		1										
X1 01374		SCRAPER: piston rod 134042 (12603)	EA		1										

best copy available

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO. & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(b) ITEM NO
X1 01375		SEAL: piston 134041 (12603)	EA		1										
X1 01376	5340-027-1633	SNAP RING: seal 755855 (12603)	EA		1										
X1 01377		WIPER 134039 (12603)	EA		1										
X2 F 01378		SEAL KIT: valve 136801 (12603)	EA		1	*	*	*	*	*	*	*	*		
X1 01379	5330-080-0001	PACKING, PREFORMED: 5/16 in. by 7/16 in. 25K20014 (12603)	EA		1									51	28
X1 01380	2530-534-5565	PACKING, PREFORMED 25K20010 (12603)	EA		2									51	5
X1 01381	5330-088-6512	RETAINER, PACKING 134290 (12603)	EA		1									51	7
X1 01382	2530-019-2266	RETAINER, SPOOL SEAL 134289 (12603)	EA		1									51	3
X1 01383	5340-776-3782	SEAL, PLAIN, ENCASED 25K30022 (12603)	EA		2									51	2
P F 01384	2530-019-2262	STUD, CYLINDER STEERING 134052 (12603)	EA		1	*	*	*	*	*	*	5	5	51	17
01385		GROUP 15 - FRAME, TOWING ATTACHMENTS AND DRAWBARS													
01386		1501 - FRAME ASSEMBLY													
X2 0 01387		GUARD ASSEMBLY: overhead 328722 (12603)	EA		1									52	15
X2 0 01388		LATCH: hood side 737989 (12603)	EA		2									52	8
X2 0 01389		LATCH: seat, support 733138 (12603)	EA		1									52	2

242-1

(1) SMR CODE	(1) INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION — REFERENCE NO & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
0	01390	5310-763-8905	NUT: guard to cowl, 5/8-18 thd size		EA		2	*	*	*	*	*	*	*	*	52	14
0	01391	5310-768-0319	NUT, PLAIN, HEXAGON: hood latch		EA		4	*	*	*	*	*	*	*	*	52	11
0	01392	5310-274-8323	NUT, SELF-LOCKING, HEXAGON: seat support		EA		1	*	*	*	*	*	*	*	*	52	5
0	01393	5305-071-2239	SCREW, CAP, HEXAGON HEAD: latch, mounting		EA		2	*	*	*	*	*	*	*	*	52	7
0	01394	5306-225-9089	SCREW, CAP, HEXAGON HEAD: seat support		EA		1	*	*	*	*	*	*	*	*	52	1
0	01395	5305-274-2568	SCREW, CAP, SOCKET HEAD: guard to cowl		EA		2	*	*	*	*	*	*	*	*	52	12
X2 0	01396		SPACER: seat support 731844 (12603)		EA		1									52	4
X2 0	01397		SPRING: latch 660148 (12603)		EA		2	*	*	*	*	*	*	*	*	52	6
X2 0	01398		SPRING: seat support 667430 (12603)		EA		1	*	*	*	*	*	*	*	*	52	3
0	01399	5310-740-7417	WASHER: hood latch		EA		2	*	*	*	*	*	*	*	*	52	10
0	01400	5310-685-8308	WASHER: hood latch		EA		2	*	*	*	*	*	*	*	*	52	9
0	01401	5310-820-6653	WASHER, LOCK: guard to cowl		EA		2	*	*	*	*	*	*	*	*	52	13
	01402		1502 - COUNTERWEIGHTS														
X2 F	01403		BOLT, MACHINE: counterweight to frame, 1-14 thd size, 7 in. lg 1C16112 (12603)		EA		1	*	*	*	*	*	*	*	*		
X2 F	01404		COUNTERWEIGHT 790224 (12603)		EA		1										
F	01405	5310-027-7216	NUT, PLAIN, HEXAGON: counterweight to frame, 1-14 thd size		EA		1	*	*	*	*	*	*	*	*		
X2 F	01406		PIN, COUPLER 665135 (12603)		EA		1										
F	01407	5315-217-9420	PIN, SPRING		EA		1	*	*	*	*	*	*	*	*		
X2 F	01408		WASHER: counterweight to frame 619028 (12603)		EA		1										

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO. & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO.	(11) (b) ITEM NO
F 01409	5310-013-1048	WASHER, LOCK: counterweight to frame, 1 in.	EA		1	*	*	*	*	*	*	*	*		
01410		GROUP 18 - BODY, CAB, HOOD AND HULL													
01411		1806 - UPHOLSTERY SEATS AND CARPETS													
X2 0 01412		ADJUSTER: lh 666477 (12603)	EA		1	*	*	*	*	*	*	*	*	53	4
X2 0 01413		ADJUSTER: rh 666476 (12603)	EA		1	*	*	*	*	*	*	*	*	53	8
X2 0 01414		BACK REST: seat 329347 (12603)	EA		1	*	*	*	*	*	*	*	*	53	2
X2 0 01415		CUSHION: seat 776798 (12603)	EA		1	*	*	*	*	*	*	*	*	53	1
X2 0 01416	2540-929-7093	FRAME: seat 317450 (12603)	EA		1									53	3
0 01417	5310-853-9335	NUT, PLAIN, HEXAGON: adjuster mounting, lh and rh	EA		4	*	*	*	*	*	*	*	*	53	5
0 01418	5310-853-9335	NUT, PLAIN, HEXAGON: adjuster to frame	EA		4	*	*	*	*	*	*	*	*	53	10
X2 0 01419		SPACER: adjuster mounting, lh and rh 5/16 in. 626787 (12603)	EA		8									53	7
X2 0 01420		SPACER: guard to cowl 675781 (12603)	EA		2										
0 01421	5310-407-9566	WASHER, LOCK: adjuster mounting, lh and rh	EA		4	*	*	*	*	*	*	*	*	53	6
0 01422	5310-407-9566	WASHER, LOCK: adjuster to frame	EA		4	*	*	*	*	*	*	*	*	53	9
01423		GROUP 24 - HYDRAULIC LIFT COMPONENTS													
01424		2401 - HYDRAULIC PUMP													
X2 F 01425		ADAPTER: hydraulic pump F400V408 (14351)	EA		1									5	18
X2 F 01426		FLANGE: pump inlet 665208 (12603)	EA		1									62	31

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
P F 01427	5330-757-8464	GASKET, BEARING: pump to adapter 23921 (61038)		EA		1	*	*	2	*	*	2	7	100	54	13
P F 01428	2590-384-0157	GASKET: pump adapter to front end plate F400V300 (14351) (Component of GASKET SET, Stock No. 2805-073-2108, See Group 0100)		EA		1	*	*	2	*	*	2	10	5	5	19
P F 01429	5330-674-6843	GASKET: pump flange 665209 (12603)		EA		1	*	*	2	*	*	2	10	10	62	32
X2 F 01430		GEAR: pump drive F600H318 (14351)		EA		1									54	11
F 01431	5315-311-2298	KEY, MACHINE: pump shaft, 3/16 in. by 1 in.		EA		1	*	*	*	*	*	*	*	*	54	9
F 01432	5310-732-0558	NUT, PLAIN, HEXAGON: pump mounting		EA		2	*	*	*	*	*	*	*	*	54	17
P F 01433	2590-678-7259	PARTS KIT, HYDRAULIC PUMP 925537 (62983)		EA		1	*	*	2	*	*	2	10	100		
X1 01434	5330-231-4107	PACKING, PREFORMED 25K40308 (12603)		EA		3									54	18
X1 01435		RING: pump 922519-2 (62983)		EA		1									54	21
X1 01436		ROTOR: pump 922519-3 (62983)		EA		1									54	20
X1 01437		VANE: pump rotor 922519-1 (62983)		EA		12									54	19
X2F R 01438		PUMP ASSEMBLY: hydraulic 727218 (12603) (Includes components of PARTS KIT, Stock No. 2590-678-7259)		EA		1	*	*	*	*	*	*	*	5	62	33
P F 01439	3110-144-8494	BEARING, BALL, ANNULAR: pump shaft, inner 3202 (43334)		EA		1	*	*	2	*	*	2	7	10	54	6
P F 01440	3110-156-8390	BEARING, BALL, ANNULAR: pump shaft, outer 204NNF4G75 (43991)		EA		1	*	*	2	*	*	2	7	10	54	10
X1 01441	2590-765-4844	BODY, HYDRAULIC PUMP 116655 (62983)		EA		1									54	5

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION	
INDEX NO.		REFERENCE NO & MFR CODE USABLE ON CODE				(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
F 01442	5306-359-2761	BOLT, MACHINE: pump cover	EA		4	•	•	•	•	•	•	•	•	54	22
X2 F 01443	2590-765-5638	COVER: pump	EA		1									54	1
F 01444	5310-596-2516	NUT, PLAIN, HEXAGON: pump shaft	EA		1	•	•	•	•	•	•	•	•	54	12
F 01445	5315-775-2523	PIN, STRAIGHT, HEADLESS: plate locating	EA		2	•	•	•	•	•	•	•	•	54	4
P F 01446	3930-888-2451	PLATE, PRESSURE 209902 (62983)	EA		1	•	•	•	•	•	•	5	5	54	3
P F 01447	5340-359-4042	RING, RETAINING: bearing 109975 (62983)	EA		1	•	•	•	•	•	•	5	5	54	15
P F 01448	4320-995-6231	SEAL, PLAIN, ENCASED: pump shaft 229235 (62983)	EA		1	•	•	2	•	•	2	10	100	54	7
P F 01449	2590-359-4360	SHAFT: pump 120037 (62983)	EA		1	•	•	•	•	•	•	5	5	[illegible]	8
P F 01450	5340-359-4359	SPRING: pump cover pressure 114139 (62983)	EA		1	•	•	2	•	•	2	7	10	54	2
F 01451	5305-269-4511	SCREW, CAP, HEXAGON HEAD: gear cover to adapter	EA		3	•	•	•	•	•	•	•	•	5	5
F 01452	5305-018-0129	SCREW, CAP, HEXAGON HEAD: gear cover to adapter	EA		1	•	•	•	•	•	•	•	•		
F 01453	5305-269-3218	SCREW, CAP, HEXAGON HEAD: gear cover to adapter	EA		1	•	•	•	•	•	•	•	•		
F 01454	5305-269-2804	SCREW, CAP, HEXAGON HEAD: flange mounting	EA		2	•	•	•	•	•	•	•	•	62	38
F 01455	5310-638-2880	WASHER, KEY: gear to pump	EA		1	•	•	•	•	•	•	•	•	[illegible]	14
F 01456	5310-637-9541	WASHER, LOCK: flange mounting	EA		2	•	•	•	•	•	•	•	•	62	37
F 01457	5310-637-9541	WASHER, LOCK: gear cover to adapter	EA		5	•	•	•	•	•	•	•	•		
F 01458	5310-637-9541	WASHER, LOCK: pump mounting	EA		2	•	•	•	•	•	•	•	•	[illegible]	16
0145[illegible]		2402 - HYDRAULIC CONTROL VALVE													
O 01460	5310-012-1932	NUT, PLAIN, HEXAGON: valve mounting	EA		2	•	•	•	•	•	•	•	•	[illegible]	10
F 01461	5310-012-1932	NUT, PLAIN, HEXAGON: valve mounting	EA		2	•	•	•	•	•	•	•	•	[illegible]	19

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
F 01462	5310-732-0558	NUT, PLAIN, HEXAGON: valve thru bolt	EA		8	*	*	*	*	*	*	*	*	55	8
P F 01463	2530-087-0327	PLUG: check valve 222640 (62983)	EA		1				SEE	GRP	9901			55	24
P F 01464	5330-960-9332	RING, SET: valve 922906 (62983)	EA		2	*	2	2	*	2	2	20	200		
X1 01465	3930-953-5208	PACKING, CONTROL VALVE 226161 (62983)	EA		1									55	31
X1 01466		PACKING, PREFORMED: check valve 25K30014 (62983)	EA		1									55	27
X1 01467	5330-714-5265	PACKING, PREFORMED: relief valve, plug	EA		1									55	12
X1 01468		PACKING, PREFORMED: spool 282971 (62983)	EA		1									55	4
X1 01469		PACKING, PREFORMED: spool 283856 (62983)	EA		1									55	16
X1 01470		PACKING, PREFORMED: spool cap 25K20104 (62983)	EA		1									55	3
X1 01471	3930-052-7504	RETAINER, OIL, SEAL 237736 (62983)	EA		1									55	18
X1 01472		RING: back up 286669 (62983)	EA		1									55	15
X1 01473		RING: check valve, back up 286669 (62983)	EA		1									55	28
X1 01474	3930-953-5206	SEAL, CONTROL VALVE 223489 (62983)	EA		1									55	17
X1 01475	3930-953-5207	SEAL, CONTROL VALVE 223493 (62983)	EA		1									55	30
F 01476	5305-269-2805	SCREW, CAP, HEXAGON HEAD: valve mounting	EA		3	*	*	*	*	*	*	*	*	55	23
O 01477	5305-687-7011	SCREW, CAP, HEXAGON HEAD: valve mounting	EA		2	*	*	*	*	*	*	*	*	56	1

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
X2 O 01478		SPACER: valve mounting, 3/8 in. 603985 (12603)	EA		2									56	8
X2 FR 01479		VALVE ASSEMBLY: hydraulic control 330804 (12603) (Includes components of RING SET, Stock No. 5330-960-9332)	EA		1									62	10
P F R 01480	3930-587-7020	VALVE SECTION: inlet 330824 (12603) (Includes items 1 thru 7, 9 thru 13, 15, 16, 25 thru 29 and 32 of figure 55)	EA		1	*	*	*	*	*	*	5	5	55	14
P F 01481	3110-965-0445	BALL, BEARING: check valve 10J20 (12603)	EA		1				SEE	GRP	9901			55	25
P F 01482	3110-965-0445	BALL, BEARING: check valve, 5/8 in. 10J20 (12603)	EA		1				SEE	GRP	9901				
F 01483	4730-674-6831	CAP: relief valve	EA		1	*	*	*	*	*	*	*	*	55	11
X2 F 01484		PLUG: rear port 662647 (12603)	EA		1									55	13
P F 01485	2530-087-0327	PLUG: check valve 222640 (62983)	EA		1				SEE	GRP	9901			55	29
P F 01486	5340-889-5209	RETAINER: end cap 284154 (62983)	EA		1	*	*	*	*	*	*	5	5	55	1
P F 01487	5340-889-5209	RETAINER: end cap 284154 (62983)	EA		1	*	*	*	*	*	*	5	5		
P F 01488	3930-867-1464	SCREW: cap, retaining 282027 (62983)	EA		4	*	*	*	*	*	*	5	20	55	32
P F 01489	2530-087-0369	SLEEVE: end cap 284155 (62983)	EA		1	*	*	*	*	*	*	5	5	55	2
P F 01490	2530-087-0369	SLEEVE: end cap 284155 (62983)	EA		1	*	*	*	*	*	*	5	5		
X1 01491		SPOOL: inlet and outlet, section 229999 (12603)	EA		1									55	7

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
P F 01492	4810-953-5205	SPRING: check valve 223388 (62983)		EA		1				SEE	GRP	9901				
P F 01493	4810-953-5205	SPRING, HYDRAULIC VALVE 223388 (62983)		EA		1				SEE	GRP	9901			55	26
P F 01494	3930-918-1920	SPRING: relief valve 259871 (62983)		EA		1	*	*	2	*	*	2	6	10	55	10
P F 01495	3930-960-9326	SPRING, VALVE: spool centering 246632 (62983)		EA		1				SEE	GRP	9901				
P F 01496	3930-960-9326	SPRING, VALVE: spool centering 246632 (62983)		EA		1				SEE	GRP	9901			55	5
X2 F 01497		STUD: valve, 3/8-16 thd size, 5-1/2 in. lg 13000635 (12603)		EA		4	*	*	*	*	*	*	*	*	55	22
P F 01498	2530-034-4188	VALVE: relief, lift cylinder valve 232799 (62983)		EA		1	*	*	*	*	*	*	5	5	55	9
P F R 01499	3930-960-9331	VALVE SECTION: outlet 330821 (12603) (Includes items 1 thru 7, 15, 16, 25 thru 29, 32, of figure 55)		EA		1	*	*	*	*	*	*	5	5	55	21
F 01500	5310-960-9327	WASHER: spool		EA		4	*	*	*	*	*	*	*	*		
F 01501	5310-867-1465	WASHER: spool "C"		EA		2	*	*	*	*	*	*	*	*	55	6
P O R 01502	4820-012-2261	VALVE, LINEAR, DIRECTION: tilt lock 134370 (12603)		EA		1	*	*	2	*	*	2	6	10	62	63
X2 F 01503		CAP: tilt, lock, valve spring 134544 (12603)		EA		2									56	5
P F 01504	2590-930-5683	ORIFICE: tilt, lock, valve 134375 (12603)		EA		1	*	*	*	*	*	*	5	5	56	11
P F 01505	5330-587-7049	SEAL: tilt, lock, valve spool, large 134438 (12603)		EA		1	*	*	2	*	*	2	10	100	56	3
P F 01506	3930-886-2794	SEAL: tilt, lock, valve spool, small 8055HR173 (72902)		EA		1	*	*	2	*	*	2	10	100	56	2

242-401

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
X2 0 01507		SPOOL: tilt lock, valve 136803 (12603)	EA		1	*	*	*	*	*	*	*	*	56	7
X2 0 01508		SPRING; tilt lock, valve spool 134588 (12603)	EA		1	*	*	*	*	*	*	*	*	56	6
X2 0 01509		STOP: tilt lock, valve spool 134368 (12603)	EA		1	*	*	*	*	*	*	*	*	56	4
F 01510	5310-637-9541	WASHER, LOCK: valve mounting	EA		3	*	*	*	*	*	*	*	*	55	20
0 01511	5310-637-9541	WASHER, LOCK: valve mounting	EA		2	*	*	*	*	*	*	*	*	56	9
01512		2403 - HYDRAULIC CONTROL LEVERS AND LINKAGE													
X2 F 01513		BASE: valve linkage 328614 (12603)	EA		2									57	6
P 0 01514	5355-765-5688	KNOB: control lever 653785 (12603)	EA		2				SEE	GRP	9901			57	1
X2 F 01515		LEVER: control, lift 335747 (12603)	EA		1									57	9
X2 F 01516		LEVER: control, tilt 335748 (12603)	EA		1									57	2
X2 F 01517		PIN: base to valve 1300641 (12603)	EA		1									57	7
F 01518	5315-966-4924	PIN, CLEVIS: control lever to valve	EA		4	*	*	*	*	*	*	*	*	57	4
F 01519	5315-842-3044	PIN, COTTER: control lever, pin	EA		4	*	*	*	*	*	*	*	*	57	3
X2 0 01520		RING: retaining 732736 (12603)	EA		2	*	*	*	*	*	*	*	10	57	8
F 01521	5310-833-3340	WASHER, FLAT: control lever, pin	EA		4	*	*	*	*	*	*	*	*	57	5
01522		2404 - HYDRAULIC TILT CYLINDER AND TILT CRANK													
P F 01523	3120-892-3910	BEARING, PLAIN: tilt cylinder alignment, rear 665199 (12603)	EA		2	*	2	2	*	2	2	12	20	58	19

(1) SMR CODE INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
P F 01524	3120-888-6611	BUSHING, SLEEVE: tilt cylinder,rod end 661930 (12603)	EA		2	*	2	2	*	2	2	12	20	58	31
P O R 01525	3930-102-2571	CYLINDER ASSEMBLY: tilt, rh and lh 790654 (12603) (Includes components of PARTS KIT, Stock No. 3930-073-2149)	EA		2	*	*	*	*	*	*	5	10	62	28
F 01526	5306-960-9314	BOLT, SELF-LOCKING: tilt cylinder, 5/16-24 thd size, 1 in.lg	EA		6	*	*	*	*	*	*	*	*	58	17
P F 01527	3120-876-4570	BUSHING, SLEEVE: tilt cylinder 757760 (12603)	EA		2	*	*	*	*	*	*	5	20	58	10
P F 01528	3930-886-3161	COVER: tilt cylinder 757766 (12603)	EA		2	*	*	*	*	*	*	3	3	58	9
X1 01529		CYLINDER, TILT CYLINDER 759424 (12603)	EA		2									58	33
F 01530	4730-891-7059	FITTING, LUBRICATION: tilt cylinder	EA		4	*	*	*	*	*	*	*	*	58	18
X2 F 01531		GLAND: tilt cylinder 757758 (12603)	EA		2									58	13
X2 F 01532		RETAINER: tilt cylinder 757763 (12603)	EA		2									58	7
P F 01533	2530-860-0388	RING, RETAINING: tilt cylinder 507695 (12603)	EA		2	*	*	*	*	*	*	5	10	58	14
X2 F 01534		ROD ASSEMBLY: tilt cylinder 788951 (12603)	EA		2									58	28
X2 F 01535		SCREW, CAP, HEXAGON HEAD: tilt cylinder, 5/16 in.-24 by 7/8 in. 2C514 (12603)	EA		6	*	*	*	*	*	*	*	*	58	3
P F 01536	5340-027-1059	SHIM: tilt cylinder 757762 (12603)	EA		2	*	*	*	*	*	*	5	20	58	8
X2 F 01537		SPACER: tilt cylinder, 1/8 in. by 3-3/4 in. by 4 in. 730505 (12603)	EA		2									58	29
X2 F 01538	5310-407-9566	WASHER, LOCK: tilt cylinder	EA		6	*	*	*	*	*	*	*	*	58	4
C F 01539		KEY, MACHINE: mounting assembly, 3/8 in. by 3/8 in. by 3-1/8 in. lg 7J5302 (12603)	EA		2	*	*	*	*	*	*	*	*	58	20

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION: REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7)(b) 21-50	(7)(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8)(b) 21-50	(8)(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11)(b) ITEM NO
X2 F 01540		MOUNT ASSEMBLY: tilt cylinder, lh 734231 (12603)	EA		1									58	23
X2 F 01541		MOUNT ASSEMBLY: tilt cylinder, rh 745993 (12603)	EA		1										
0 01542	5310-732-0560	NUT, PLAIN, HEXAGON: tilt cylinder rod end, attaching	EA		2	*	*	*	*	*	*	*	*	58	1
P F 01543	3930-073-2149	PARTS KIT: tilt cylinder, rh and lh 1810209 (12603)	EA		2	1	3	5	2	3	5	62	200		
X1 01544	3930-860-9916	CUP COMPRESSION: tilt cylinder, piston 743810 (12603)	EA		4									58	26
X1 01545	3950-805-9976	PACKING, PREFORMED: tilt cylinder 25K40324 (12603)	EA		2									59	16
X1 01546	3930-733-9731	PARTS KIT, SEAL: tilt cylinder 743343 (12603)	EA		2									59	6
X1 01547		RETAINER: tilt cylinder 757764 (12603)	EA		2									59	5
X1 01548	3930-805-9977	RETAINER, PACKING: back up tilt cylinder 743866 (12603)	EA		2									59	15
X1 01549	3930-983-4311	RING SET, CYLINDER: gland positioning 881285 (12603)	EA		2									59	12
X1 01550	3930-983-4305	RING, WEARING: tilt cylinder 757757 (12603)	EA		2									59	27
X1 01551	5330-292-1631	SEAL, PACKING, ENCASED: tilt cylinder 757761 (12603)	EA		2									59	11
P 0 01552	5315-791-9244	PIN: pivot, tilt cylinder, front 661931 (12603)	EA		2	*	*	*	*	*	*	5	5	59	13
X2 0 01553		PIN: pivot, tilt cylinder, rear 660383 (12603)	EA		2	*	*	*	*	*	*	*	*	60	25
P 0 01554	5315-052-0147	PIN, [illegible]: tilt cylinder, front 654841 (12603)	EA		2	*	*	*	*	*	*	*	*	60	12

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
0 01555	5315-791-9190	PIN, COTTER: tilt cylinder, 7/32 in. by 3 in. lg	EA		2	*	*	*	*	*	*	*	*	58	24
P 0 01556	3930-069-3625	ROD, END: tilt cylinder 732562 (12603)	EA		2	*	*	*	*	*	*	3	3	58	30
F 01557	5305-727-8815	SCREW, CAP, HEXAGON HEAD: tilt cylinder, mounting bracket, 3/4-16 thd size, 1-3/4 in. lg	EA		4	*	*	*	*	*	*	*	*	58	21
0 01558	5305-725-4187	SCREW, CAP, HEXAGON HEAD: tilt cylinder, rod end, attaching	EA		2	*	*	*	*	*	*	*	*	58	32
F 01559	5310-584-7888	WASHER, LOCK: tilt cylinder, 3/4 in.	EA		4	*	*	*	*	*	*	*	*	58	22
0 01560	5310-584-5272	WASHER, LOCK: tilt cylinder, rod end, attaching	EA		2	*	*	*	*	*	*	*	*	58	2
01561		2405 - HYDRAULIC MAST COLUMN													
X2 0 01562		ADAPTER: cylinder base 342626 (12603)	EA		1									59	17
X2 0 01563		ANCHOR: chain 734635 (12603)	EA		2									61	11
X2 0 01564		ANCHOR: chain, fork plate 665755 (12603)	EA		2									61	17
X2 0 01565		BACK REST: load 762166 (12603)	EA		1									61	21
X2 F 01566		BEARING: chain 789401 (12603)	EA		2	*	*	*	*	*	*	*	*	61	7
2 F 01567		BRACKET: cylinder 1615443 (12603)	EA		1									59	1
X2 F 01568		CAP: trunnion 343842 (12603)	EA		2									59	15
X2 F 01569		CARRIAGE: lift 342270 (12603)	EA		1									59	23
MF 0 01570		CHAIN ASSEMBLY, LIFT (144 in. lift) 666399 (12603) - MANUFACTURE FROM:	EA		2									61	9

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
P F 01571	3020-252-7363	CHAIN, STEEL (4 ft. 7 in. required for each CHAIN ASSEMBLY)	FT						SEE	GRP	9501				
P 0 01572	3930-699-9435	LINK: connecting, riveted type 616659 (12603)	EA		4	*	2	2	*	2	2	12	20	61	10
MF 0 01573		CHAIN ASSEMBLY, LIFT (100 in. lift) 766826 (12603) MANUFACTURE FROM:	EA		2									61	9
P F 01574	3020-252-7363	CHAIN, STEEL (3 ft. 9 in. required for each CHAIN ASSEMBLY)	FT						SEE	GRP	9501				
P 0 01575	3930-699-9435	LINK: connecting, riveted type 616659 (12603)	EA		4	*	2	2	*	2	2	12	20	61	10
X2 FR 01576		CYLINDER ASSEMBLY 144 in. lift 397560 (12603) (Includes components of REPAIR KIT, Stock No. 3930-073-2150) (Same as CYLINDER ASSEMBLY, Part No. (12603) 397545, except where individual components are annotated)	EA		1										
X2 FR 01577		CYLINDER ASSEMBLY: 100 in. lift 397545 (12603) (Includes components of REPAIR KIT, Stock No. 3930-073-2150)	EA		1										
X2 F 01578		BODY, CYLINDER (144 in. lift) 397689 (12603)	EA		1									60	23
X2 F 01579		BODY, CYLINDER (100 in. lift) 397674 (12603)	EA		1									60	23
C F 01580		BUSHING: head, cylinder 1302370 (12603)	EA		1	*	*	*	*	*	*	*	10	60	13
X2 F 01581		HEAD: cylinder 394589 (12603)	EA		1									60	14
X2 F 01582		HEAD: piston 393622 (12603)	EA		1									61	8
X2 F 01583		NUT: gland 397489 (12603)	EA		1									60	26
X2 F 01584		NUT: gland 397490 (12603)	EA		1									60	20

(1) SMR CODE INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
X2 F 01585		NUT: gland 397491 (12603)	EA		1									60	31
F 01586	4730-857-0960	PLUG, FITTING	EA		2	*	*	*	*	*	*	*	*	60	3
X2 F 01587		RETAINER: lift 397501 (12603)	EA		1									60	29
X2 F 01588		RETAINER: lift cylinder 394582 (12603)	EA		1									60	17
P F 01589	3930-998-6164	RING: bearing 394585 (12603)	EA		1	*	*	*	*	*	*	5	5	60	28
X2 F 01590		ROD: piston, primary (144 in. lift) 397816 (12603)	EA		1									60	22
X2 F 01591		ROD: piston, primary (100 in. lift) 397801 (12603)	EA		1									60	22
X2 F 01592		ROD: piston, secondary (144 in. lift) 397317 (12603)	EA		1									60	6
X2 F 01593		ROD: piston, secondary (100 in. lift) 397302 (12603)	EA		1									60	6
F 01594	5305-103-3035	SCREW	EA		2	*	*	*	*	*	*	*	*	60	1
X2 F 01595		SCREW: lock 730981 (12603)	EA		1	*	*	*	*	*	*	*	*	60	16
F 01596	5305-723-9387	SETSCREW: cup-point, 1/4-20 by 1/4 in. hexagon socket head	EA		1	*	*	*	*	*	*	*	*	60	15
X2 F 01597		TUBE: stationary lift (144 in. lift) 394518 (12603)	EA		1									60	33
X2 F 01598		TUBE: stationary lift (100 in. lift) 394503 (12603)	EA		1									60	33
X2 F 01599		VALVE: flow divider 762682 (12603)	EA		1									60	5
P F 01600	4820-034-1614	VALVE, TRUCK: bleeder, flow divider 393266 (12603)	EA		2	*	*	*	*	*	*	5	10	60	2

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(b) ITEM NO
0 01601	4730-050-4203	FITTING, LUBRICATION: trunnion		EA		2	*	*	*	*	*	*	*	*	59	14
X2 0 01602		FORK ASSEMBLY 752044 (12603)		EA		2								5	61	1
P 0 01603	3930-674-2908	LEVER: fork stop 756446 (12603)		EA		2	*	*	*	*	*	*	5	10	61	2
X2 0 01604		NUT: chain anchor, spherical, 5/8 in. 18 swivel 510659 (12603)		EA		2	*	*	*	*	*	*	*	*	61	13
F 01605	5310-637-9541	NUT, PLAIN, HEXAGON: lift cylinder, 3/8-24 thd size		EA		2	*	*	*	*	*	*	*	*	59	18
X2 F 01606	2530-439-9246	NUT, WHEEL: anchor, chain 2D10 (12603)		EA		2	*	*	*	*	*	*	5	5	61	12
X2 F 01607		PAD: stop block 342951 (12603)		EA		2	*	*	*	*	*	*	*	*	59	4
P F 01608	3930-073-2150	PARTS KIT: lift cylinder 1810208 (12603)		EA		1	2	2	3	2	2	3	31	100		
X1 01609	3930-226-1926	PACKING ASSEMBLY 394588 (12603)		EA		1									60	19
X1 01610	3930-226-1949	PACKING ASSEMBLY 394586 (12603)		EA		1									60	25
X1 01611	3930-226-1952	PACKING ASSEMBLY 394587 (12603)		EA		1									60	30
X1 01612	5330-890-3398	PACKING ASSEMBLY 25K40504 (12603)		EA		1									60	4
X1 01613	5330-064-7777	PACKING 91F7 (12603)		EA		1									60	11
X1 01614		RETAINER 397500 (12603)		EA		1									60	24
X1 01615	3930-884-5552	RING, BACK UP 1302391 (12603)		EA		1									60	12

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO. & MFR. CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
X1 01616	3930-226-1925	SPRING, HELICAL, COMPRESSION 390503 (12603)	EA		16									60	18
X1 01617	5330-226-1950	WASHER, NONMETALLIC 11E21 (12603)	EA		1									60	21
X1 01618	5330-226-1951	WASHER, NONMETALLIC 11E46 (12603)	EA		1									60	27
X1 01619	5330-226-1948	WASHER, NONMETALLIC 11E145 (12603)	EA		1									60	32
X2 0 01620		PIN: chain anchor 713380 (12603)	EA		2	*	*	*	*	*	*	*	*	61	15
0 01621	5315-889-5822	PIN, COTTER: anchor, chain	EA		2	*	*	*	*	*	*	*	*	61	14
0 01622	5315-839-5822	PIN, COTTER: chain, anchor	EA		2	*	*	*	*	*	*	*	*	61	16
P 0 01623	5315-791-9243	PIN, SPECIAL: fork stop 954618 (12603)	EA		2	*	*	*	*	*	*	5	10	61	3
P 0 01624	5315-674-9484	PIN: stop, fork 756447 (12603)	EA		2	*	*	*	*	*	*	5	10	61	5
P F 01625	5340-281-6655	RING, RETAINING: chain, bearing 5100-156 (79136)	EA		2	*	*	*	*	*	*	5	10	61	6
P F 01626	5340-803-9981	RING, RETAINING: cylinder, base 5100-156 (79136)	EA		2				SEE	GRP	9901			59	16
X2 0 01627		ROLLER: back rest 342957 (12603)	EA		4									61	20
X2 F 01628		ROLLER: lift bracket 342957 (12603)	EA		4									59	22
P F 01629	3930-010-7961	ROLLER: thrust 666354 (12603)	EA		2	*	*	2	*	*	2	10	20	61	18
F 01630	5305-810-8431	SCREW, CAP, HEXAGON HEAD: cylinder top, 3/8-24 by 1-1/4 in.	EA		6	*	*	*	*	*	*	*	*	59	25
F 01631	5305-543-2271	SCREW, CAP, HEXAGON HEAD: lift cylinder, 3/8-24 thd size, 3/4 in. lg	EA		2	*	*	*	*	*	*	*	*	59	20

242-451

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
F 01632	5305-810-8431	SCREW, CAP, HEXAGON HEAD: stop block, 3/8-24 by 1-1/4 in.	EA		4	•	•	•	•	•	•	•	•	59	2
F 01633	5305-068-8202	SCREW, CAP, SOCKET HEAD: safety stop, 3/8-24 by 1 in.	EA		2	•	•	•	•	•	•	•	•	59	6
X2 F 01634		SCREW, CAP, SOCKET HEAD: safety stop, 3/8-24 by 1 in. 10G616 (12603)	EA		2	•	•	•	•	•	•	•	•	59	9
X2 F 01635		SHIM: roller 662655 (12603)	EA		4									59	21
X2 O 01636		SHIM: roller, lift bracket 662655 (12603)	EA		4									61	19
X2 F 01637		SHIM: stop block, pad 342982 (12603)	EA		2									59	5
P O 01638	5340-674-9483	SPRING: fork, stop 756991 (12603)	EA		2	•	•	•	•	•	•	5	10	61	4
X2 F 01639		STOP: safety, lh 338984 (12603)	EA		1									59	8
X2 F 1639A		STOP: safety, rh 343740 (12603)	EA		1									59	11
F 01640	5310-833-3340	WASHER, FLAT: stop block	EA		4	•	•	•	•	•	•	•	•	59	3
F 01641	5310-637-9541	WASHER, LOCK: cylinder, top	EA		6	•	•	•	•	•	•	•	•	59	24
F 01642	5310-637-9541	WASHER, LOCK: lift cylinder	EA		2	•	•	•	•	•	•	•	•	59	19
F 01643	5310-846-0343	WASHER, LOCK: safety stop, 3/8 in.	EA		2	•	•	•	•	•	•	•	•	59	7
F 01644	5310-846-0343	WASHER, LOCK: safety stop, 3/8 in.	EA		2	•	•	•	•	•	•	•	•	59	10
01645		2406 - HYDRAULIC LINES AND FITTINGS													
O 01646	5306-225-9087	BOLT, MACHINE: tee support clip to bracket	EA		1	•	•	•	•	•	•	•	•	62	42
X2 O 01647		BRACKET: lh, tilt cylinder, hose to drive axle housing 390651 (12603)	EA		1									62	50
X2 O 01648		BRACKET: tee assembly support 1302462 (12603)	EA		1									62	45
O 01649	4730-674-6834	CAP: pump outlet, tee	EA		1	•	•	•	•	•	•	•	•	62	60

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
P 0 01650	5340-827-0802	CAP: sump vent, port 5-[illegible] (95760)	EA		1	*	*	*	*	*	*	5	5	62	36
0 01651	4730-674-[illegible]	CAP: tilt lock, valve	EA		1	*	*	*	*	*	*	*	*	[illegible]	[illegible]
0 01652	4730-467-3514	CLAMP, HOSE: pump to tube hose, tube to sump hose, valve to sump hose	EA		6	*	*	*	*	*	*	*	*	[illegible]	21
X2 0 01653		CLAMP, HOSE: tee assembly, SAE type, E, .70[illegible] in. dia 17H11 (12603)	EA		1	*	*	*	*	*	*	*	*	[illegible]	44
P 0 01654	4730-010-0597	CONNECTOR, FITTING: tilt lock valve, 1/2 in. tube by 3/4-16 unf 15K6 (12603)	EA		1	*	*	*	*	*	*	5	5	[illegible]	66
P 0 01655	4730-010-0597	CONNECTOR, FITTING: to tilt lock outlet, 1/2 in. tube by 3/4-16 unf 15K6 (12603)	EA		1	*	*	*	*	*	*	5	5		58
P 0 01656	4730-853-1183	CONNECTOR: hydraulic control valve, 5/8 in. tube by 7/8-14 unf 202702-10-10S (01276)	EA		1	*	*	*	*	*	*	5	5	[illegible]	16
P 0 01657	4730-883-8448	ELBOW: lh, tilt cylinder, front and rear 90 deg, 3/8 in. tube by 9/16-18 unf 2062-6-6 (01276)	EA		2	*	*	*	*	*	*	5	10	[illegible]	53
P 0 01658	4730-883-8448	ELBOW: tilt lock valve to lh cylinder, 90 deg, 3/8 in. tube by 9/16-18 unf 2062-6-6 (01276)	EA		1	*	*	*	*	*	*	5	5	62	1
P 0 01659	4730-883-8448	ELBOW; tilt lock valve to rh cylinder, 90 deg, 3/8 in. tube by 9/16-18 unf 2062-6-6 (01276)	EA		1	*	*	*	*	*	*	5	5	62	22
X2 F 01660		ELBOW, TUBE 12K7 (12603)	EA		1	*	*	*	*	*	*	*	5	60	9
P 0 01661	4730-052-3972	ELBOW, TUBE TO BOSS: rh, tilt cylinder front, 45 deg, 3/8 in. tube by 9/16-18 unf 18K[illegible] (12603)	EA		1				SEE	GRP	9901			62	26
P 0 01662	4730-052-3972	ELBOW, TUBE TO BOSS: rh, tilt cylinder rear, 45 deg, 3/8 in. tube by 9/16-18 unf 18K[illegible] (12603)	EA		1				SEE	GRP	9901			62	56

242-4

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION	
						(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
P 0 01663	4730-674-6845	ELBOW, TUBE TO HOSE 11K7 (12603)	EA		1	*	*	*	*	*	*	5	5	62	14
P 0 01664	4730-674-6836	ELBOW, TUBE TO HOSE 17K6 (12603)	EA		1	*	*	*	*	*	*	5	5	62	12
P 0 01665	4730-674-6844	ELBOW, TUBE TO HOSE: tilt lock valve to connector 9410281 (24617)	EA		1	*	*	*	*	*	*	5	5	62	68
P 0 01666	4730-674-6836	ELBOW, TUBE TO HOSE: to tilt lock valve 17K6 (12603)	EA		1	*	*	*	*	*	*	5	5	62	65
X2 0 01667		ELBOW: valve lift port 763818 (12603)	EA		1	*	*	*	*	*	*	*	5	62	8
X2 0 01668		ELBOW: valve, outlet port 1300504 (12603)	EA		1	*	*	*	*	*	*	*	5	62	6
P 0 01669	3930-073-2148	FILTER ASSEMBLY: sump 1810141 (12603)	EA		1	*	*	2	*	*	2	7	10	63	1
0 01670	5306-833-9088	BOLT, SPECIAL: sump cover	EA		7	*	*	*	*	*	*	*	*	63	3
X2 0 01671	3930-069-3629	COVER: sump inlet 762272 (12603)	EA		1									63	7
X2 0 01672		COVER: sump outlet 733290 (12603)	EA		1									63	2
P 0 01673	3930-587-7043	FILTER ELEMENT, W/GASKETS (WASHABLE) 1810143 (12603)	EA		1	*	*	2	*	*	2	7	10	63	4
0 01674	5310-088-1251	NUT: check valve, 1/4-20 thd size	EA		2	*	*	*	*	*	*	*	*	63	6
X2 0 01675		VALVE ASSEMBLY 142062 (12603)	EA		1									63	5
P 0 01676	5330-226-1962	WASHER: breather cap 776925 (12603)	EA		1	*	*	*	*	*	*	5	5		
MF 0 01677		HOSE ASSEMBLY, RUBBER 8C10FJS27 (70434) MANUFACTURE FROM:	EA		1									60	7

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
P F 01678	4730-051-4674	ADAPTER, STRAIGHT, TUBE TO HOSE 4721-10-8 (01276)	EA		2	*	*	*	*	*	*	5	10	60	8
P F 01679	4720-054-3825	HOSE, RUBBER: bulk (24 in. required) 1509-8 (01276)	FT						SEE	GRP	9501				
MF O 01680		HOSE ASSEMBLY, RUBBER: control valve elbow to tilt lock valve elbow MANUFACTURE FROM:	EA		1										
P F 01681	4730-897-6271	ADAPTER 4411-8 (00624)	EA		2				SEE	GRP	9901				
P F 01682	4720-067-0454	HOSE, RUBBER: bulk (52 in. required) 1503-8 (01276)	FT						SEE	GRP	9501				
MF O 01683		HOSE ASSEMBLY, RUBBER: control valve to tilt lock valve, elbow 6P8FJS55 (70434) MANUFACTURE FROM:	EA		1									62	3
P F 01684	4730-897-5932	ADAPTER, STRAIGHT, TUBE TO HOSE: control valve to tilt lock valve 4411-6 (00624)	EA		2				SEE	GRP	9901				
P F 01685	4720-288-9840	HOSE, RUBBER: control valve to tilt lock valve, 24 in. 211-6 (98441)	FT						SEE	GRP	9501				
MF O 01686	3930-226-1955	HOSE ASSEMBLY, RUBBER: control valve tubing to tilt lock valve, inlet elbow 6N8MJS8FJS (70434) MANUFACTURE FROM:	EA		1									62	4
P F 01687	4730-897-6271	ADAPTER, STRAIGHT, TUBE TO HOSE: control valve to tilt lock valve 4411-8 (00624)	EA		1	*	*	*	*	*	*	5	5		
P F 01688	4730-897-5933	ADAPTER, STRAIGHT, TUBE TO HOSE: control valve to tilt lock valve 4414-8 (00624)	EA		1	*	*	*	*	*	*	5	5		
P F 01689	4720-067-0954	HOSE, RUBBER: control valve to tilt lock valve 1503-8 (01276)	FT			*	*	*	*	*	*	25	25		

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 11-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
MF 0 01690	3930-226-1958	HOSE ASSEMBLY, RUBBER: tee to lh, tilt cylinder, rear 5N6FJS23 (70434) MANUFACTURE FROM:	EA		1									62	52
P F 01691	4730-897-5932	ADAPTER, STRAIGHT, TUBE TO HOSE: tee to lh, tilt cylinder, rear 4411-6 (00624)	EA		2				SEE	GRP	9901				
P F 01692	4720-288-9840	HOSE, RUBBER: tee to lh, tilt cylinder, rear (21 in. required) 211-6 (98441)	FT						SEE	GRP	9501				
MF 0 01693	3930-886-2788	HOSE ASSEMBLY, RUBBER: tee to rh, tilt cylinder, rear 5N6FJS24 (70434) MANUFACTURE FROM:	EA		1									62	27
P F 01694	4730-897-5932	ADAPTER, STRAIGHT, TUBE TO HOSE: tee to rh, tilt cylinder 4411-6 (00624)	EA		2				SEE	GRP	9901				
P F 01695	4720-288-9840	HOSE, RUBBER: tee to rh, tilt cylinder (22 in. required) 211-6 (98441)	FT						SEE	GRP	9501				
MF 0 01696		HOSE ASSEMBLY, RUBBER: tilt lock valve, lh side to tilt cylinder, front 5N6FJS14-1-2 (70434) MANUFACTURE FROM:	EA		1									62	57
P F 01697	4730-897-5932	ADAPTER, STRAIGHT, TUBE TO HOSE: tilt lock valve, lh side to tilt cylinder, front 4411-6 (00624)	EA		2				SEE	GRP	9901				
P F 01698	4720-288-9840	HOSE, RUBBER: tilt lock valve, lh to tilt cylinder, front (12 in. required) 211-6 (98441)	FT						SEE	GRP	9501				
MF 0 01699		HOSE ASSEMBLY, RUBBER: tilt lock valve, rh side to tilt cylinder, front 5N6FJS14-1-2 (70434) MANUFACTURE FROM:	EA		1									62	24
P F 01700	4730-897-5932	ADAPTER, STRAIGHT, TUBE TO HOSE: tilt lock valve, rh side to tilt cylinder, front 4411-6 (00624)	EA		2				SEE	GRP	9901				

242-451

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION / REFERENCE NO. & MFR. CODE / USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(b) ITEM NO
P F 01701	4720-288-9840	HOSE, RUBBER: tilt lock valve, to tilt cylinder, front, 33 in. 211-6 (98441)	FT						SEE	GRP	9501				
P 0 01702	3930-983-4269	HOSE, PREFORMED: pump to sump 733636 (12603)	EA		1	*	*	2	*	*	2	6	10	62	29
P 0 01703	3930-983-4270	HOSE, PREFORMED: pump to tube 733635 (12603)	EA		1	*	*	2	*	*	2	6	10	62	39
MF 0 01704	3930-612-0767	HOSE: valve to sump, return 664832 (12603) MANUFACTURE FROM:	EA		1									62	20
P F 01705	4720-542-4433	HOSE, RUBBER: sump (28 in. required)	FT						SEE	GRP	9501				
P 0 01706	3930-226-1953	LINE ASSEMBLY: pump to valve, steel tube and rubber hose combination 668840 (12603)	EA		1	*	*	2	*	*	2	6	10	62	40
0 01707	5310-768-0319	NUT, PLAIN, HEXAGON: tee assembly support	EA		1	*	*	*	*	*	*	*	*	62	43
0 01708	5310-880-7746	NUT, PLAIN, HEXAGON: tee assembly support	EA		1	*	*	*	*	*	*	*	*	62	47
P 0 01709	5330-714-5265	PACKING, PREFORMED 91F6 (12603)	EA		1				SEE	GRP	9901			62	13
P 0 01710	5330-714-5265	PACKING, PREFORMED 91F6 (12603)	EA		1				SEE	GRP	9901			62	61
P 0 01711	5330-714-5265	PACKING, PREFORMED: elbow, valve lift port 91F6 (12603)	EA		1				SEE	GRP	9901			62	9
P 0 01712	5330-064-7777	PACKING, PREFORMED: hydraulic control valve connector 91F7 (12603)	EA		1				SEE	GRP	9901			62	15
P 0 01713	3930-733-9716	PACKING, PREFOMRED: lh, tilt cylinder elbow 91F5 (12603)	EA		2				SEE	GRP	9901			62	54
P 0 01714	5330-064-7777	PACKING, PREFORMED: pump, outlet 91F7 (12603)	EA		1				SEE	GRP	9901			62	34
P 0 01715	3930-733-9716	PACKING, PREFORMED: rh, tilt cylinder elbow 91F5 (12603)	EA		1				SEE	GRP	9901			62	55
P 0 01716	3930-733-9716	PACKING, PREFORMED: rh, tilt cylinder elbow 91F5 (12603)	EA		1				SEE	GRP	9901			62	25

(1) SMR CODE INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(11) (b) ITEM NO
P 0 01717	5330-714-5265	PACKING, PREFORMED: tilt lock, outlet connector 91F6 (12603)	EA		1				SEE	GRP	9901			62	62
P 0 01718	5330-714-5265	PACKING, PREFORMED: tilt lock, valve 91F6 (12603)	EA		1				SEE	GRP	9901			62	65
P 0 01719	3930-733-9716	PACKING, PREFORMED: tilt lock, valve elbow 91F5 (12603)	EA		1				SEE	GRP	9901			62	2
P 0 01720	3930-733-9716	PACKING, PREFORMED: tilt lock, valve elbow 91F5 (12603)	EA		1				SEE	GRP	9901			62	19
P 0 01721	5330-714-5265	PACKING, PREFORMED: tilt lock, valve elbow 91F6 (12603)	EA		1				SEE	GRP	9901			62	63
P 0 01722	5330-251-8839	PACKING, PREFORMED: valve outlet, port elbow 91F8 (12603)	EA		1	*	*	2	*	*	2	6	100	62	7
0 01723	5305-068-0505	SCREW, CAP, HEXAGON HEAD: lh tilt cylinder hose clip to bracket, valve to lift cylinder hose, tube assembly clip	EA		2	*	*	*	*	*	*	*	*	62	51
0 01724	5305-071-2506	SCREW, CAP, HEXAGON HEAD: pressure line to cowl clip, 1/4-28 thd size by 1/2 in.	EA		1	*	*	*	*	*	*	*	*		
0 01725	5305-071-2506	SCREW, CAP, HEXAGON HEAD: tee assembly support, 1/4-24 thd size by 1/2 in.	EA		1	*	*	*	*	*	*	*	*	62	49
X2 0 01726		TEE LINE ASSEMBLY: tilt cylinder hose 1613758 (12603)	EA		1	*	*	*	*	*	*	*	*	62	41
X2 0 01727		TEE: pump outlet, 5/8 in. tube by 7/8-14 unf 21K7 (12603)	EA		1	*	*	*	*	*	*	*	*	62	35
X2 0 01728		TUBE ASSEMBLY: elbow to main valve 1300286 (12603)	EA		1	*	*	*	*	*	*	*	*	62	11
X2 0 01729		TUBE ASSEMBLY: lift cylinder to return hose 776150 (12603)	EA		1	*	*	*	*	*	*	*	*	60	10
X2 0 01730		TUBE ASSEMBLY: tilt lock, lh side to lh tilt hose, front 390620 (12603)	EA		1	*	*	*	*	*	*	*	*	62	68
X2 0 01731		TUBE ASSEMBLY: tilt lock, rh side to rh tilt hose, front 390618 (12603)	EA		1	*	*	*	*	*	*	*	*	62	23
X2 0 01732		TUBE ASSEMBLY: valve return to sump hose 336493 (12603)	EA		1	*	*	*	*	*	*	*	*	62	18

242-431

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION — REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
P 0 01733	3930-226-1954	TUBE ASSEMBLY: valve to lift cylinder hose 398499 (12603)	EA		1	*	*	*	*	*	*	5	5	62	5
X2 0 01734		TUBE ASSEMBLY: valve to pressure hose 398826 (12603)	EA		1	*	*	*	*	*	*	*	*	62	17
X2 0 01735		TUBE: pump to sump 733637 (12603)	EA		1	*	*	*	*	*	*	*	*	62	30
X2 0 01736		WASHER: clip 664421 (12603)	EA		1	*	*	*	*	*	*	*	*		
0 01737	5310-012-0380	WASHER, LOCK: clip, rubber covered, 3/8 in., clip rubber covered, 11/16 in., valve to cylinder hose tube assembly, clip	EA		3	*	*	*	*	*	*	*	*		
0 01738	5310-407-9566	WASHER, LOCK: tee assembly support	EA		1	*	*	*	*	*	*	*	*	62	46
0 01739	5310-637-9541	WASHER, LOCK: tee support assembly	EA		1	*	*	*	*	*	*	*	*	62	48
01740		GROUP 76 - FIRE FIGHTING EQUIPMENT COMPONENTS													
01741		7603 - FIRE EXTINGUISHERS													
P 0 01742	4210-889-2221	EXTINGUISHER, FIRE: w/bracket 874195 (33525)	EA		1	*	*	*	*	*	*	5	*	64	1
01743		GROUP 95 - GENERAL USE STANDARDIZED PARTS													
01744		9501 - BULK MATERIAL													
P F 01745	3020-252-7363	CHAIN, ROLLER	FT			*	*	*	*	*	*	*	*		
P F 01746	4720-542-4933	HOSE, RUBBER	FT			*	*	*	*	*	*	*	*		
P F 01747	4720-274-1156	HOSE, RUBBER	FT			*	*	*	*	*	*	25	100		
P F 01748	4720-067-0454	HOSE, RUBBER	FT			*	*	*	*	*	*	25	25		
P F 01749	4720-288-9840	HOSE, RUBBER	FT			*	*	*	*	*	*	25	100		
P F 01750	4720-274-1157	HOSE, RUBBER	FT			*	*	*	*	*	*	25	50		
P F 01751	4720-054-3825	HOSE, RUBBER	FT			*	*	*	*	*	*	25	25		

best copy available

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(b) 21-50	(c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUS-TRATION (a) FIG NO	(b) ITEM NO
P F 01752	4710-277-5527	TUBING, COPPER		FT			*	*	*	*	*	*	25	25		
P F 01753	6145-845-1861	WIRE, ELECTRICAL		FT			*	*	*	*	*	*	500	500		
01754		GROUP 99 - PARTS PECULIAR														
01755		9901 - PARTS PECULIAR WITH MORE THAN ONE APPLICATION														
P F 01756	4730-897-6271	ADAPTER 4411-8 (00624)		EA		4	*	2	2	*	2	2	20	20		
P F 01757	4730-542-2807	ADAPTER 4797-8B (01276)		EA		7	2	2	3	2	2	3	35	35		
P F 01758	4730-897-5932	ADAPTER 4411-6 (00624)		EA		10	2	2	4	2	2	4	50	50		
P F 01759	4730-838-3555	ADAPTER 4738-2-4B (00624)		EA		3	*	2	2	*	2	2	15	15		
P F 01760	4730-073-2151	ADAPTER 4797-5-4B (00624)		EA		3	*	2	2	*	2	2	15	15		
X2 F 01761	3110-100-6149	BALL, BEARING 10J06 (12603)		EA		2										
P F 01762	3110-965-0445	BALL, BEARING 10J20 (12603)		EA		2	*	2	2	*	2	2	12	20		
P F 01763	3110-198-2829	BALL, BEARING 10J12 (12603)		EA		2	*	2	2	*	2	2	12	20		
P H 01764	3110-144-8534	BEARING, BALL, ANNULAR 207S (76062)		EA		2				*	2	2	12	20		
P F 01765	5940-500-6905	CLIP		EA		6	4	8	16	4	8	16	186	150		
P F 01766	4730-010-0597	CONNECTOR 15K6 (12603)		EA		2	*	*	2	*	*	2	10	10		
P H 01767	2530-900-6878	DISK: directional selector, inner 222391 (12603)		EA		8				2	2	4	48	80		

(1) SMR CODE / INDEX NO.	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NO & MFR CODE	USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE			(8) 30-DAY GS MAINT ALLOWANCE			(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION	
							(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100			(a) FIG NO	(b) ITEM NO
P H 01768	2520-848-2595	DISK: directional selector, outer 222605 (12603)		EA		8				2	2	4	48	80		
P O 01769	4730-052-3972	ELBOW 18K5 (12603)		EA		2	*	*	2	*	*	2	10	10		
P F 01770	4730-883-8448	ELBOW 2062-6-6 (01276)		EA		4	*	2	2	*	2	2	20	20		
P O 01771	2530-466-8624	GASKET 613750 (12603)		EA		2	*	2	2	*	2	2	12	200		
X2 H 01772		GEAR AND BUSHING: directional selector 222424 (12603)		EA		2				*	*	*	*	10		
P O 01773	4720-203-6527	HOSE ASSEMBLY AF108-19 (80713)		EA		2	*	2	2	*	2	2	14	20		
P O 01774	5355-765-5688	KNOB 653785 (12603)		EA		3	*	*	*	*	*	*	5	15		
P F 01775	5975-951-8272	NIPPLE		EA		7	3	6	12	3	6	12	155	125		
P O 01776	5330-714-5265	PACKING, PREFORMED 91F6 (12603)		EA		6	2	3	6	2	3	6	72	600		
P O 01777	5330-064-7777	PACKING, PREFORMED 91F7 (12603)		EA		2	*	2	2	*	2	2	14	200		
P F 01778	5330-350-9013	PACKING, PREFORMED 25K30016 (12603)		EA		8	2	2	4	2	2	4	48	800		
P O 01779	3930-733-9716	PACKING, PREFORMED 91F5 (12603)		EA		6	2	3	6	2	3	6	72	600		
X2 H 01780		PISTON: directional selector 222390 (12603)		EA		2										
X2 H 01781		PLATE: end directional selector, disk 220137 (12603)		EA		2										
P F 01782	2530-087-0327	PLUG: check valve 222640 (62983)		EA		2	*	*	*	*	*	*	5	10		

(1) SMR CODE / INDEX NO	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION — REFERENCE NO & MFR CODE — USABLE ON CODE	(4) UNIT OF ISSUE	(5) QTY INC IN UNIT PACK	(6) QTY INC IN UNIT	(7) 30-DAY DS MAINT ALLOWANCE (a) 1-20	(7) (b) 21-50	(7) (c) 51-100	(8) 30-DAY GS MAINT ALLOWANCE (a) 1-20	(8) (b) 21-50	(8) (c) 51-100	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW-PER 100 EQUIP	(11) ILLUSTRATION (a) FIG NO	(11) (b) ITEM NO
P O 01783	4730-384-8763	PLUG, MACHINE THREAD 16DP6 (59875)	EA		2	*	*	*	*	*	*	5	10		
P H 01784	2520-587-5575	RING: directional selector piston, outer 220618 (12603)	EA		2				*	*	*	5	10		
P O 01785	5340-803-9981	RING, RETAINING 5100-150 (79136)	EA		8	2	2	3	2	2	3	40	40		
P H 01786	5340-844-0073	RING, RETAINING 223946 (12603)	EA		2				*	*	*	5	10		
P F 01787	4810-953-5205	SPRING 223388 (62983)	EA		2	*	2	2	*	2	2	12	20		
P H 01788	2520-848-2594	SPRING: disk release 220136 (12603)	EA		14				2	4	7	84	140		
P F 01789	3930-960-9326	SPRING, VALVE 246632 (62983)	EA		2	*	2	2	*	2	2	12	20		
X2 H 01790		WASHER, THRUST: directional selector, shaft 220620 (12603)	EA		2				*	*	*	*	*		
		SECTION III - SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE													
01791		GROUP 26 - TOOLS AND TEST EQUIPMENT													
01792		2604 - SPECIAL TOOLS													
		(If these tools are a component of authorized TA or TOE tool sets a quantity necessary for the performance of assigned maintenance mission is authorized for each FIELD and DEPOT maintenance facility.)													
X2 F 01793		WRENCH, SPANNER: lift cylinder head 394589 (12603)	EA		1	*	*	*	*	*	*	*	*	65	2
X2 F 01794		WRENCH, SPANNER: lift cylinder 394499 (12603)	EA		1	*	*	*	*	*	*	*	*	65	1

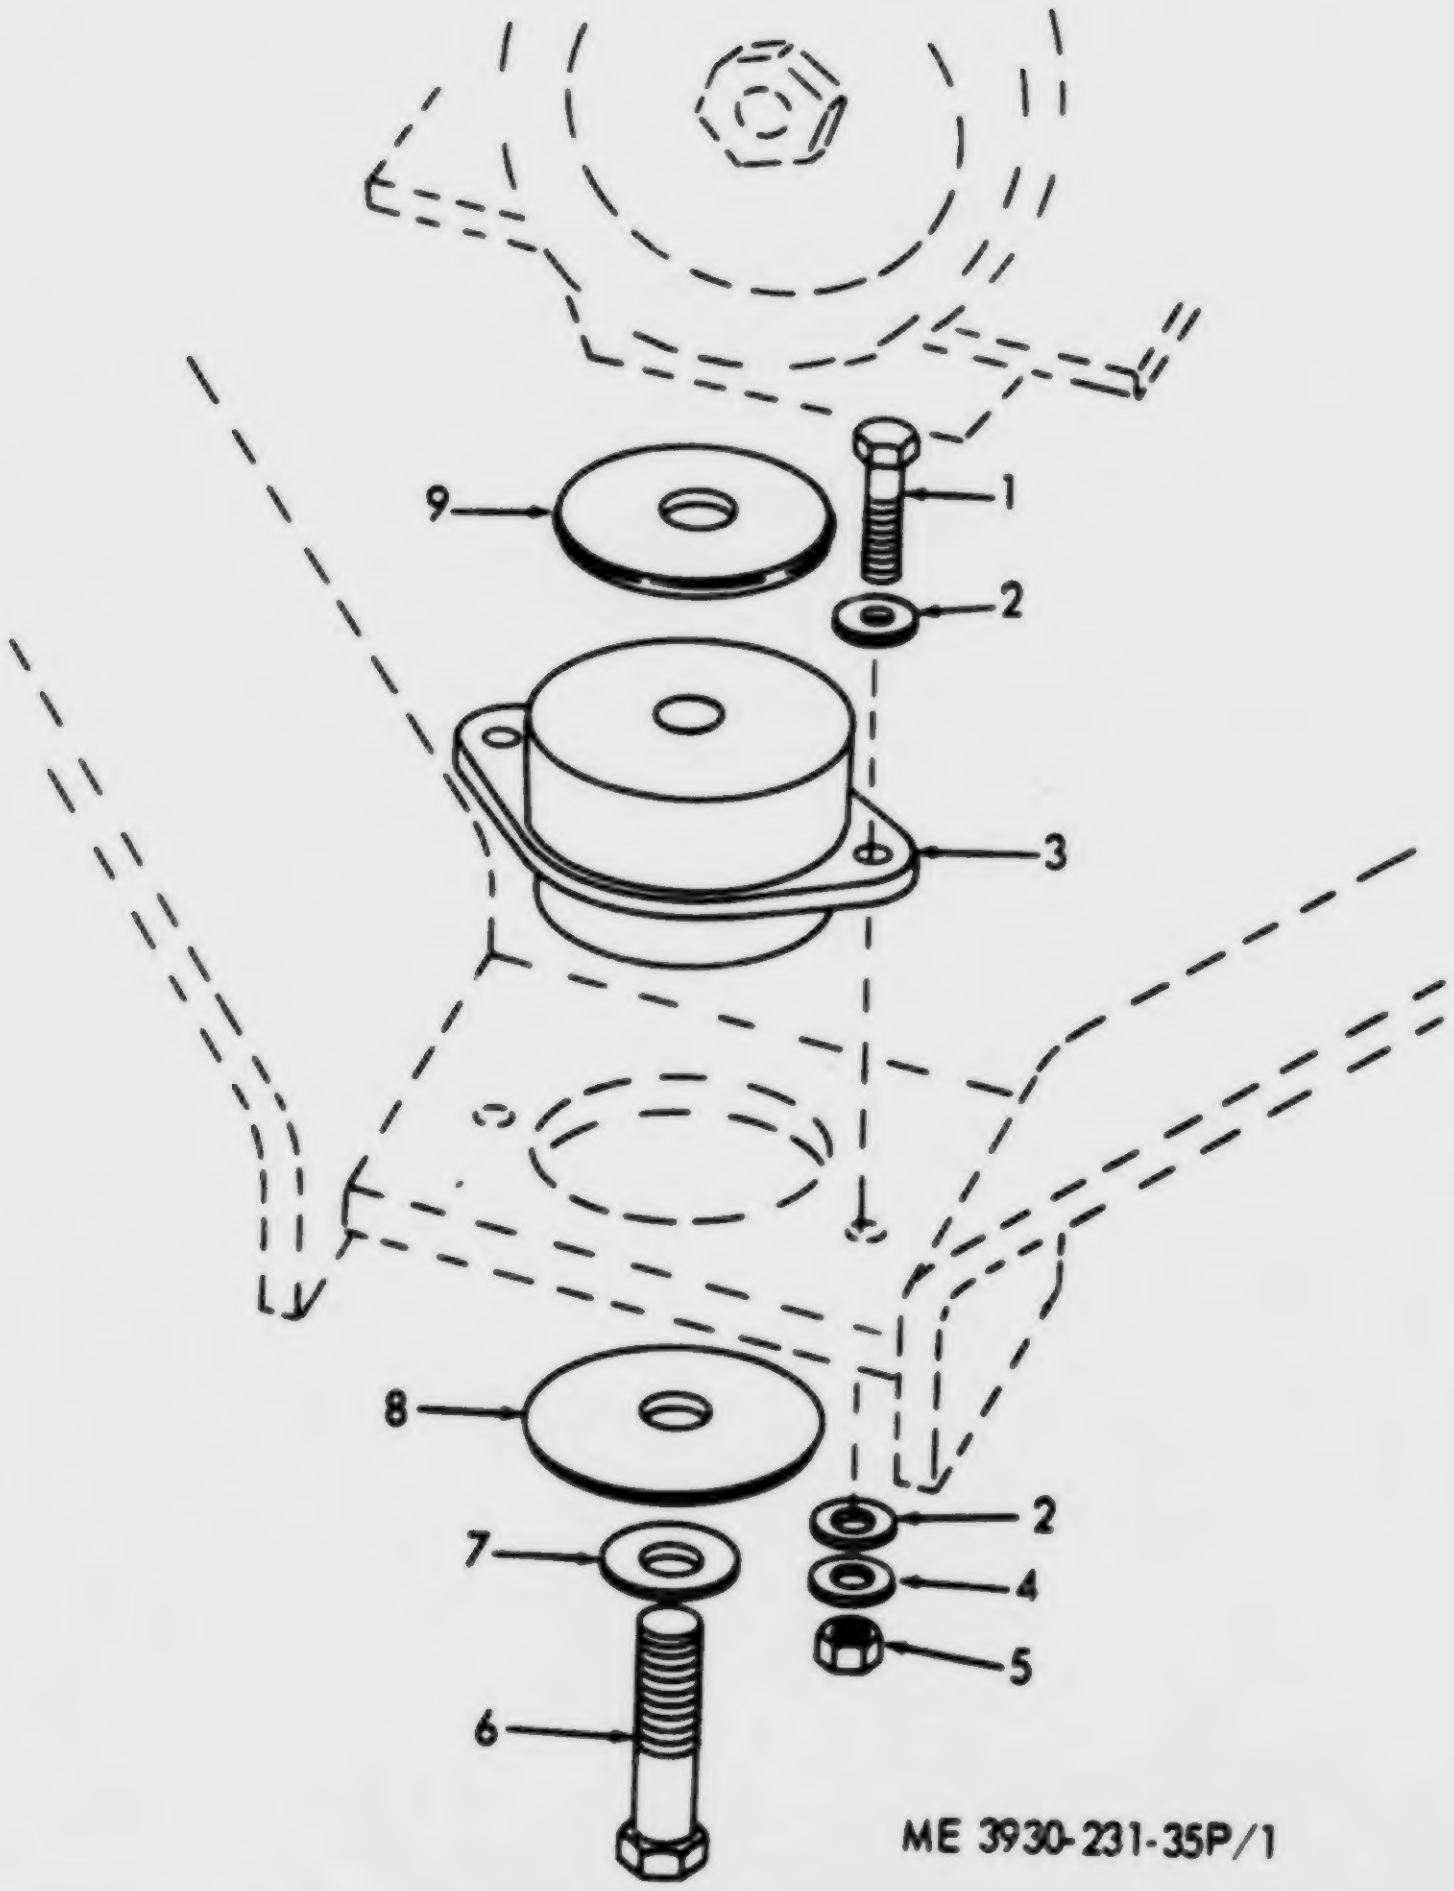

Figure 1. Engine Mounting.

INDEX TO PARTS, FIGURE 1

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0100	SCREW	6	0100	BOLT
2	0100	WASHER	7	0100	WASHER
3	0100	MOUNT	8	0100	WASHER
4	0100	WASHER	9	0100	WASHER
5	0100	NUT			

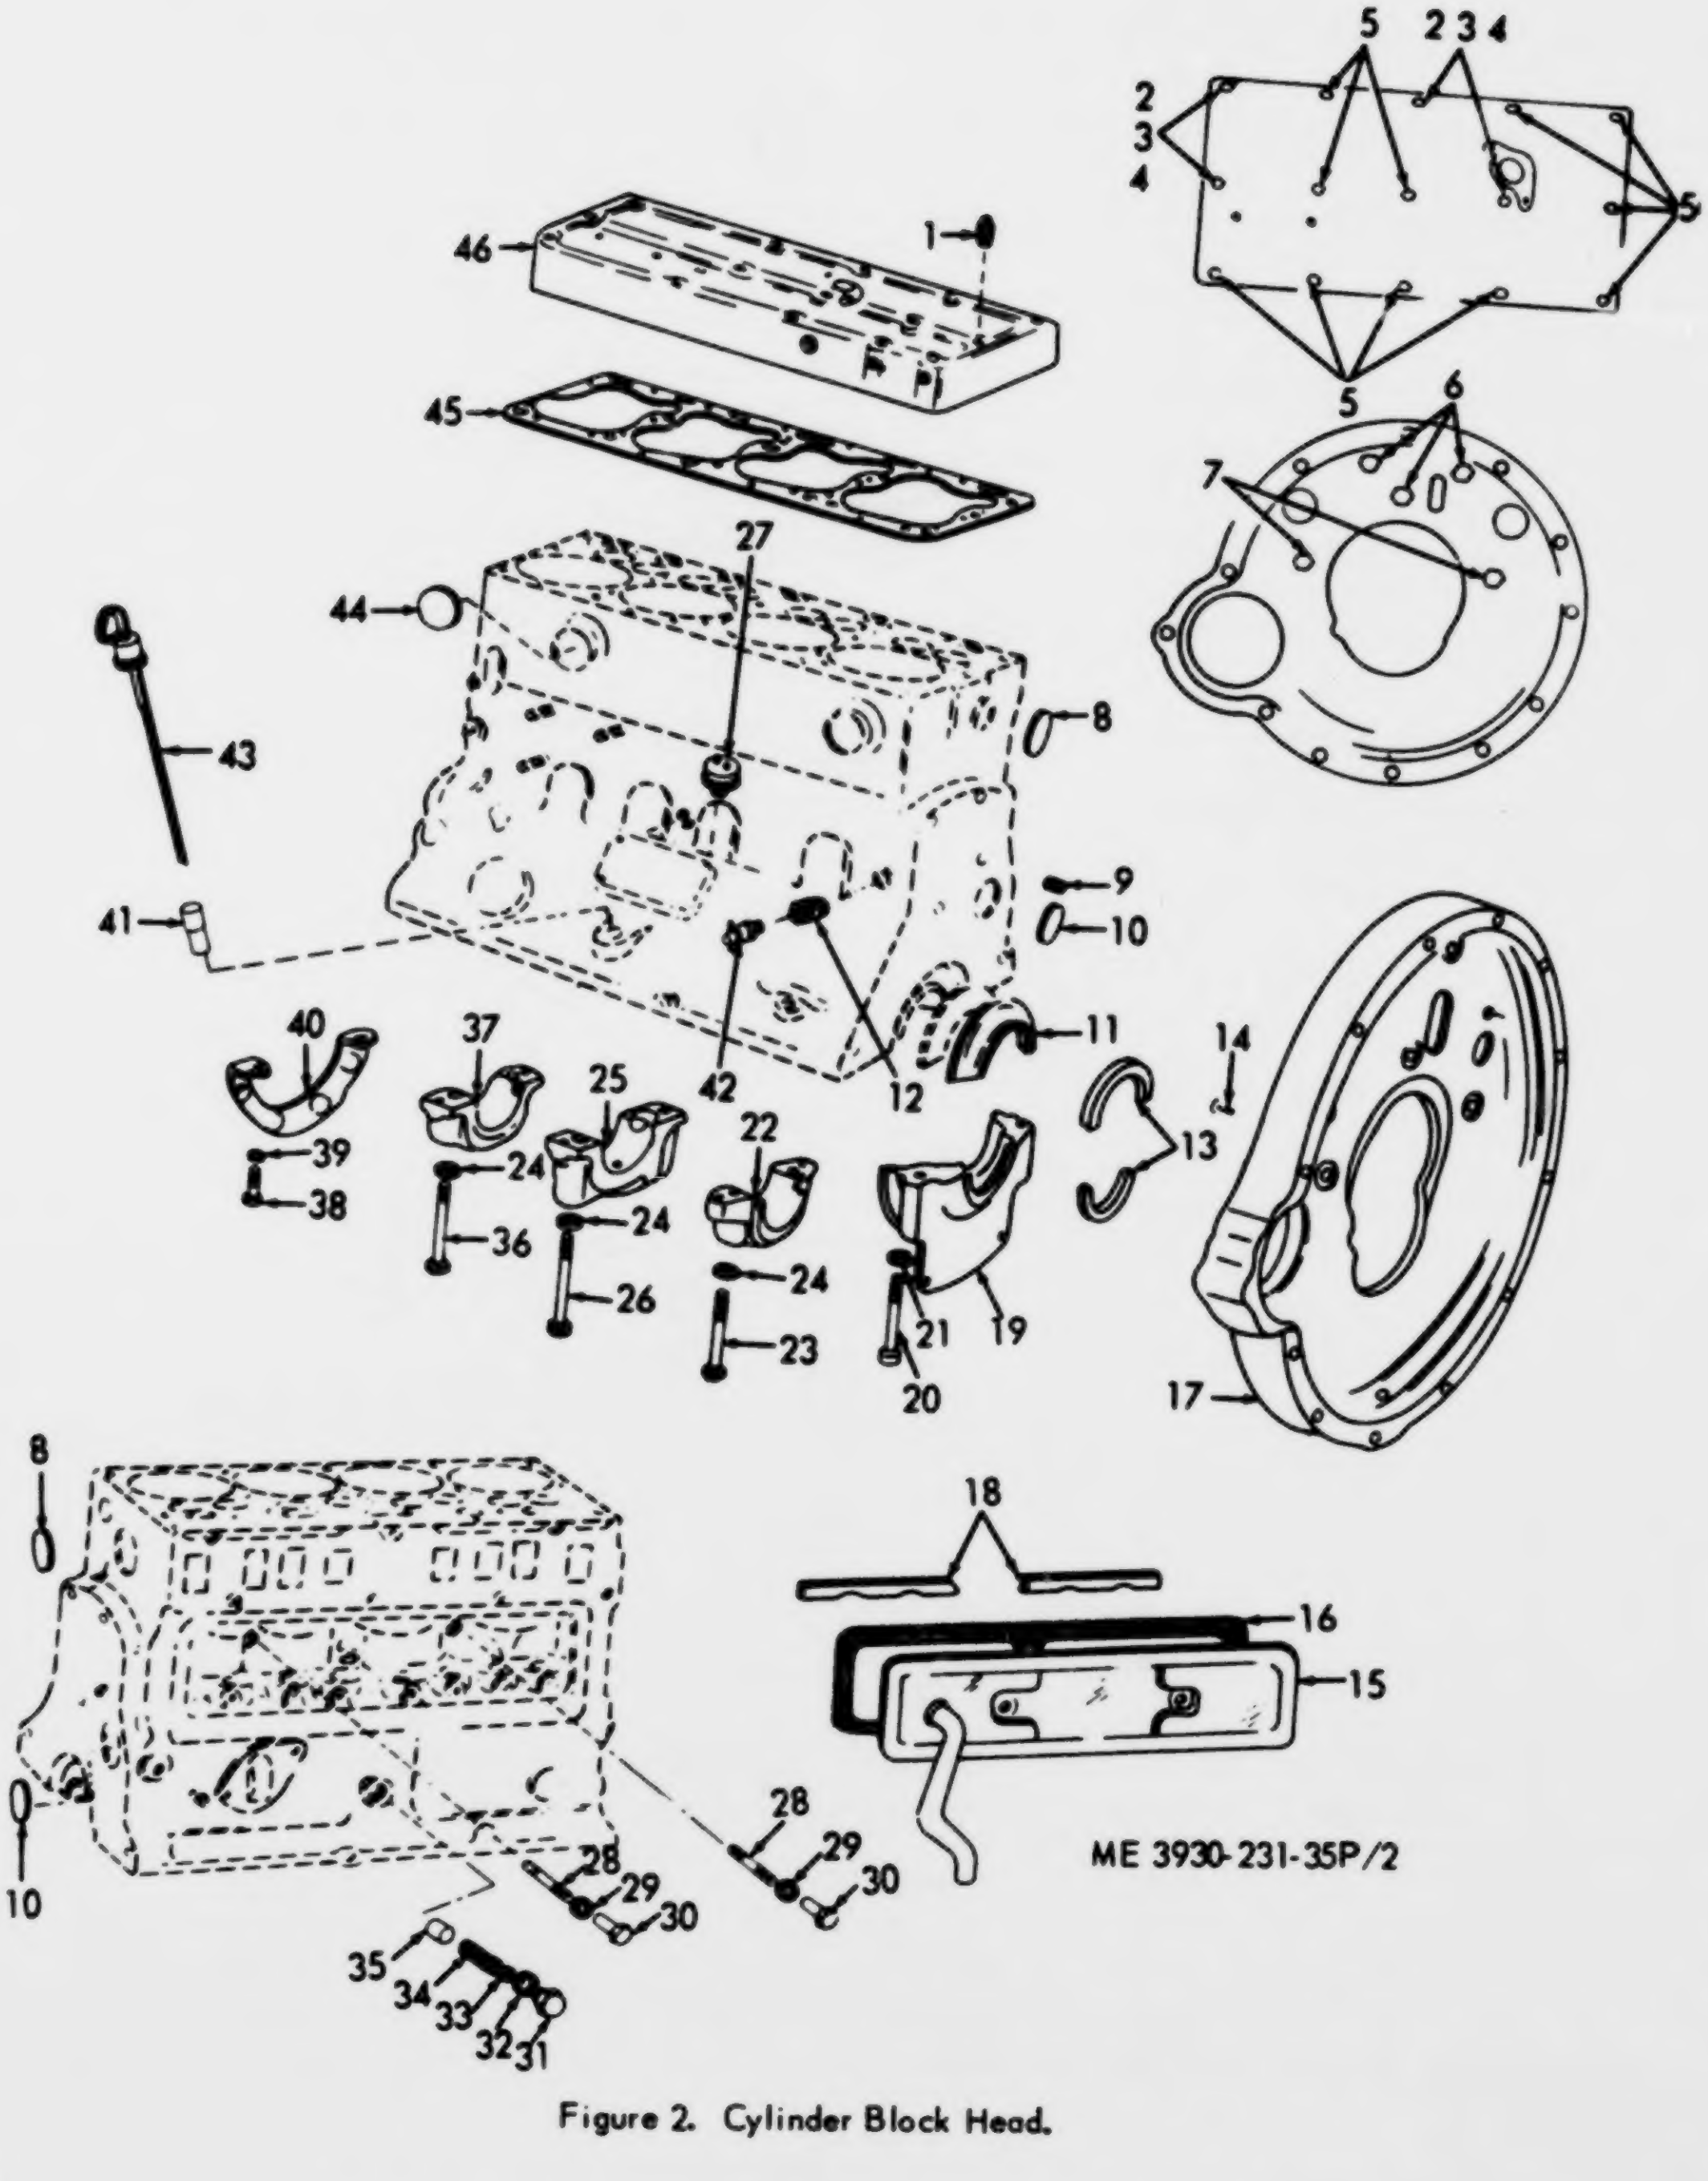
5
2 3 4
2
3
4
5
5
46
1
45
6
7
27
44
43
8
9
10
41
42
12
11
40
37
25
22
14
13
39
38
24
36
24
26
24
23
21
19
20
17
8
18
16
15
28
29
30
28
29
30
10
35
34
33
32
31
ME 3930-231-35P/2

Figure 2. Cylinder Block Head.

INDEX TO PARTS, FIGURE 2

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0101	PLUG	24	0101	WASHER
2	0101	NUT	25	0101	CAP
3	0101	WASHER	26	0101	BOLT
4	0101	STUD	27	0610	TRANSMITTER
5	0101	STUD	28	0101	STUD
6	0103	SCREW	29	0105	GASKET
7	0103	BOLT	30	0105	NUT
8	0101	PLUG	31	0106	PLUG
9	0101	PLUG	32	0106	GASKET
10	0101	PLUG	33	0106	WASHER
11	0106	GUARD	34	0106	SPRING
12	0101	BUSHING	35	0106	VALVE
13	0106	PACKING	36	0101	SCREW
14	0103	POINTER	37	0101	CAP
15	0105	COVER	38	0106	SCREW
16	0105	GASKET	39	0106	WASHER
17	0103	HOUSING	40	0106	BLOCK
18	0105	BAFFLE	41	0106	SUPPORT
19	0106	BLOCK	42	0101	VALVE
20	0106	SCREW	43	0106	ROD
21	0106	WASHER	44	0101	PLUG
22	0101	CAP	45	0101	GASKET
23	0101	SCREW	46	0101	HEAD

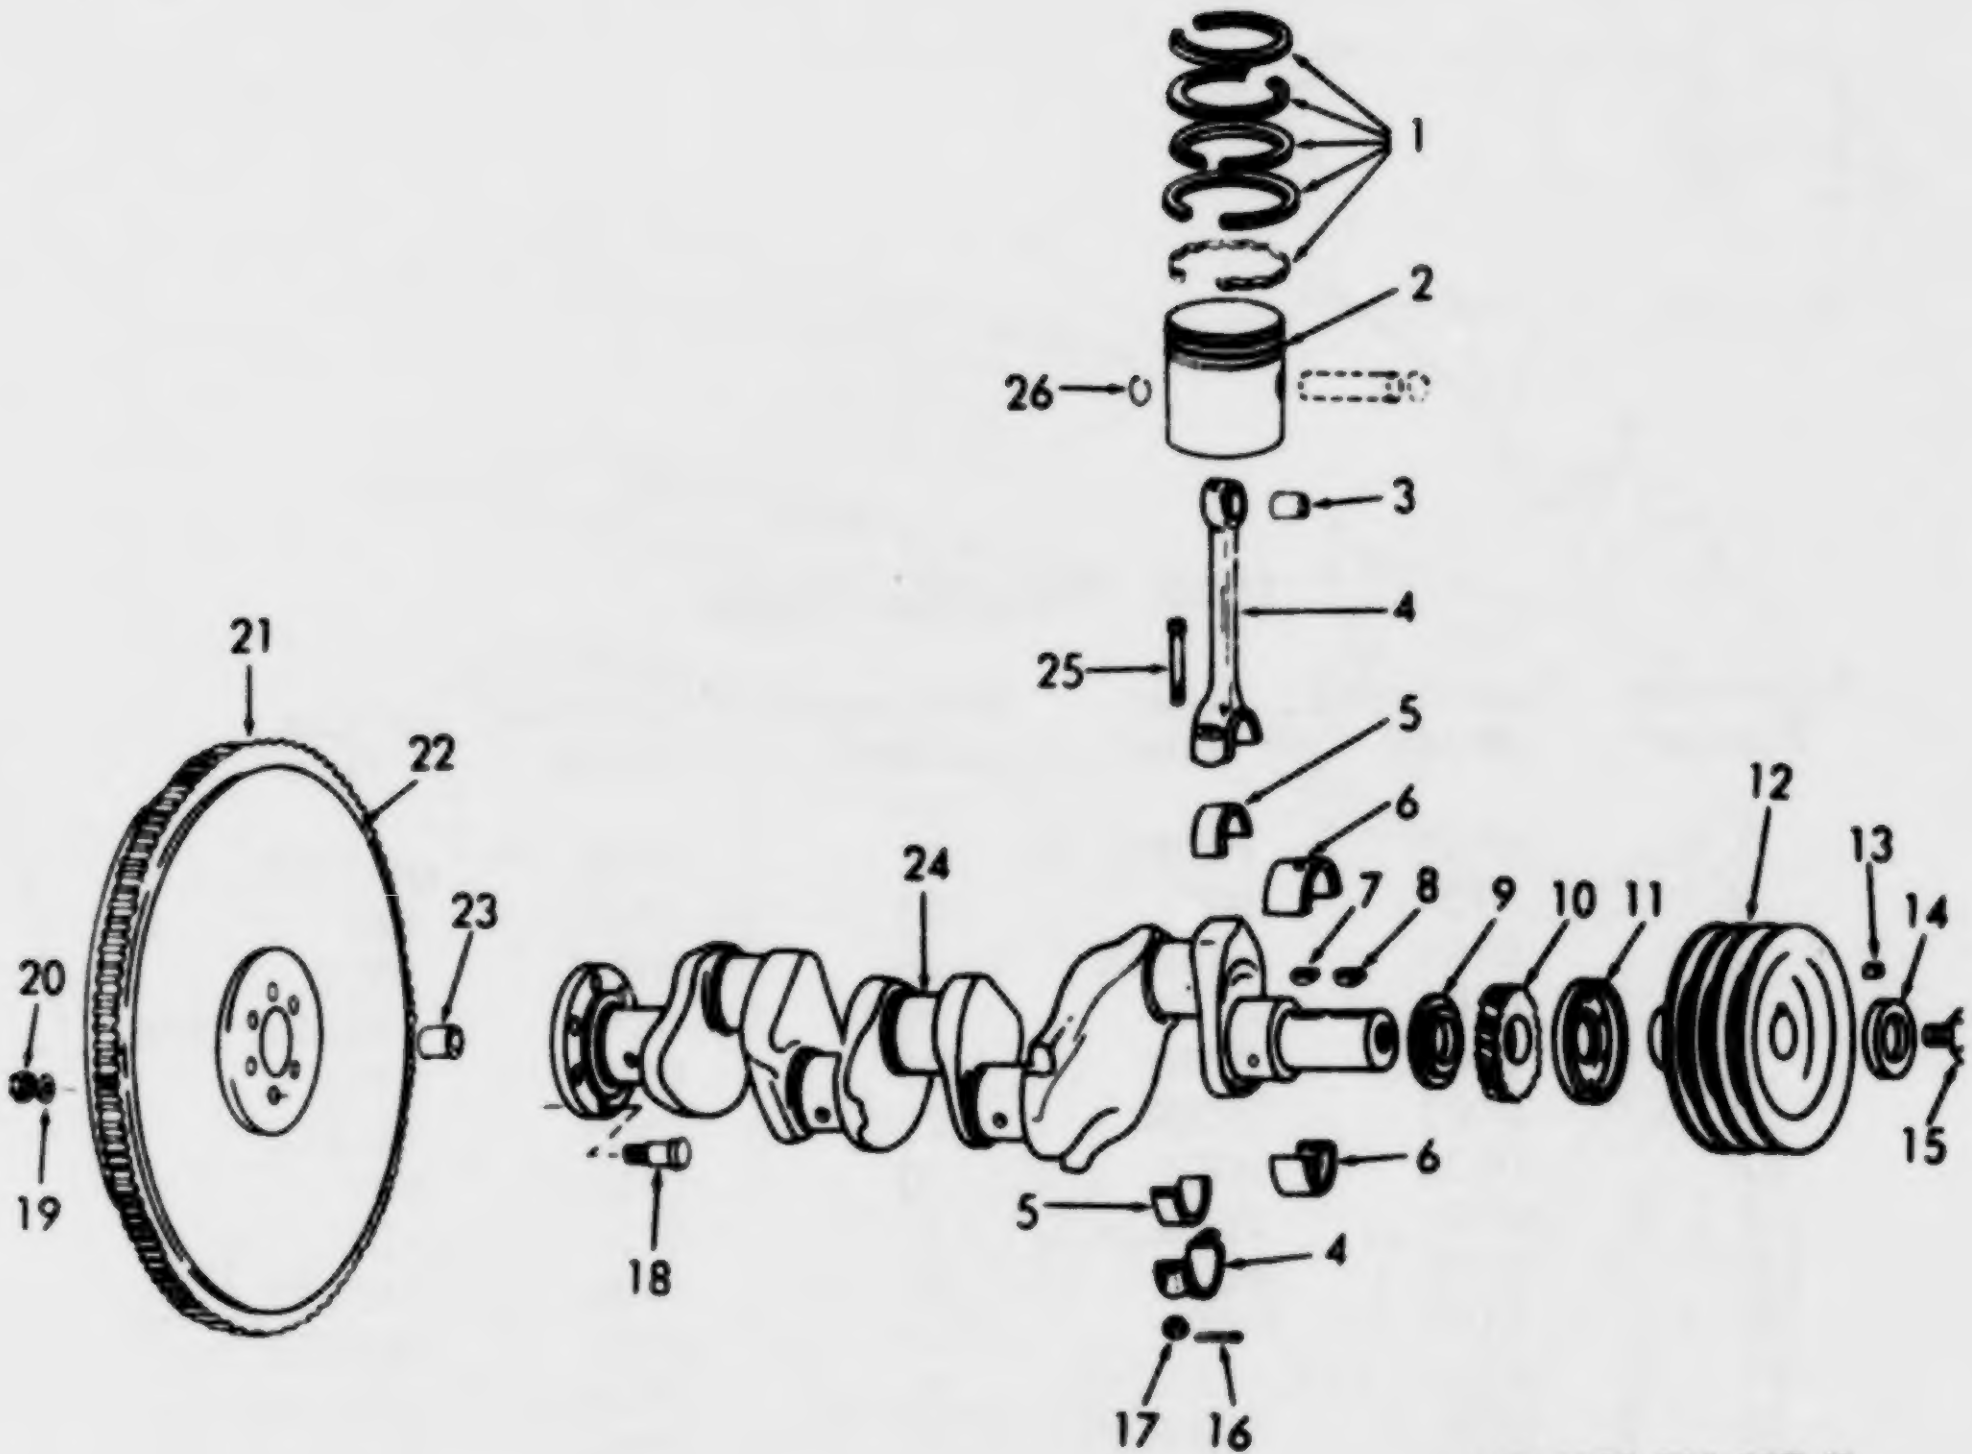

ME 3930-231-35P/3

Figure 3. Crankshaft.

INDEX TO PARTS, FIGURE 3

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0104	RING	14	0102	WASHER
2	0104	PISTON	15	0102	SCREW
3	0104	BEARING	16	0104	PIN
4	0104	ROD AND CAP	17	0104	NUT
5	0104	BEARING	18	0103	BOLT
6	0102	BEARING	19	0103	WASHER
7	0105	KEY	20	0103	NUT
8	0102	KEY	21	0103	GEAR
9	0105	PLATE	22	0103	FLYWHEEL
10	0105	GEAR	23	0102	BEARING
11	0102	SLINGER	24	0102	CRANKSHAFT
12	0102	PULLEY	25	0104	BOLT
13	0102	PLUG	26	0104	RING

INDEX TO PARTS, FIGURE 4

Reference Number	Functional Group	Item Name
1	0105	VALVE
2	0105	GUIDE
3	0105	SPRING
4	0105	SEAT
5	0105	BUSHING KIT
6	0105	LOCK
7	0105	LIFTER
8	0105	WASHER
9	0105	BOLT
10	0105	GEAR
11	0105	NUT
12	0105	WASHER
13	0105	KEY
14	0105	CAMSHAFT
15	0105	SEAT
16	0105	CAP

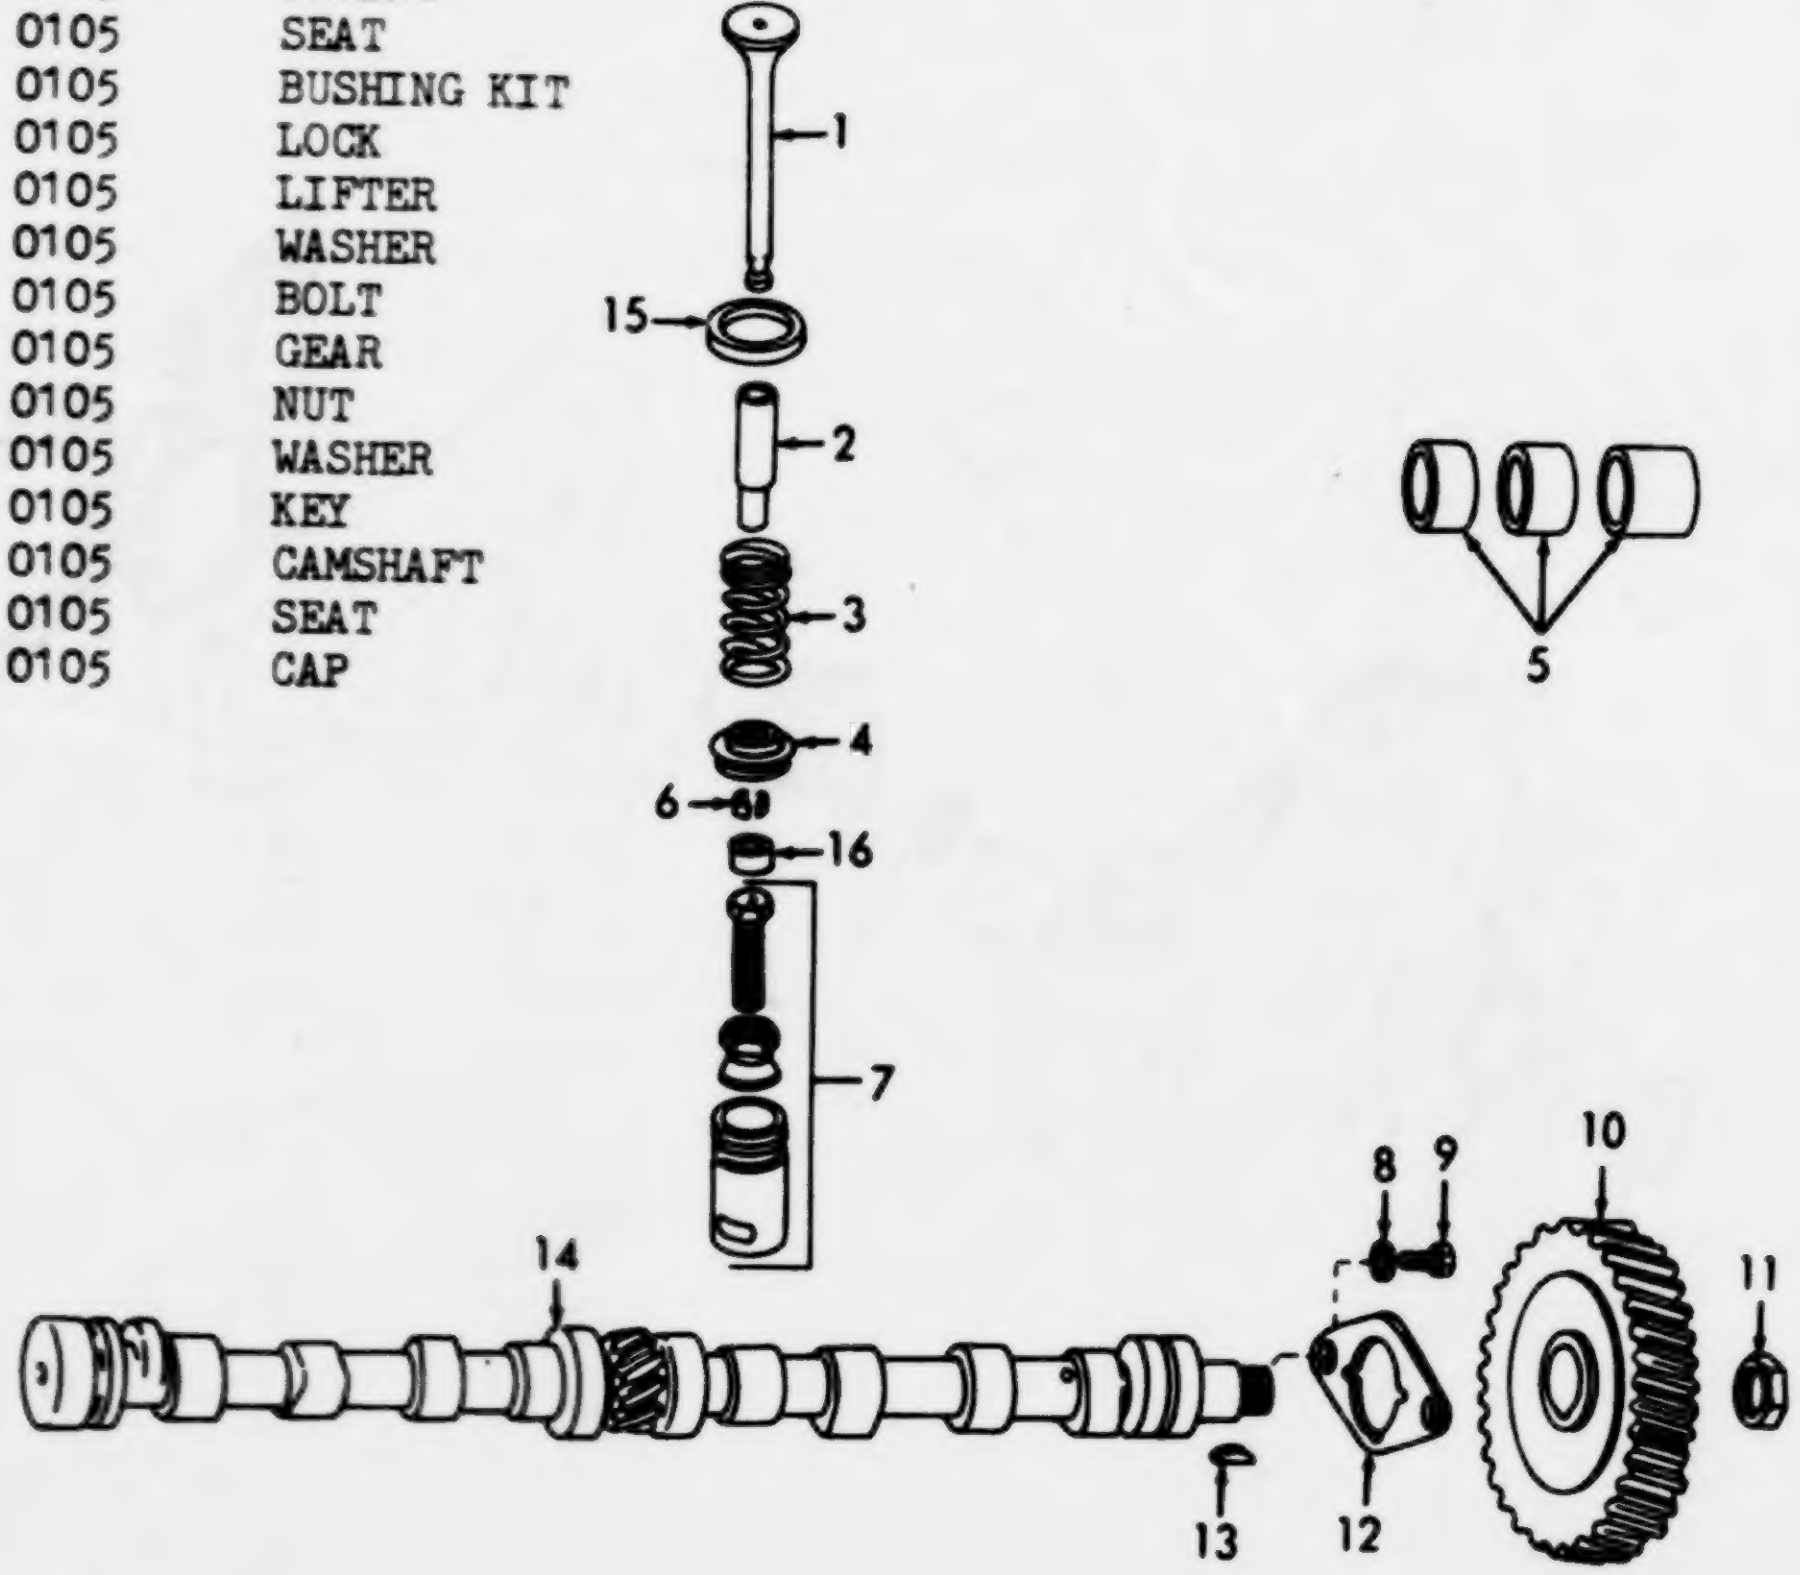

ME 3930-231-35P/4

Figure 4. Camshaft.

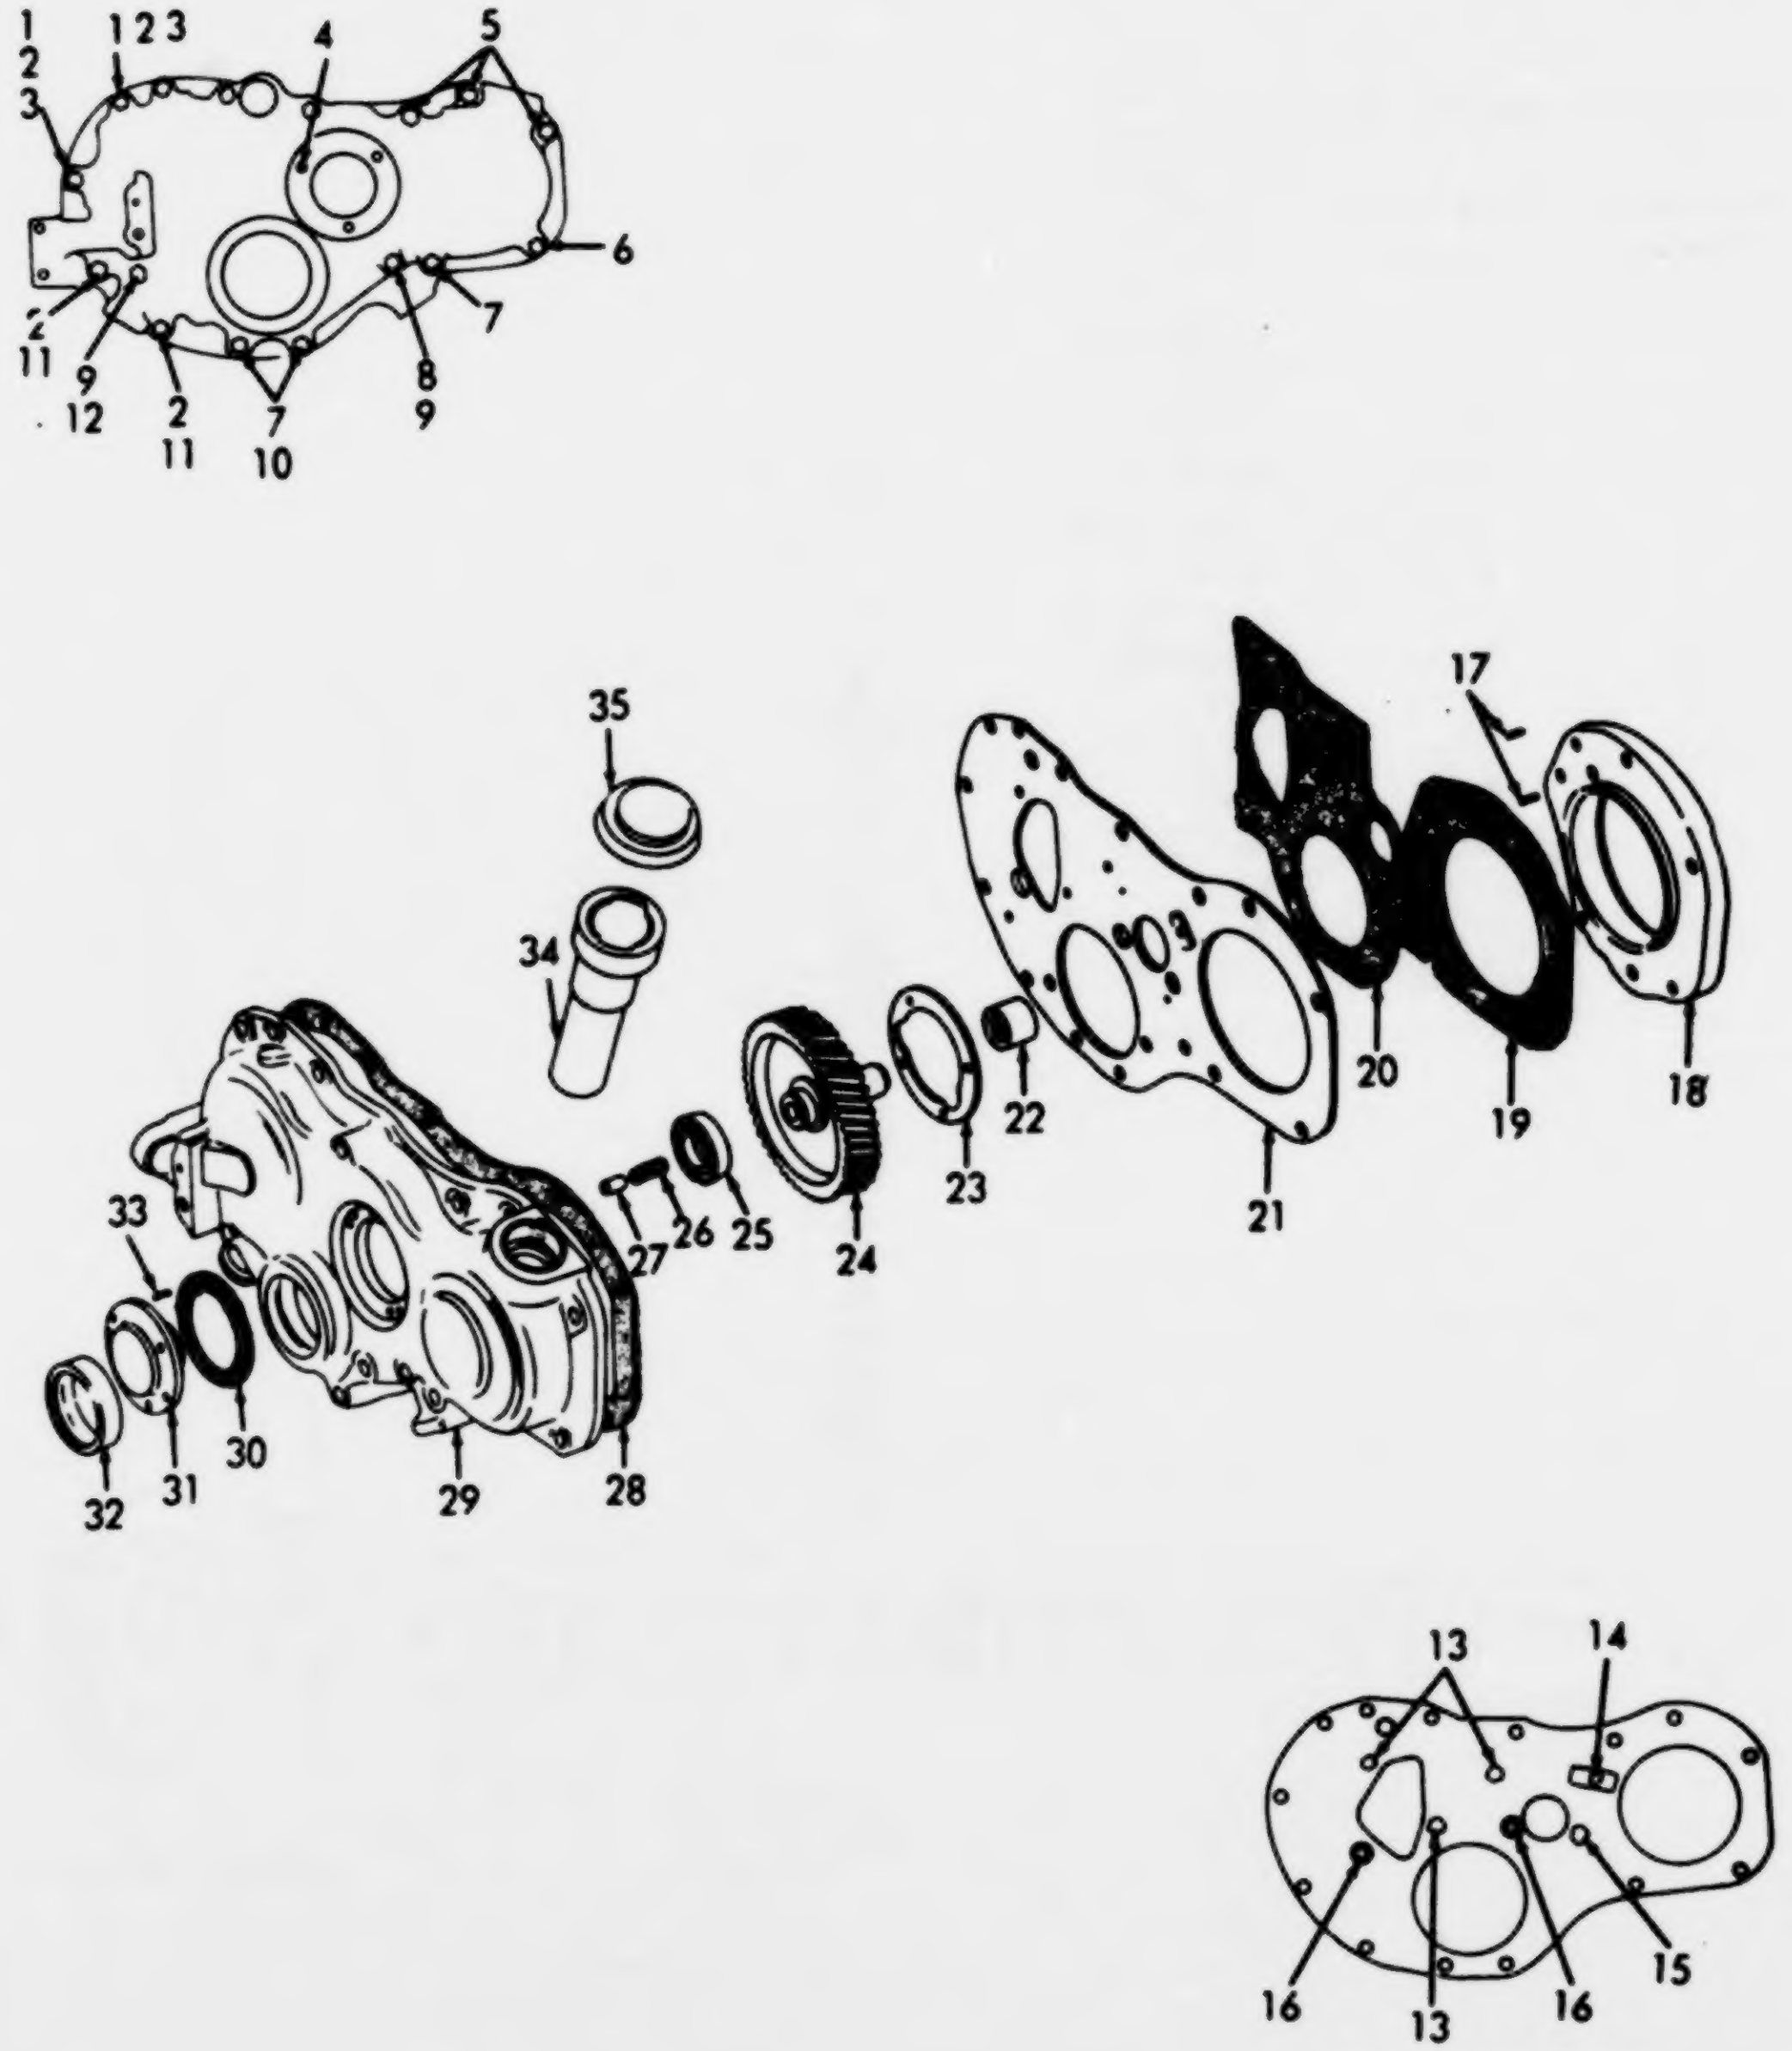
1
2
3
1 2 3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35

ME 3930-231-35P/5

Figure 5. Timing Gear Cover, Oil Filler.

INDEX TO PARTS, FIGURE 5

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0105	WASHER	19	2401	GASKET
2	0105	NUT	20	0105	GASKET
3	0105	BOLT	21	0105	PLATE
4	0101	STUD	22	0105	BEARING
5	2401	SCREW	23	0105	WASHER
6	0105	SCREW	24	0105	GEAR
7	0105	SCREW	25	0105	BEARING
8	0105	BOLT	26	0105	SPRING
9	0105	WASHER	27	0105	PLUNGER
10	0105	WASHER	28	0105	GASKET
11	0105	SCREW	29	0105	COVER
12	0105	BOLT	30	0105	GASKET
13	0105	BOLT	31	0105	COVER
14	0105	WASHER	32	0105	SEAL
15	0105	BOLT	33	0105	PIN
16	0105	SCREW	34	0106	BODY
17	0105	PIN	35	0106	CAP
18	2401	ADAPTER			

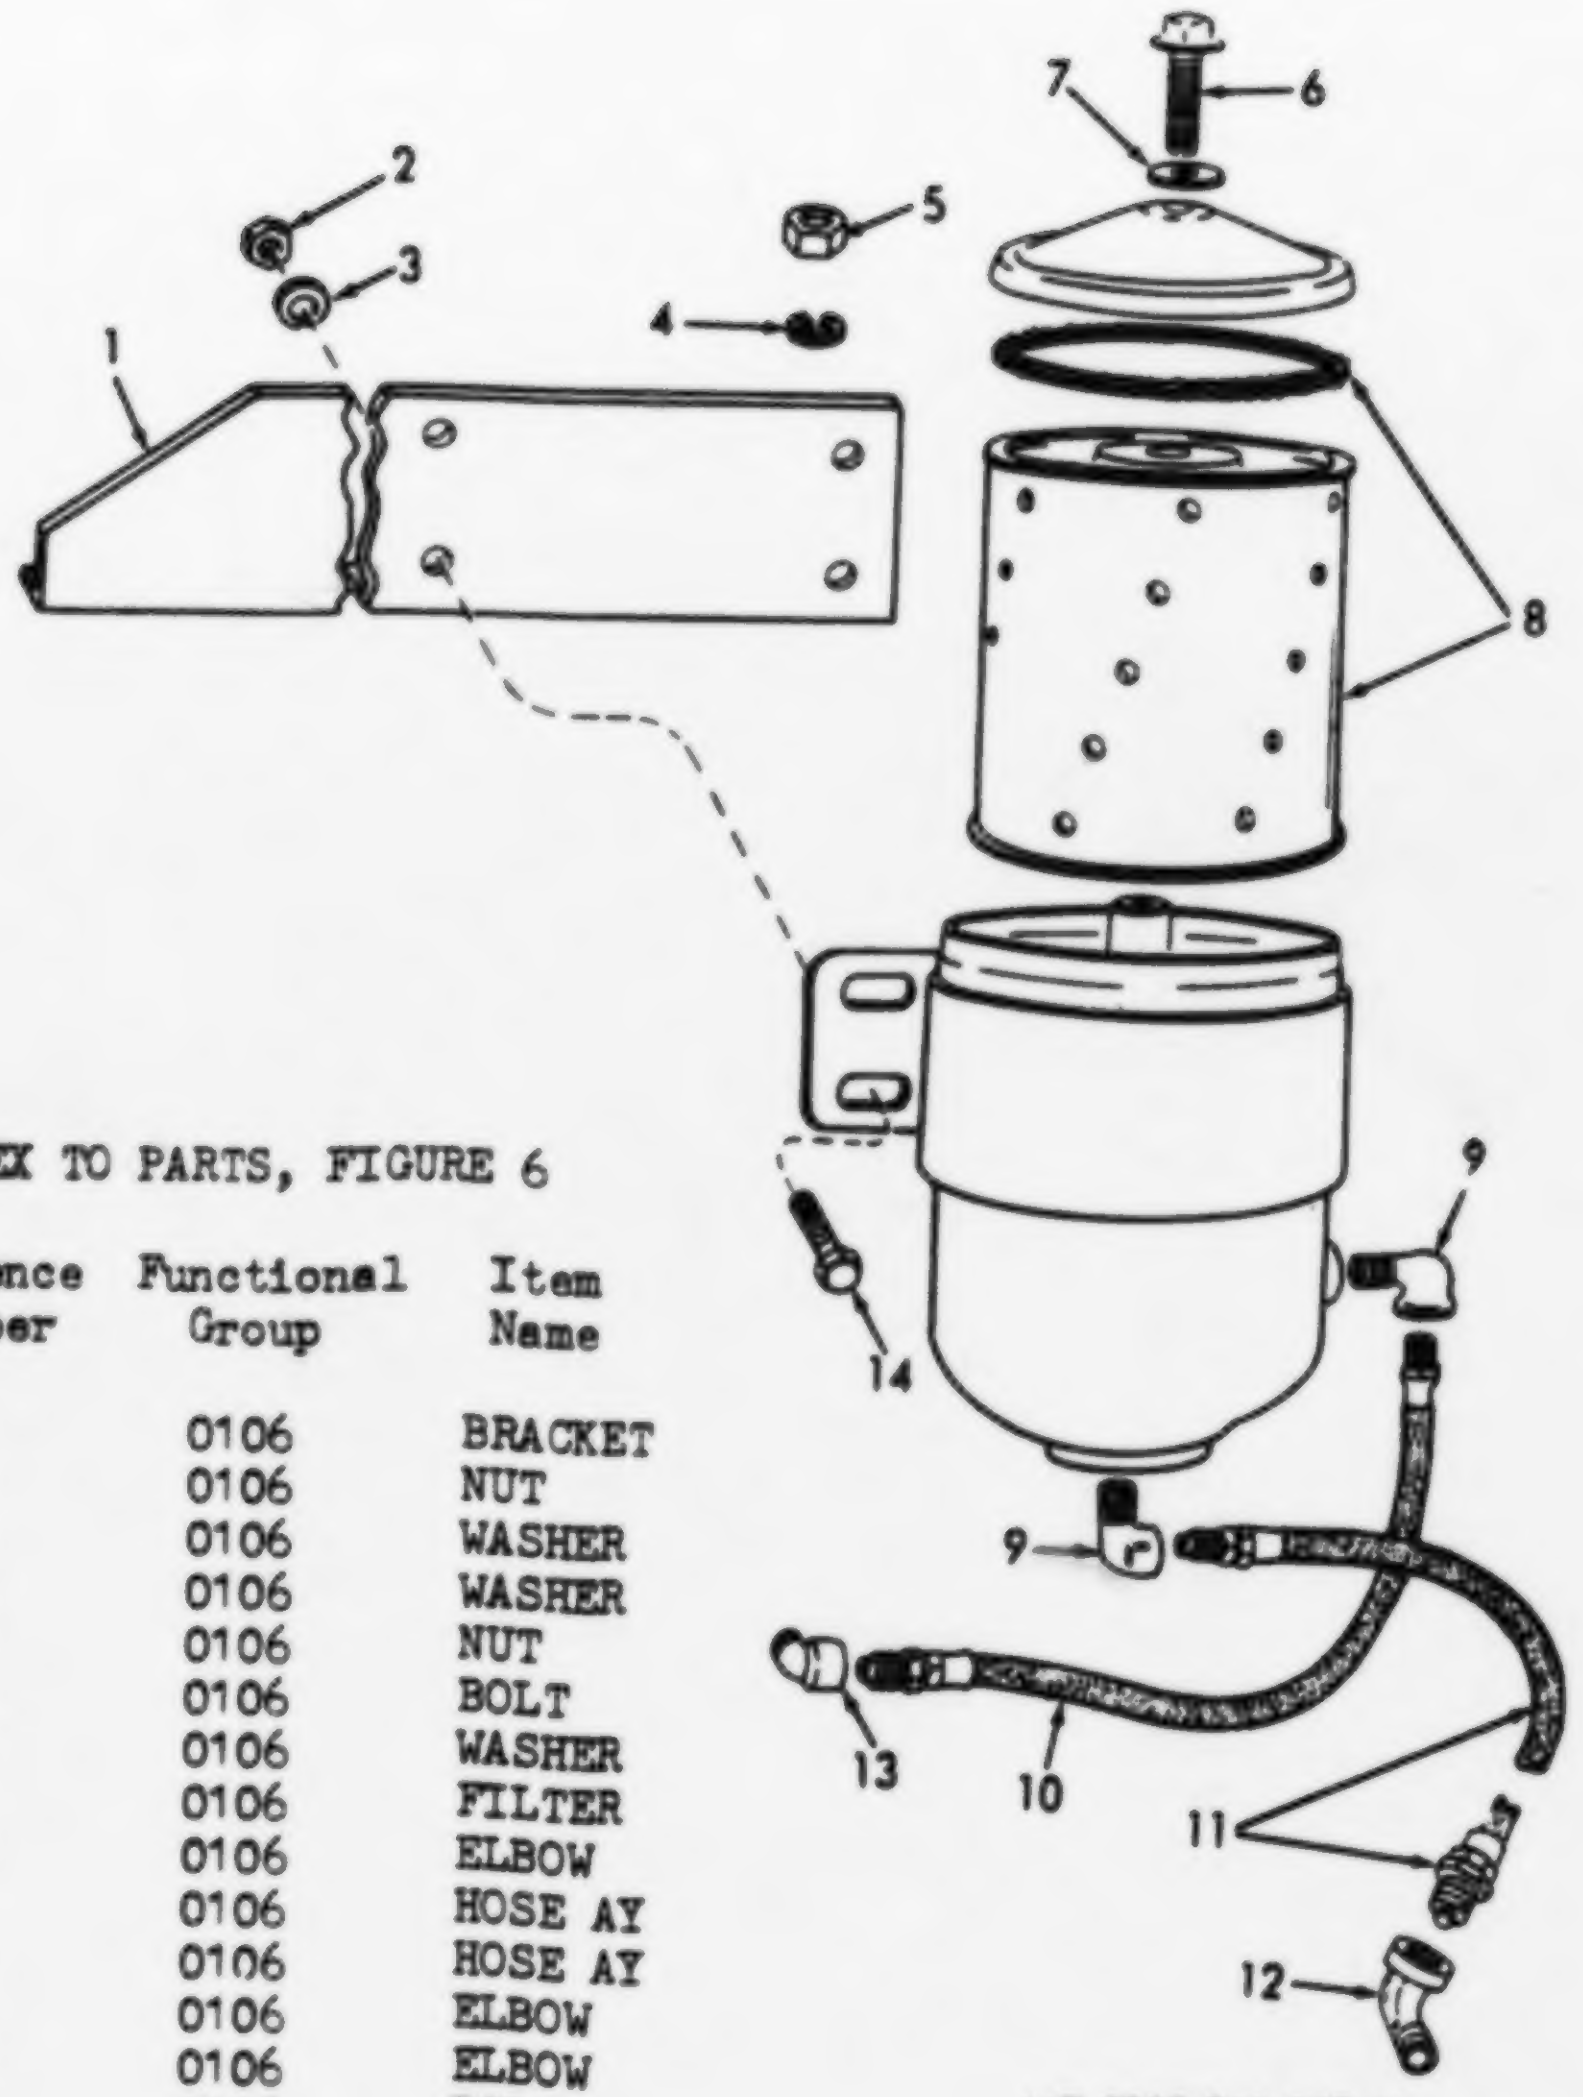
1
2
3
4
5
6
7
8
9
9
10
11
12
13
14
ME 3930-231-35P/6

INDEX TO PARTS, FIGURE 6

Reference Number	Functional Group	Item Name
1	0106	BRACKET
2	0106	NUT
3	0106	WASHER
4	0106	WASHER
5	0106	NUT
6	0106	BOLT
7	0106	WASHER
8	0106	FILTER
9	0106	ELBOW
10	0106	HOSE AY
11	0106	HOSE AY
12	0106	ELBOW
13	0106	ELBOW
14	0106	BOLT

Figure 6. Oil Filter.

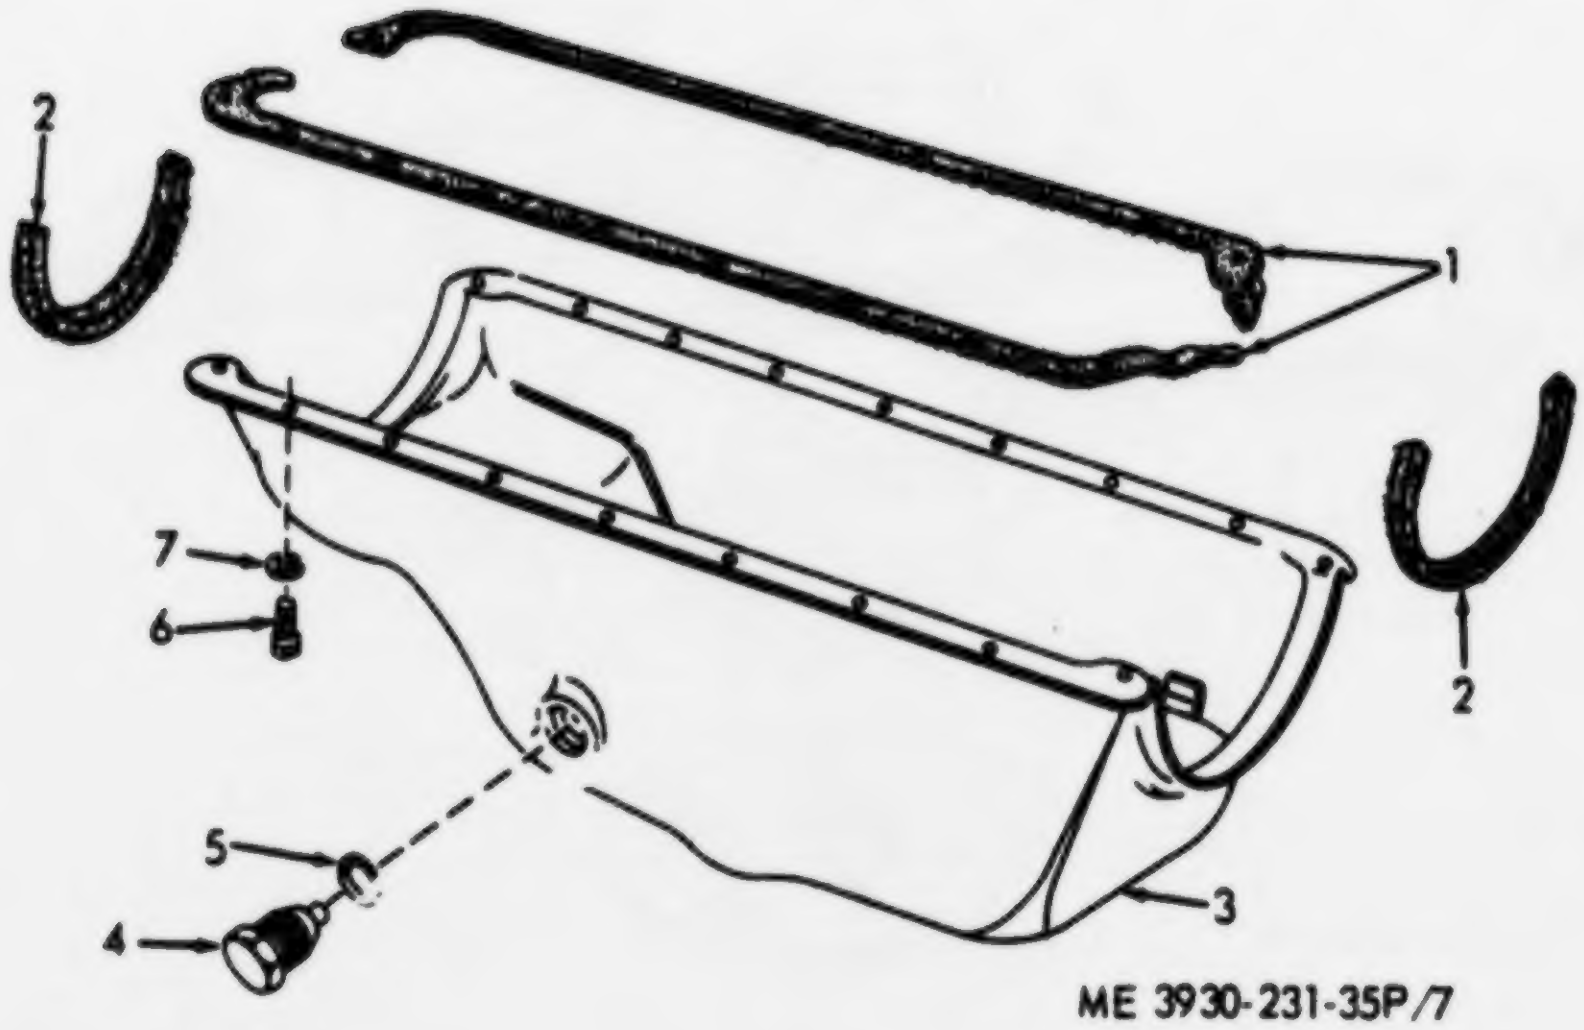
2
1
7
6
2
5
3
4
ME 3930-231-35P/7

Figure 7. Oil Pan.

INDEX TO PARTS, FIGURE 7

Reference Number	Functional Group	Item Name
1	0106	GASKET
2	0106	GASKET
3	0106	PAN
4	0106	PLUG
5	0106	GASKET
6	0106	BOLT
7	0106	WASHER

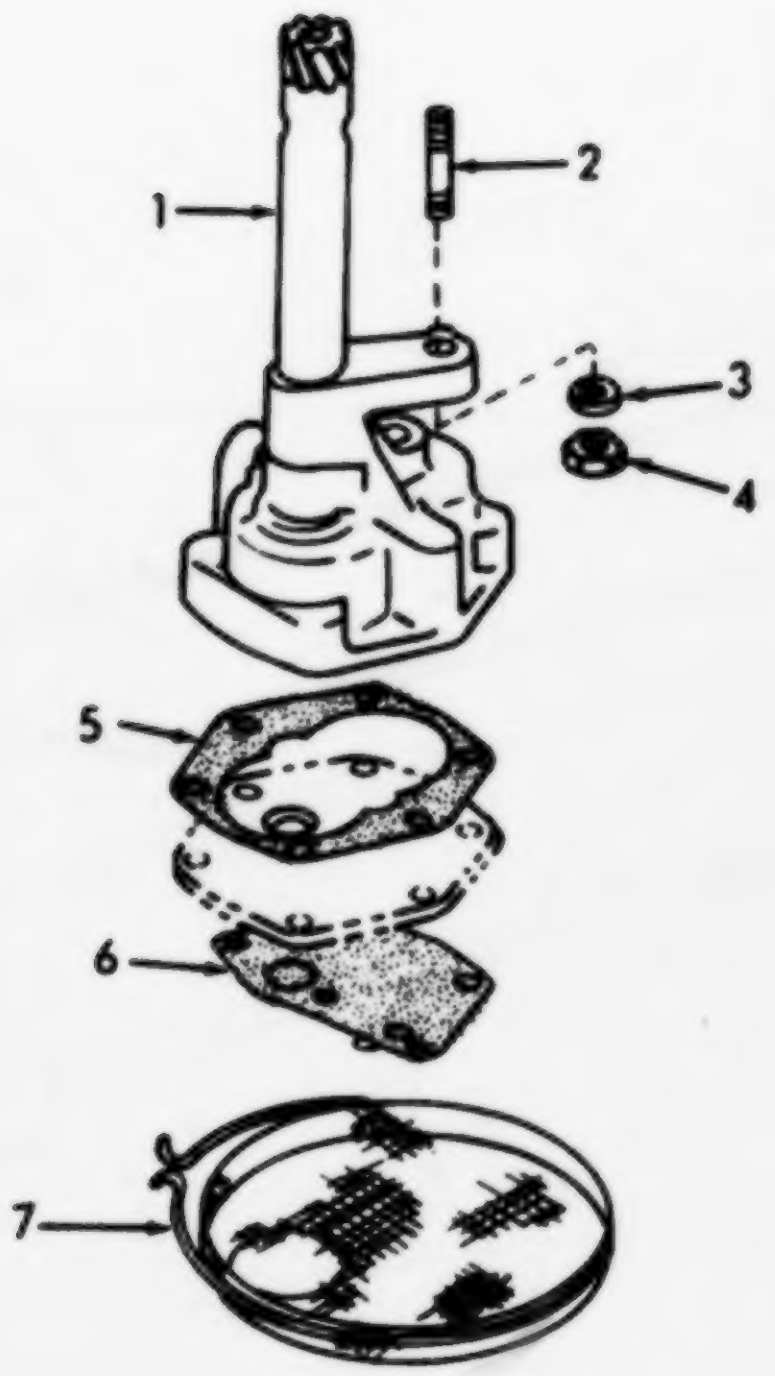

ME 3930-231-35P/8

Figure 8. Oil Pump.

INDEX TO PARTS, FIGURE 8

Reference Number	Functional Group	Item Name
1	0106	PUMP
2	0101	STUD
3	0106	WASHER
4	0106	NUT
5	0106	GASKET
6	0106	GASKET
7	0106	STRAINER

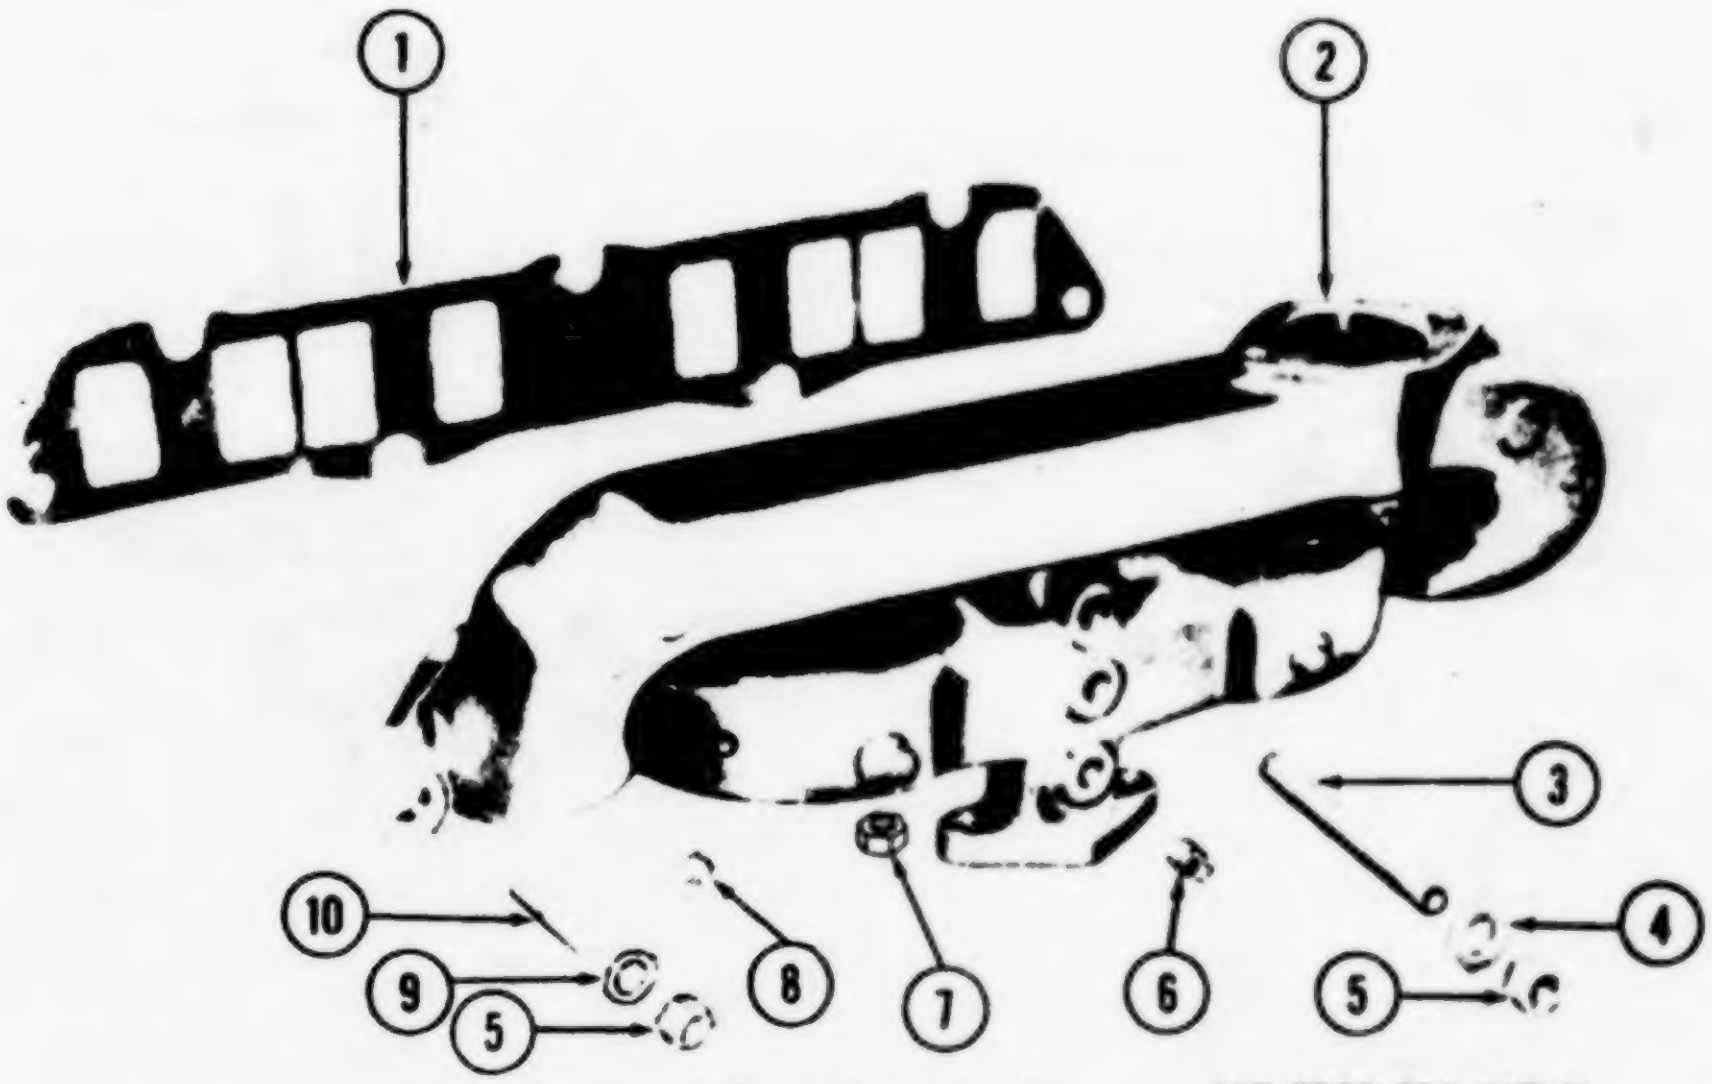

Figure 9. Manifold.   ME 3930-231-35P/9

INDEX TO PARTS, FIGURE 9

Reference Number	Functional Group	Item Name
1	0108	GASKET
2	0108	MANIFOLD
3	0101	STUD
4	0108	WASHER
5	0108	NUT
6	0108	PLUG
7	0301	NUT
8	0108	PLUG
9	0108	WASHER
10	0101	STUD

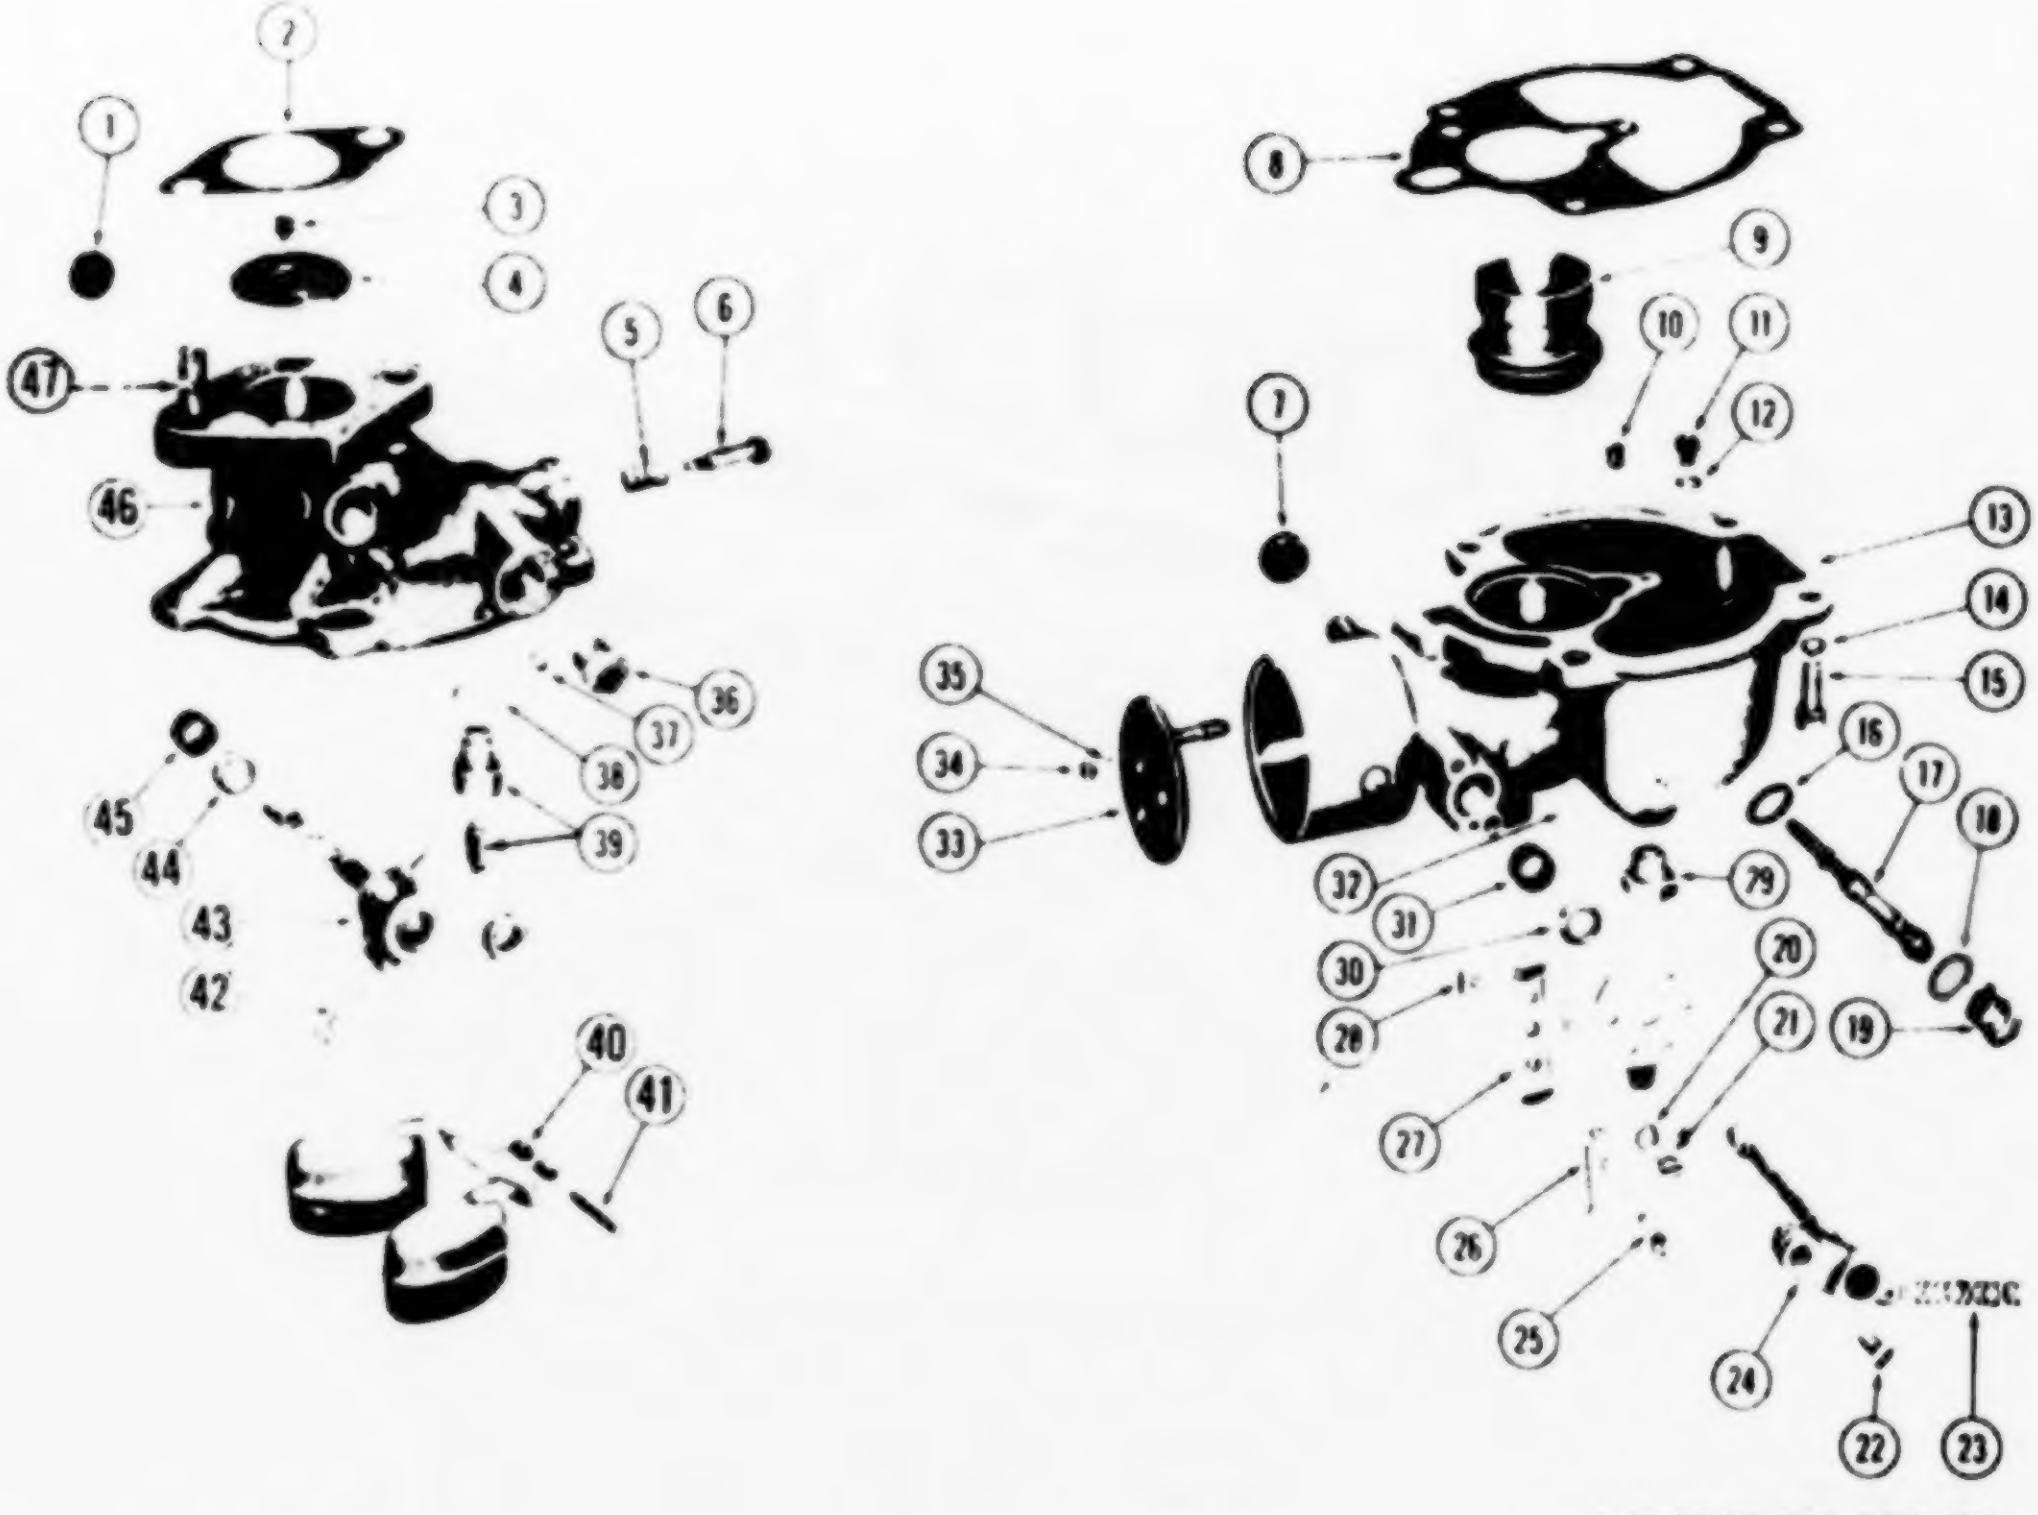
1
2
3
4
5
6
47
46
45
44
43
42
40
41
36
37
38
39
8
9
10
11
12
7
13
14
15
16
17
18
19
35
34
33
32
31
30
29
28
27
26
25
24
22
23
20
21
ME 3930-231-35P/10

Figure 10. Carburetor.

INDEX TO PARTS, FIGURE 10

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0301	PLUG	25	0301	SCREW
2	0301	GASKET	26	0301	CLAMP
3	0301	SCREW	27	0301	BRACKET
4	0301	PLATE	28	0301	NUT
5	0301	SPRING	29	0301	PLUG
6	0301	NEEDLE	30	0301	RETAINER
7	0301	PLUG	31	0301	FELT
8	0301	GASKET	32	0301	DISK
9	0301	VENTURI	33	0301	PLATE
10	0301	JET	34	0301	SCREW
11	0301	JET	35	0301	WASHER
12	0301	WASHER	36	0301	PLUG
13	0301	BOWL	37	0301	JET
14	0301	WASHER	38	0301	WASHER
15	0301	SCREW	39	0301	VALVE
16	0301	WASHER	40	0301	FLOAT
17	0301	JET	41	0301	AXLE
18	0301	WASHER	42	0301	SCREW
19	0301	PLUG	43	0301	SHAFT
20	0301	WASHER	44	0301	RETAINER
21	0301	SCREW	45	0301	SEAL
22	0301	SCREW	46	0301	BODY
23	0301	SPRING	47	0301	STUD
24	0301	SHAFT			

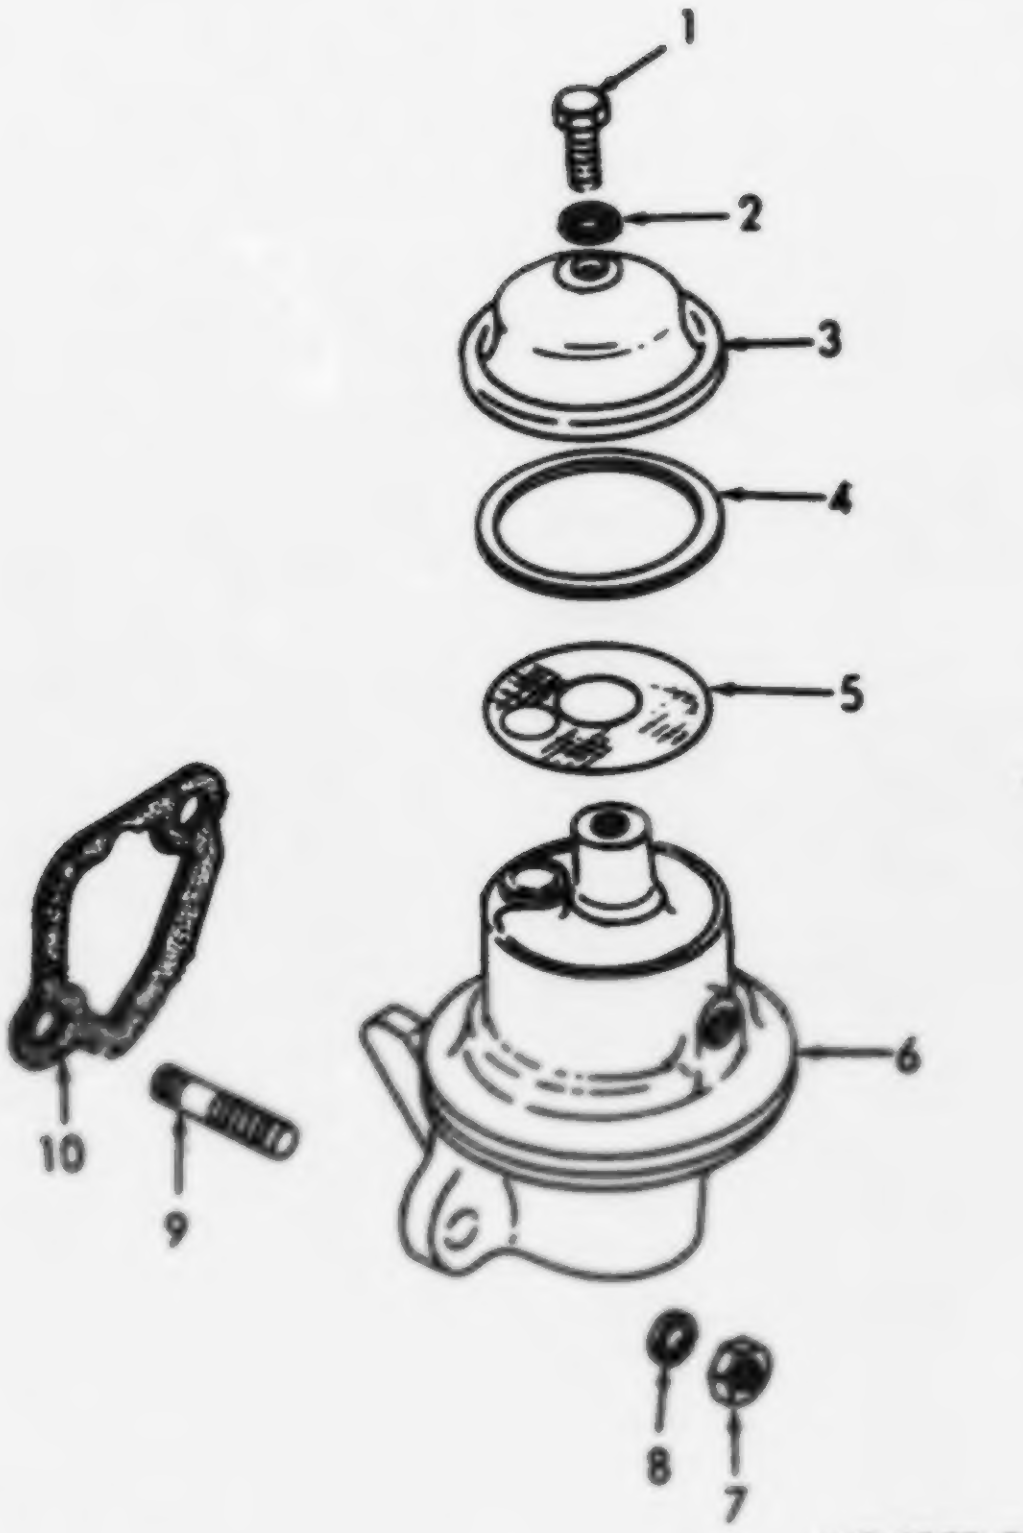

ME 3930-231-35P/11

Figure 11. Fuel Pump.

INDEX TO PARTS, FIGURE 11

Reference Number	Functional Group	Item Name
1	0302	BOLT
2	0302	GASKET
3	0302	PLATE
4	0302	GASKET
5	0302	STRAINER
6	0302	BODY
7	0302	NUT
8	0302	WASHER
9	0101	STUD
10	0302	GASKET

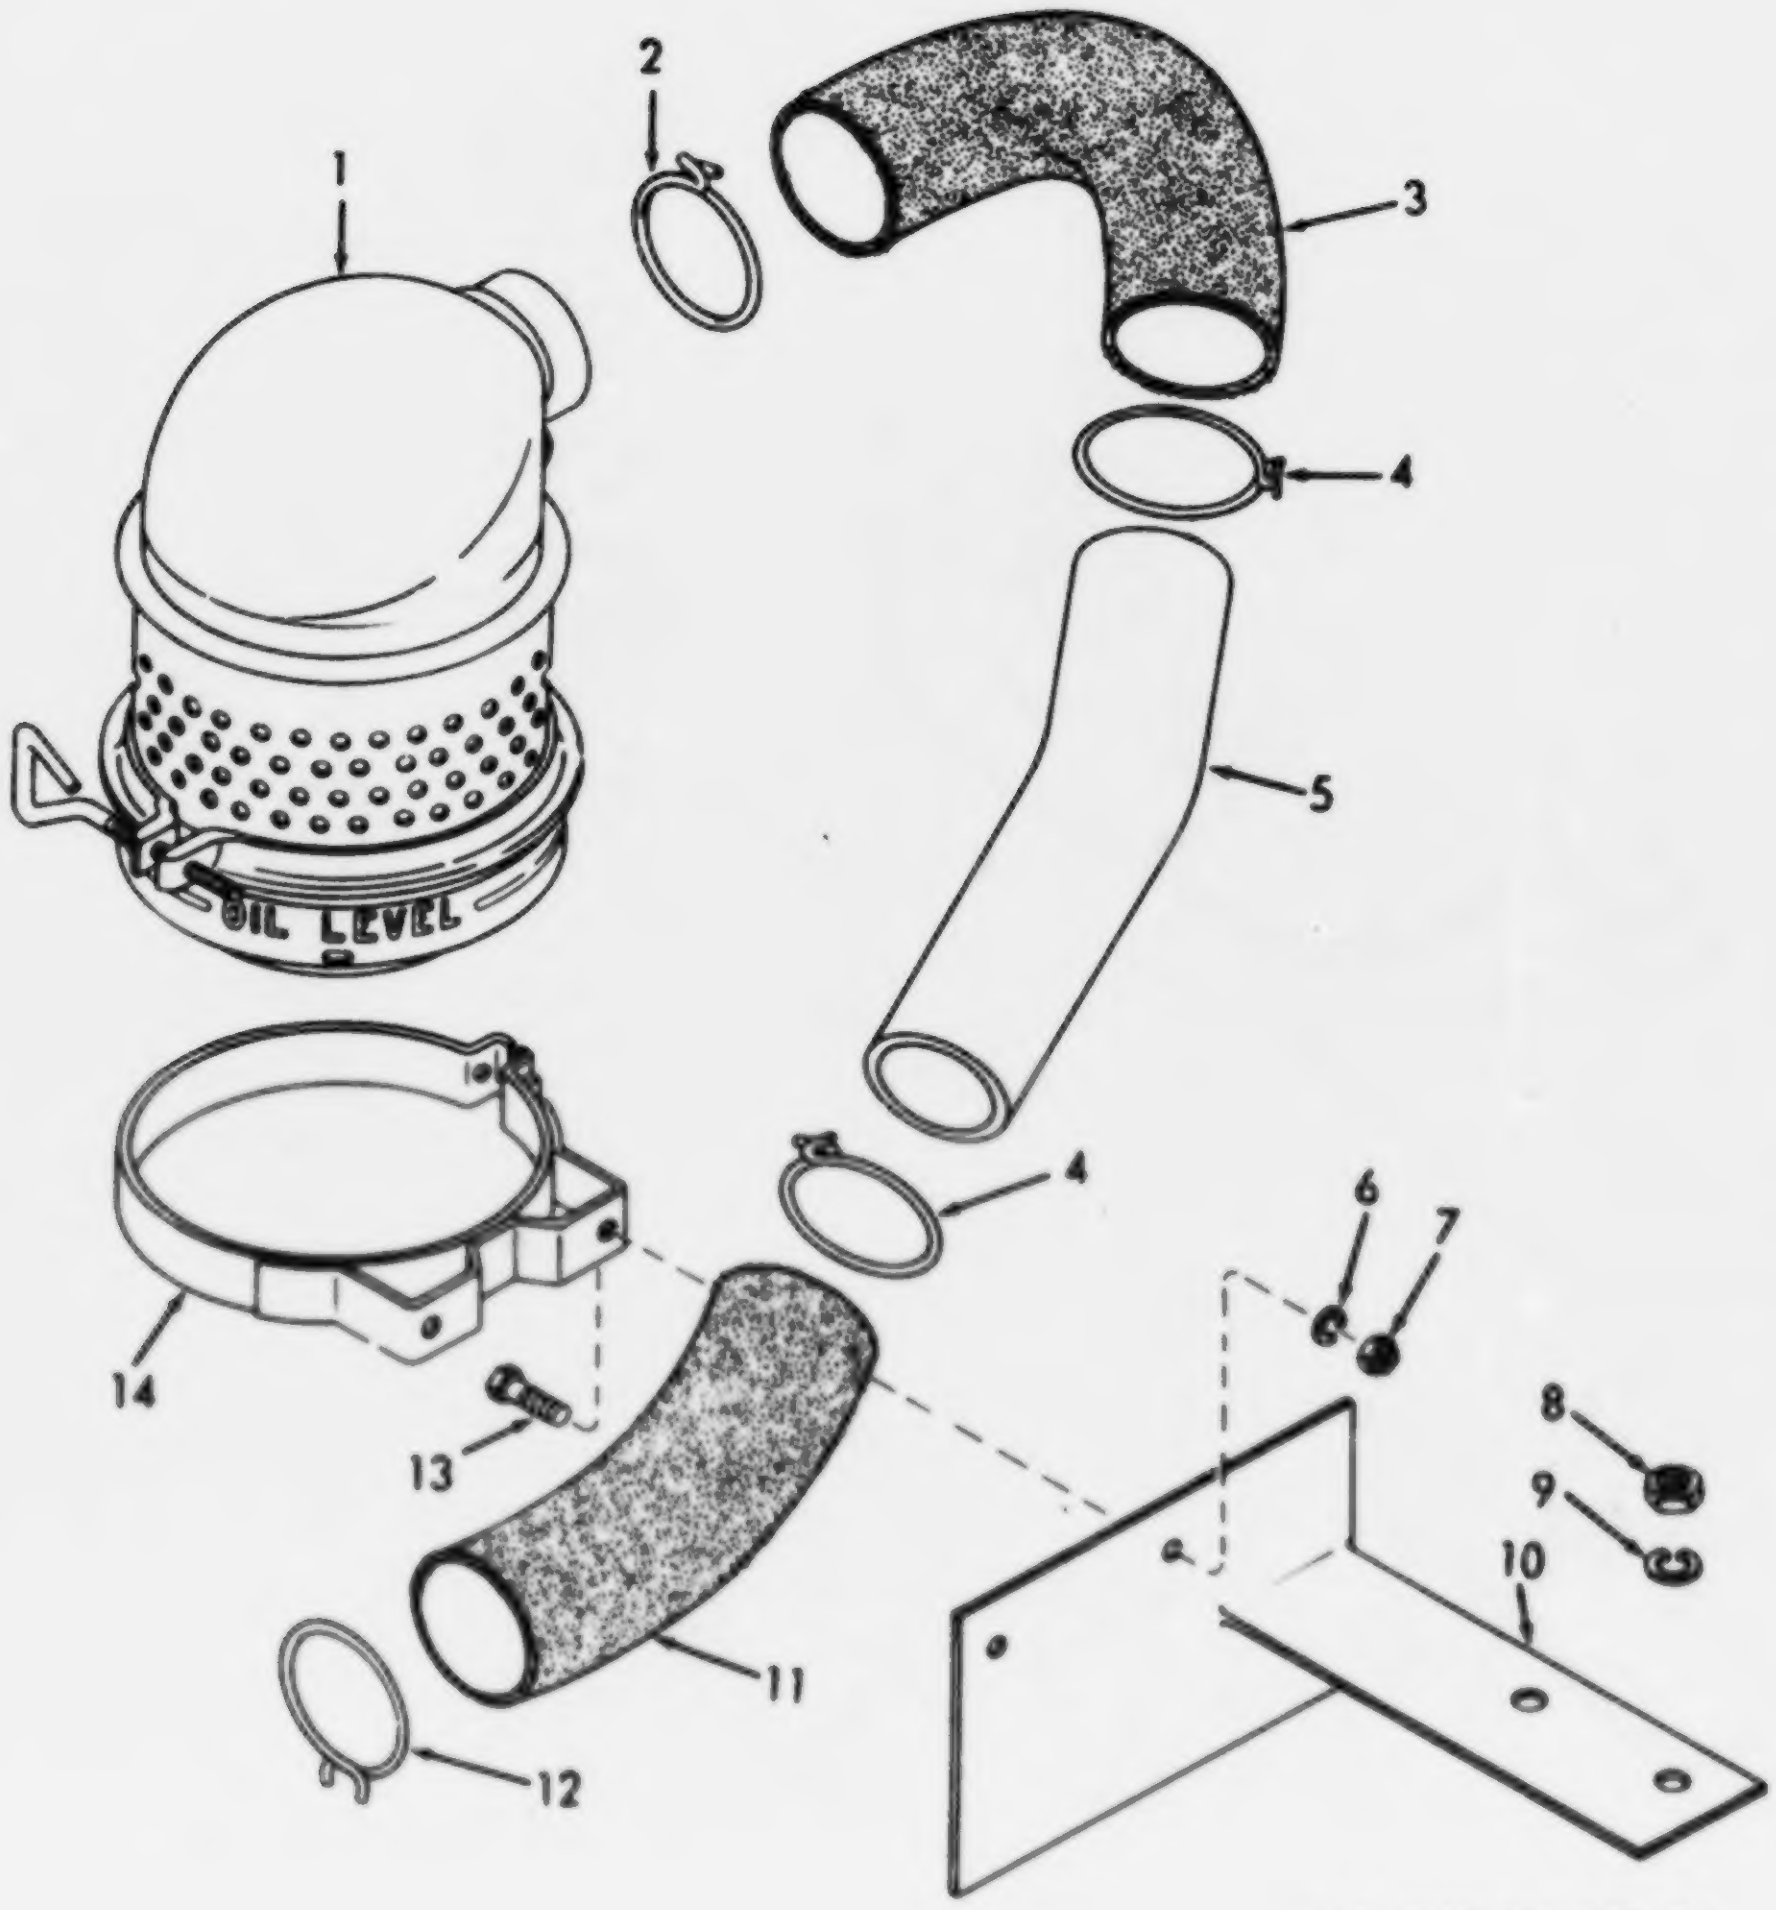

ME 3930-231-35P/12

Figure 12. Air Cleaner.

INDEX TO PARTS, FIGURE 12

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0304	AIR CLEANER	8	0304	NUT
2	0304	CLAMP	9	0304	WASHER
3	0304	HOSE	10	0304	BRACKET
4	0304	CLAMP	11	0304	HOSE
5	0304	TUBE	12	0304	CLAMP
6	0304	WASHER	13	0304	BOLT
7	0304	NUT	14	0304	CLAMP

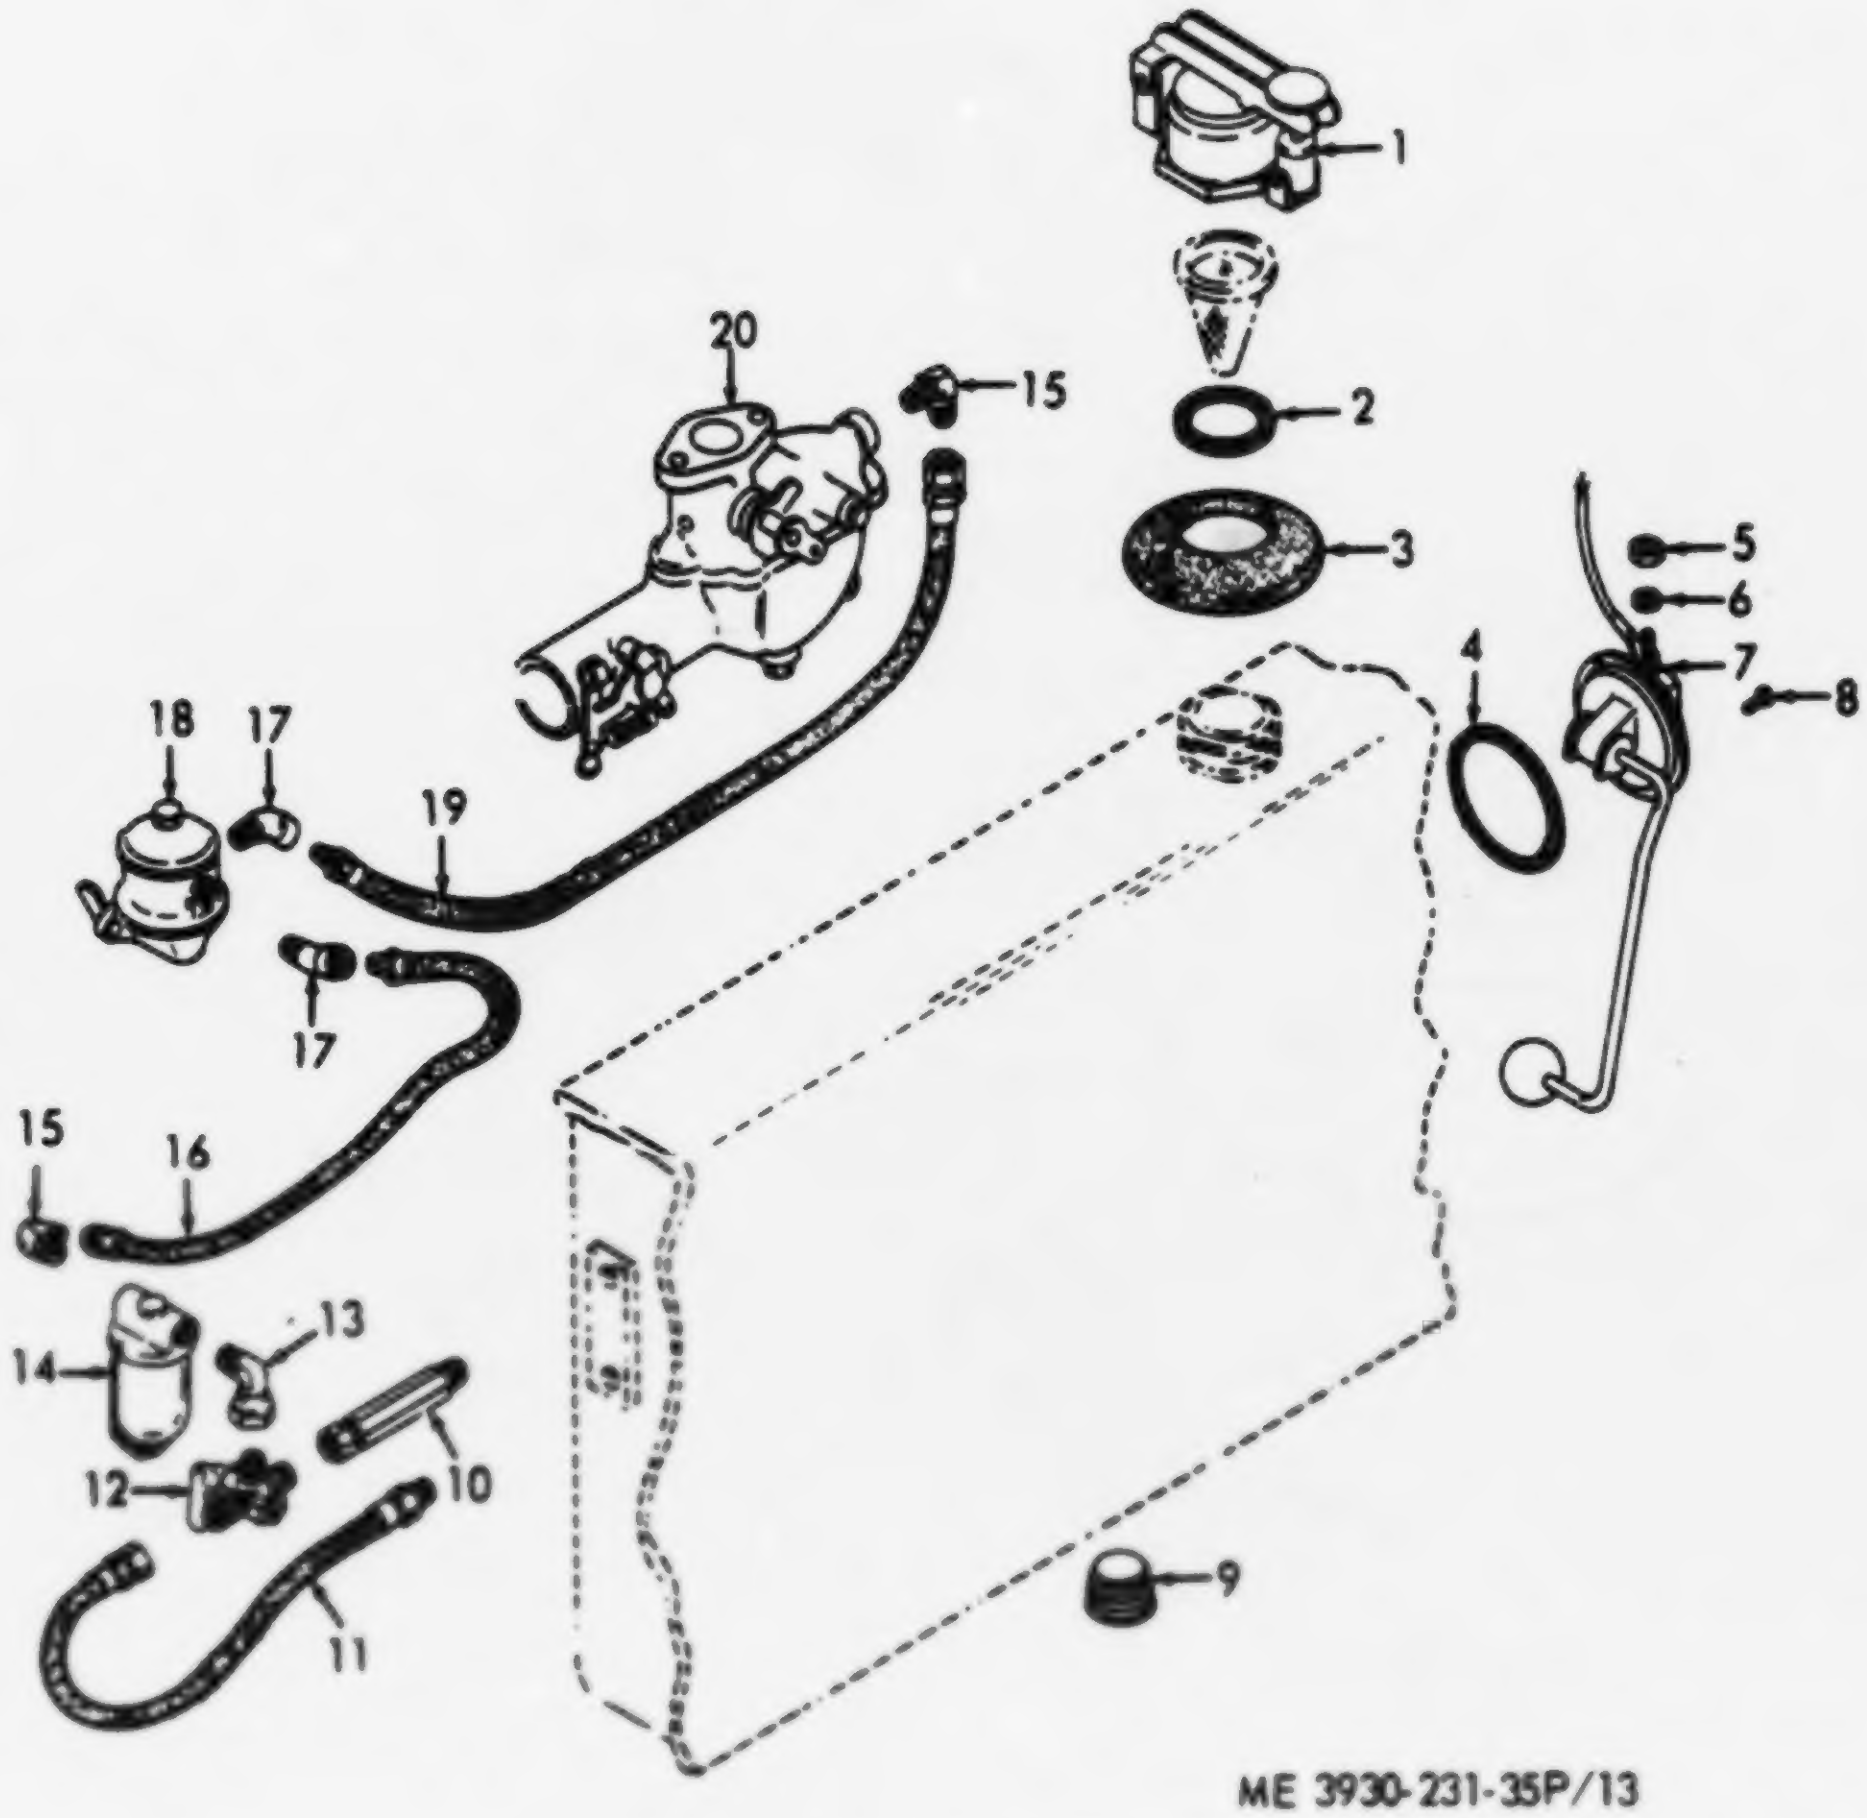

ME 3930-231-35P/13

Figure 13. Fuel Tank, Lines, Fittings.

INDEX TO PARTS, FIGURE 13

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0306	CAP	11	0306	LINE
2	0306	RING	12	0306	VALVE
3	0306	SEAL	13	0306	ELBOW
4	0610	GASKET	14	0309	FILTER
5	0610	NUT	15	0306	ELBOW
6	0610	WASHER	16	0306	HOSE AY
7	0610	TRANSMITTER	17	0306	ELBOW
8	0610	SCREW	18	0302	PUMP
9	0306	PLUG	19	0306	HOSE
10	0306	ADAPTER	20	0301	CARBURETOR

INDEX TO PARTS, FIGURE 14

Reference Number	Functional Group	Item Name
1	0308	DRIVE
2	0308	SPRING
3	0308	NUT
4	0308	SCREW
5	0308	BEARING
6	0308	SEAL
7	0308	FELT
8	0308	NUT
9	0308	BOLT
10	0308	SPRING
11	0308	NUT
12	0308	WASHER
13	0308	SCREW
14	0308	ANCHOR
15	0308	SCREW
16	0308	SHAFT
17	0308	SHAFT

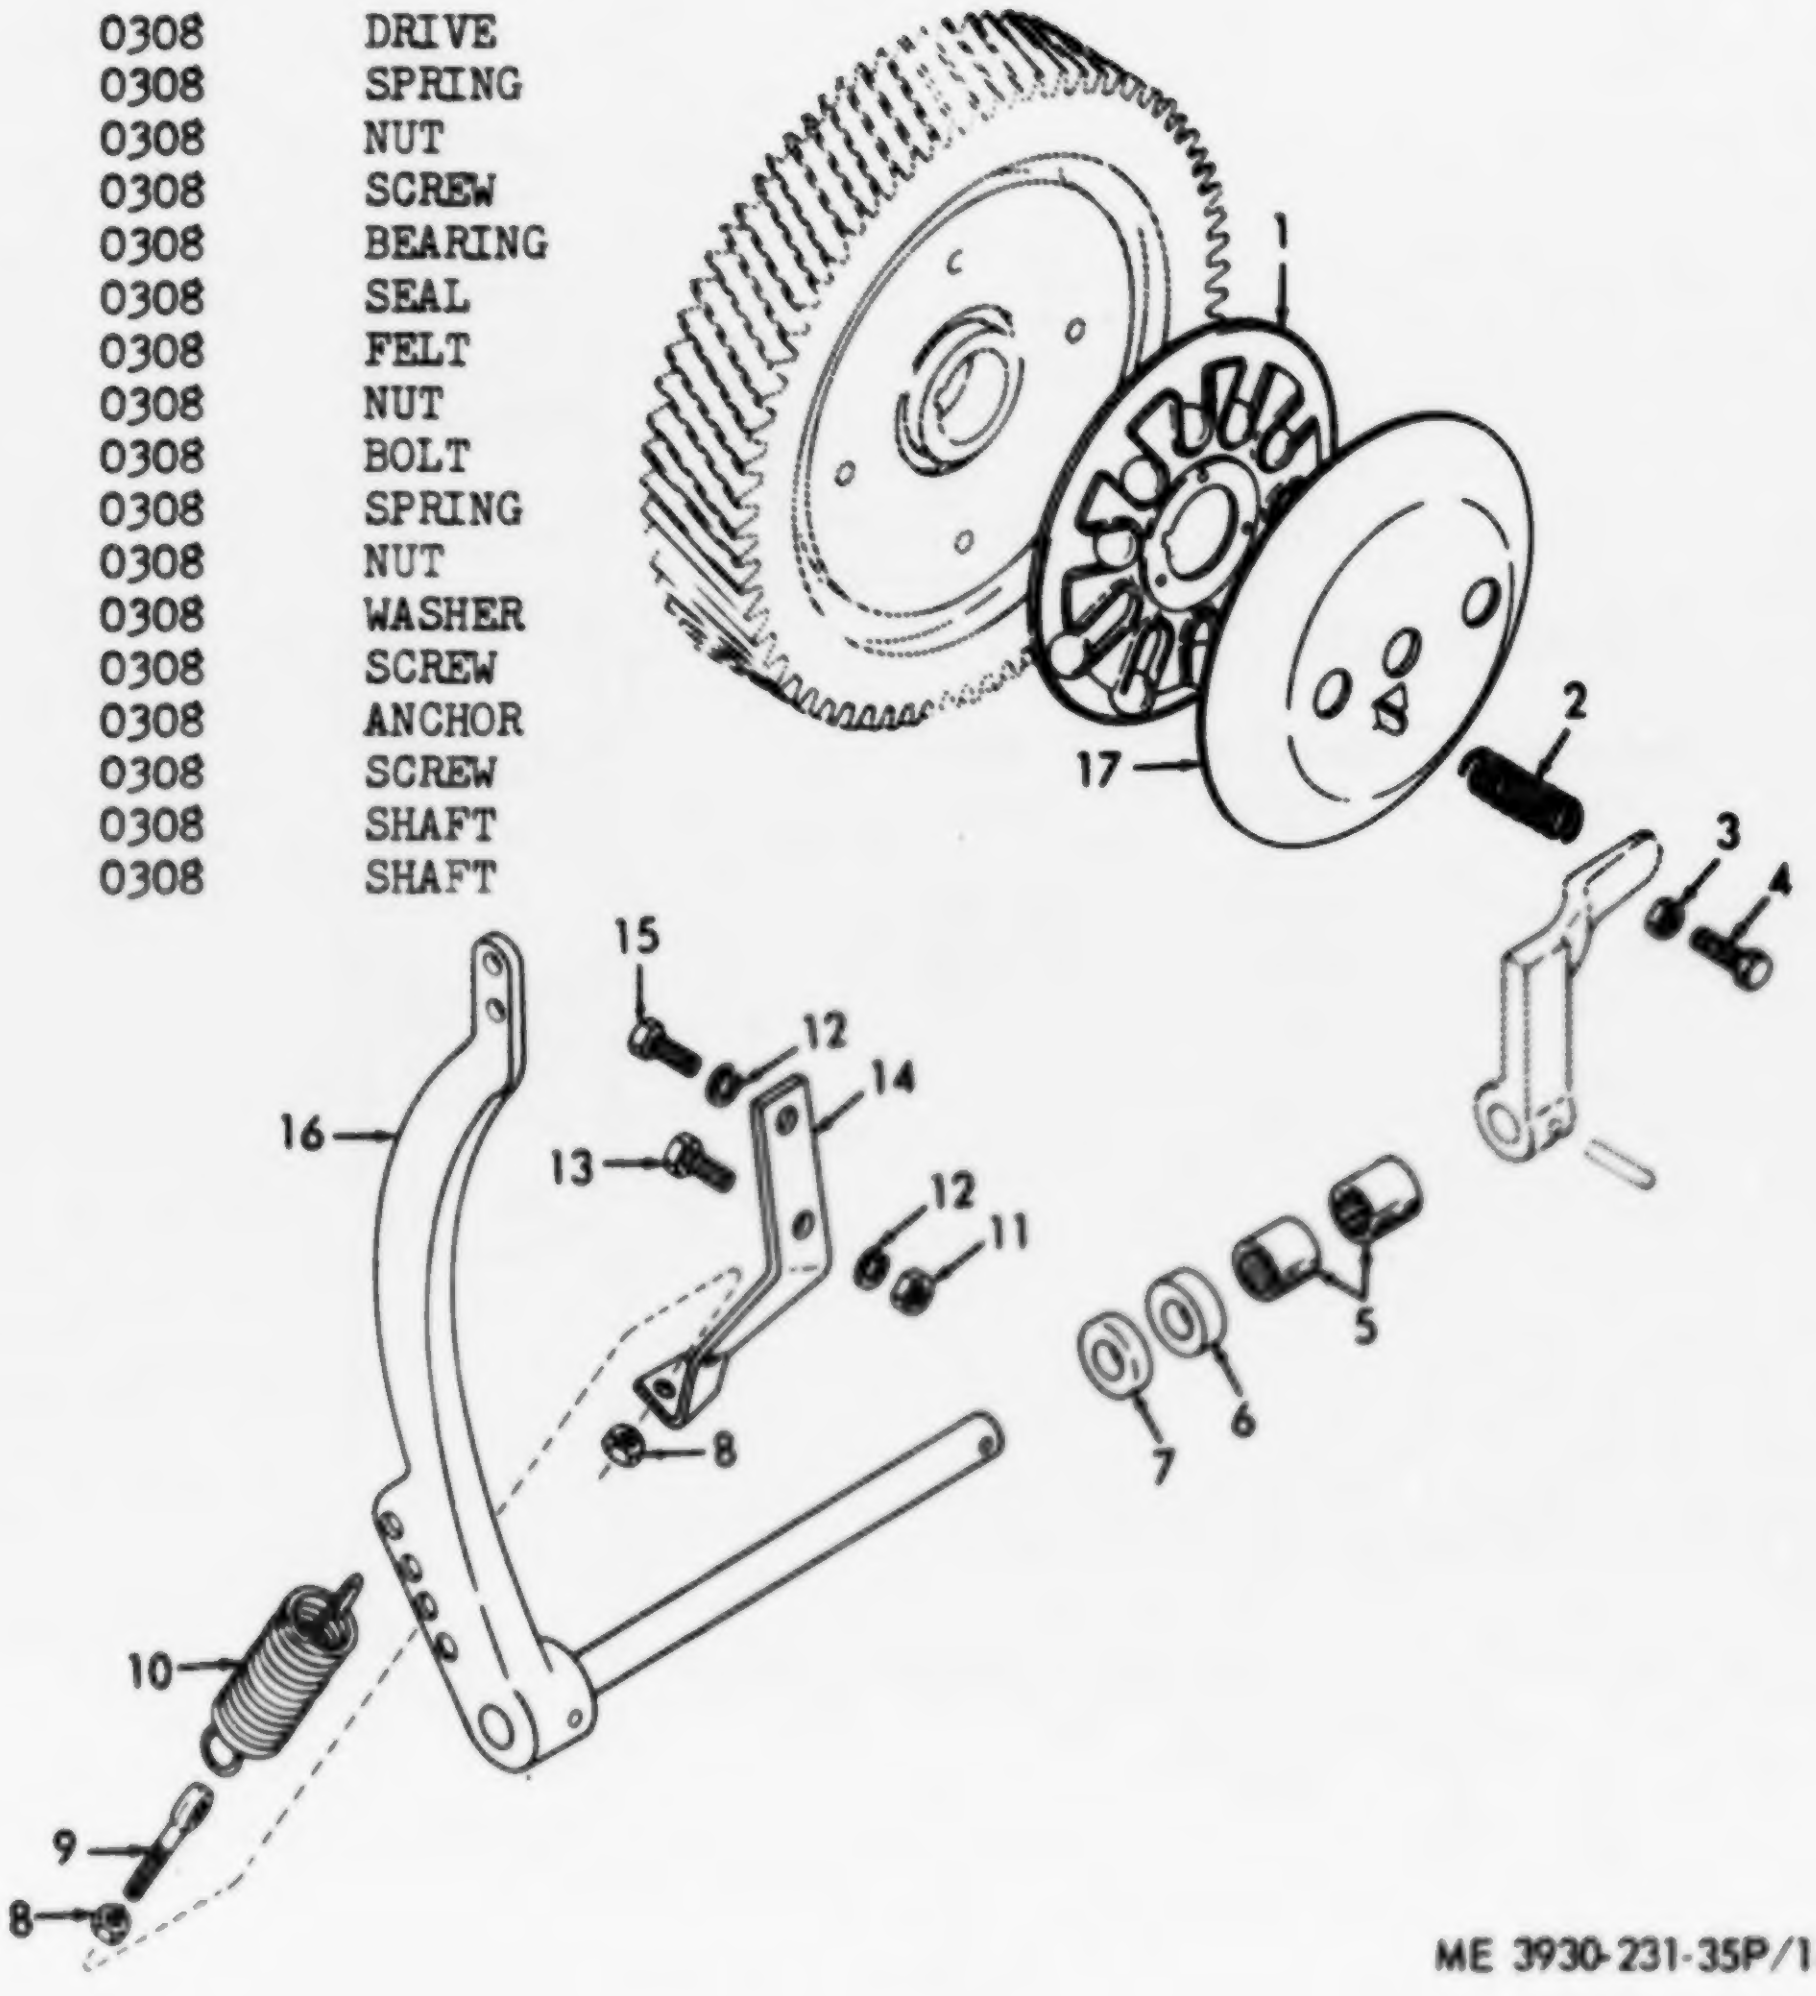

ME 3930-231-35P/14

Figure 14. Governor and Linkage.

INDEX TO PARTS, FIGURE 15

Reference Number	Functional Group	Item Name
1	0309	GASKET
2	0309	FILTER
3	0309	GASKET
4	0309	BOWL
5	0309	BAIL

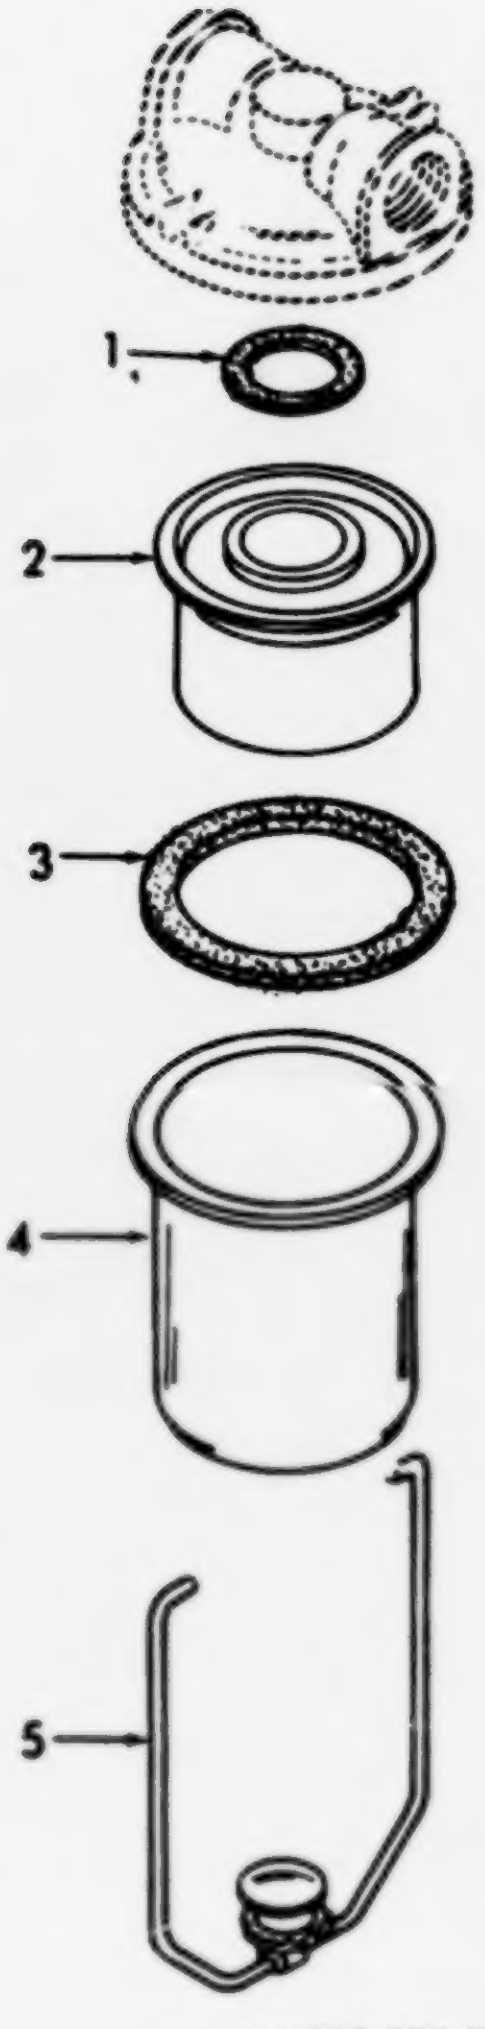

ME 3930-231-35P/15

Figure 15. Fuel Filter.

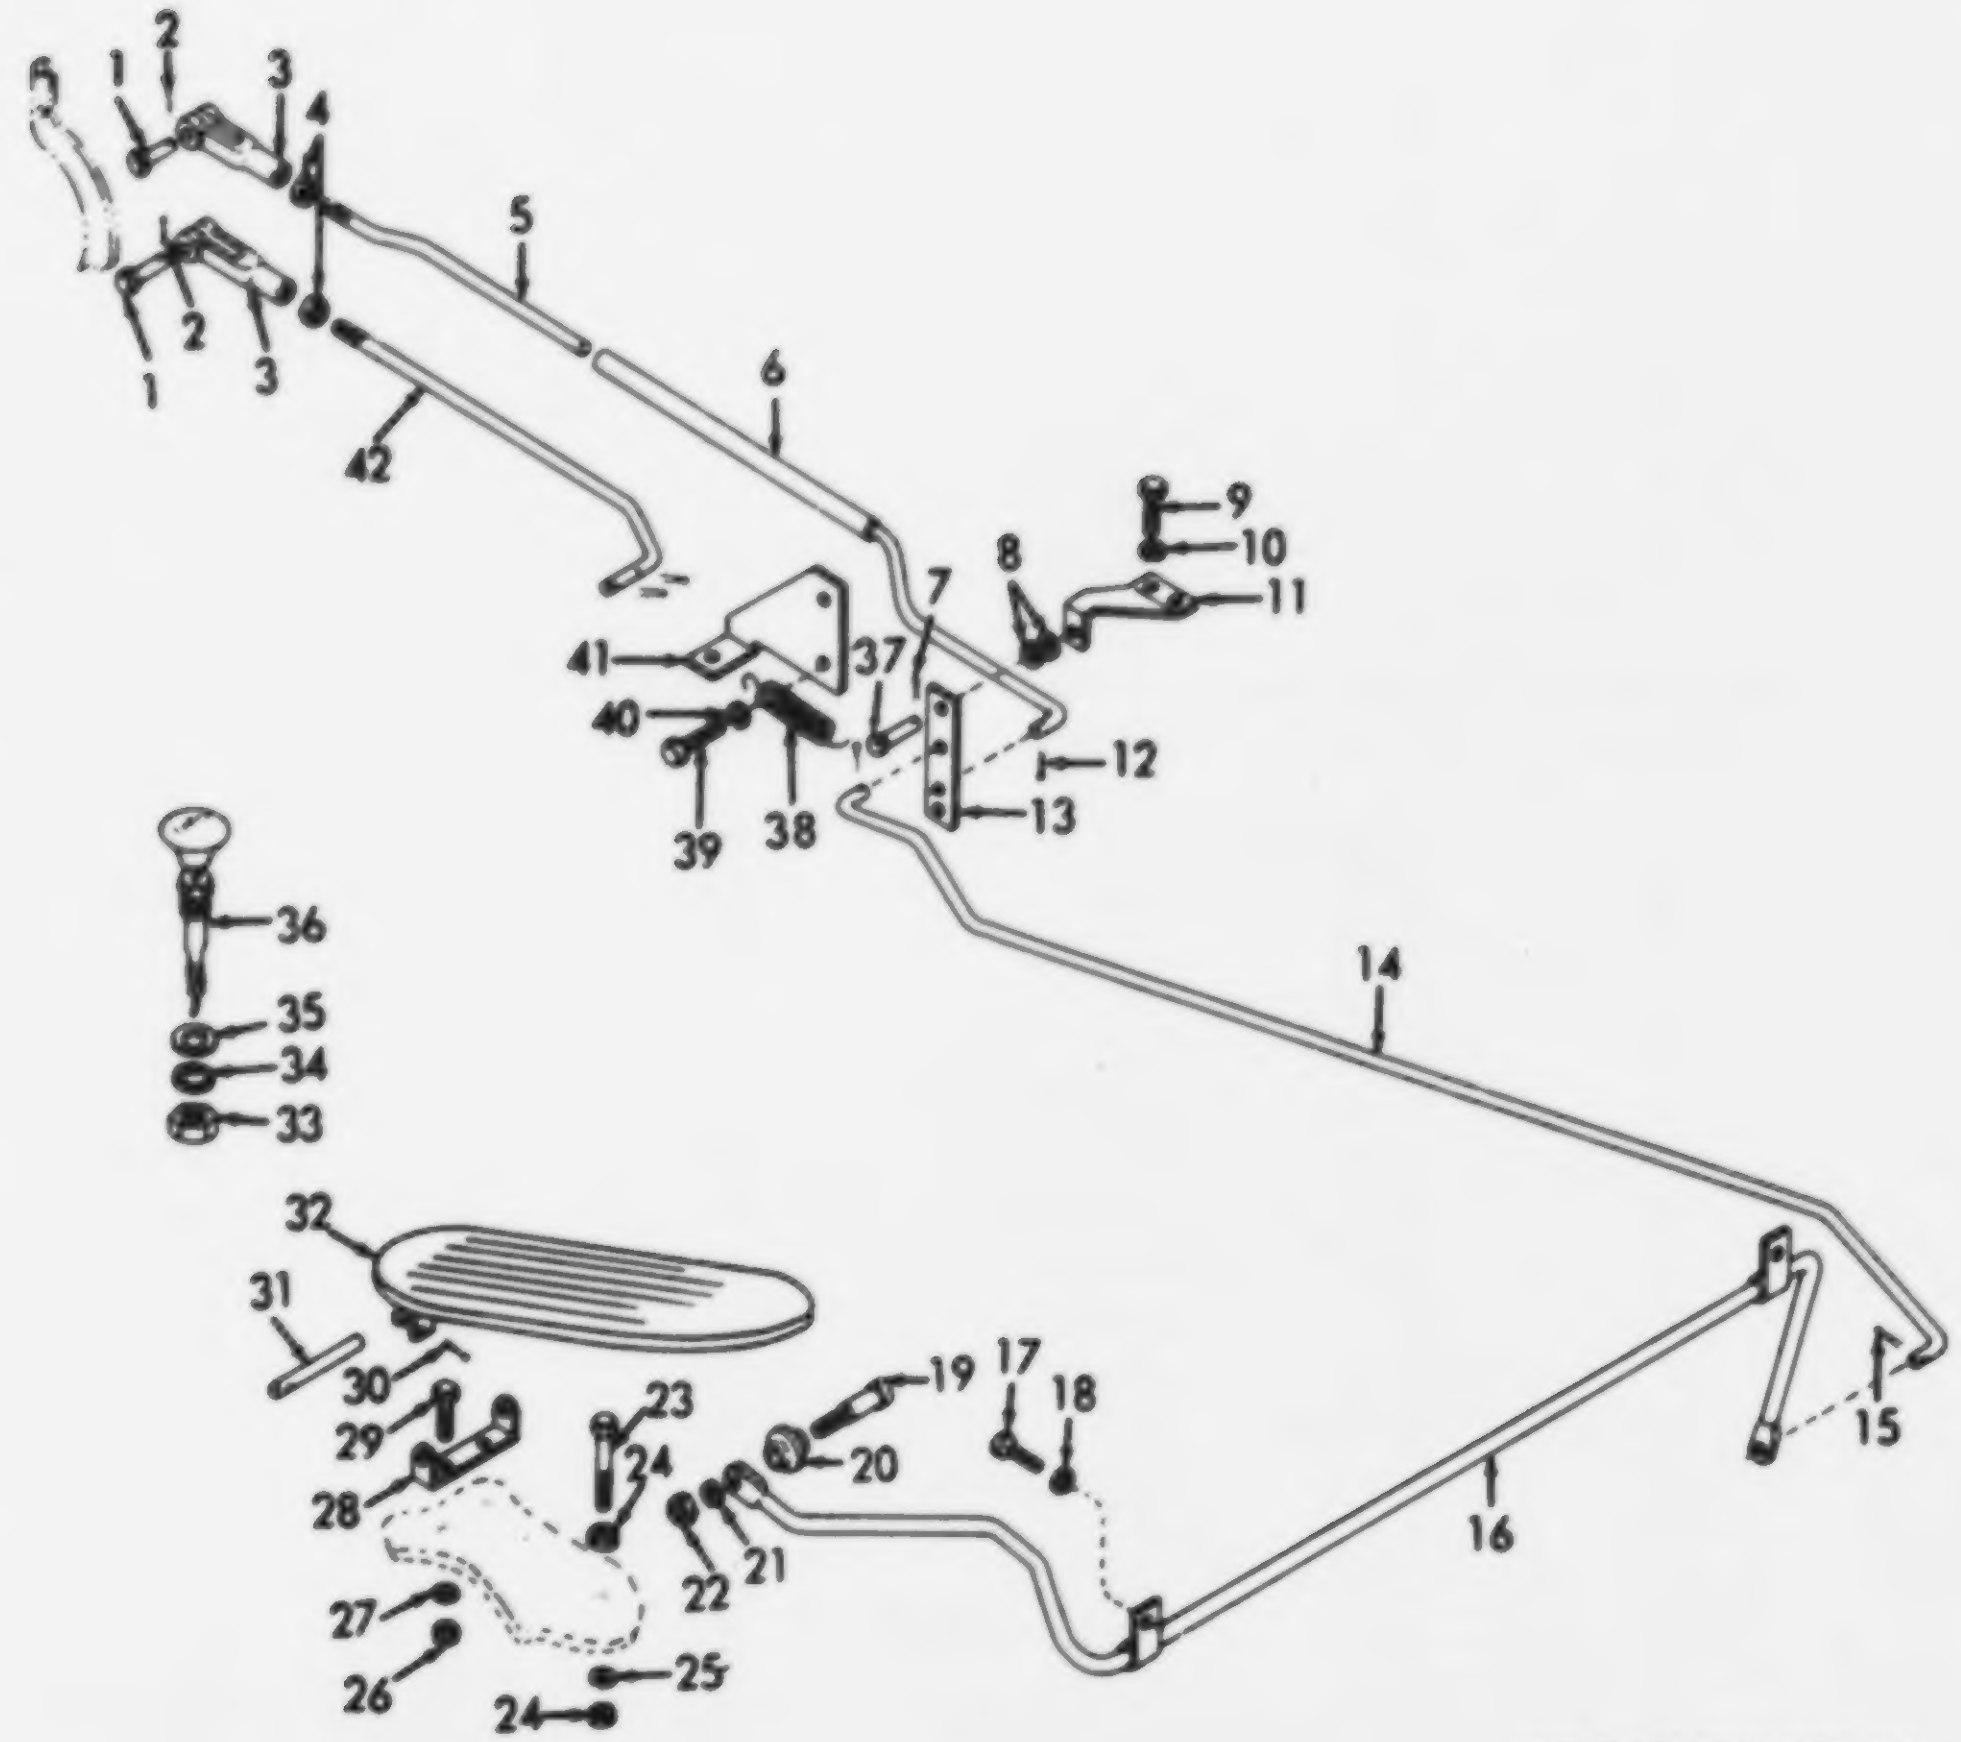
1
2
3
4
6
1
2
3
5
6
42
9
10
8
11
7
41
37
40
12
13
39
38
36
14
35
34
33
32
31
30
29
28
23
24
19
17
18
20
22
21
15
16
27
26
25
24

ME 3930-231-35P/16

Figure 16. Accelerator Linkage.

INDEX TO PARTS, FIGURE 16

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0312	PIN	22	0312	NUT
2	0312	PIN	23	0312	BOLT
3	0312	CLEVIS	24	0312	NUT
4	0312	NUT	25	0312	WASHER
5	0312	ROD	26	0312	NUT
6	0312	TUBE	27	0312	WASHER
7	0312	PIN	28	0312	BRACKET
8	0312	WASHER	29	0312	SCREW
9	0312	BOLT	30	0312	PIN
10	0312	WASHER	31	0312	PIN
11	0312	BRACKET	32	0312	PEDAL
12	0312	PIN	33	0312	NUT
13	0312	BELLCRANK	34	0312	WASHER
14	0312	ROD	35	0312	WASHER
15	0312	PIN	36	0312	CHOKE
16	0312	CROSS SHAFT	37	0312	PIN
17	0312	SCREW	38	0312	SPRING
18	0312	WASHER	39	0312	BOLT
19	0312	SPACER	40	0312	WASHER
20	0312	ROLLER	41	0312	BRACKET
21	0312	WASHER	42	0312	ROD

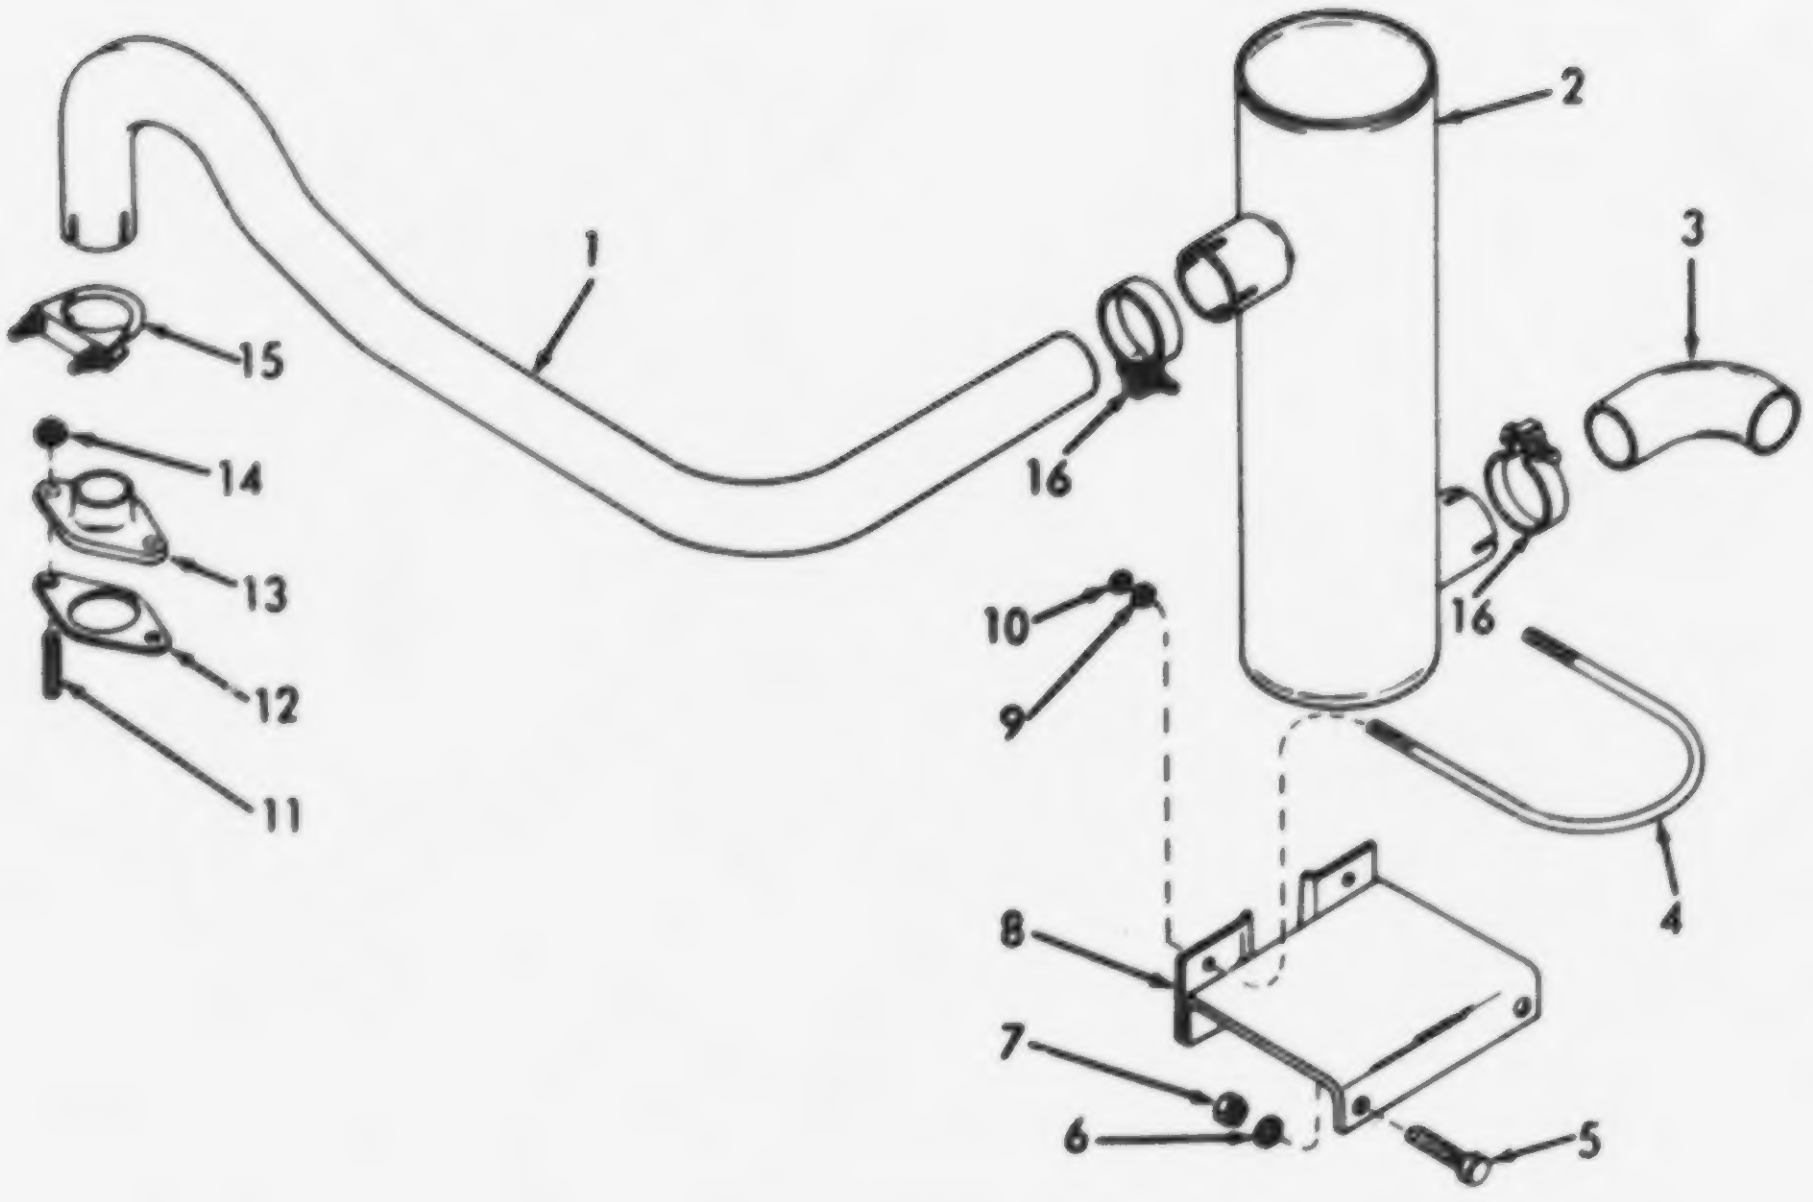

ME 3930-231-35P/17

Figure 17. Muffler, Pipes.

INDEX TO PARTS, FIGURE 17

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0401	MANIFOLD	9	0401	WASHER
2	0401	MUFFLER	10	0401	NUT
3	0401	PIPE	11	0401	STUD
4	0401	"U" BOLT	12	0401	GASKET
5	0401	SCREW	13	0401	FLANGE
6	0401	WASHER	14	0401	NUT
7	0401	NUT	15	0401	CLAMP
8	0401	BRACKET	16	0401	CLAMP

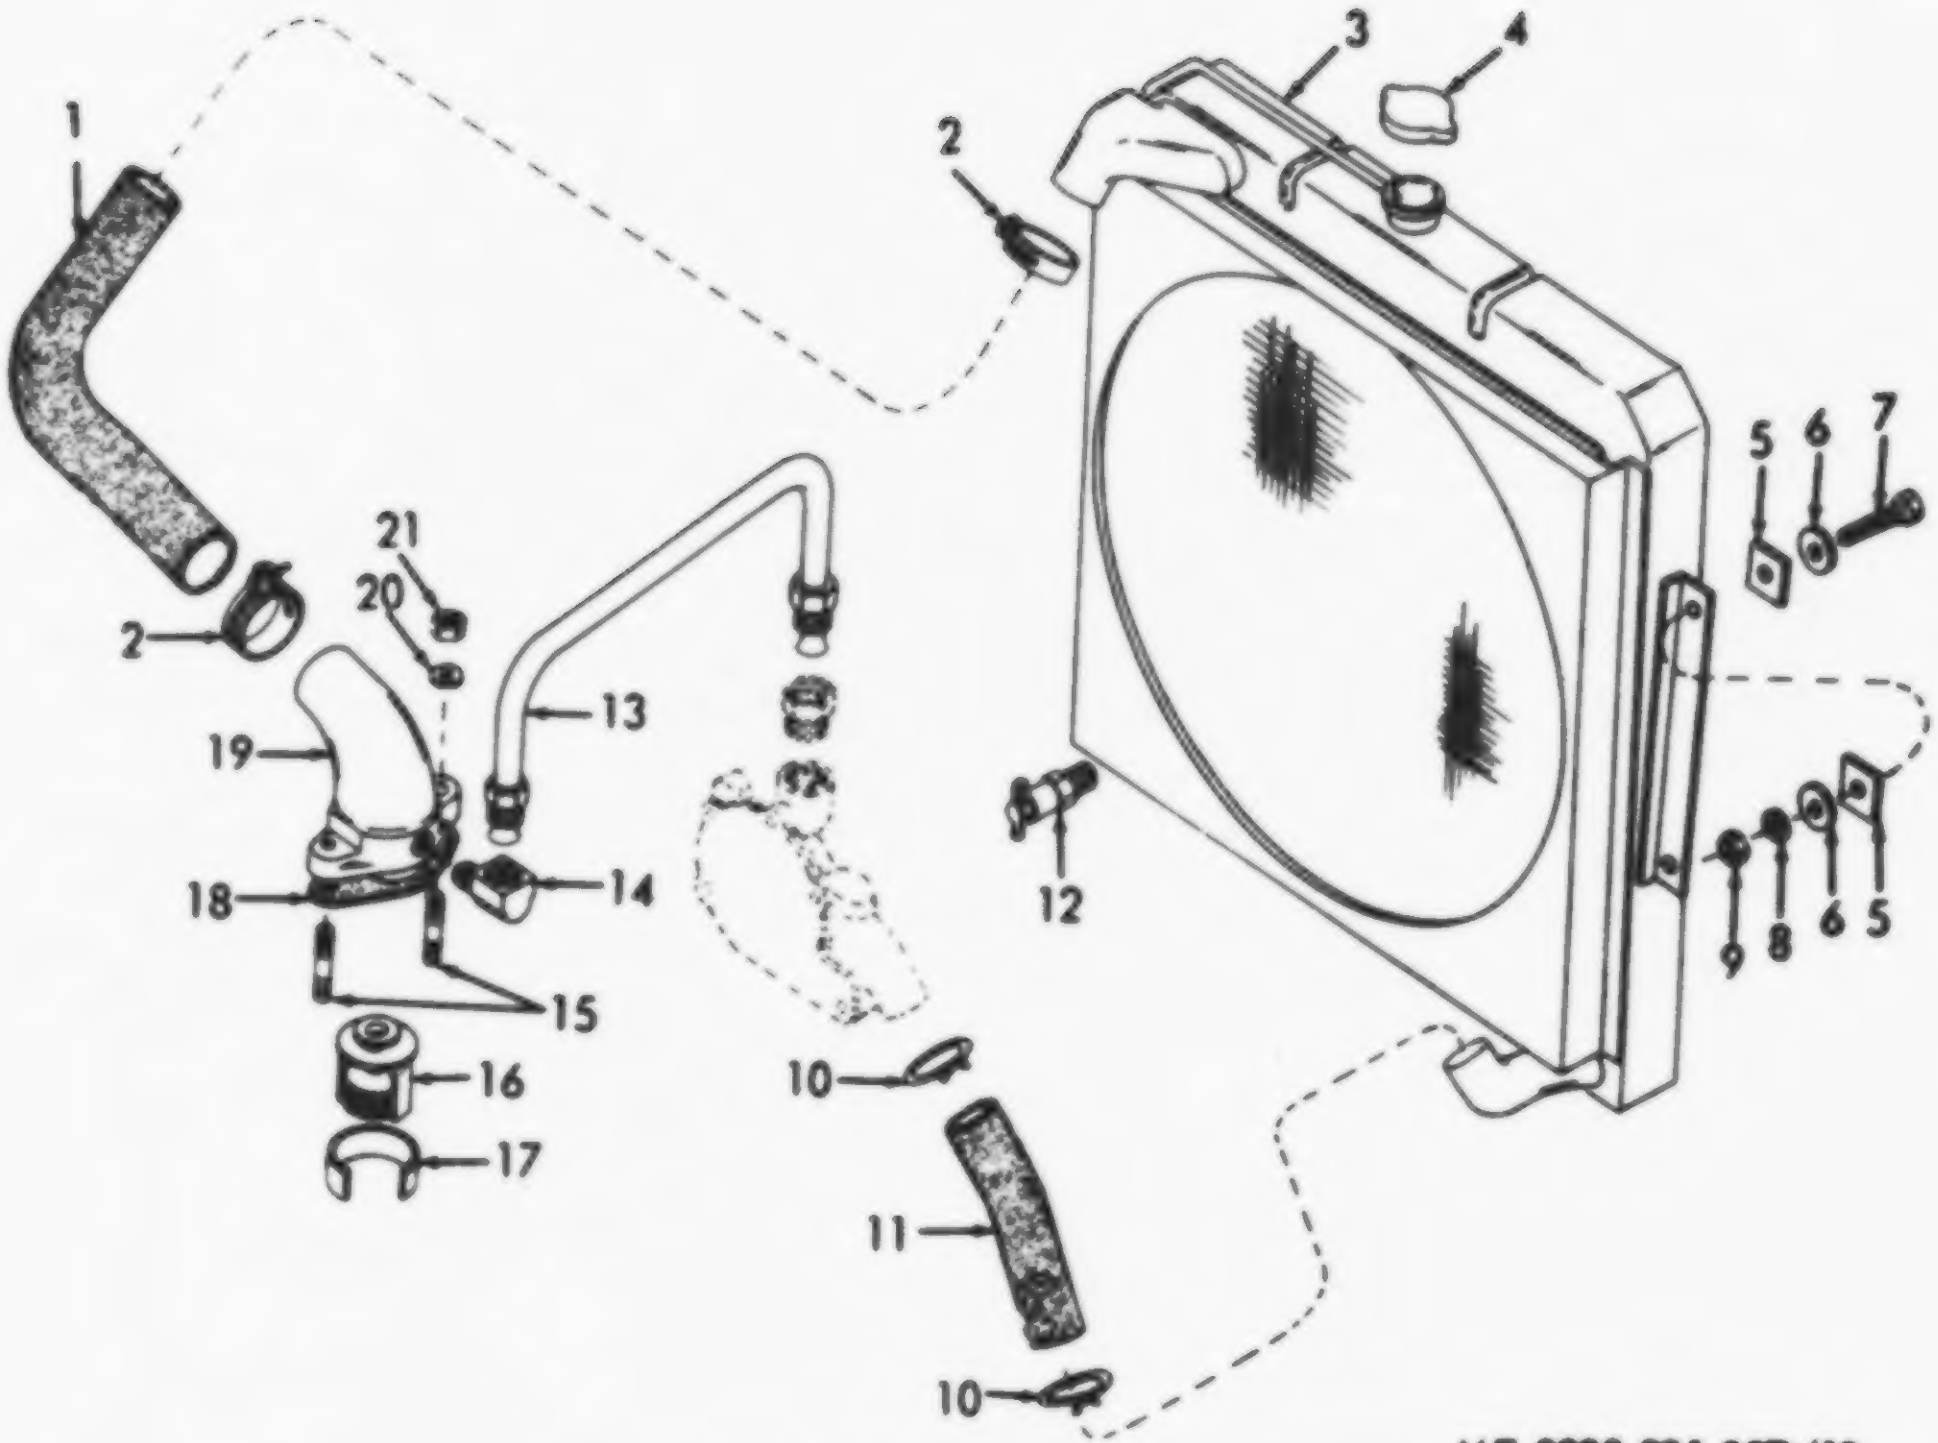
1
2
3
4
5
6
7
21
20
2
13
19
18
14
12
15
16
17
10
11
10
9
8
6
5
ME 3930-231-35P/18

Figure 18. Radiator, Hoses, Fittings.

INDEX TO PARTS, FIGURE 18

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0503	HOSE	12	0503	COCK
2	0503	CLAMP	13	0503	TUBE
3	0501	RADIATOR	14	0503	ELBOW
4	0501	CAP	15	0101	STUD
5	0501	PAD	16	0503	THERMOSTAT
6	0501	WASHER	17	0503	ADAPTER
7	0501	SCREW	18	0503	GASKET
8	0501	WASHER	19	0503	ELBOW
9	0501	NUT	20	0503	WASHER
10	0503	CLAMP	21	0503	NUT
11	0503	HOSE			

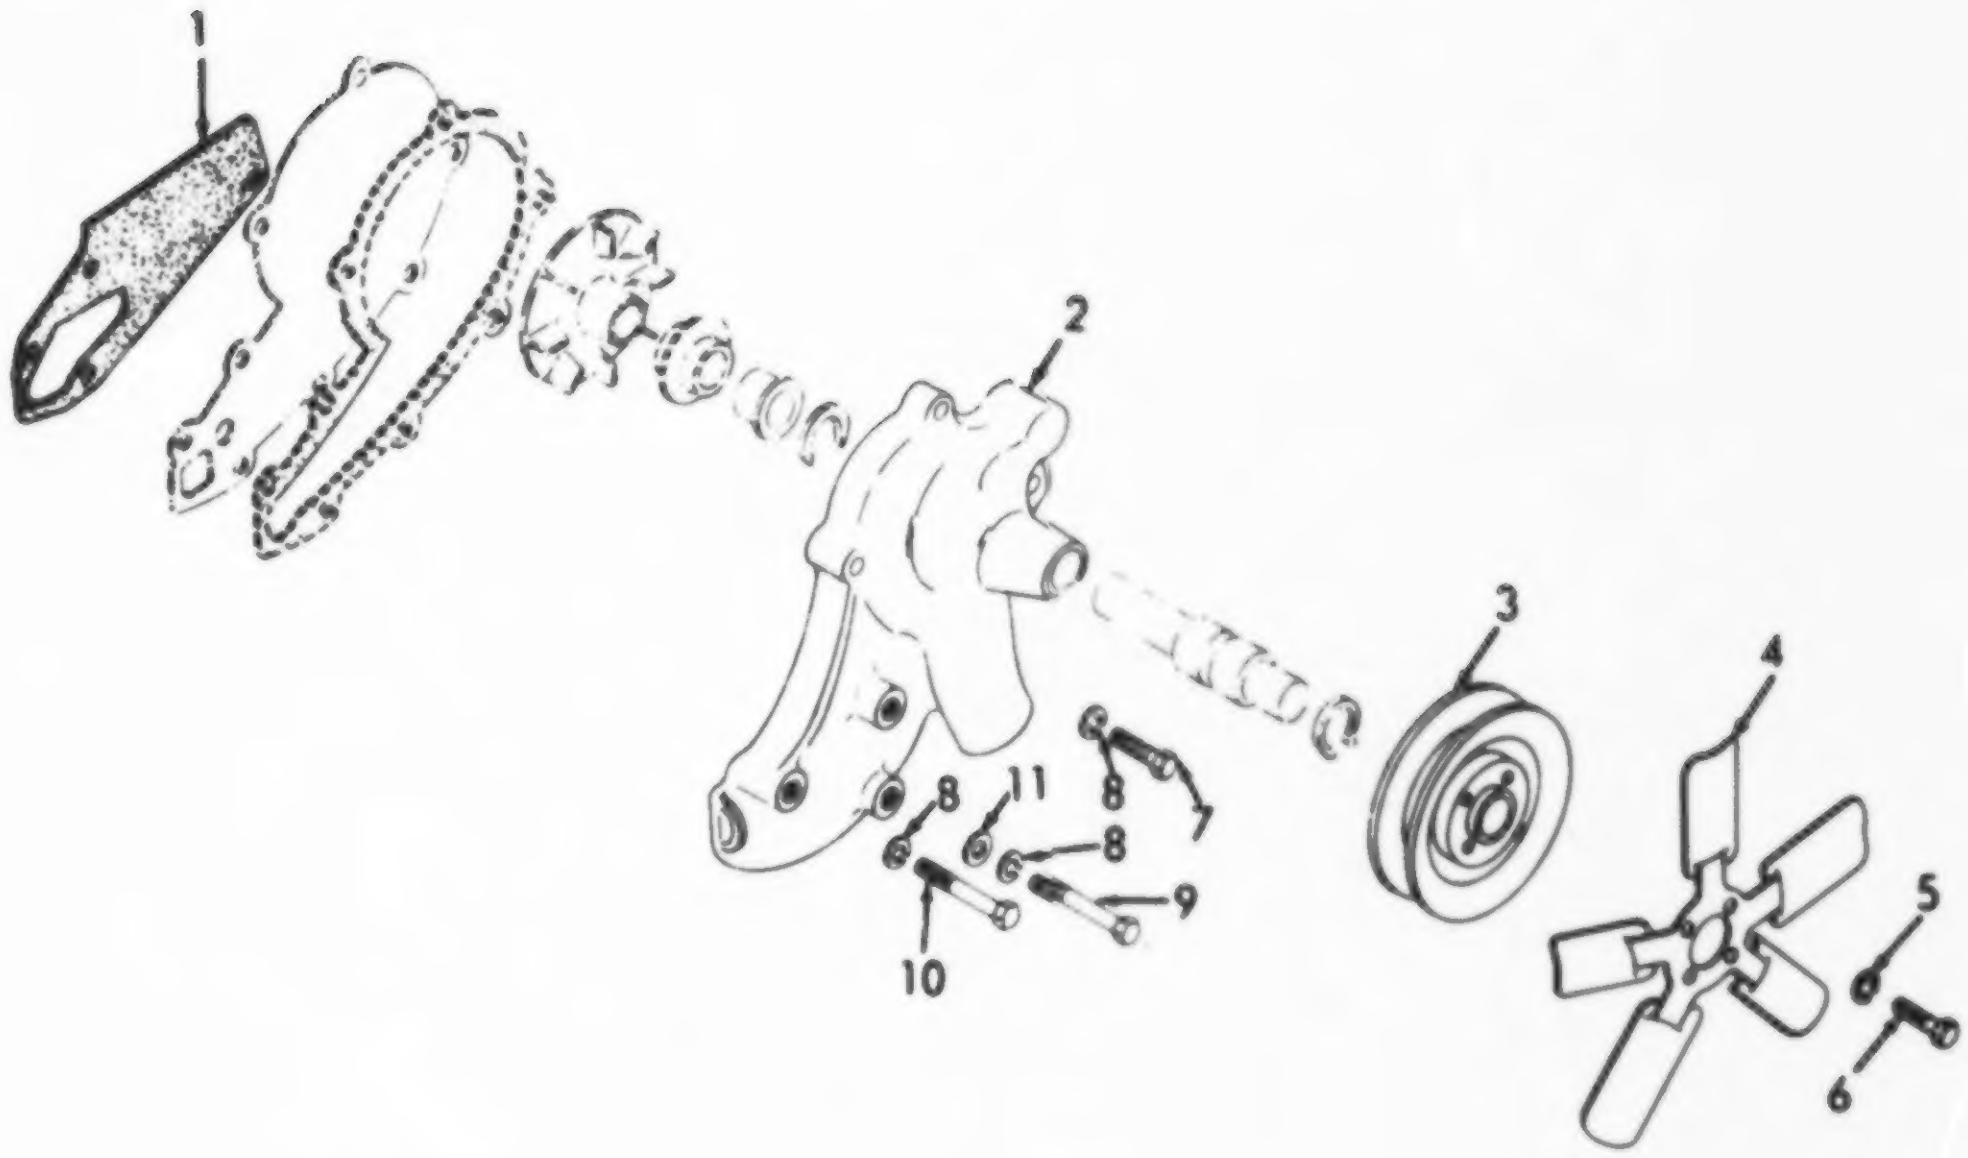

ME 3930-231-35P/19

Figure 19. Water Pump, Fan.

INDEX TO PARTS, FIGURE 19

Reference Number	Functional Group	Item Name
1	0504	GASKET
2	0504	BODY
3	0504	HUB
4	0505	BLADE
5	0505	WASHER
6	0505	BOLT
7	0504	BOLT
8	0504	WASHER
9	0504	SCREW
10	0504	SCREW
11	0504	WASHER

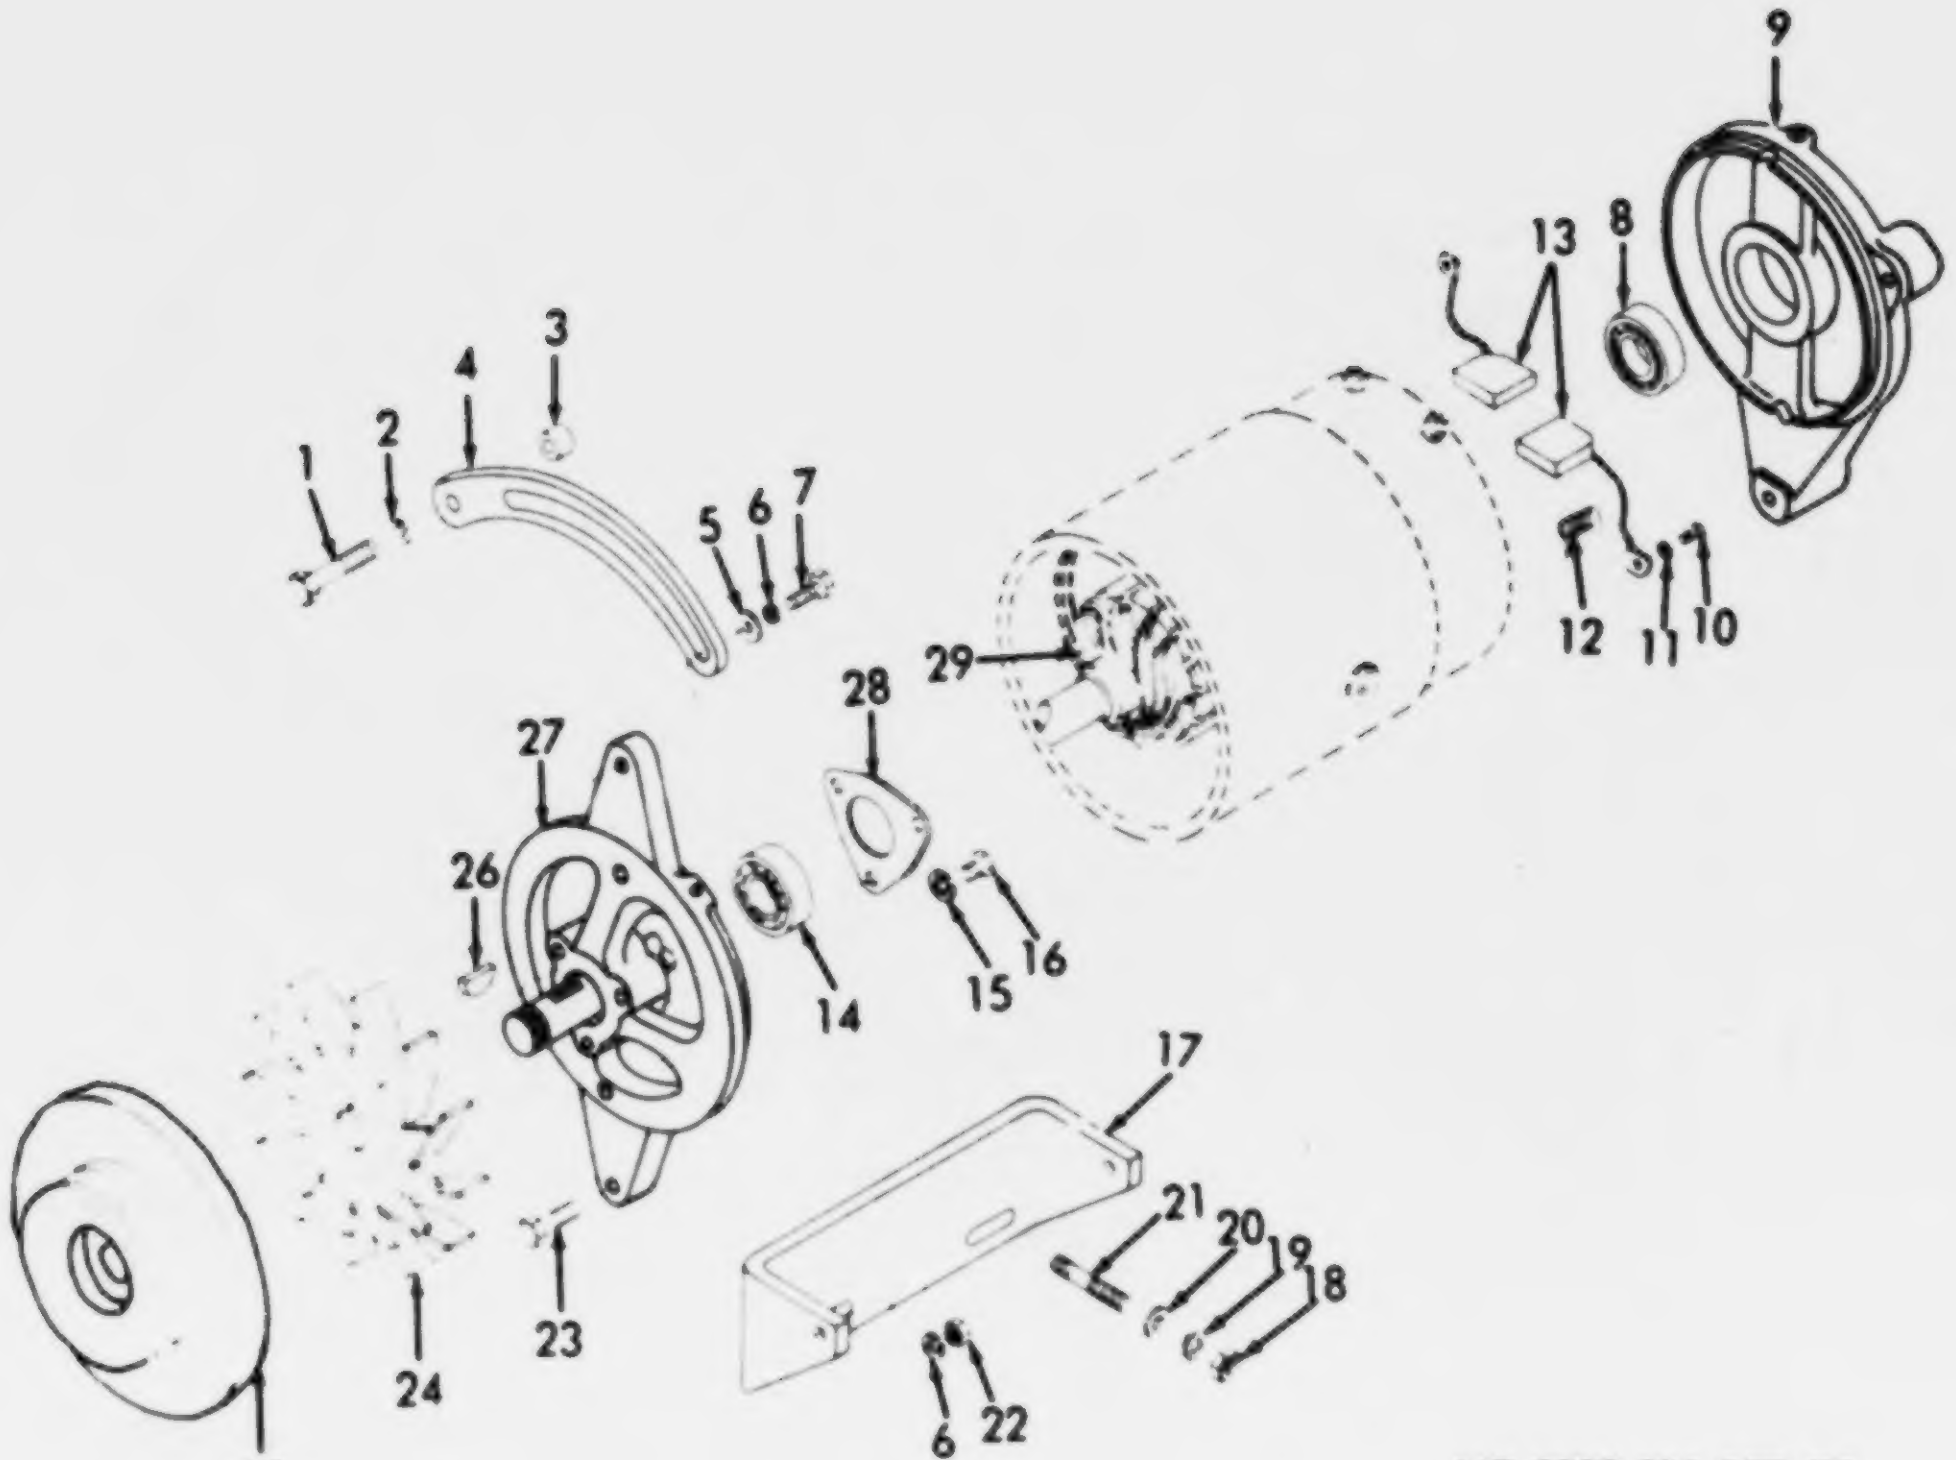
9
13
8
3
4
2
1
5
6
7
12
11
10
29
28
27
26
14
15
16
17
21
20
19
18
6
22
23
24
25

ME 3930-231-35P/20

Figure 20. Generator.

INDEX TO PARTS, FIGURE 20

Reference Number	Functional Group	Item Name
1	0601	SCREW
2	0601	WASHER
3	0601	SPACER
4	0601	STRAP
5	0601	WASHER
6	0601	WASHER
7	0601	BOLT
8	0601	BEARING
9	0601	FRAME
10	0601	SCREW
11	0601	WASHER
12	0601	SPRING
13	0601	BRUSH
14	0601	BEARING
15	0601	WASHER
16	0601	SCREW
17	0601	BRACKET
18	0601	NUT
19	0601	WASHER
20	0601	WASHER
21	0601	STUD
22	0601	NUT
23	0601	BOLT
24	0601	FAN
25	0601	PULLEY
26	0601	KEY
27	0601	END BELL
28	0601	PLATE
29	0601	ARMATURE

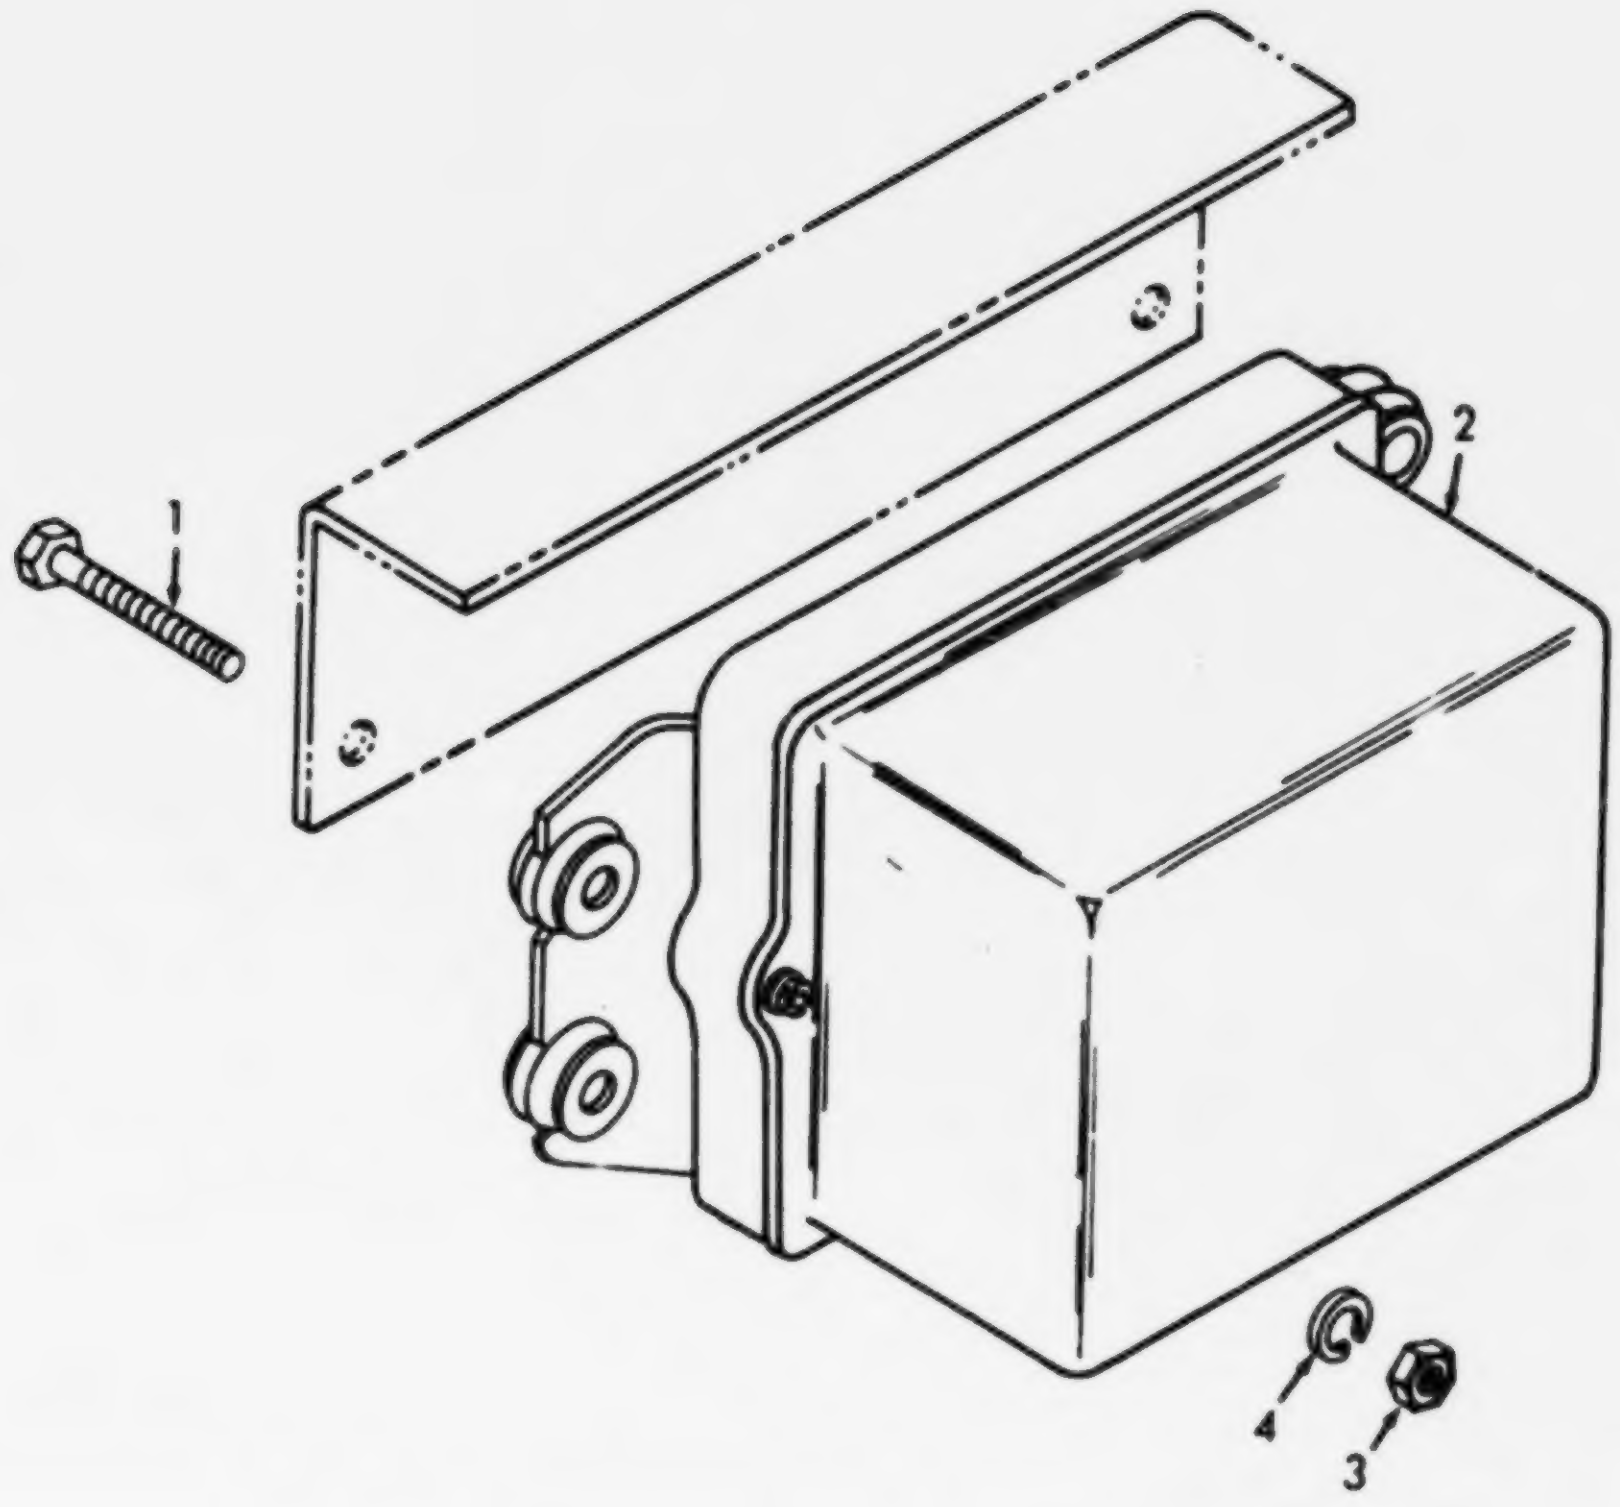

ME 3930-231-35P/21

Figure 21. Voltage Regulator.

INDEX TO PARTS, FIGURE 21

Reference Number	Functional Group	Item Name
1	0602	SCREW
2	0602	REGULATOR
3	0602	NUT
4	0602	WASHER

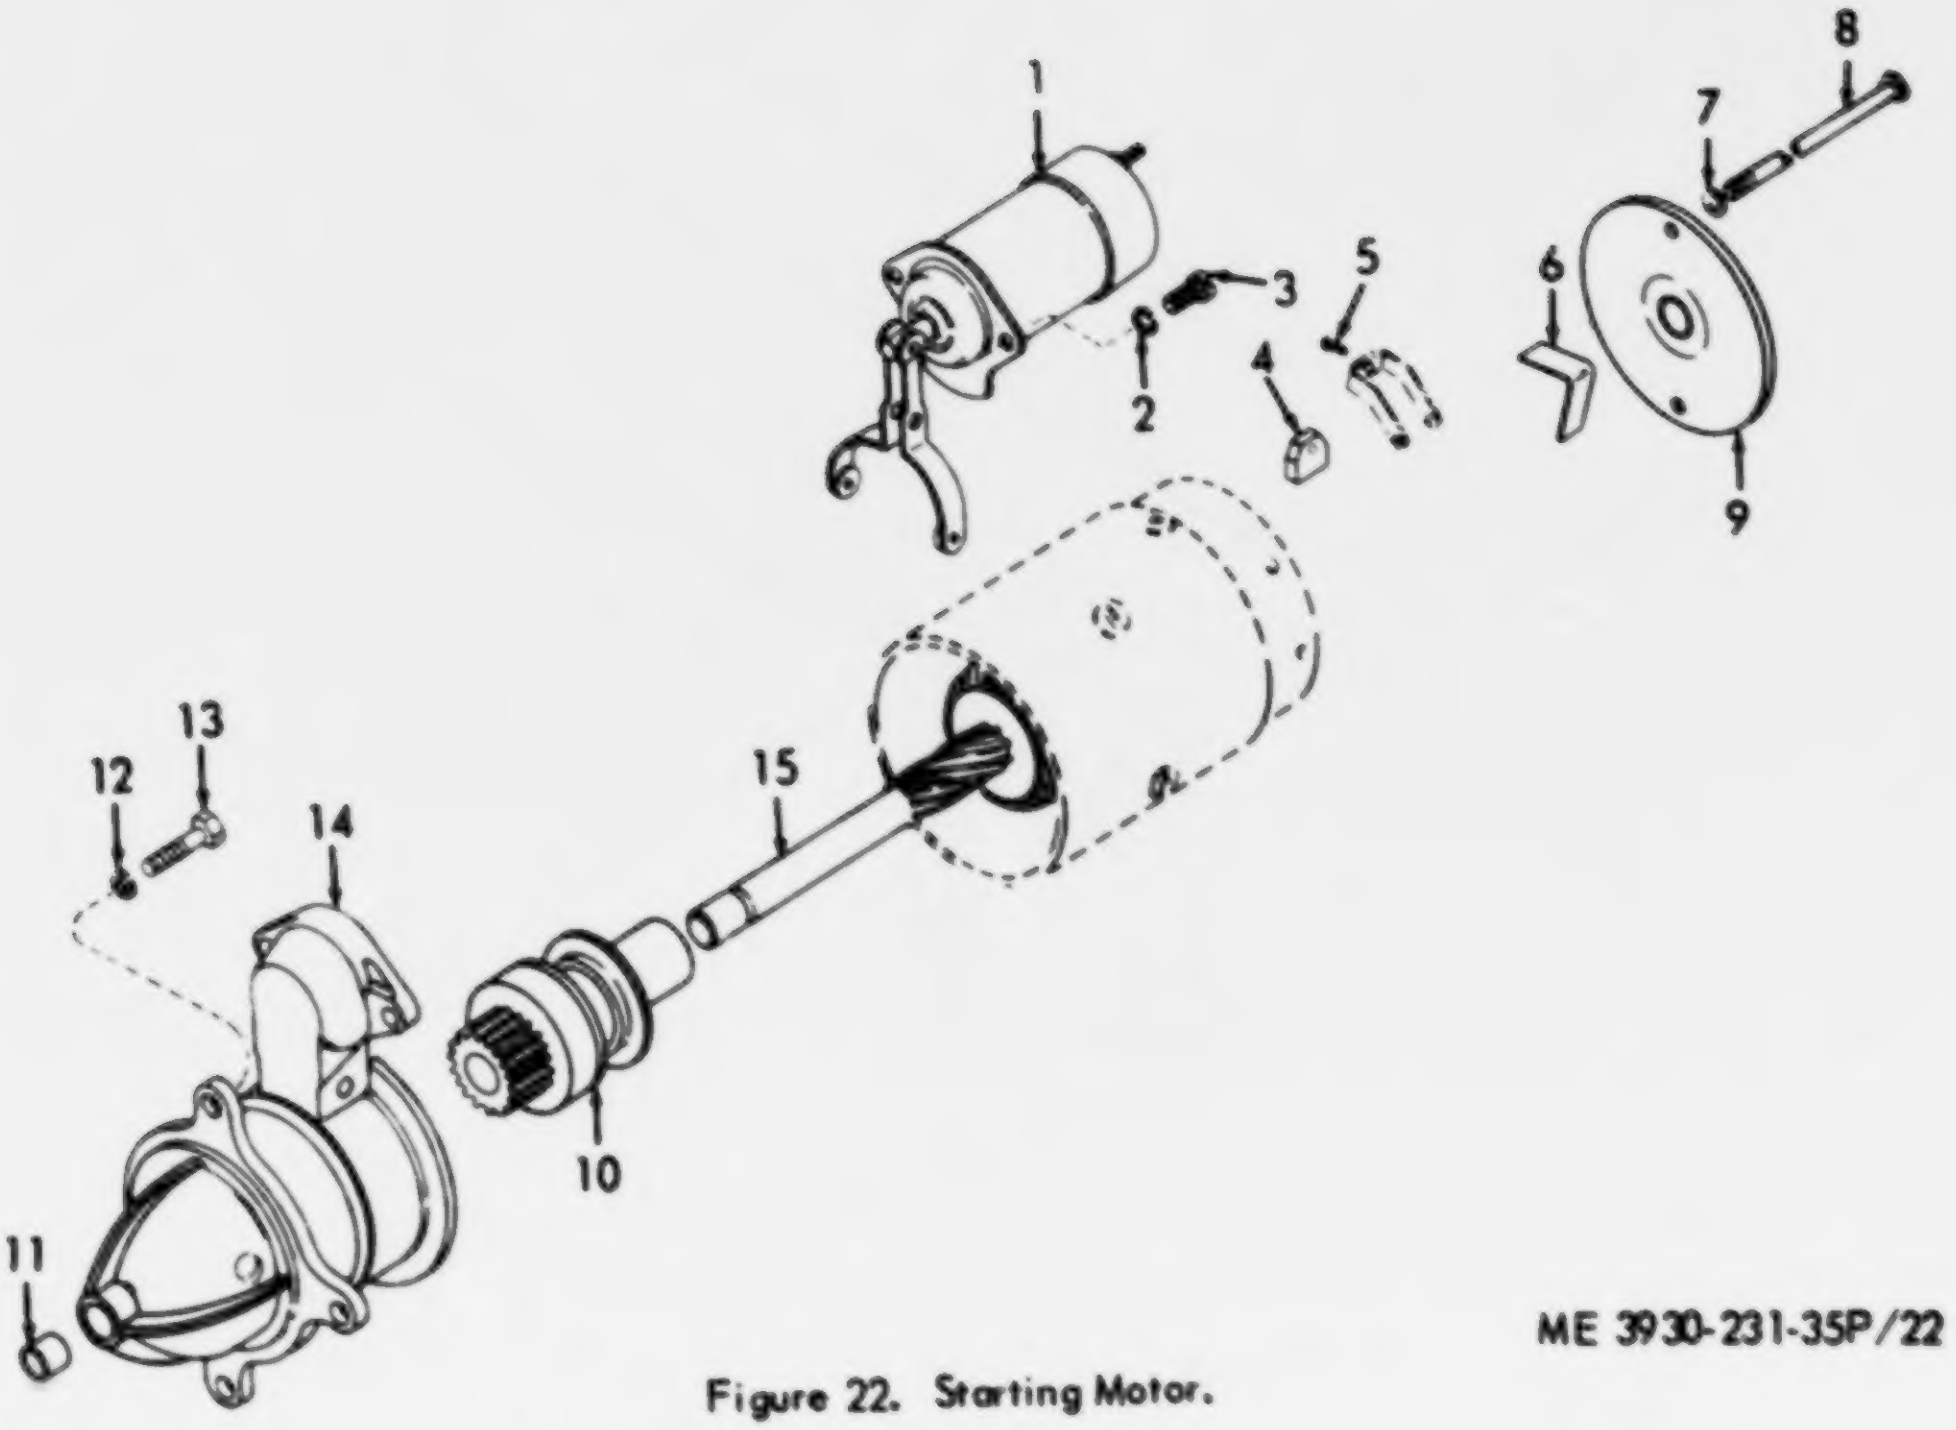
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
ME 3930-231-35P/22

Figure 22. Starting Motor.

INDEX TO PARTS, FIGURE 22

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0603	RELAY	9	0603	END
2	0603	WASHER	10	0603	DRIVE
3	0603	SCREW	11	0603	BEARING
4	0603	BRUSH	12	0603	WASHER
5	0603	SCREW	13	0603	SCREW
6	0603	SPRING	14	0603	HOUSING
7	0603	WASHER	15	0603	ARMATURE
8	0603	BOLT			

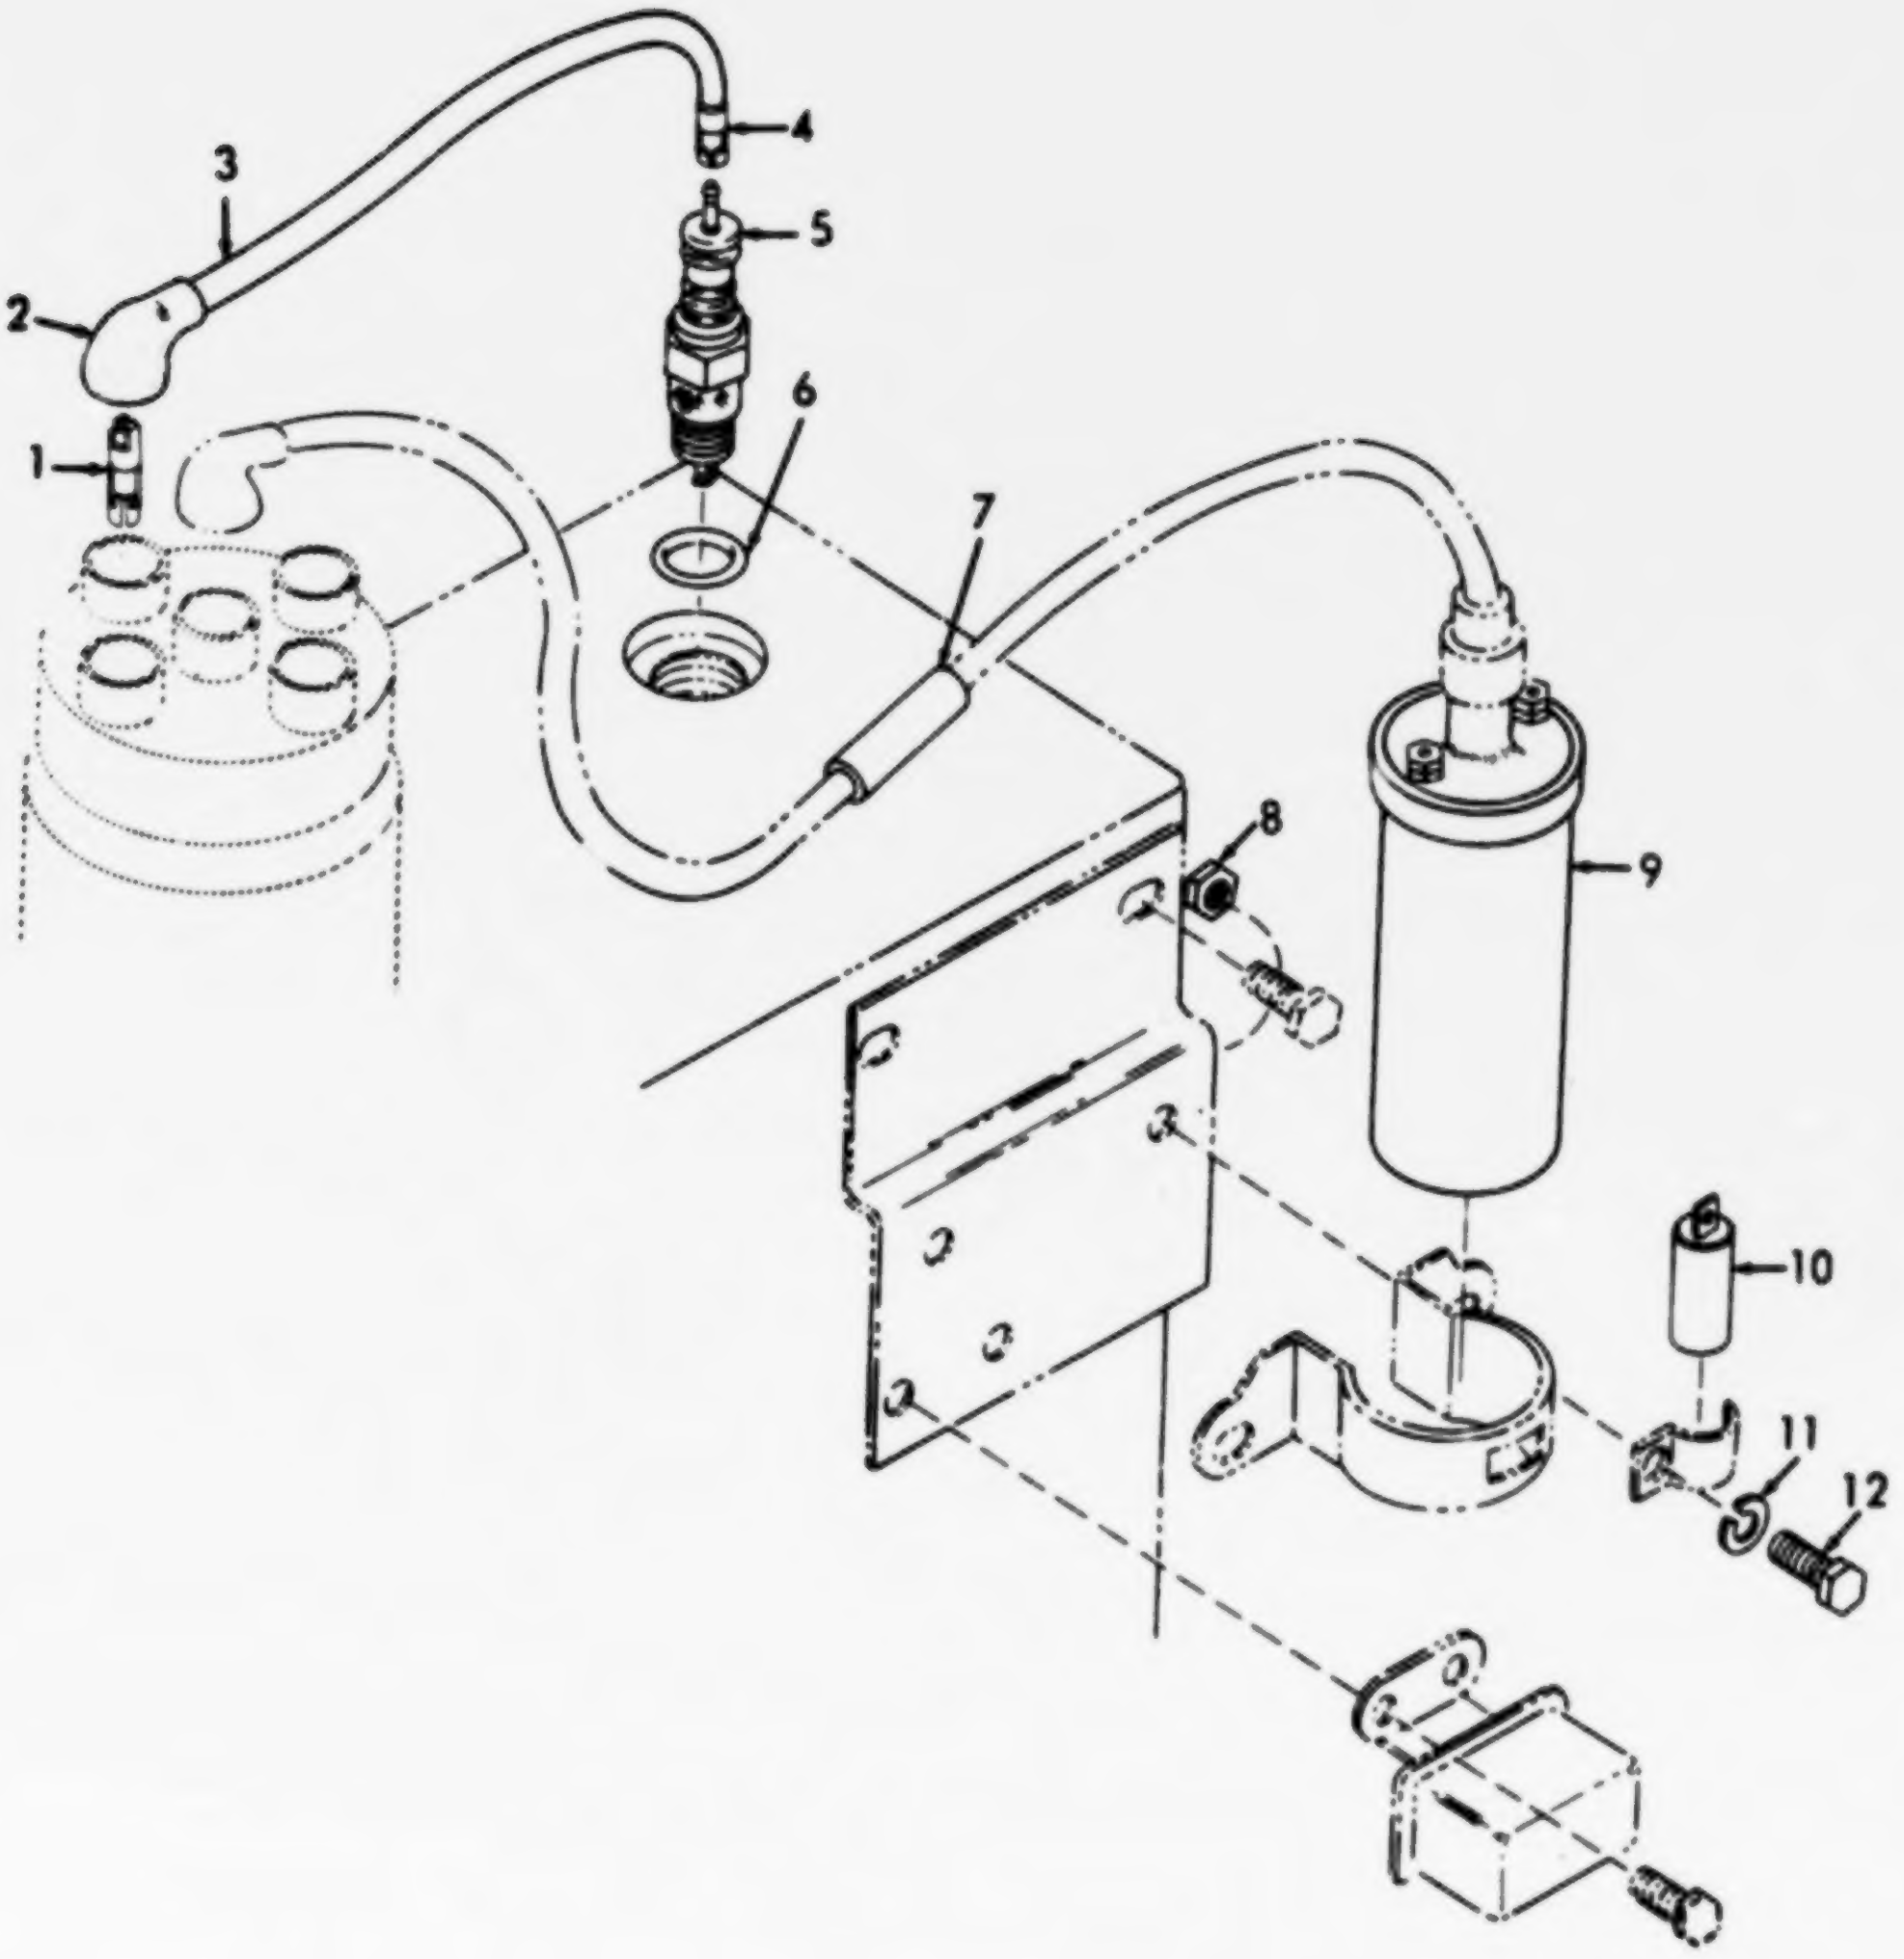

Figure 23. Ignition Components.

INDEX TO PARTS, FIGURE 23

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0605	FERRULE	7	0605	SUPPRESSOR
2	0605	NIPPLE	8	0605	NUT
3	0605	WIRE	9	0605	COIL
4	0605	CLIP	10	0615	CAPACITOR
5	0605	SPARK PLUG	11	0605	WASHER
6	0605	GASKET	12	0605	BOLT

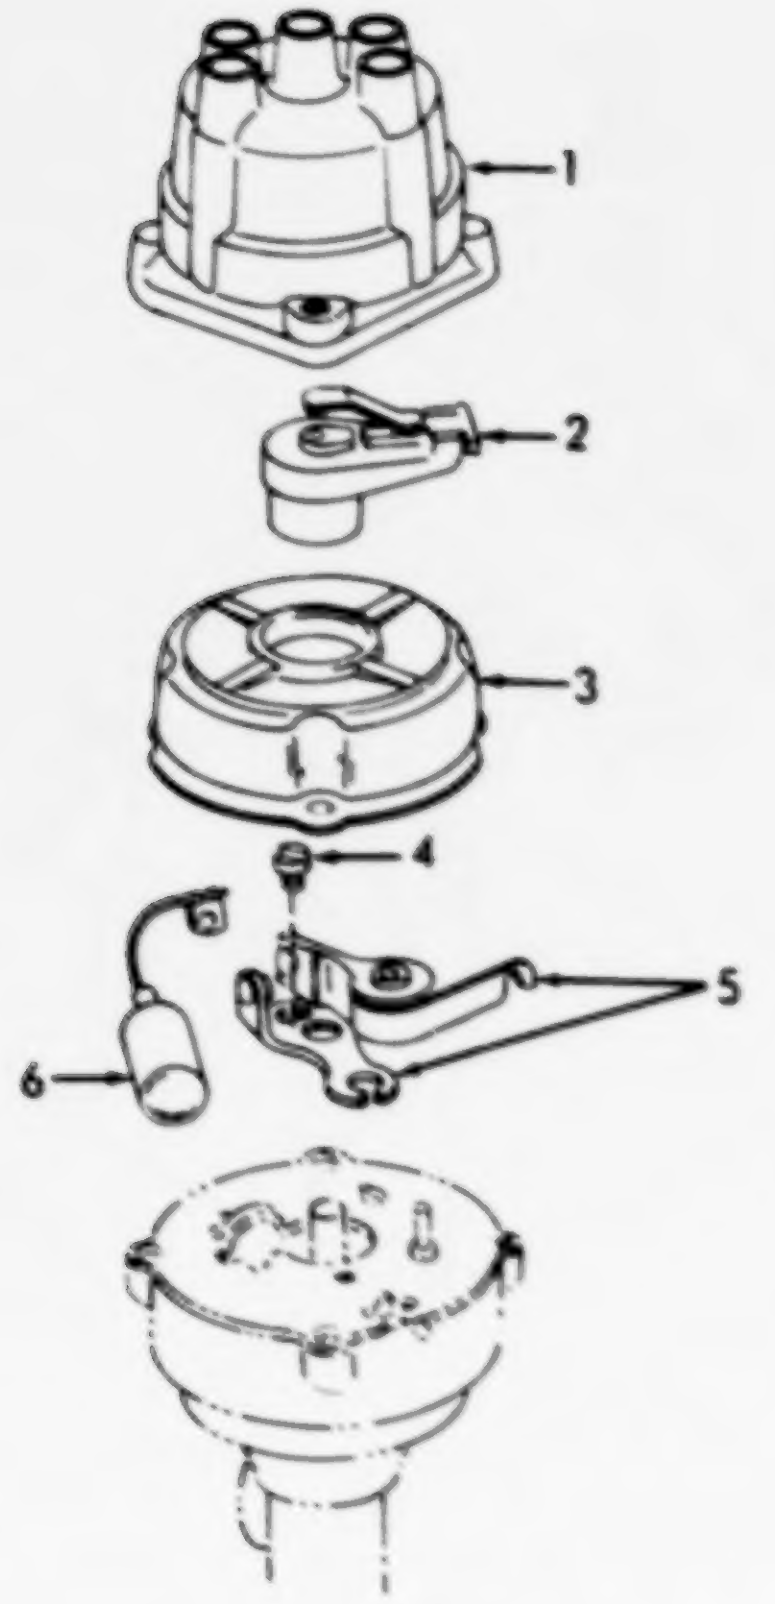
1
2
3
4
5
6
ME 3930-231-35P/24

Figure 24. Distributor.

INDEX TO PARTS, FIGURE 24

Reference Number	Functional Group	Item Name
1	0605	CAP
2	0605	ROTOR
3	0605	SEAL
4	0605	SCREW
5	0605	CONTACT
6	0605	CAPACITOR

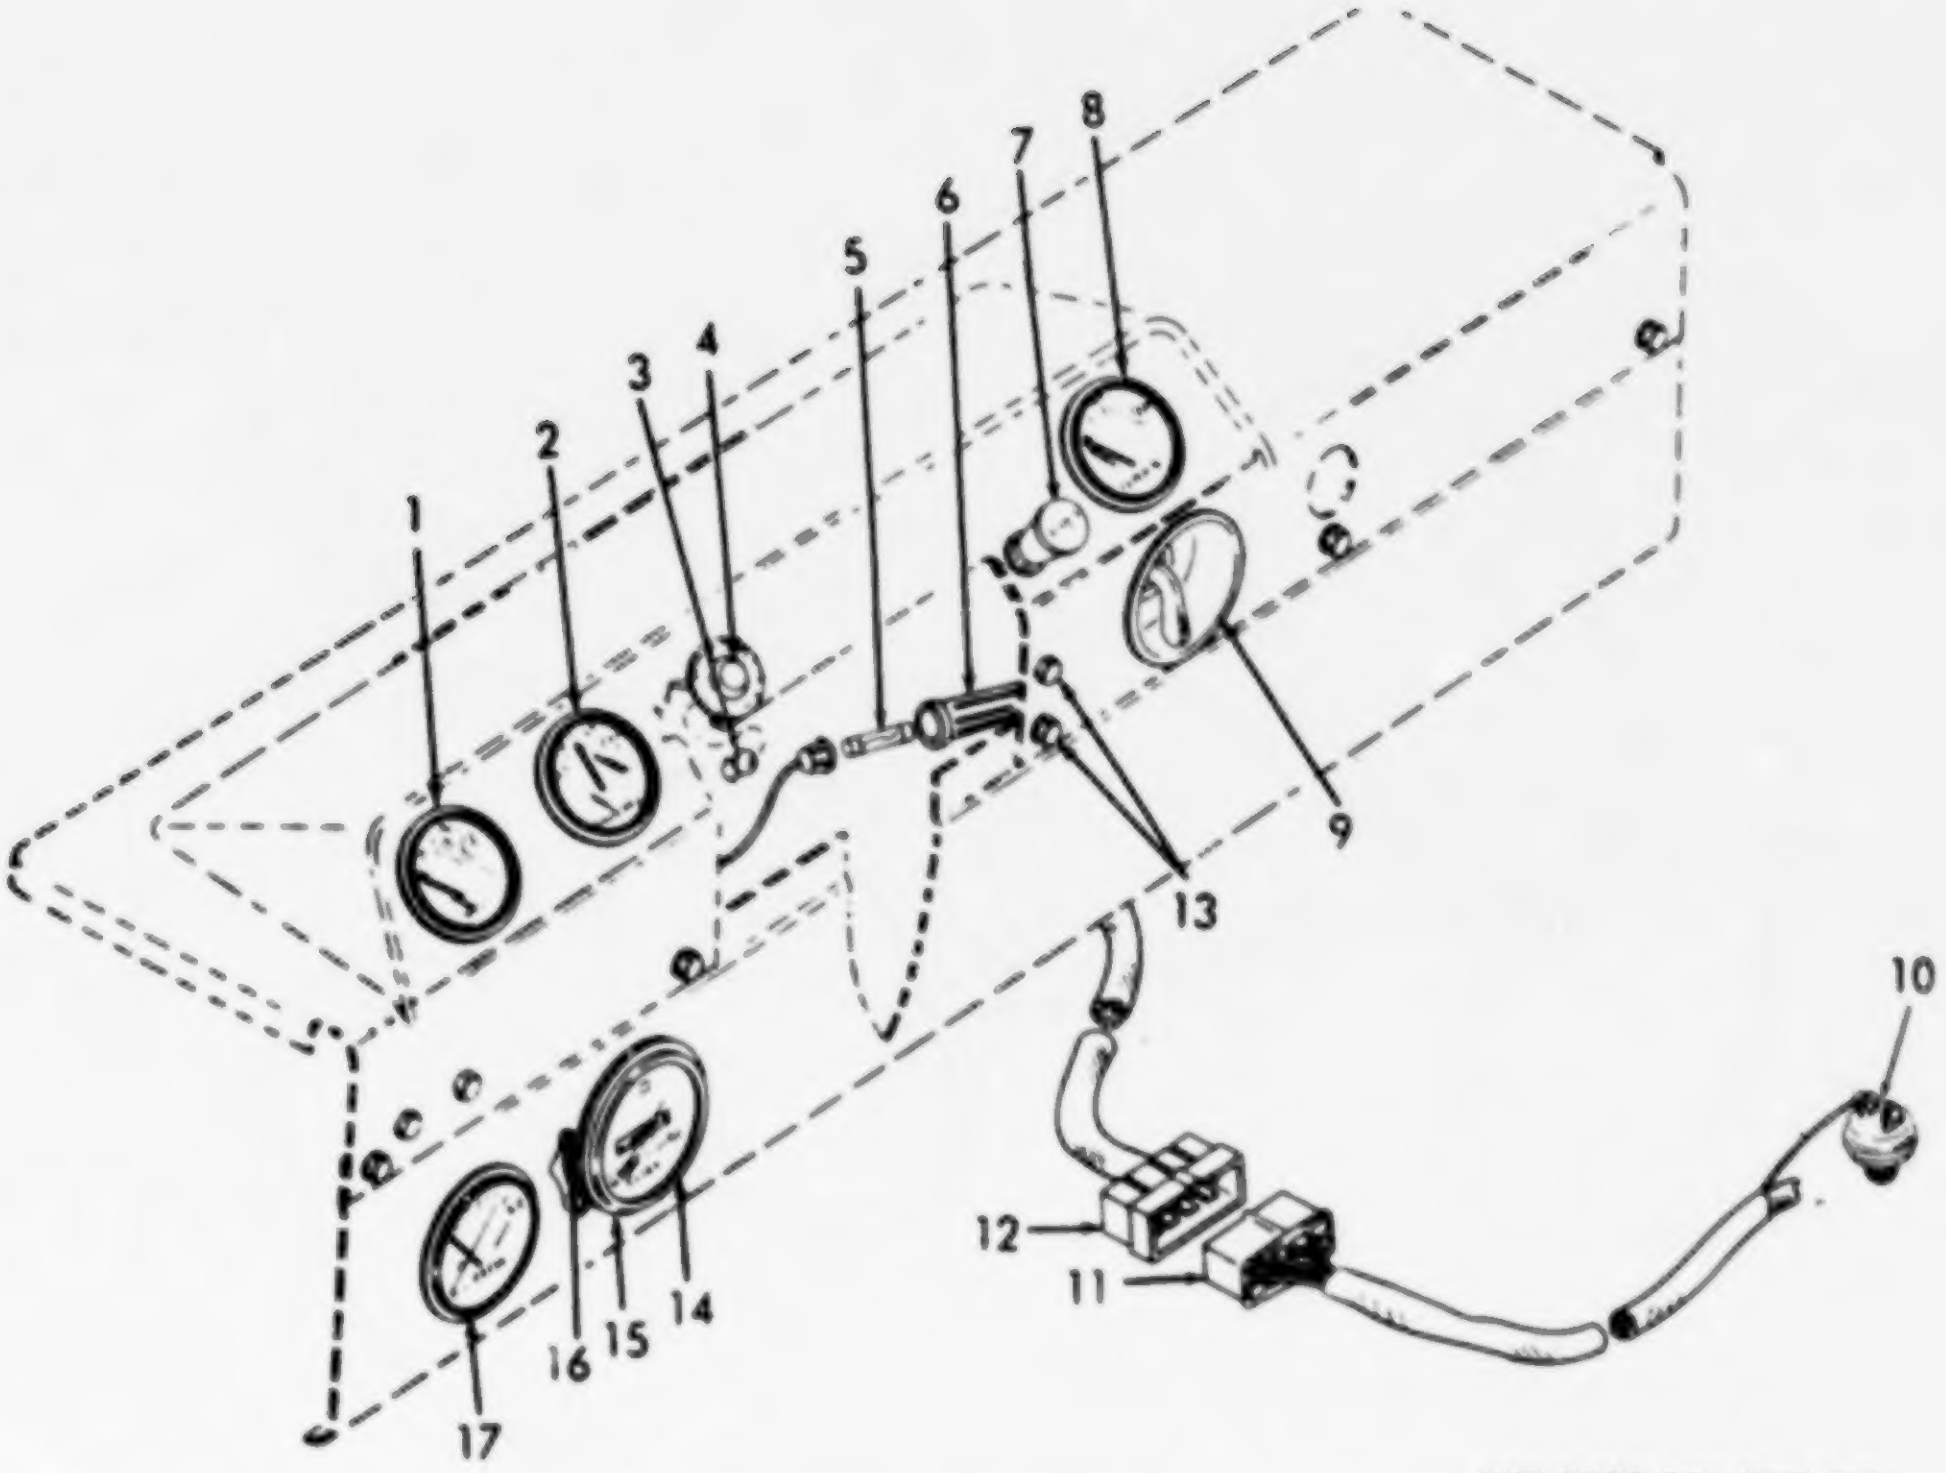
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
ME 3930-231-35P/25

Figure 25. Instruments.

INDEX TO PARTS, FIGURE 25

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0607	INDICATOR	10	0610	SWITCH
2	0607	AMMETER	11	0607	HARNESS
3	0607	LAMP	12	0607	HARNESS
4	0607	LIGHT	13	0607	BOLT
5	0607	FUSE	14	0607	METER
6	0607	FUSEHOLDER	15	0607	GASKET
7	0607	SWITCH	16	0607	SPACER
8	0607	INDICATOR	17	0607	GAGE
9	0607	SWITCH			

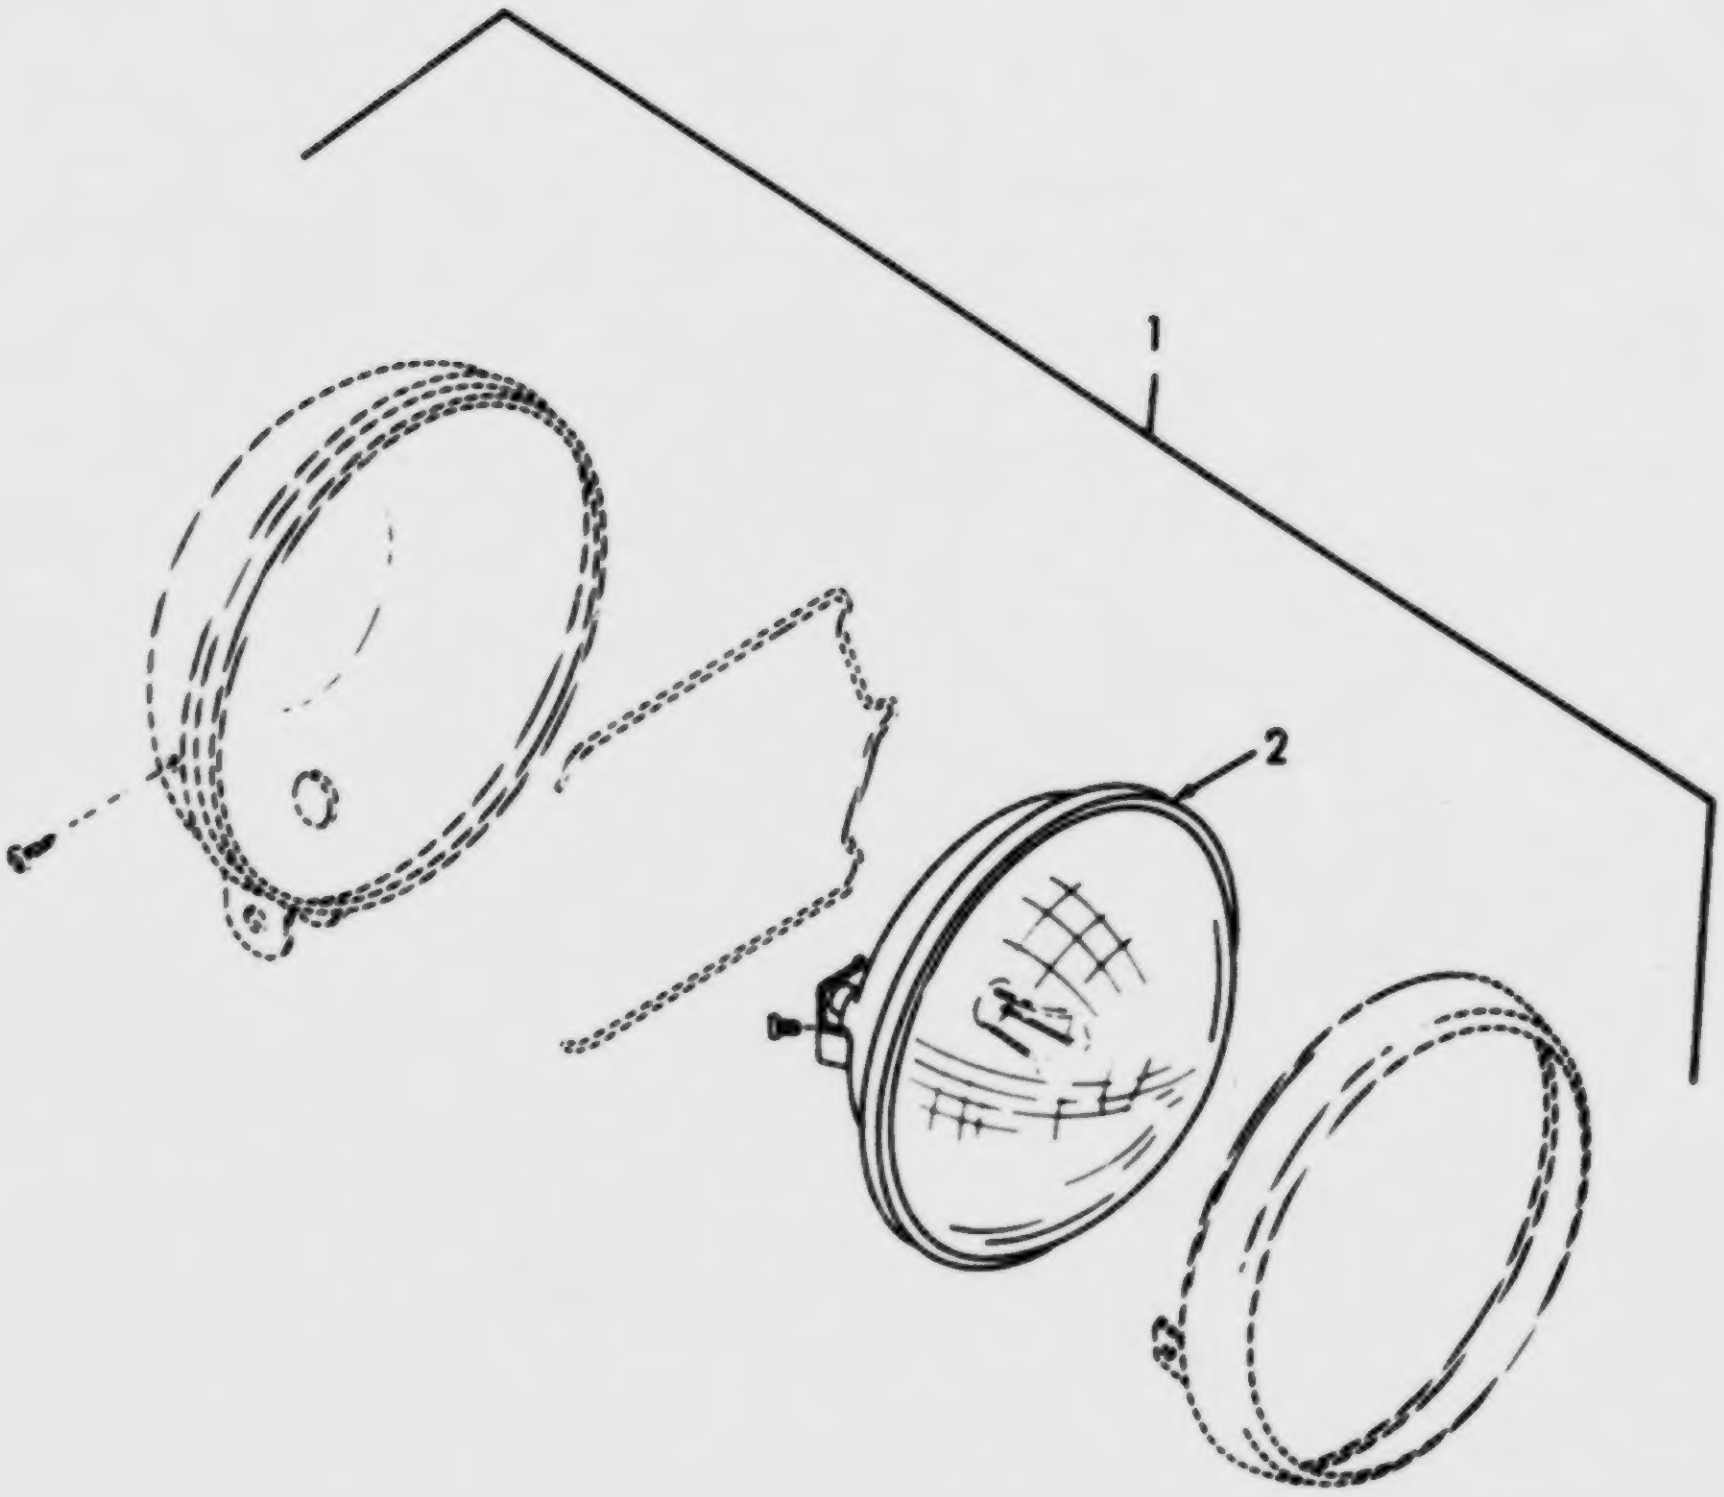
1
2
ME 3930-231-35P/26

Figure 26. Headlights.

INDEX TO PARTS, FIGURE 26

Reference Number	Functional Group	Item Name
1	0609	HEADLAMP
2	0609	LAMP

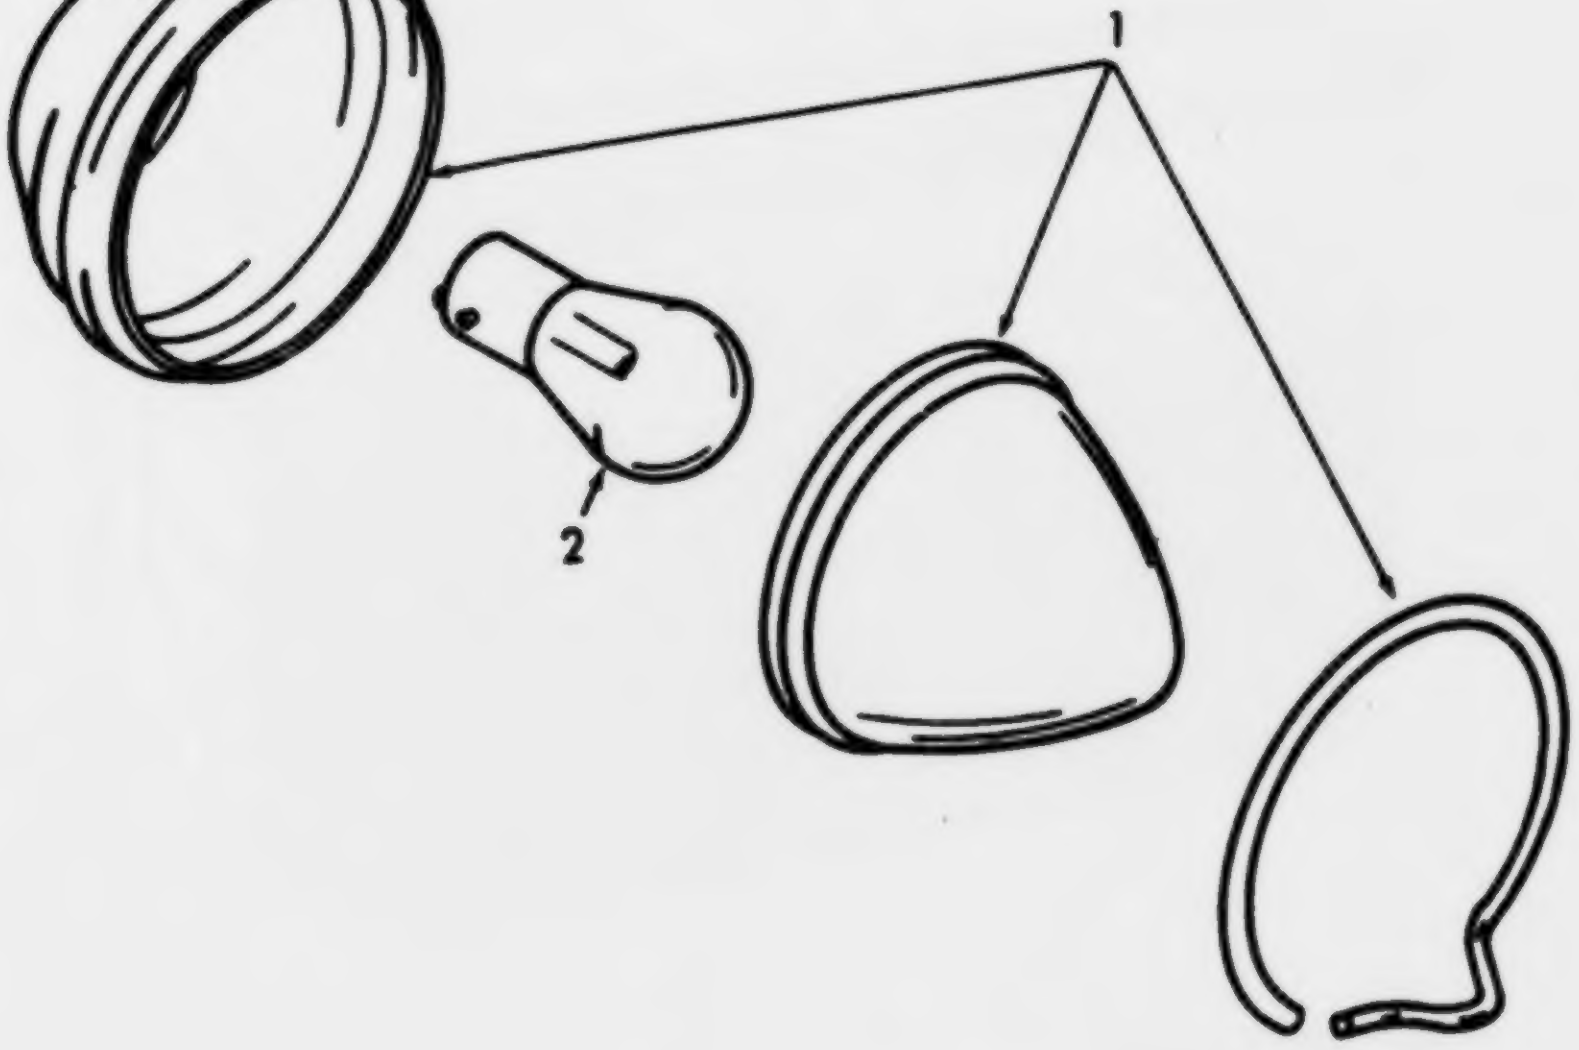

ME 3930-231-35P/27

Figure 27. Taillights.

INDEX TO PARTS, FIGURE 27

Reference Number	Functional Group	Item Name
1	0609	LIGHT
2	0609	LAMP

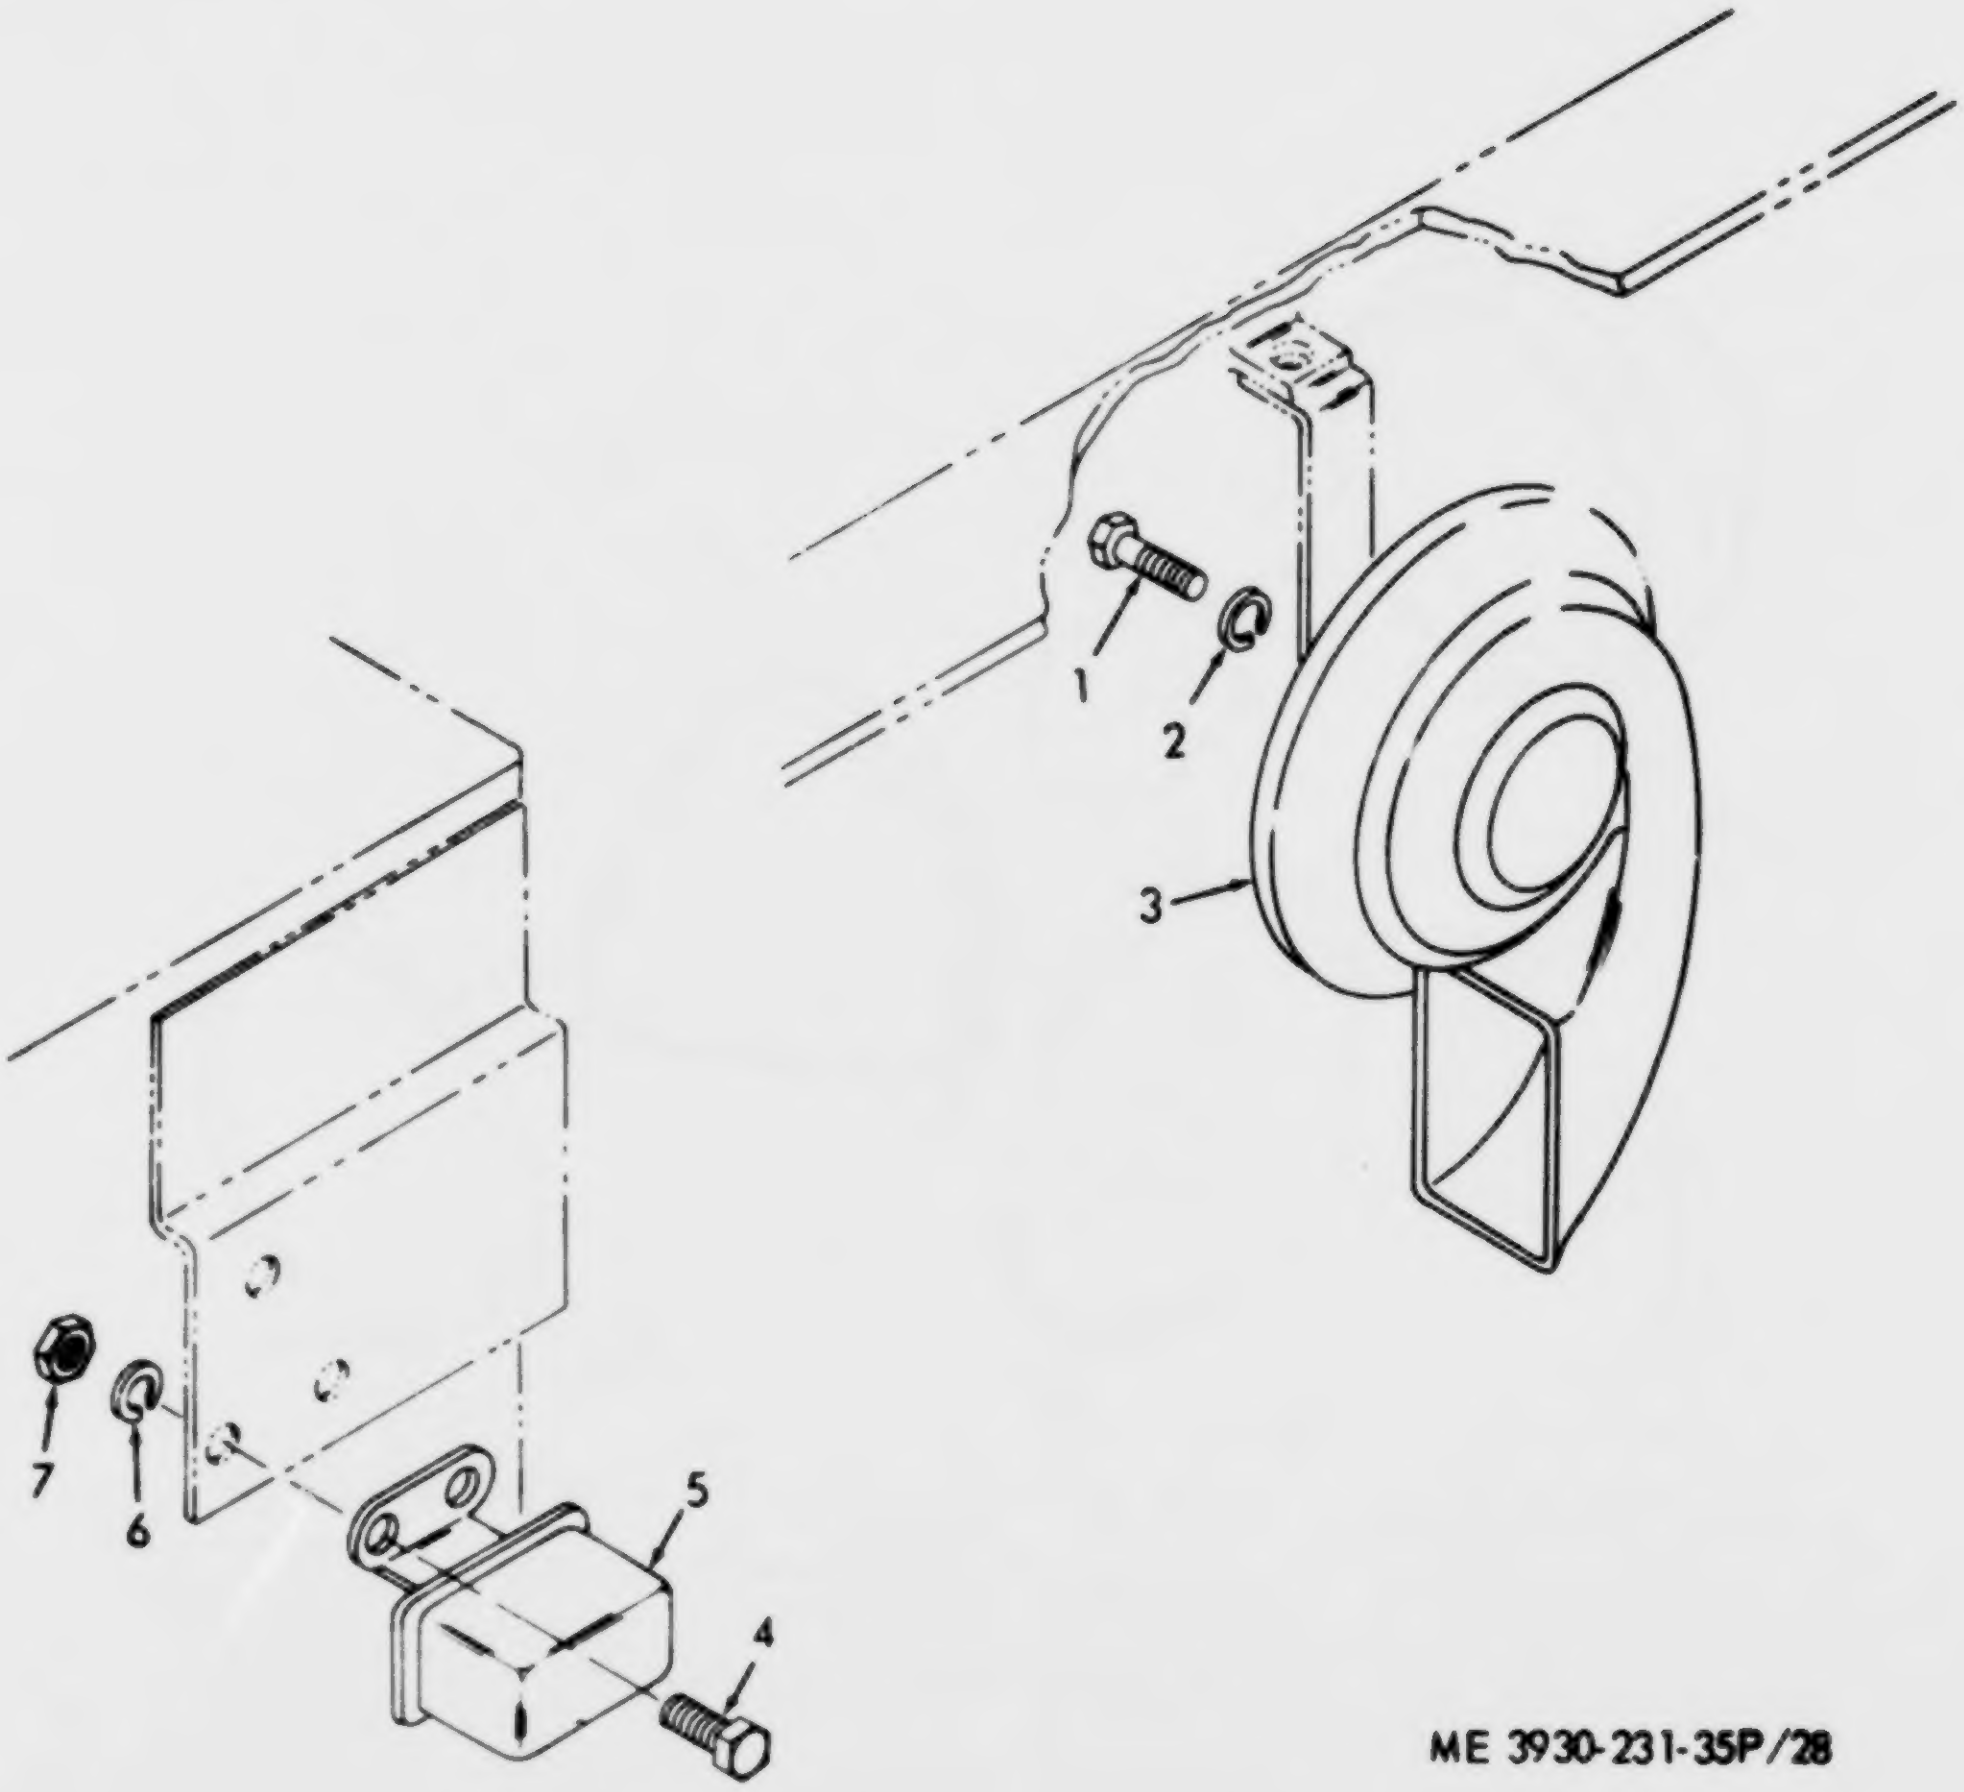
1
2
3
4
5
6
7
ME 3930-231-35P/28

Figure 28. Horn, Relay.

INDEX TO PARTS, FIGURE 28

Reference Number	Functional Group	Item Name
1	0611	BOLT
2	0611	WASHER
3	0611	HORN
4	0611	SCREW
5	0611	RELAY
6	0611	WASHER
7	0611	NUT

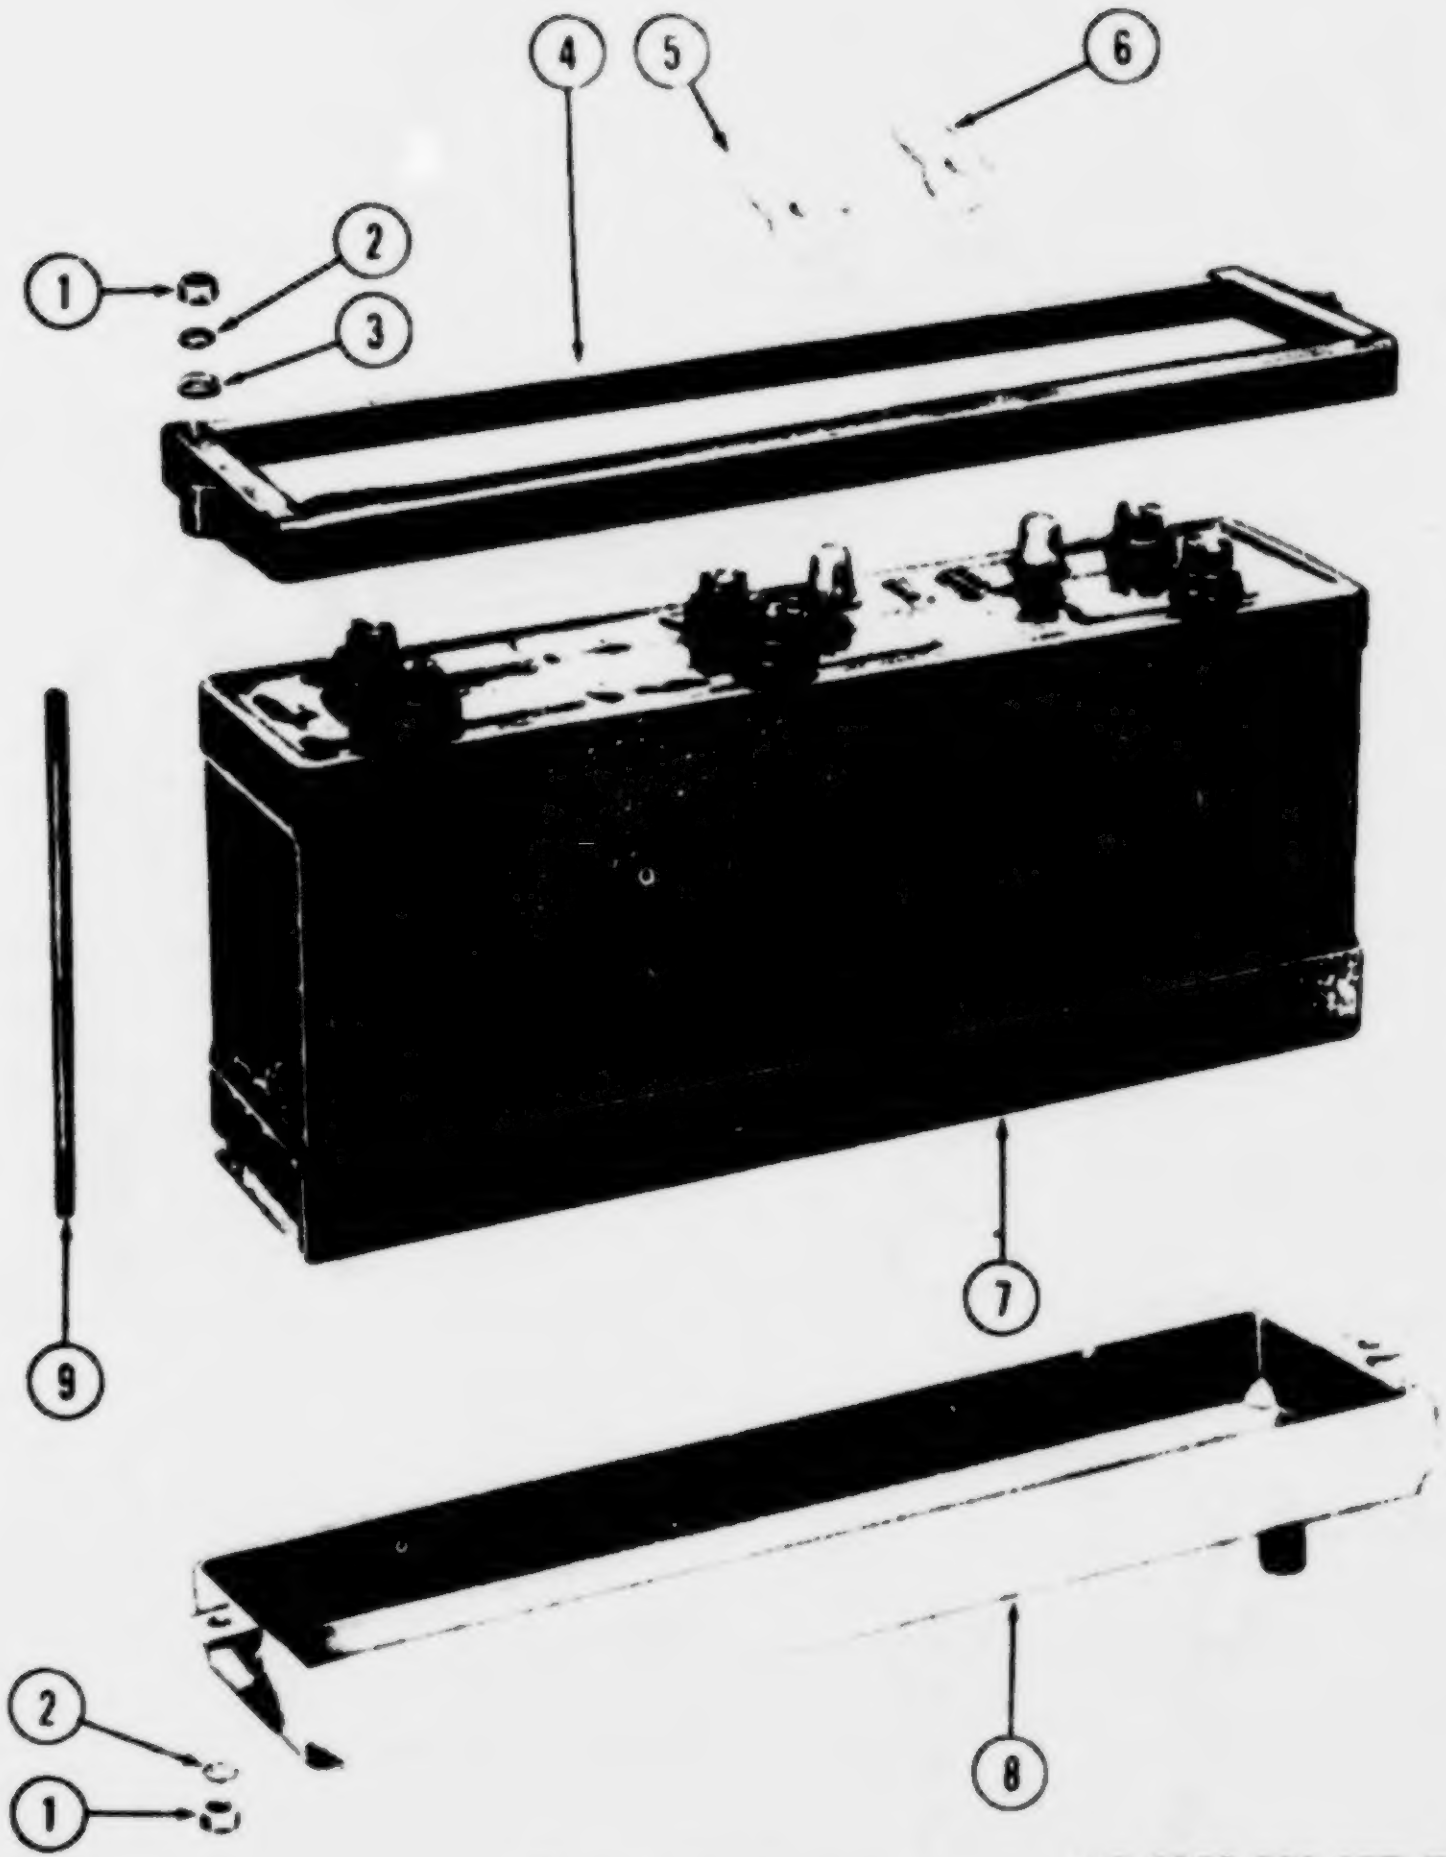

Figure 29. Battery. ME 3930-231-35P/29

INDEX TO PARTS, FIGURE 29

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0612	NUT	6	0612	CABLE
2	0612	WASHER	7	0612	BATTERY
3	0612	WASHER	8	0612	TRAY
4	0612	CLAMP	9	0612	STUD
5	0612	CABLE			

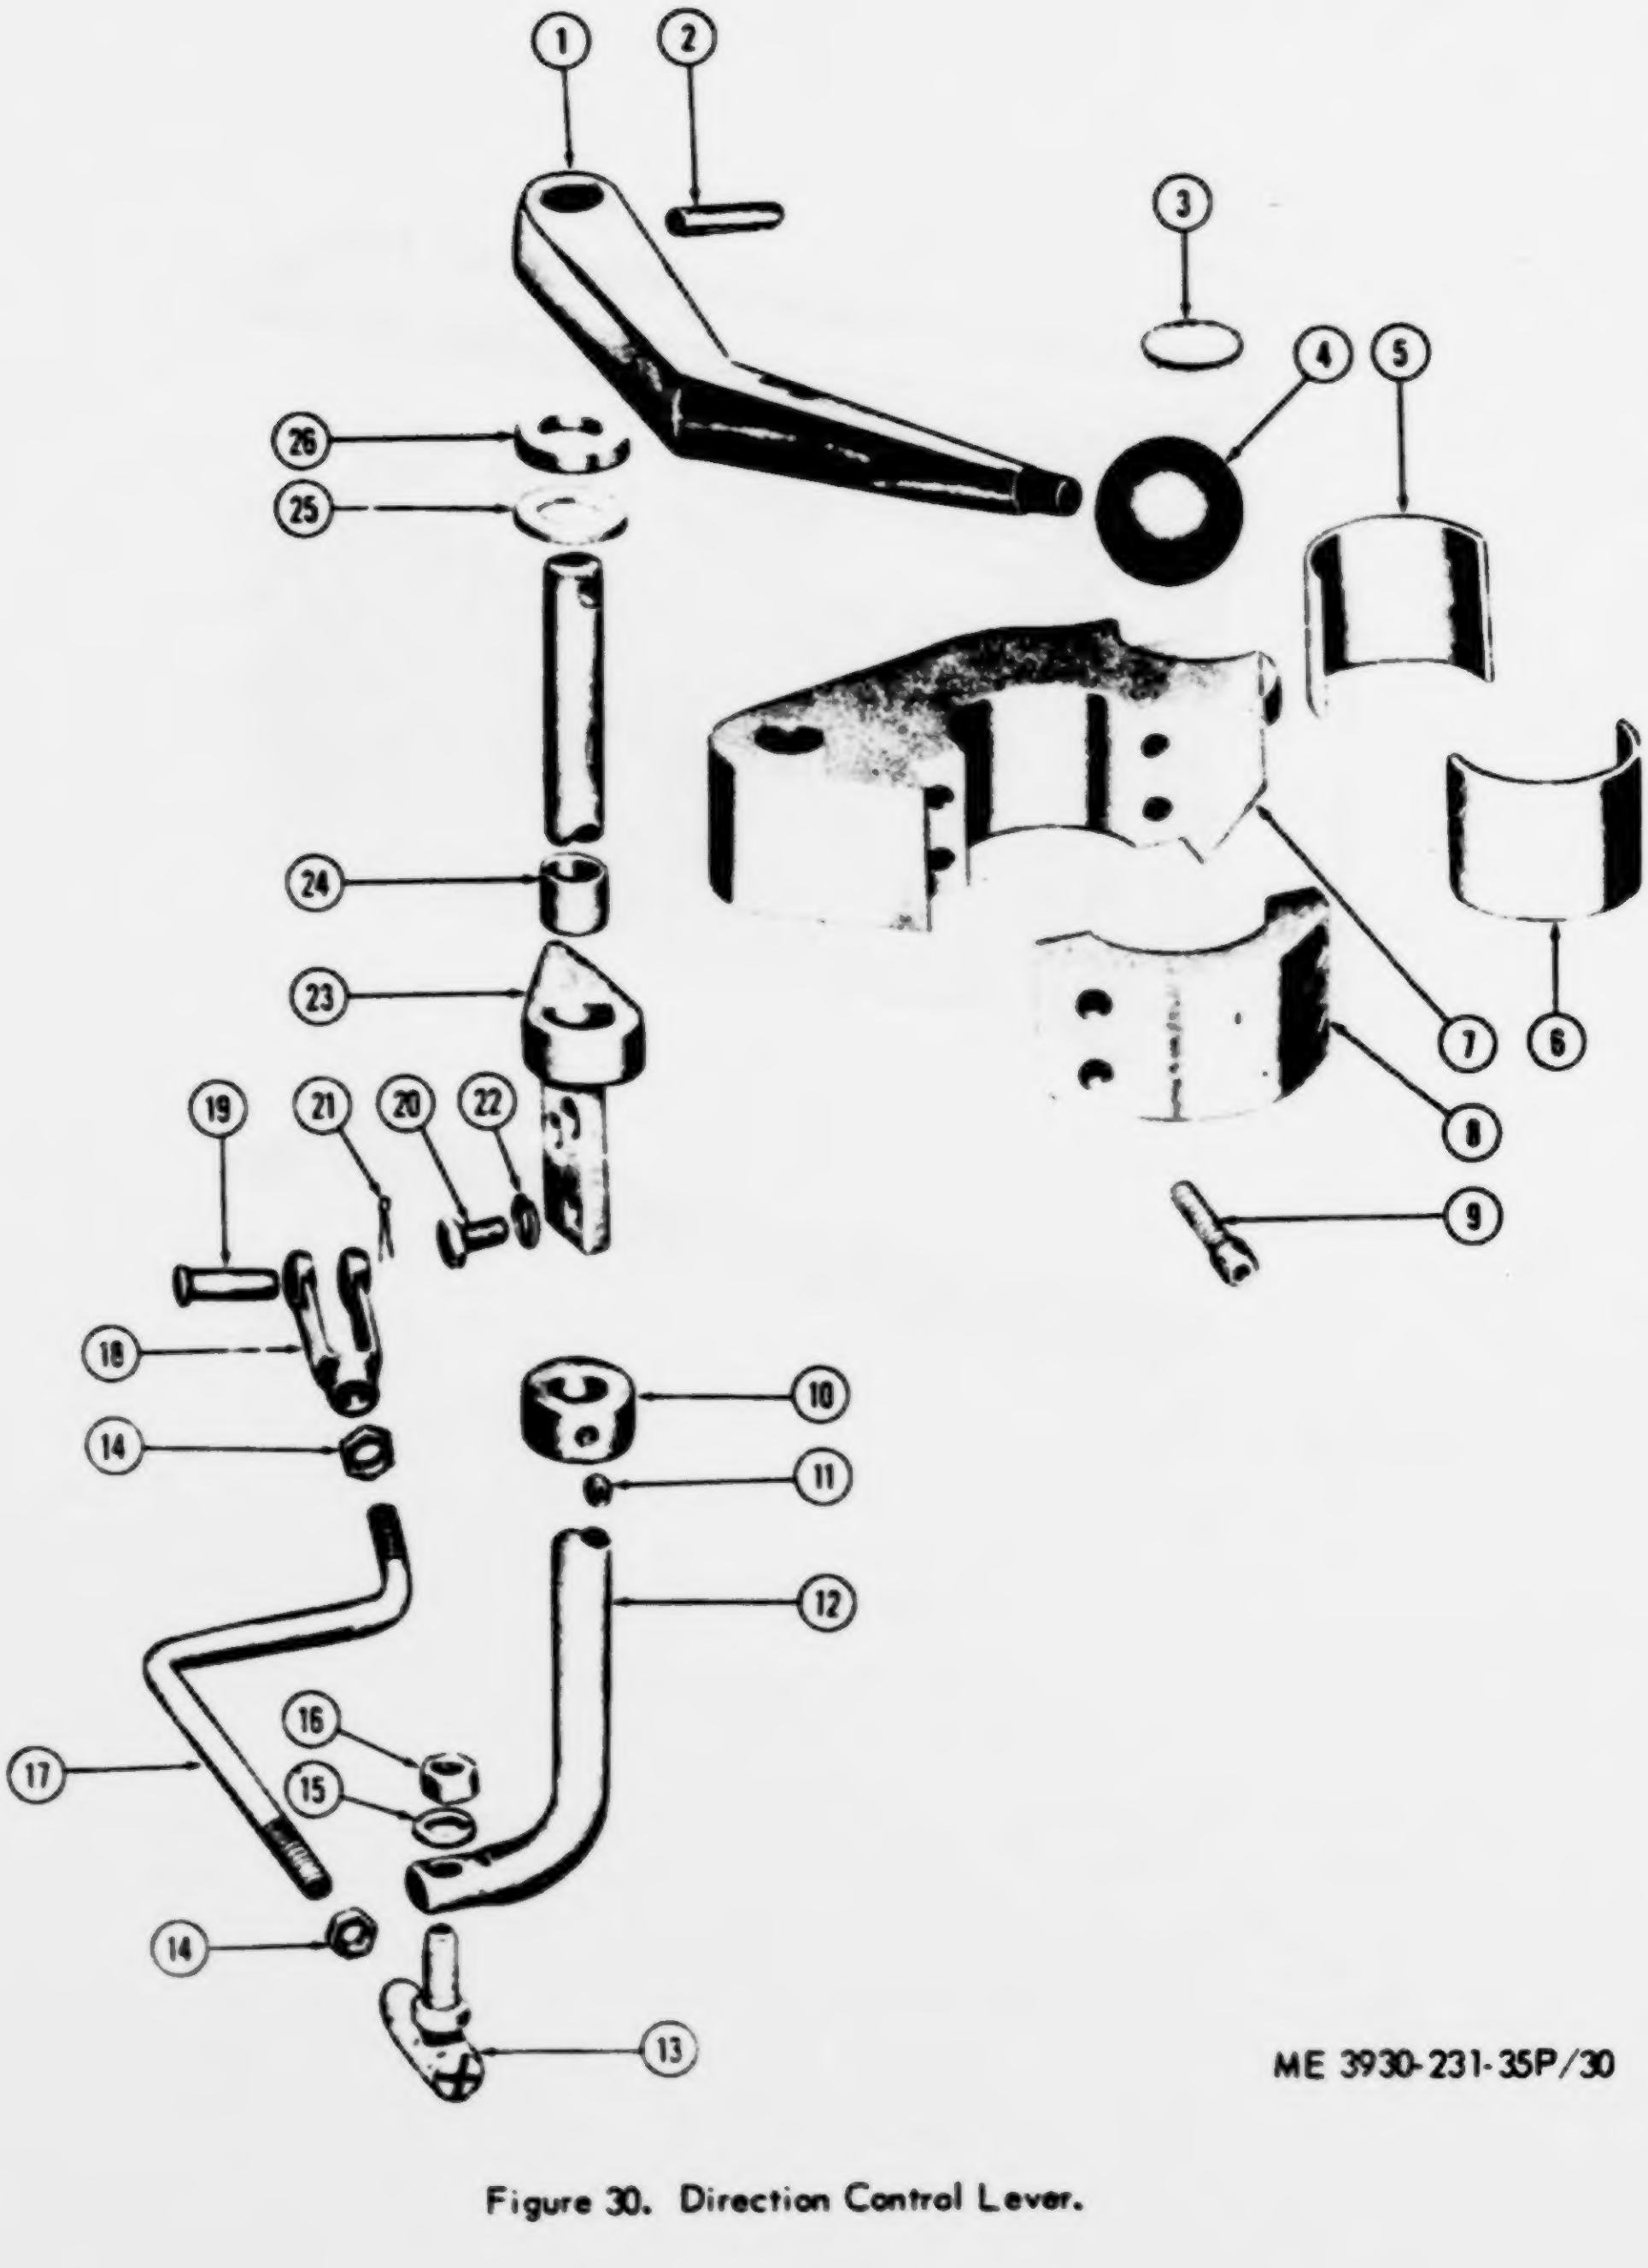
1
2
3
4
5
26
25
24
23
7
6
19
21
20
22
8
9
18
10
14
11
12
16
15
17
14
13
ME 3930-231-35P/30

Figure 30. Direction Control Lever.

INDEX TO PARTS, FIGURE 30

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0710	LEVER	14	0710	NUT
2	0710	PIN	15	0710	WASHER
3	0710	PLUG	16	0710	NUT
4	0710	KNOB	17	0710	ROD
5	0710	BUSHING	18	0710	CLEVIS
6	0710	BUSHING	19	0710	PIN
7	0710	BRACKET	20	0710	SCREW
8	0710	CAP	21	0710	PIN
9	0710	SCREW	22	0710	WASHER
10	0710	COLLAR	23	0710	BRACKET
11	0710	SETSCREW	24	0710	BUSHING
12	0710	ROD	25	0710	WASHER
13	0710	BALLJOINT	26	0710	WASHER

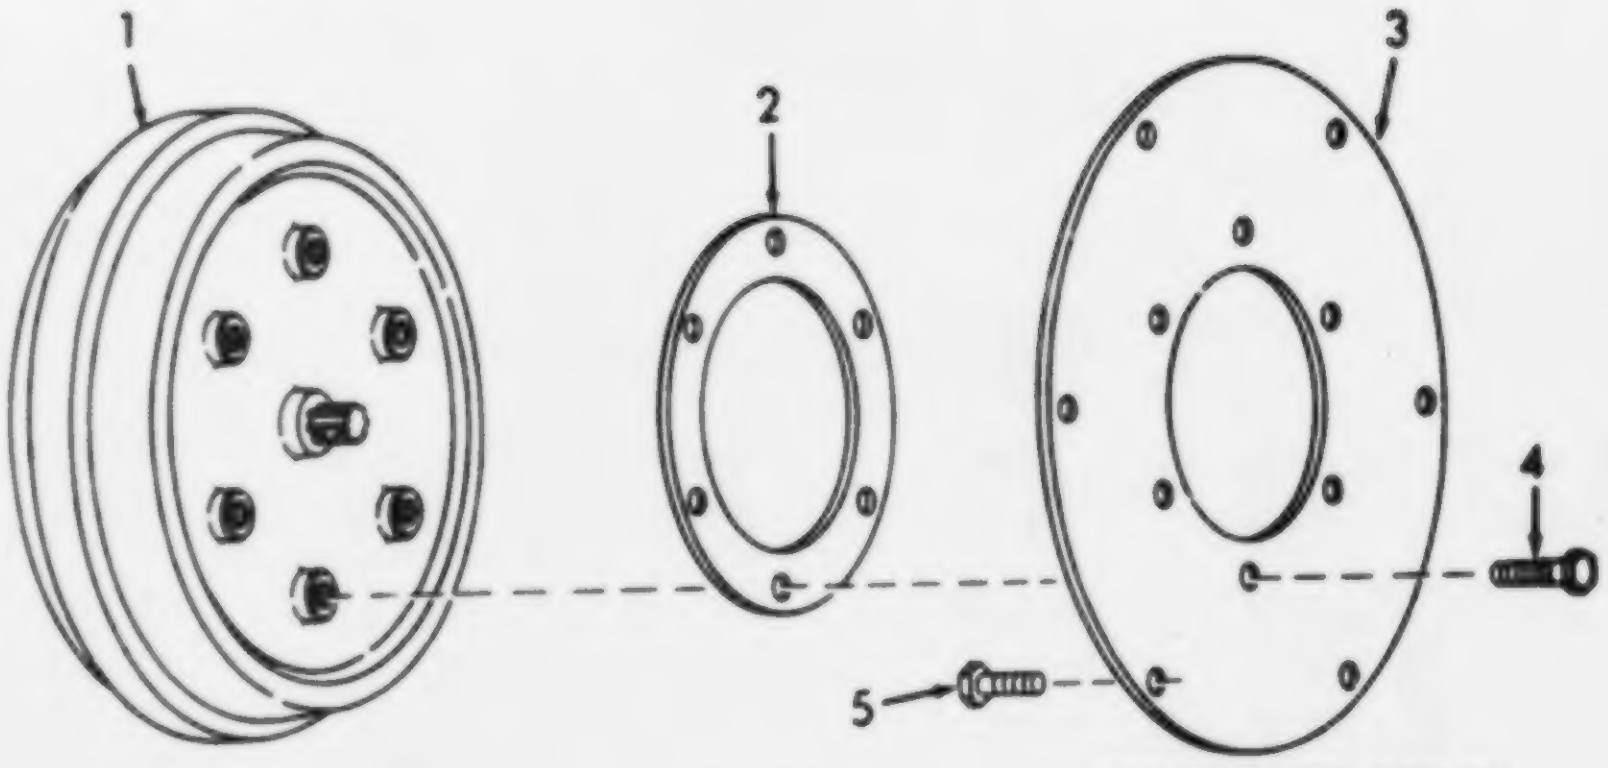
1
2
3
4
5
ME 3930-231-35P/31

Figure 31. Torque Converter.

INDEX TO PARTS, FIGURE 31

Reference Number	Functional Group	Item Name
1	0708	CONVERTER
2	0708	PLATE
3	0708	PLATE
4	0708	BOLT
5	0708	BOLT

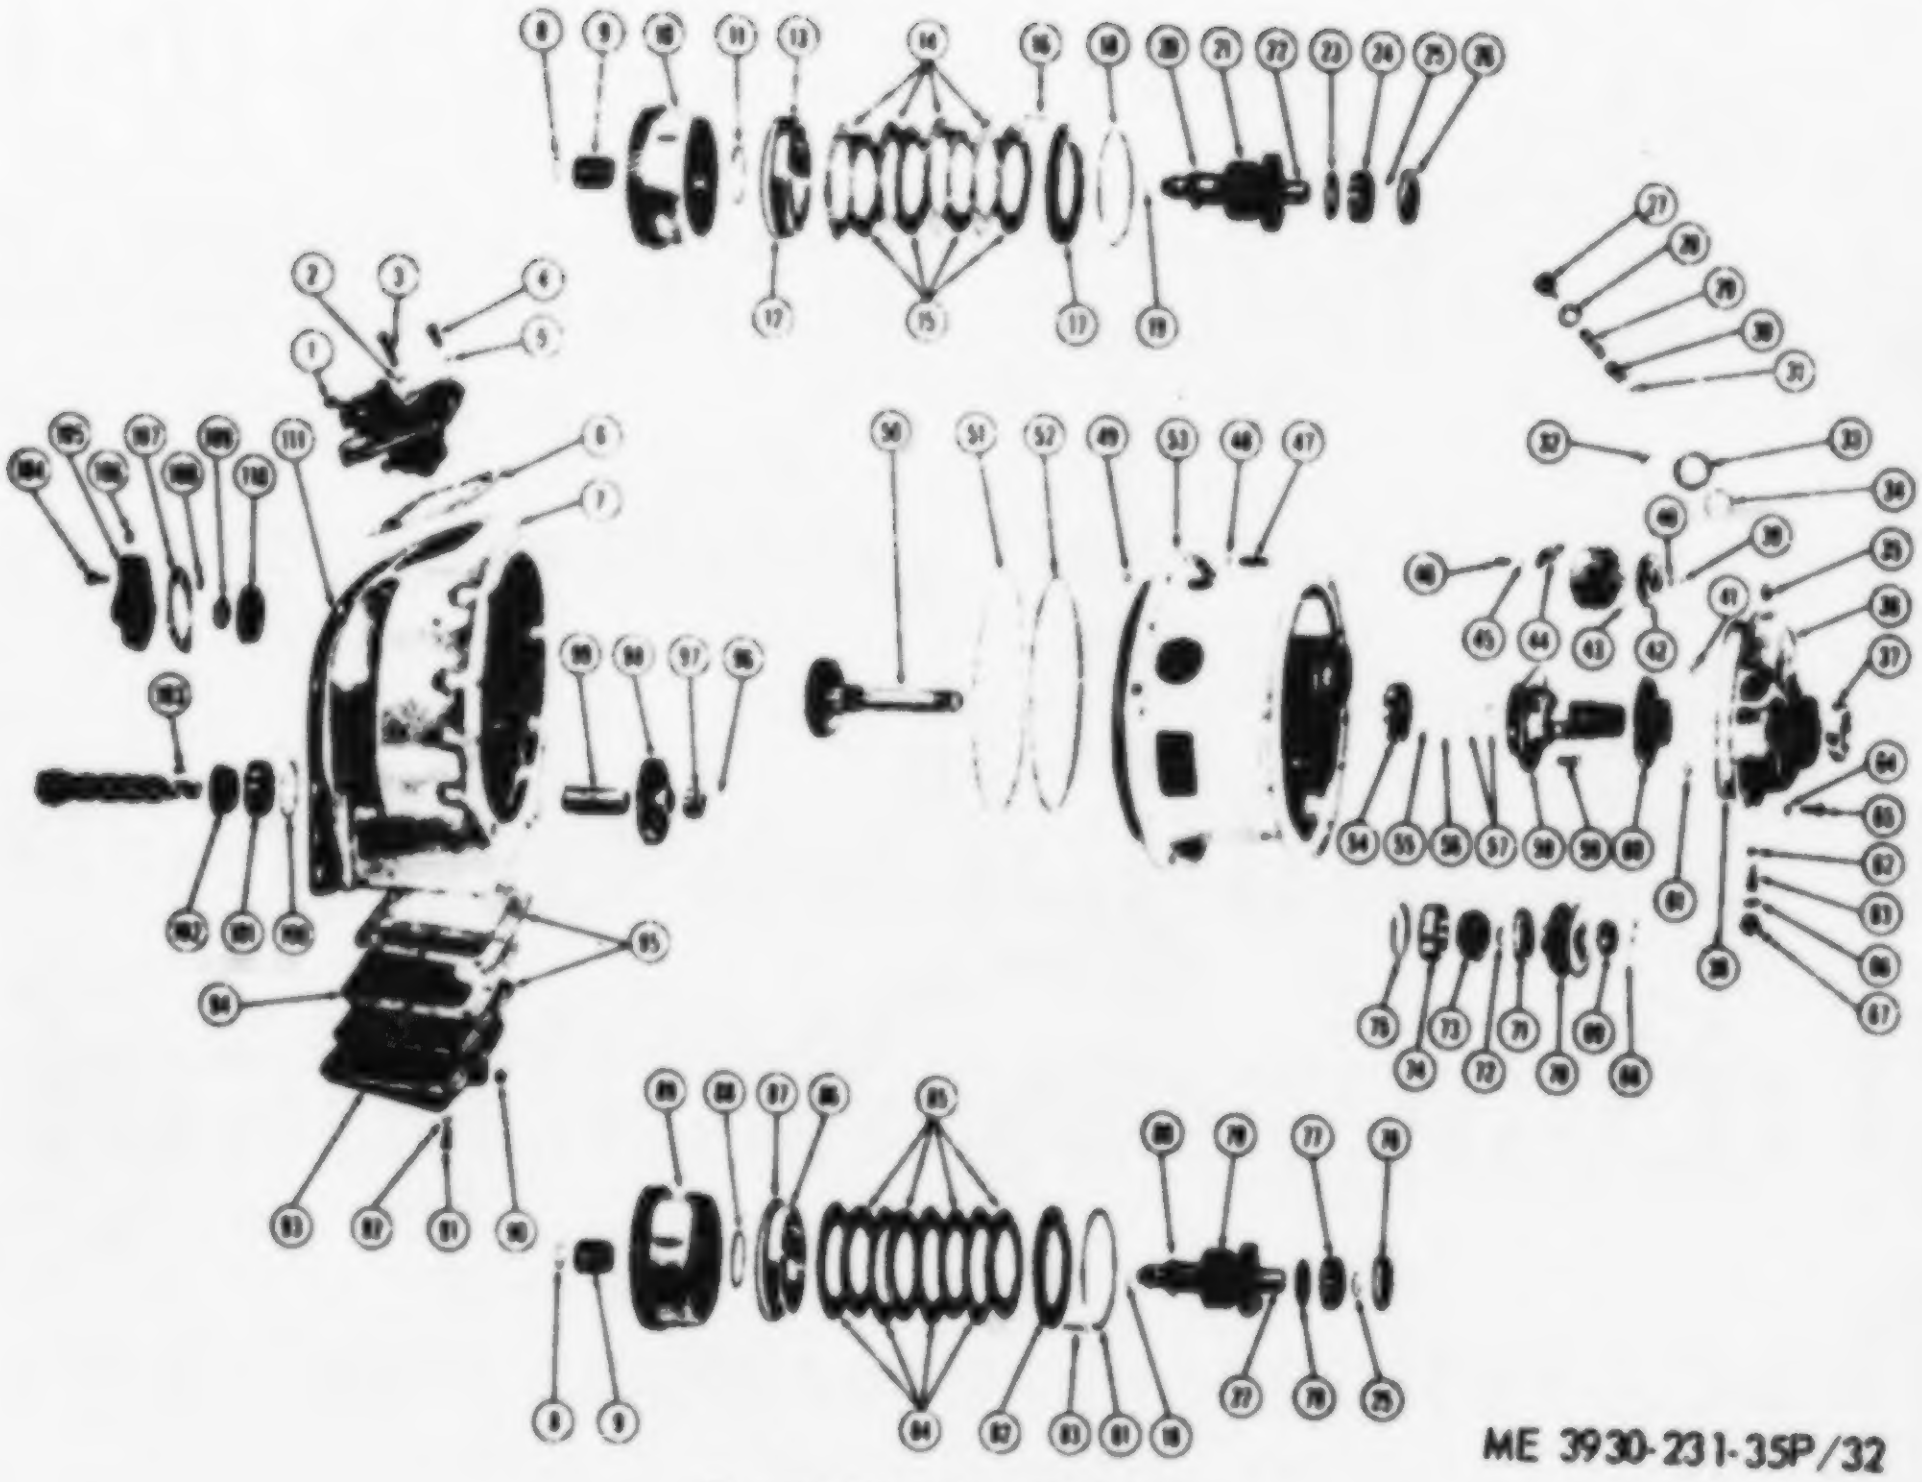
8
9
10
11
13
14
16
18
20
21
22
23
24
25
26
17
15
17
19
27
28
29
30
31
2
3
4
5
1
6
7
104
105
106
107
108
109
110
111
50
51
52
49
53
48
47
32
33
34
46
39
35
36
37
40
45
44
43
42
41
99
98
97
96
103
54
55
56
57
58
59
60
64
65
61
62
63
38
66
67
102
101
100
95
94
75
74
73
72
71
70
69
68
93
92
91
90
89
88
87
86
85
80
79
77
76
8
9
84
82
83
81
18
27
78
25

ME 3930-231-35P/32

Figure 32. Transmission.

INDEX TO PARTS, FIGURE 32

Reference Number	Functional Group	Item Name
1	0714	CONTROL VALVE
2	0714	WASHER
3	0714	SCREW
4	0714	SCREW
5	0714	WASHER
6	0714	GASKET
7	0710	CASE
8	0710	RING
9	0710	SPACER
10	0710	DRUM AND HUB
11	0710	RING
12	0710	RING
13	0710	PISTON
14	0710	DISK
15	0710	DISK
16	0710	SPRING
17	0710	PLATE
18	0710	RING
19	0710	RING
20	0710	WASHER
21	0710	GEAR AND BUSHING
22	0710	SHAFT
23	0710	SPACER
24	0710	BEARING
25	0710	RING
26	0710	SEAL
27	0721	PLUG
28	0721	WASHER
29	0721	SPRING
30	0721	REGULATOR
31	0721	STOP
32	0721	PIN
33	0721	WASHER
34	0721	SEAL
35	0710	PLUG
36	0710	PLATE
37	0710	SEAL
38	0710	GASKET
39	0710	RING
40	0710	WASHER
41	0710	PACKING
42	0710	GEAR
43	0710	KEY
44	0710	PLATE
45	0710	WASHER
46	0710	SCREW
47	0710	SCREW
48	0710	WASHER
49	0710	PACKING
50	0710	GEAR
51	0710	SEAL
52	0710	PACKING
53	0710	HOUSING
54	0710	BEARING
55	0710	RING
56	0710	SHIM
57	0710	RING
58	0710	SUPPORT
59	0710	SCREW
60	0710	GEAR
61	0710	PACKING
62	0710	BALL
63	0710	SPRING
64	0710	WASHER
65	0710	SCREW
66	0710	PACKING
67	0710	PLUG
68	0710	PIN
69	0710	NUT
70	0710	DRUM
71	0710	SEAL
72	0710	PACKING
73	0710	CONE
74	0710	CUP
75	0710	RING
76	0710	SEAL
77	0710	BEARING
78	0710	SPACER
79	0710	GEAR AND BUSHING
80	0710	WASHER
81	0710	RING
82	0710	PLATE
83	0710	SPRING
84	0710	DISK
85	0710	DISK
86	0710	PISTON
87	0710	RING
88	0710	SEAL
89	0710	DRUM AND HUB
90	0710	PLUG
91	0710	BOLT
92	0710	WASHER
93	0710	COVER
94	0710	SCREEN
95	0710	GASKET
96	0710	SHIM
97	0710	WASHER
98	0710	GEAR
99	0710	SPACER
100	0710	RING
101	0710	CUP
102	0710	CONE
103	0710	KEY
104	0710	SCREW
105	0710	CAP
106	0710	PLUG
107	0710	GASKET
108	0710	PACKING
109	0710	NUT
110	0710	BEARING
111	0710	SHIM

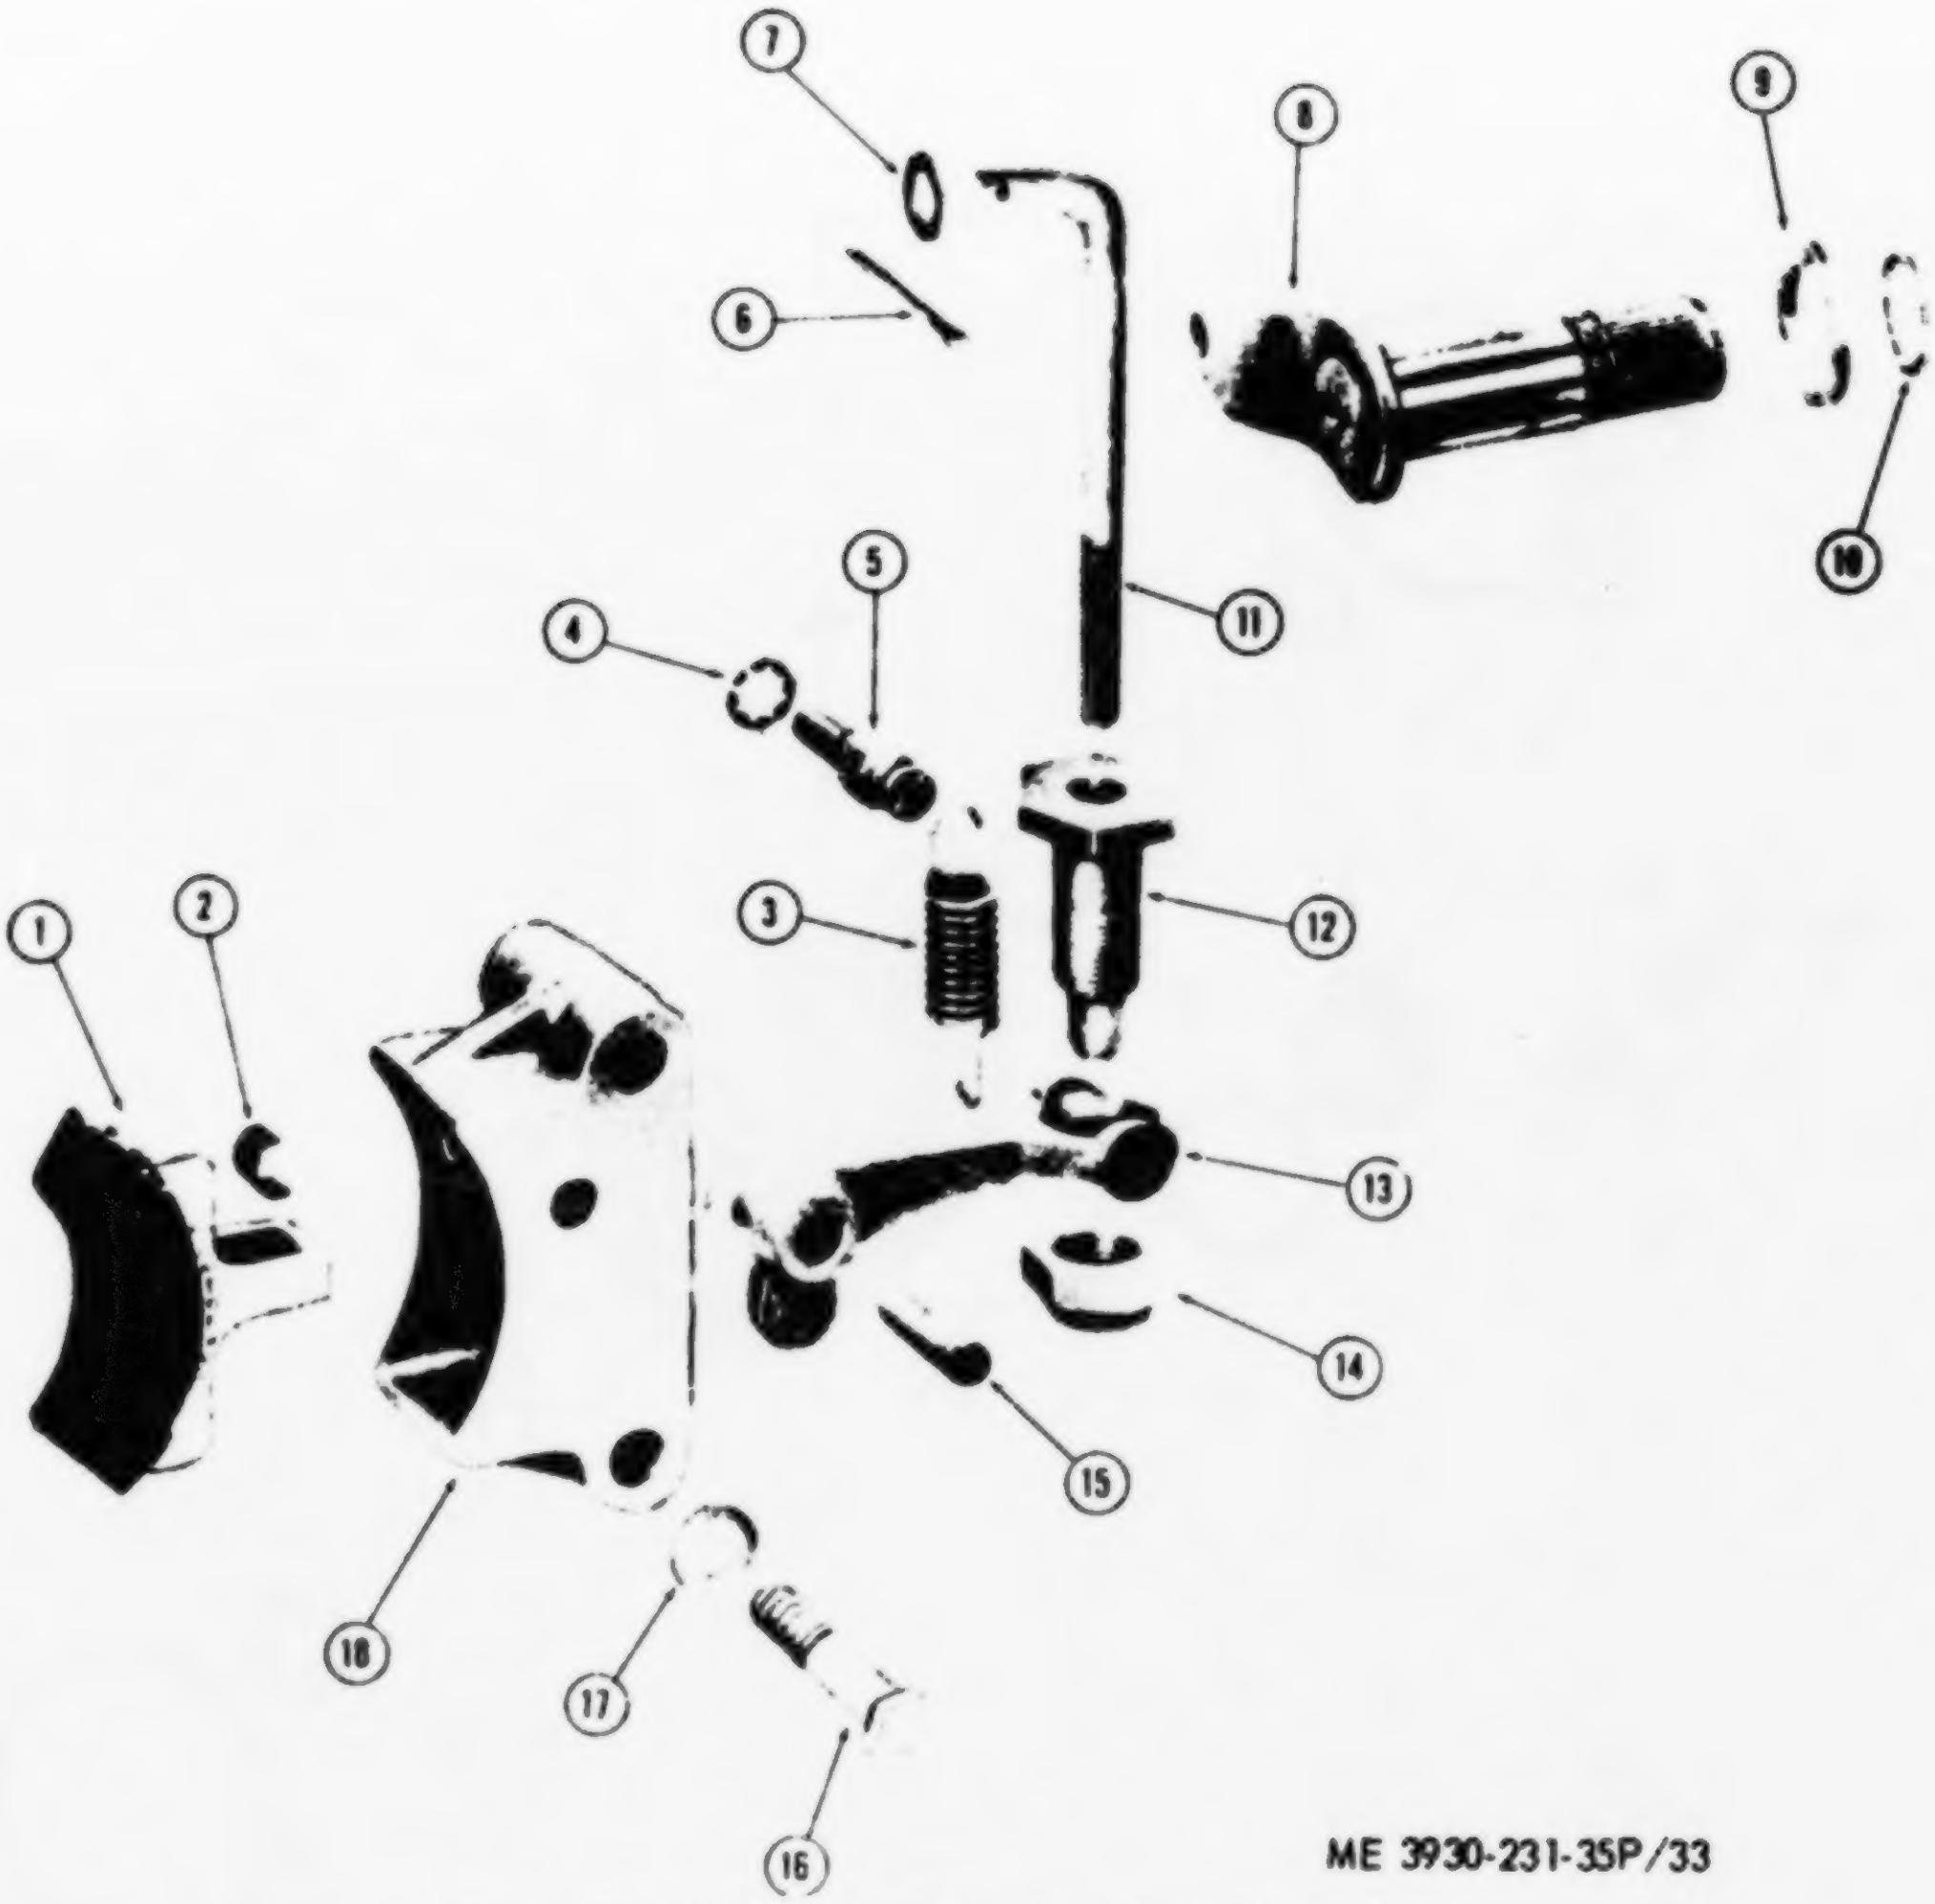

ME 3930-231-35P/33

Figure 33. Hand Brake Mechanism (Transmission).

INDEX TO PARTS, FIGURE 33

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0710	BRAKE SHOE	10	0710	RING
2	0710	SPRING	11	0710	ROD
3	0710	SPRING	12	0710	SLEEVE
4	0710	WASHER	13	0710	LEVER
5	0710	STUD	14	0710	NUT
6	0710	PIN	15	0710	PIN
7	0710	WASHER	16	0710	SCREW
8	0710	ARM-SHAFT AY	17	0710	WASHER
9	0710	WASHER	18	0710	HOUSING

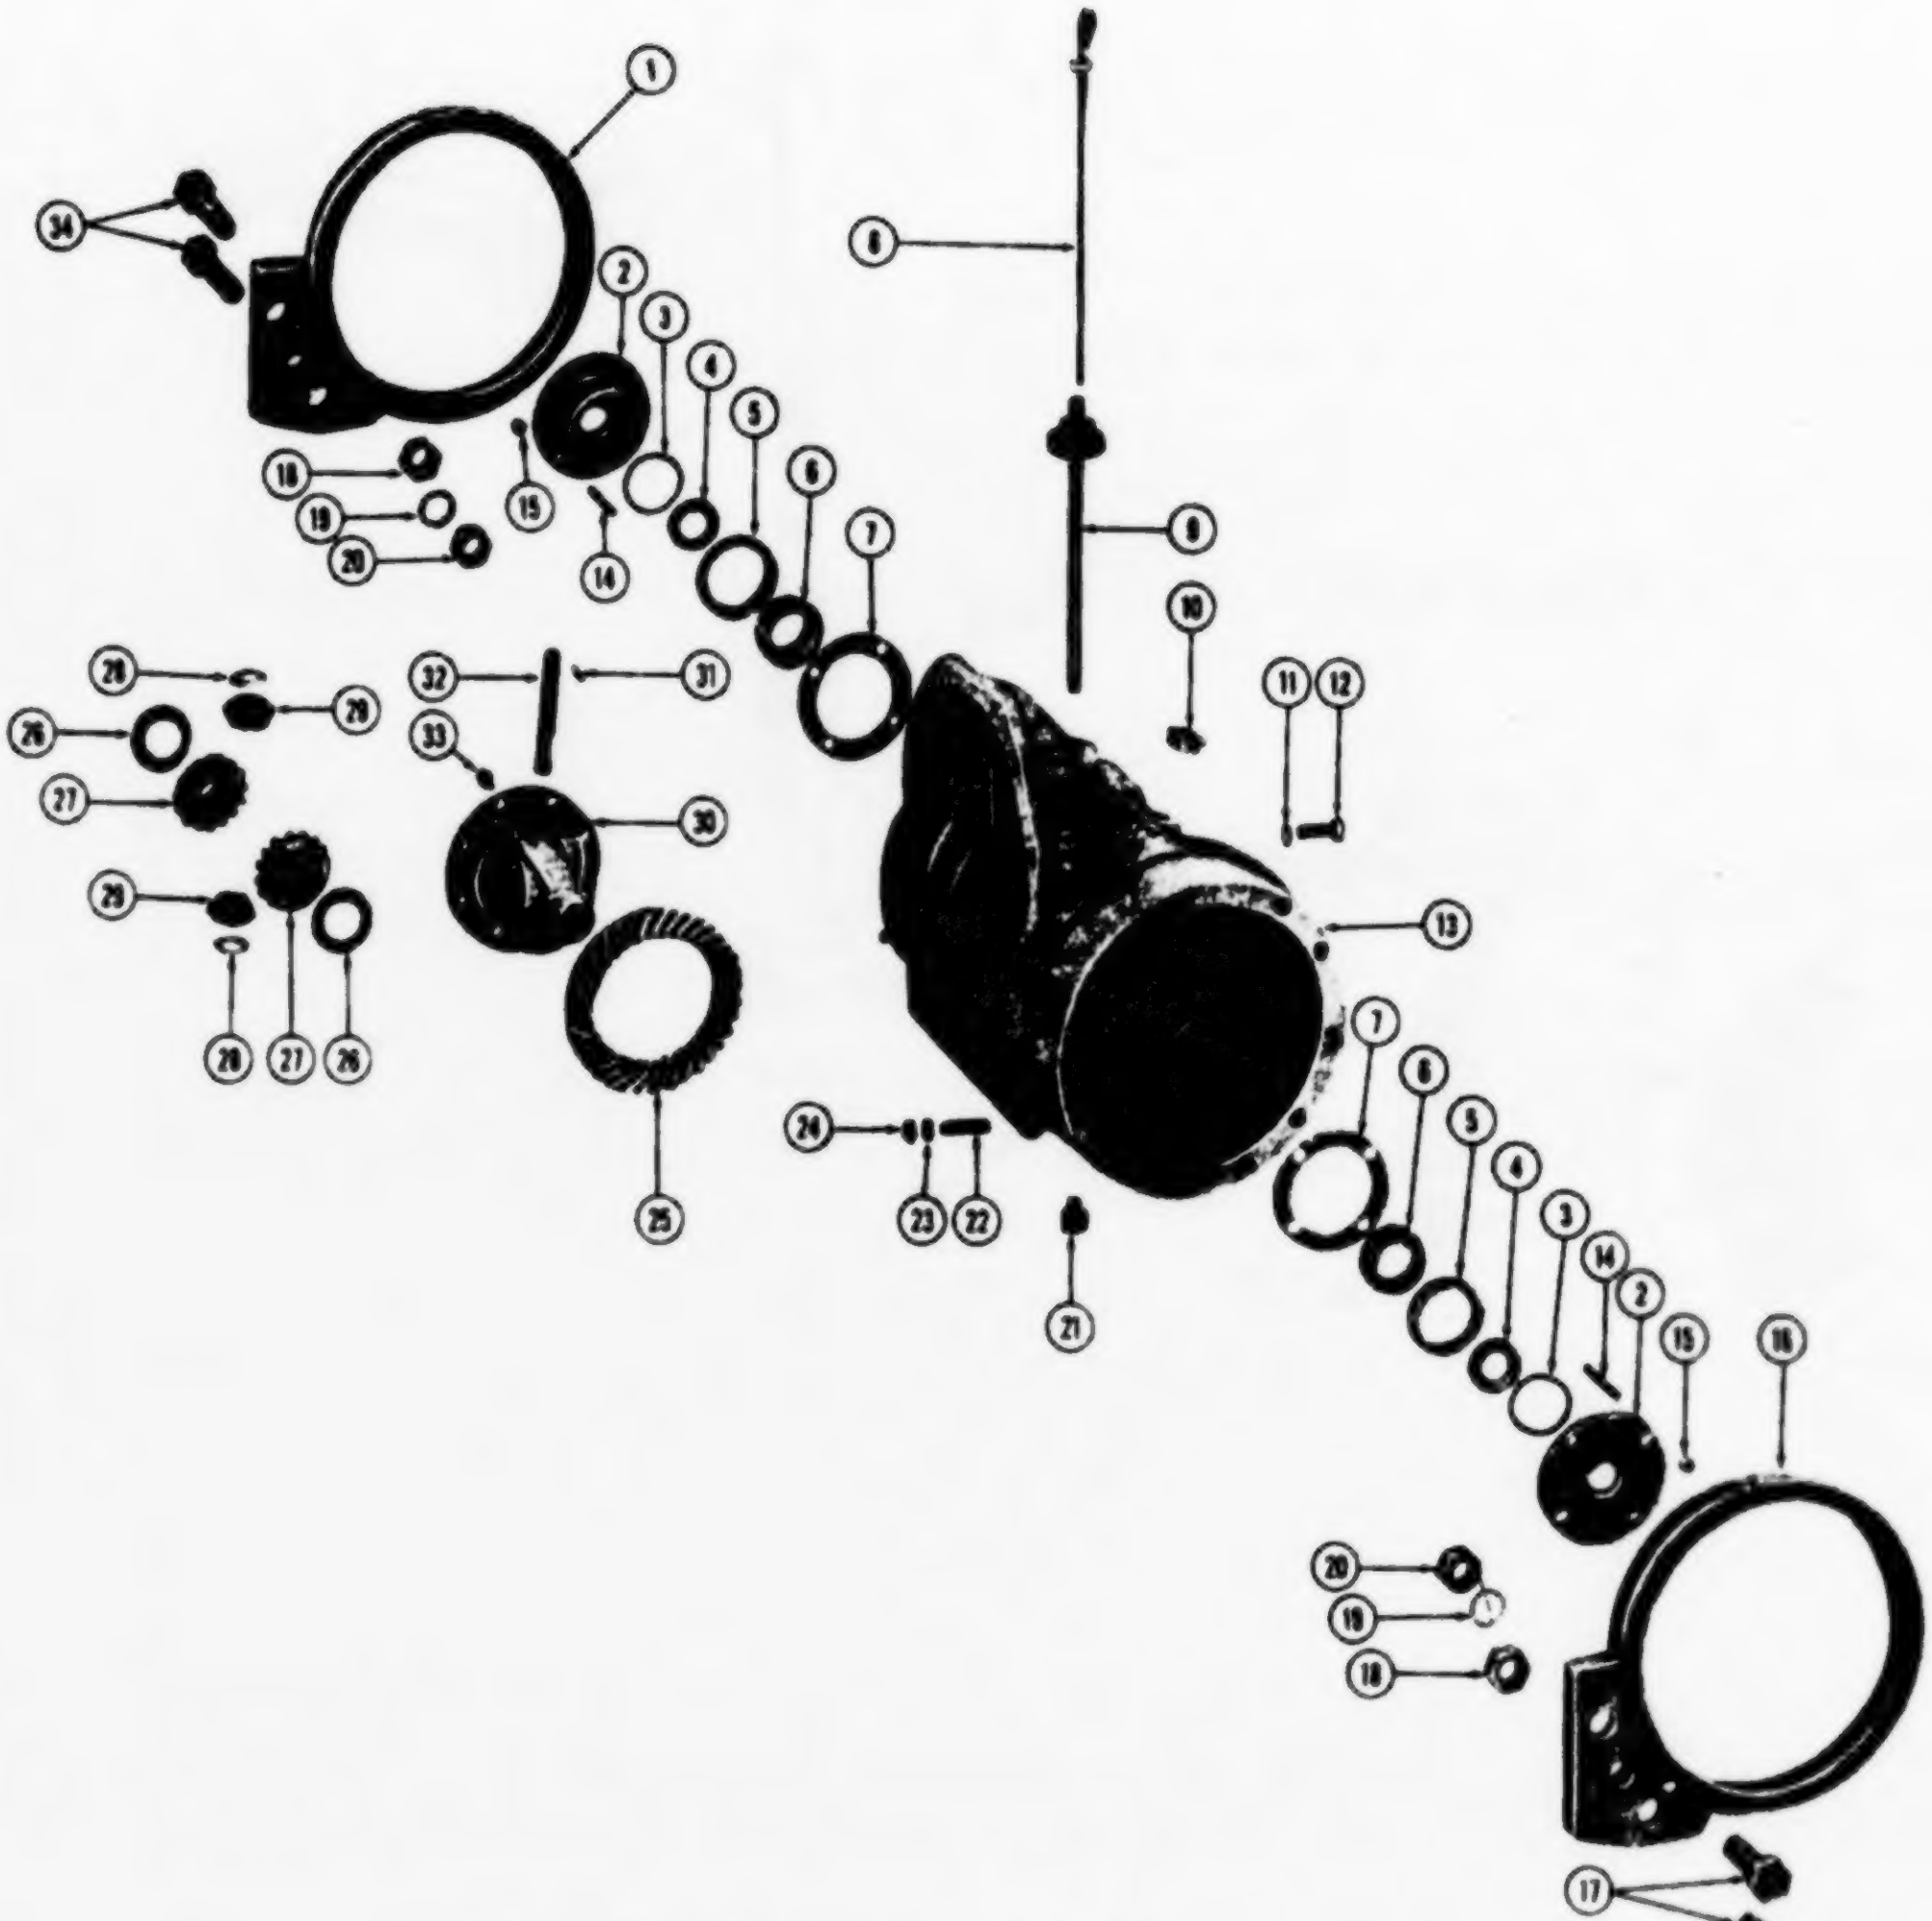
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34

Figure 34. Differential and Axle Adapter.

ME 3930-231-35P/34

INDEX TO PARTS, FIGURE 34

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	1002	RING	18	1002	NUT
2	1002	CARRIER	19	1002	WASHER
3	1002	PACKING	20	1002	NUT
4	1002	SEAL	21	1002	PLUG
5	1002	CUP	22	1002	STUD
6	1002	CONE AND ROLLERS	23	0710	WASHER
			24	0710	NUT
7	1002	SHIM	25	1002	GEAR AND PINION
8	1002	DIPSTICK			
9	1002	TUBE	26	1002	WASHER
10	1002	PLUG	27	1002	GEAR
11	0710	WASHER	28	1002	WASHER
12	0710	SCREW	29	1002	GEAR
13	1002	HOUSING	30	1002	CASE
14	1002	NUT	31	1002	PIN
15	1002	NUT	32	1002	PIN
16	1002	RING	33	1002	BOLT
17	1002	SCREW	34	1002	BOLT

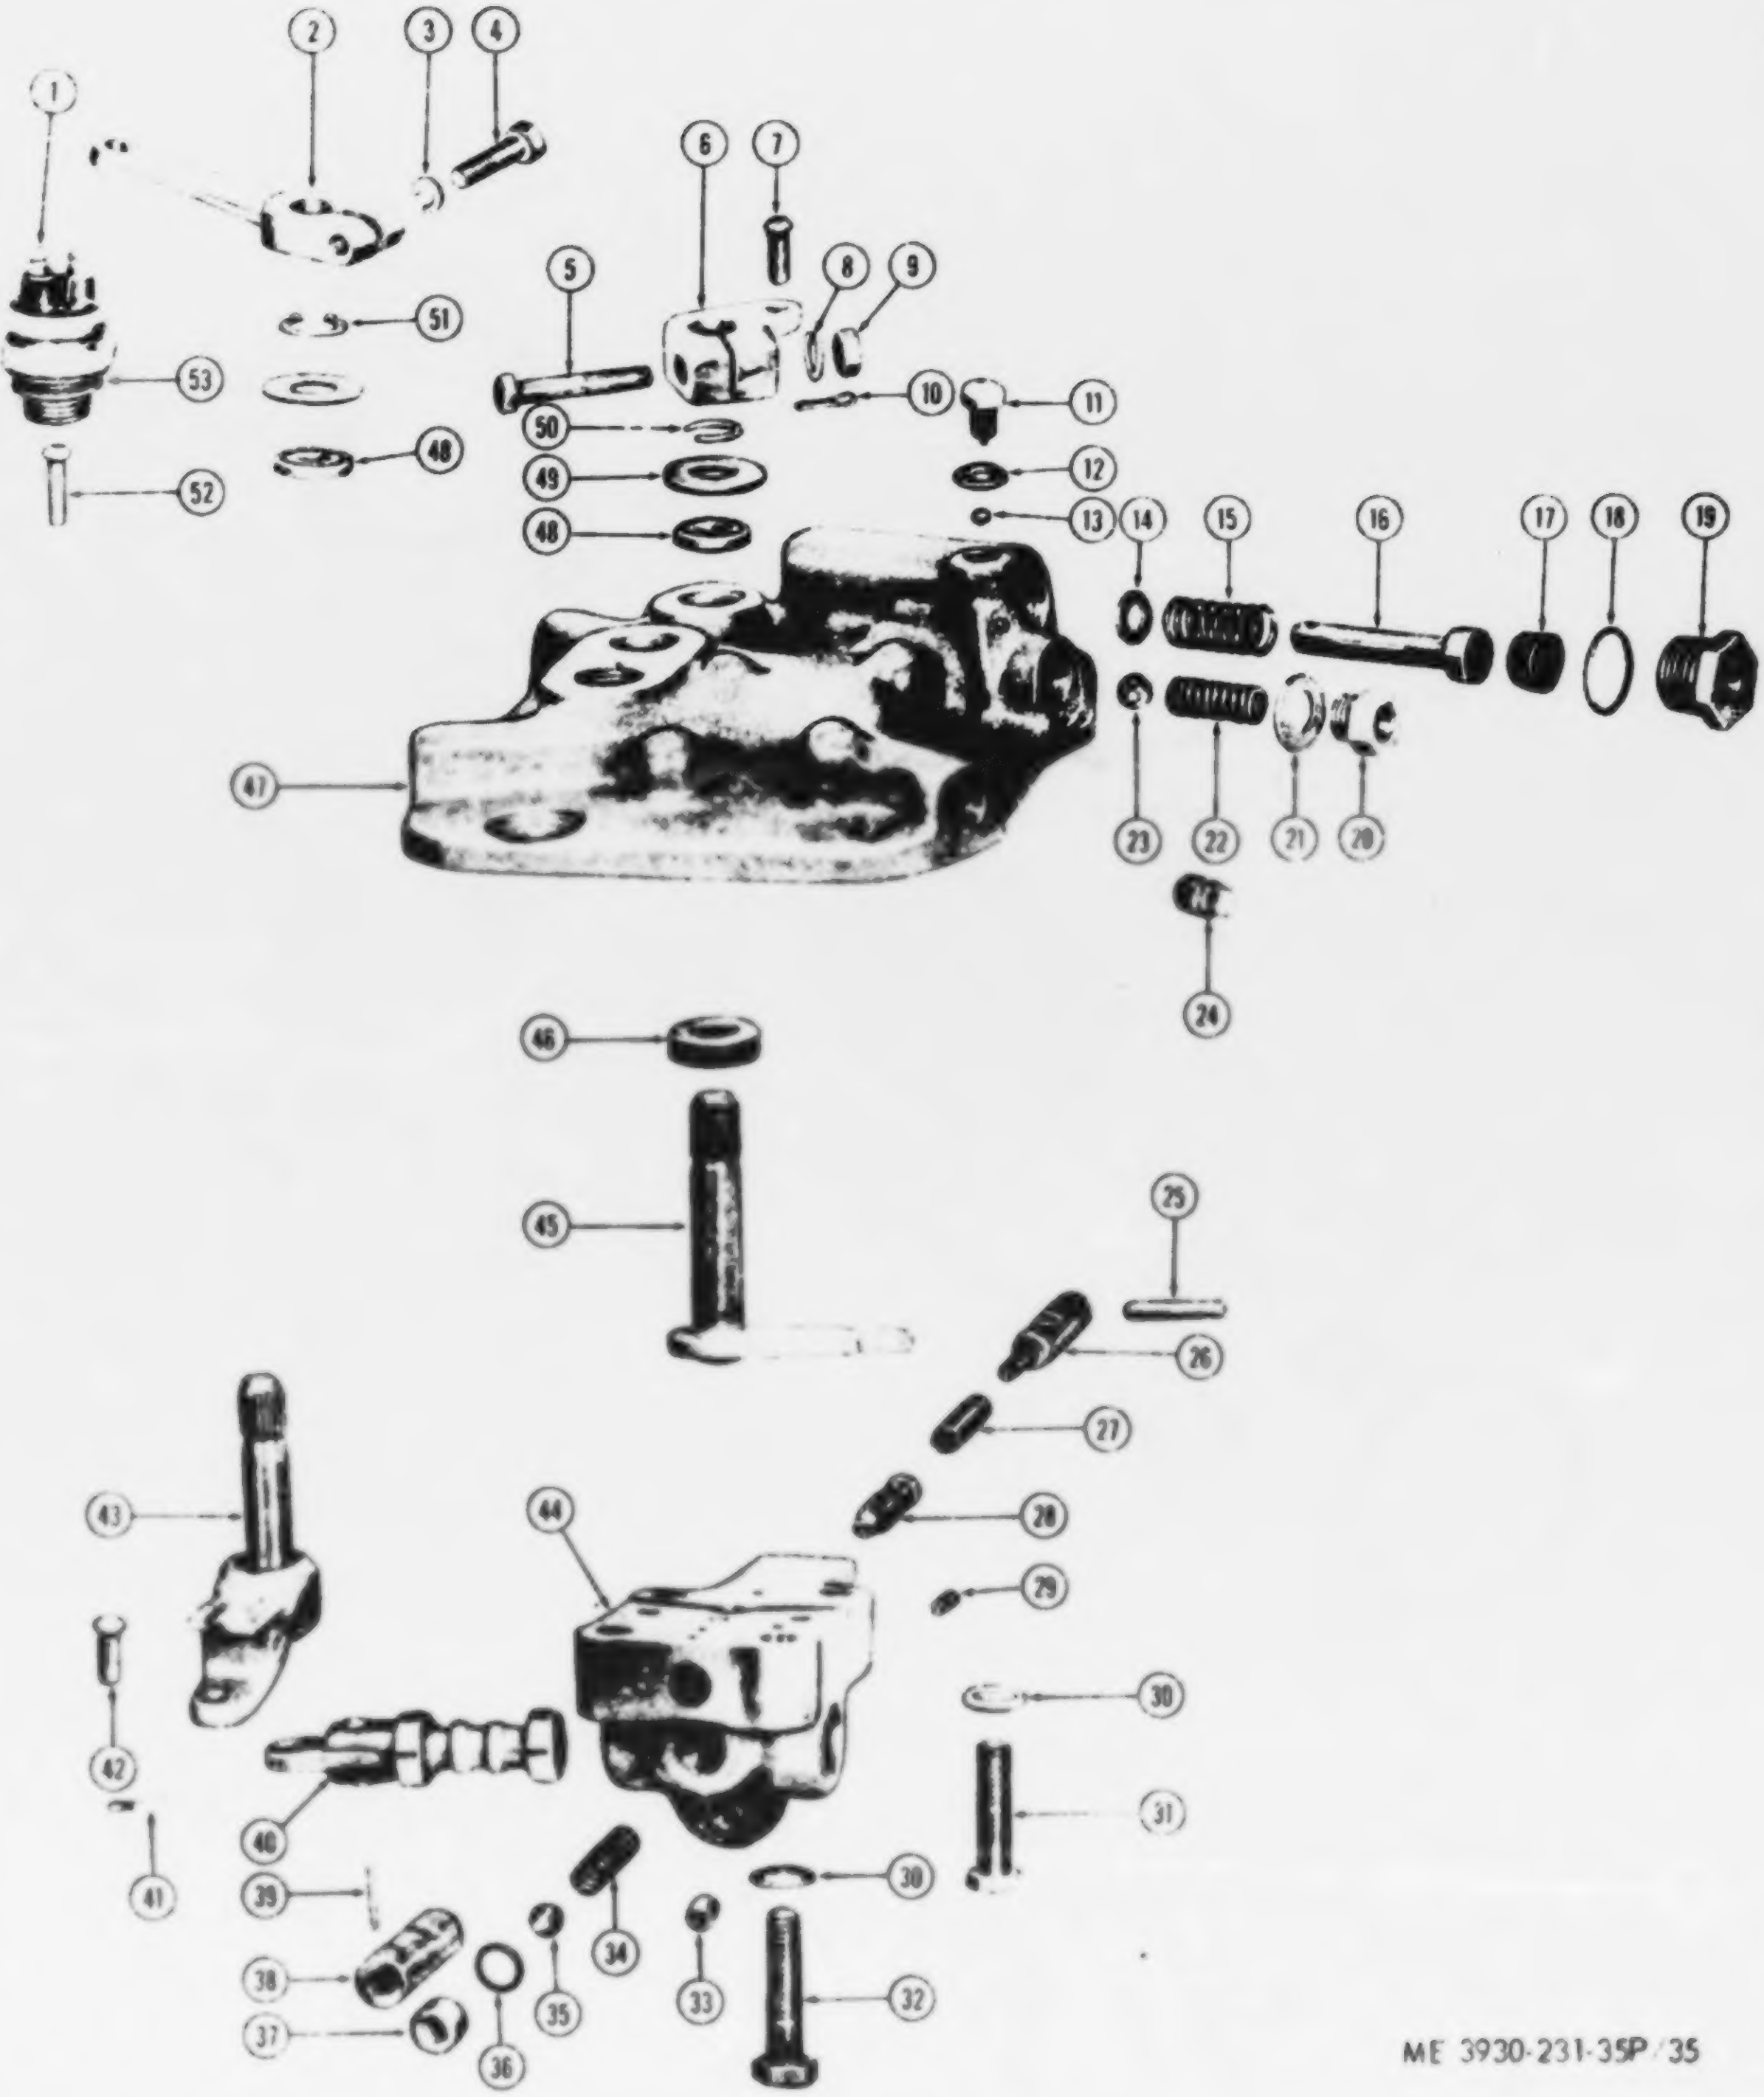
1
2
3
4
6
7
5
8
9
51
53
10
11
50
48
52
49
12
48
13
14
15
16
17
18
19
47
23
22
21
20
24
46
45
25
26
27
43
44
28
29
42
30
31
40
41
39
30
34
38
35
33
32
37
36

ME 3930-231-35P/35

Figure 35. Transmission Control Valve.

242-451

INDEX TO PARTS, FIGURE 35

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0608	SWITCH	28	0714	VALVE
2	0714	ARM	29	0714	PLUG
3	0714	WASHER	30	0714	WASHER
4	0714	SCREW	31	0714	SCREW
5	0714	SCREW	32	0714	SCREW
6	0714	ARM	33	0714	PLUG
7	0714	PIN	34	0714	SPRING
8	0714	WASHER	35	0714	BALL
9	0714	NUT	36	0714	PACKING
10	0714	PIN	37	0714	PLUG
11	0714	PLUG	38	0714	SLEEVE
12	0714	WASHER	39	0714	PIN
13	0714	BALL	40	0714	VALVE
14	0714	WASHER	41	0714	PIN
15	0714	SPRING	42	0714	PIN
16	0714	PISTON	43	0714	ARM
17	0714	CUP	44	0714	HOUSING
18	0714	SEAL	45	0714	ARM
19	0714	BUSHING	46	0714	SPACER
20	0714	PLUG	47	0714	COVER
21	0714	GASKET	48	0714	SEAL
22	0714	SPRING	49	0714	WASHER
23	0714	BALL	50	0714	RING
24	0714	PLUG	51	0714	RING
25	0714	PIN	52	0721	PIN
26	0714	ROD	53	0721	WASHER
27	0714	SPRING			

INDEX TO PARTS, FIGURE 36

Reference Number	Functional Group	Item Name
1	0721	SHAFT
2	0721	PIN
3	0721	CAP
4	0721	BEARING
5	0721	PIN
6	0721	RING
7	0721	GEAR
8	0721	HOUSING
9	0721	BOLT
10	0721	WASHER
11	0721	PLUG
12	0721	RING
13	0721	GEAR
14	0721	KEY
15	0721	SPACER
16	0721	SCREW
17	0721	SHAFT

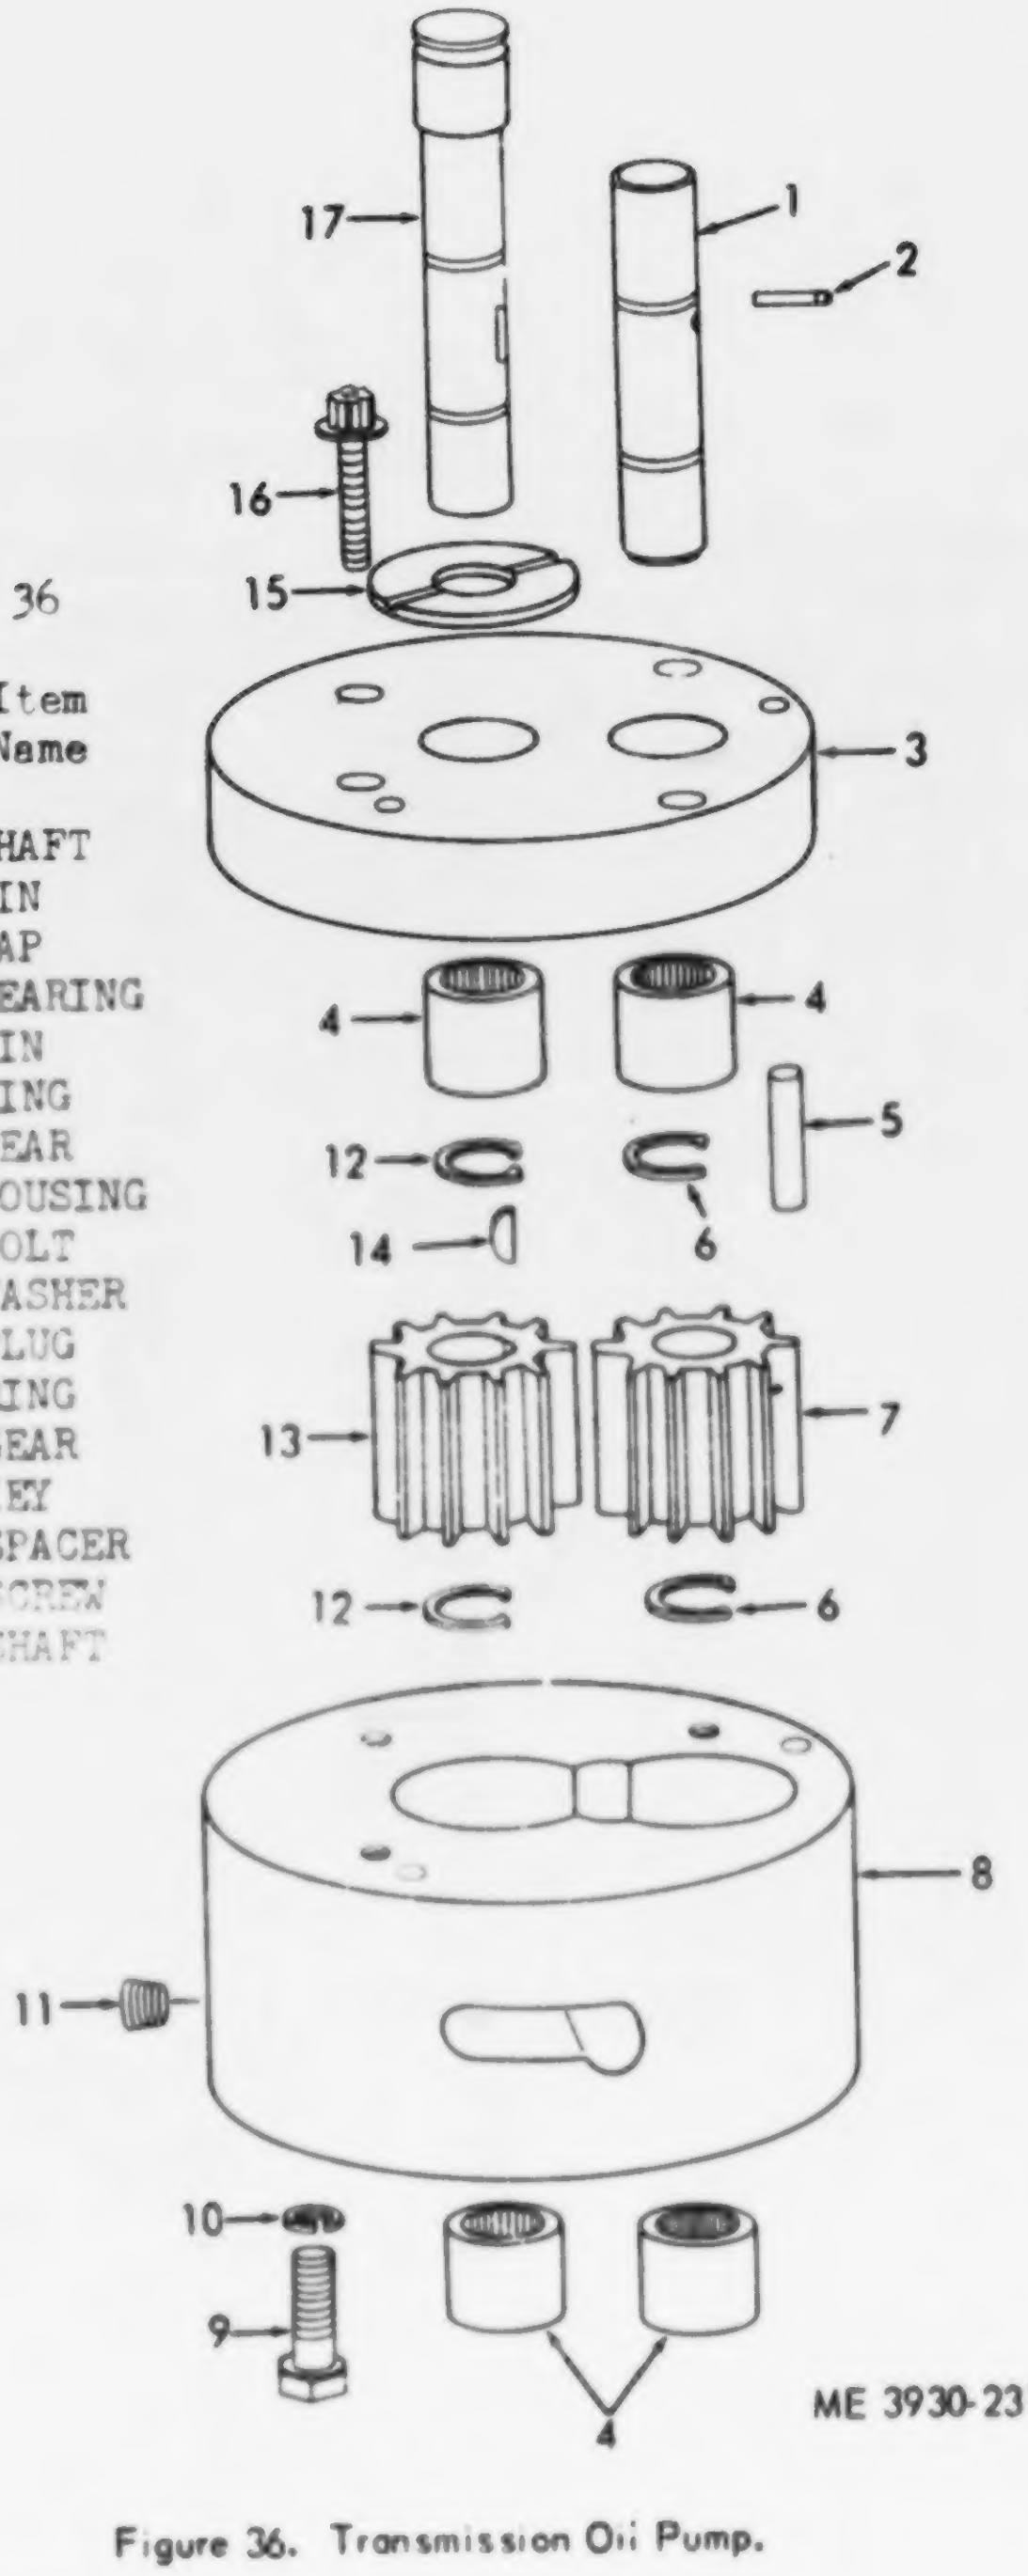

ME 3930-231-35P/36

Figure 36. Transmission Oil Pump.

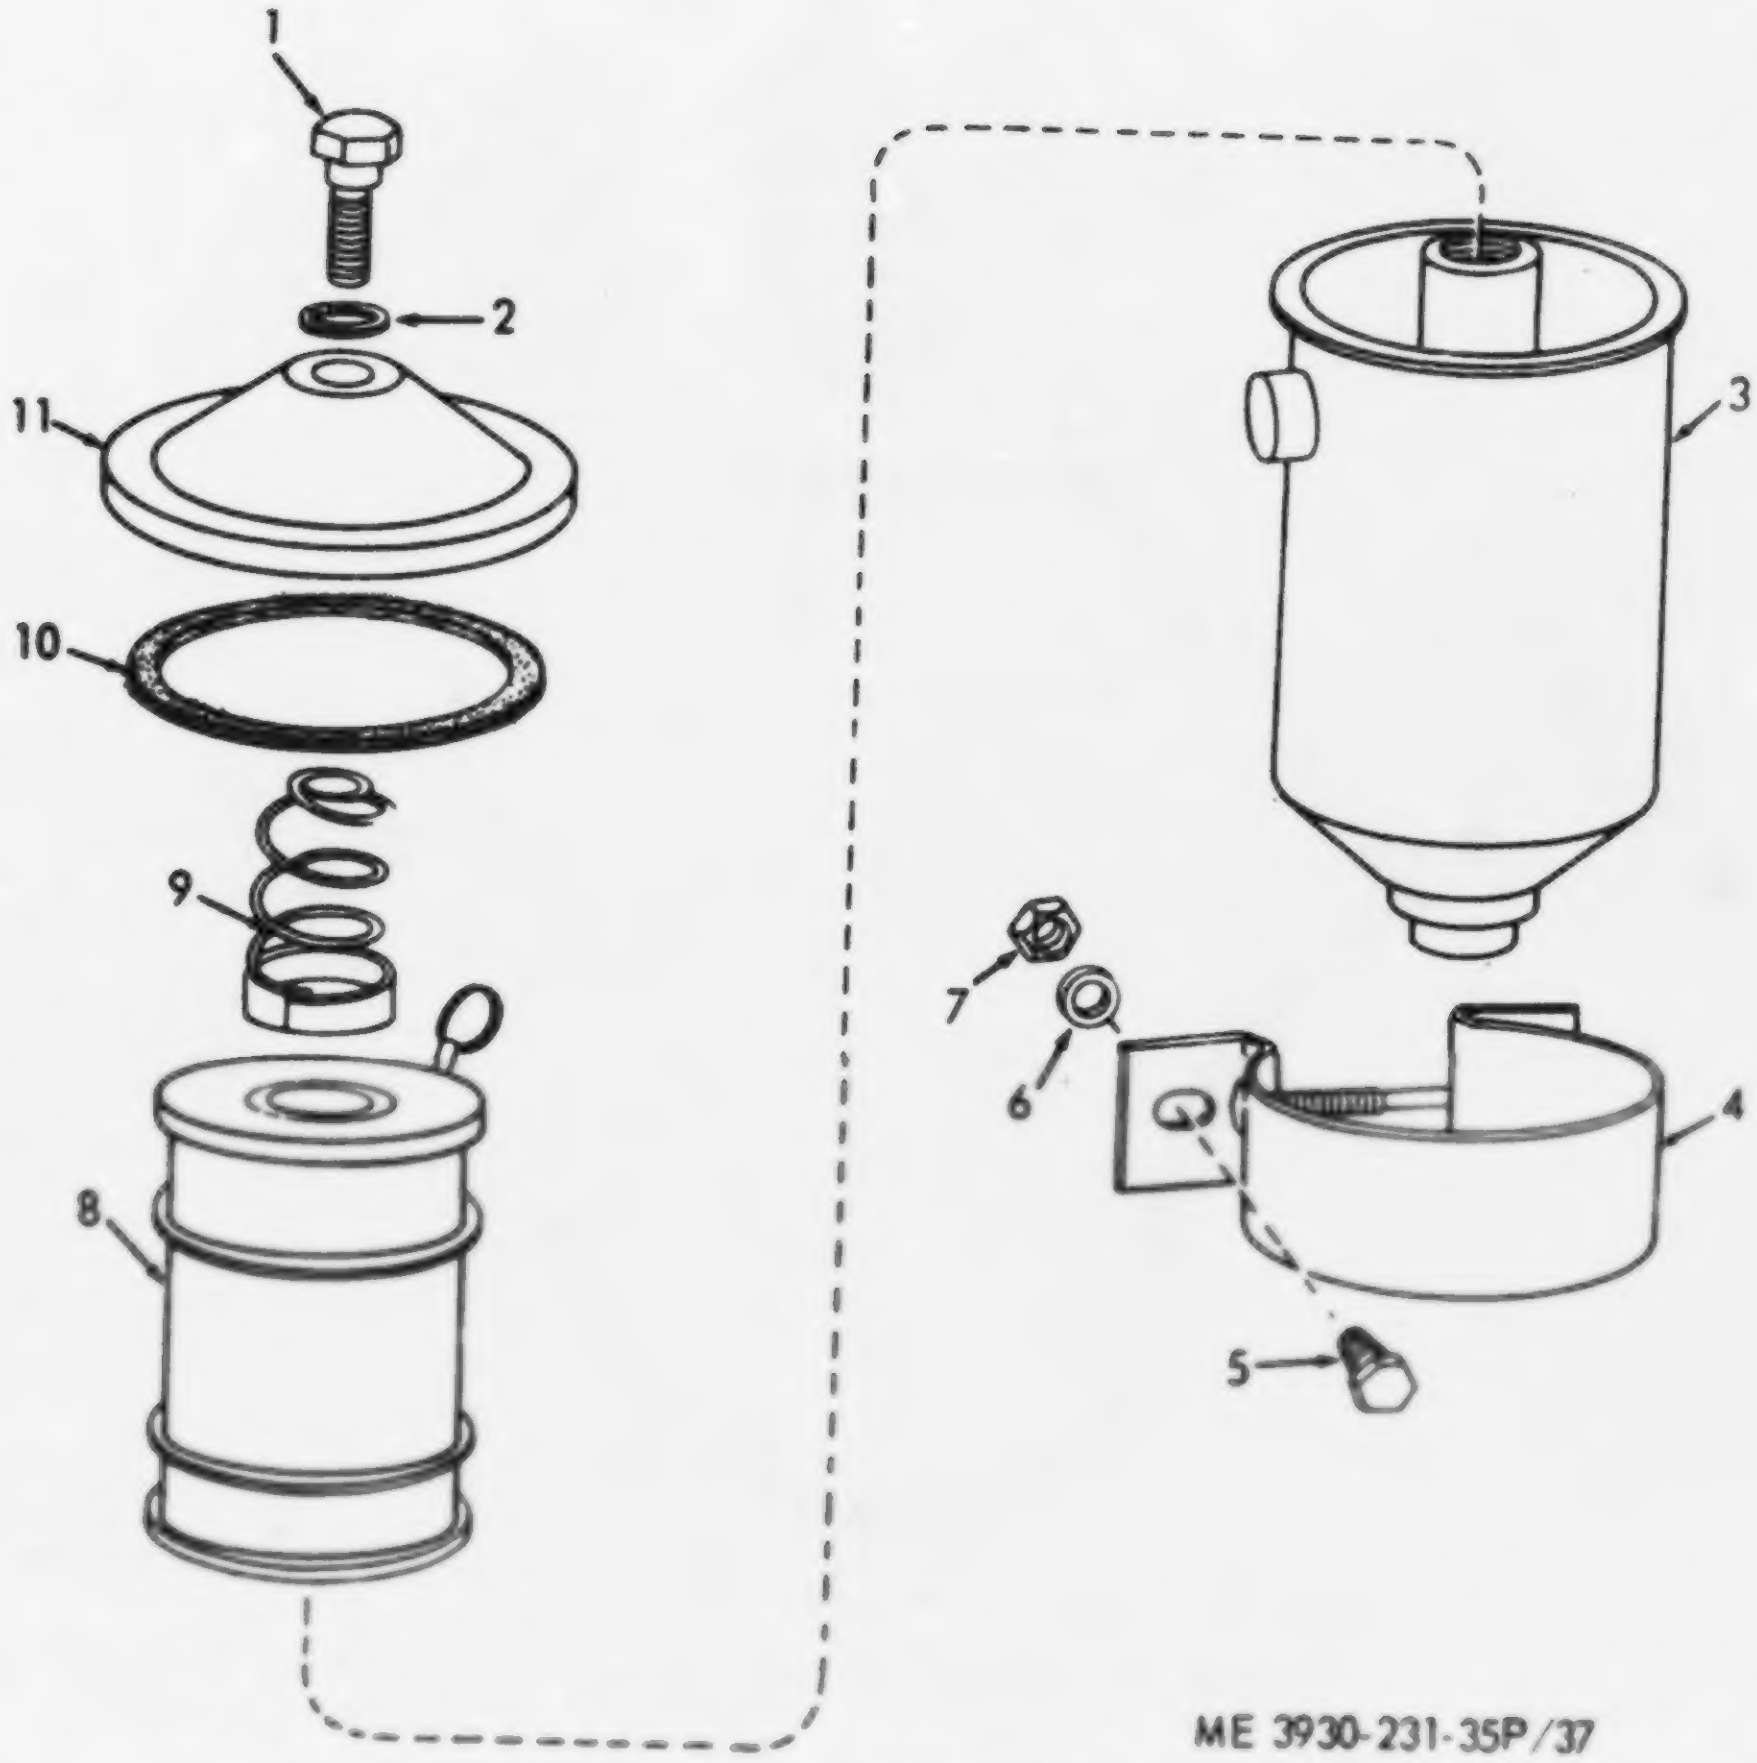

Figure 37. Transmission Oil Filter.

INDEX TO PARTS, FIGURE 37

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	0721	SCREW	7	0721	NUT
2	0721	WASHER	8	0721	FILTER
3	0721	BODY	9	0721	SPRING
4	0721	STRAP	10	0721	GASKET
5	0721	BOLT	11	0721	COVER
6	0721	WASHER			

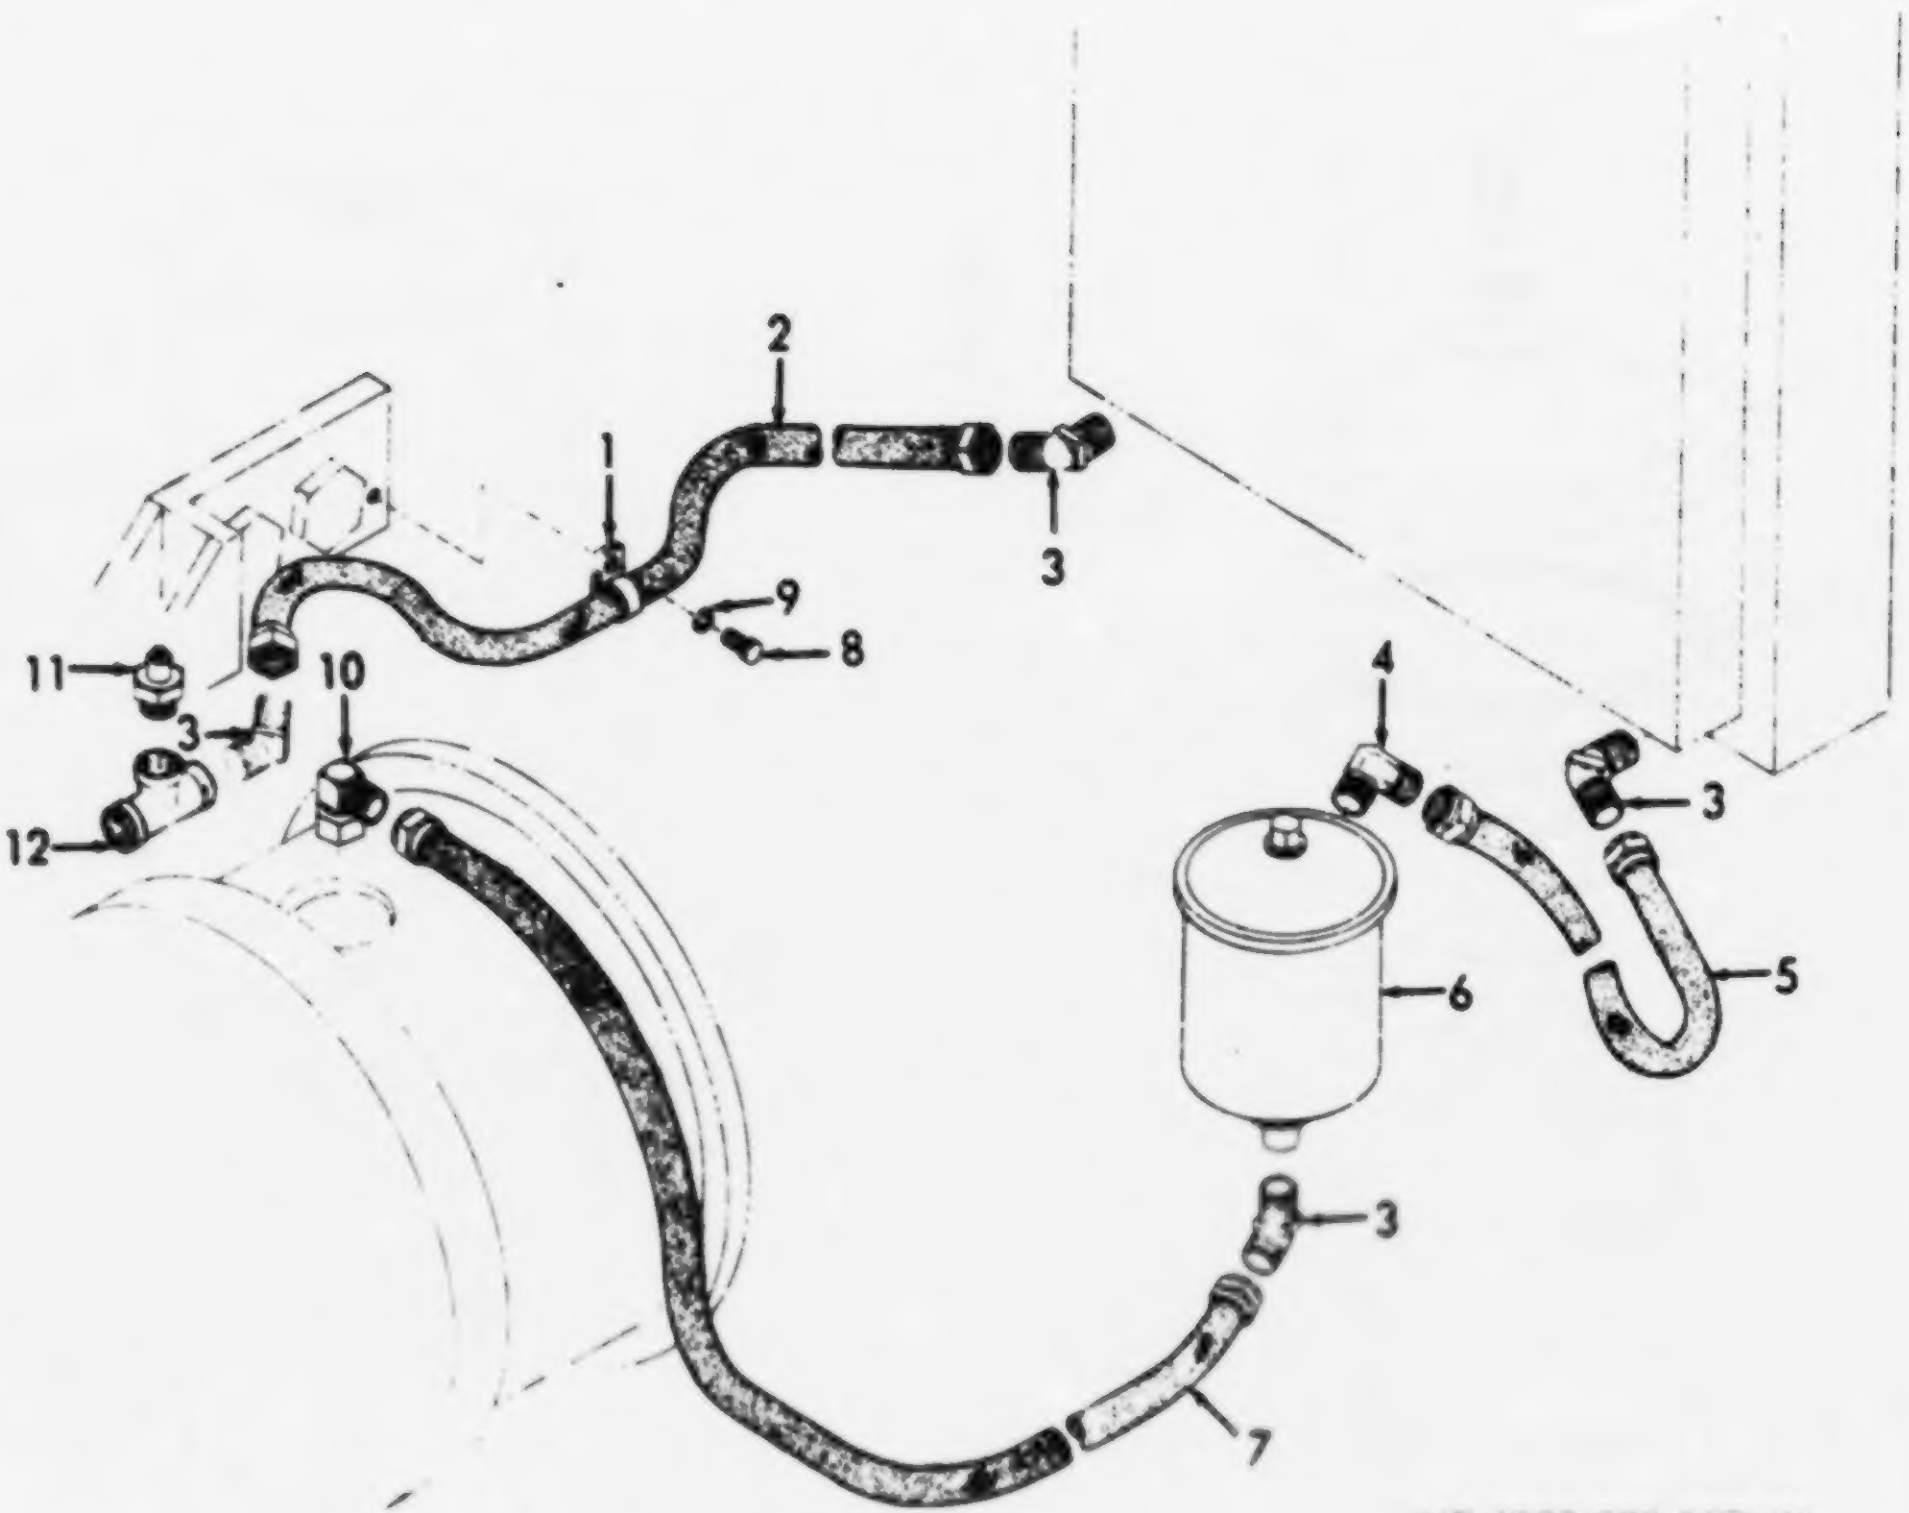

Figure 38. Transmission Lines and Fittings.

ME 3930-231-35P/38

INDEX TO PARTS, FIGURE 38

Reference Number	Functionel Group	Item Neme
1	0721	CLAMP
2	0721	HOSE AY
3	0721	ELBOW
4	0721	ELBOW
5	0721	HOSE AY
6	0721	FILTER
7	0721	HOSE AY
8	0721	BOLT
9	0721	WASHER
10	0721	ELBOW
11	0610	TRANSMITTER
12	0721	TEE

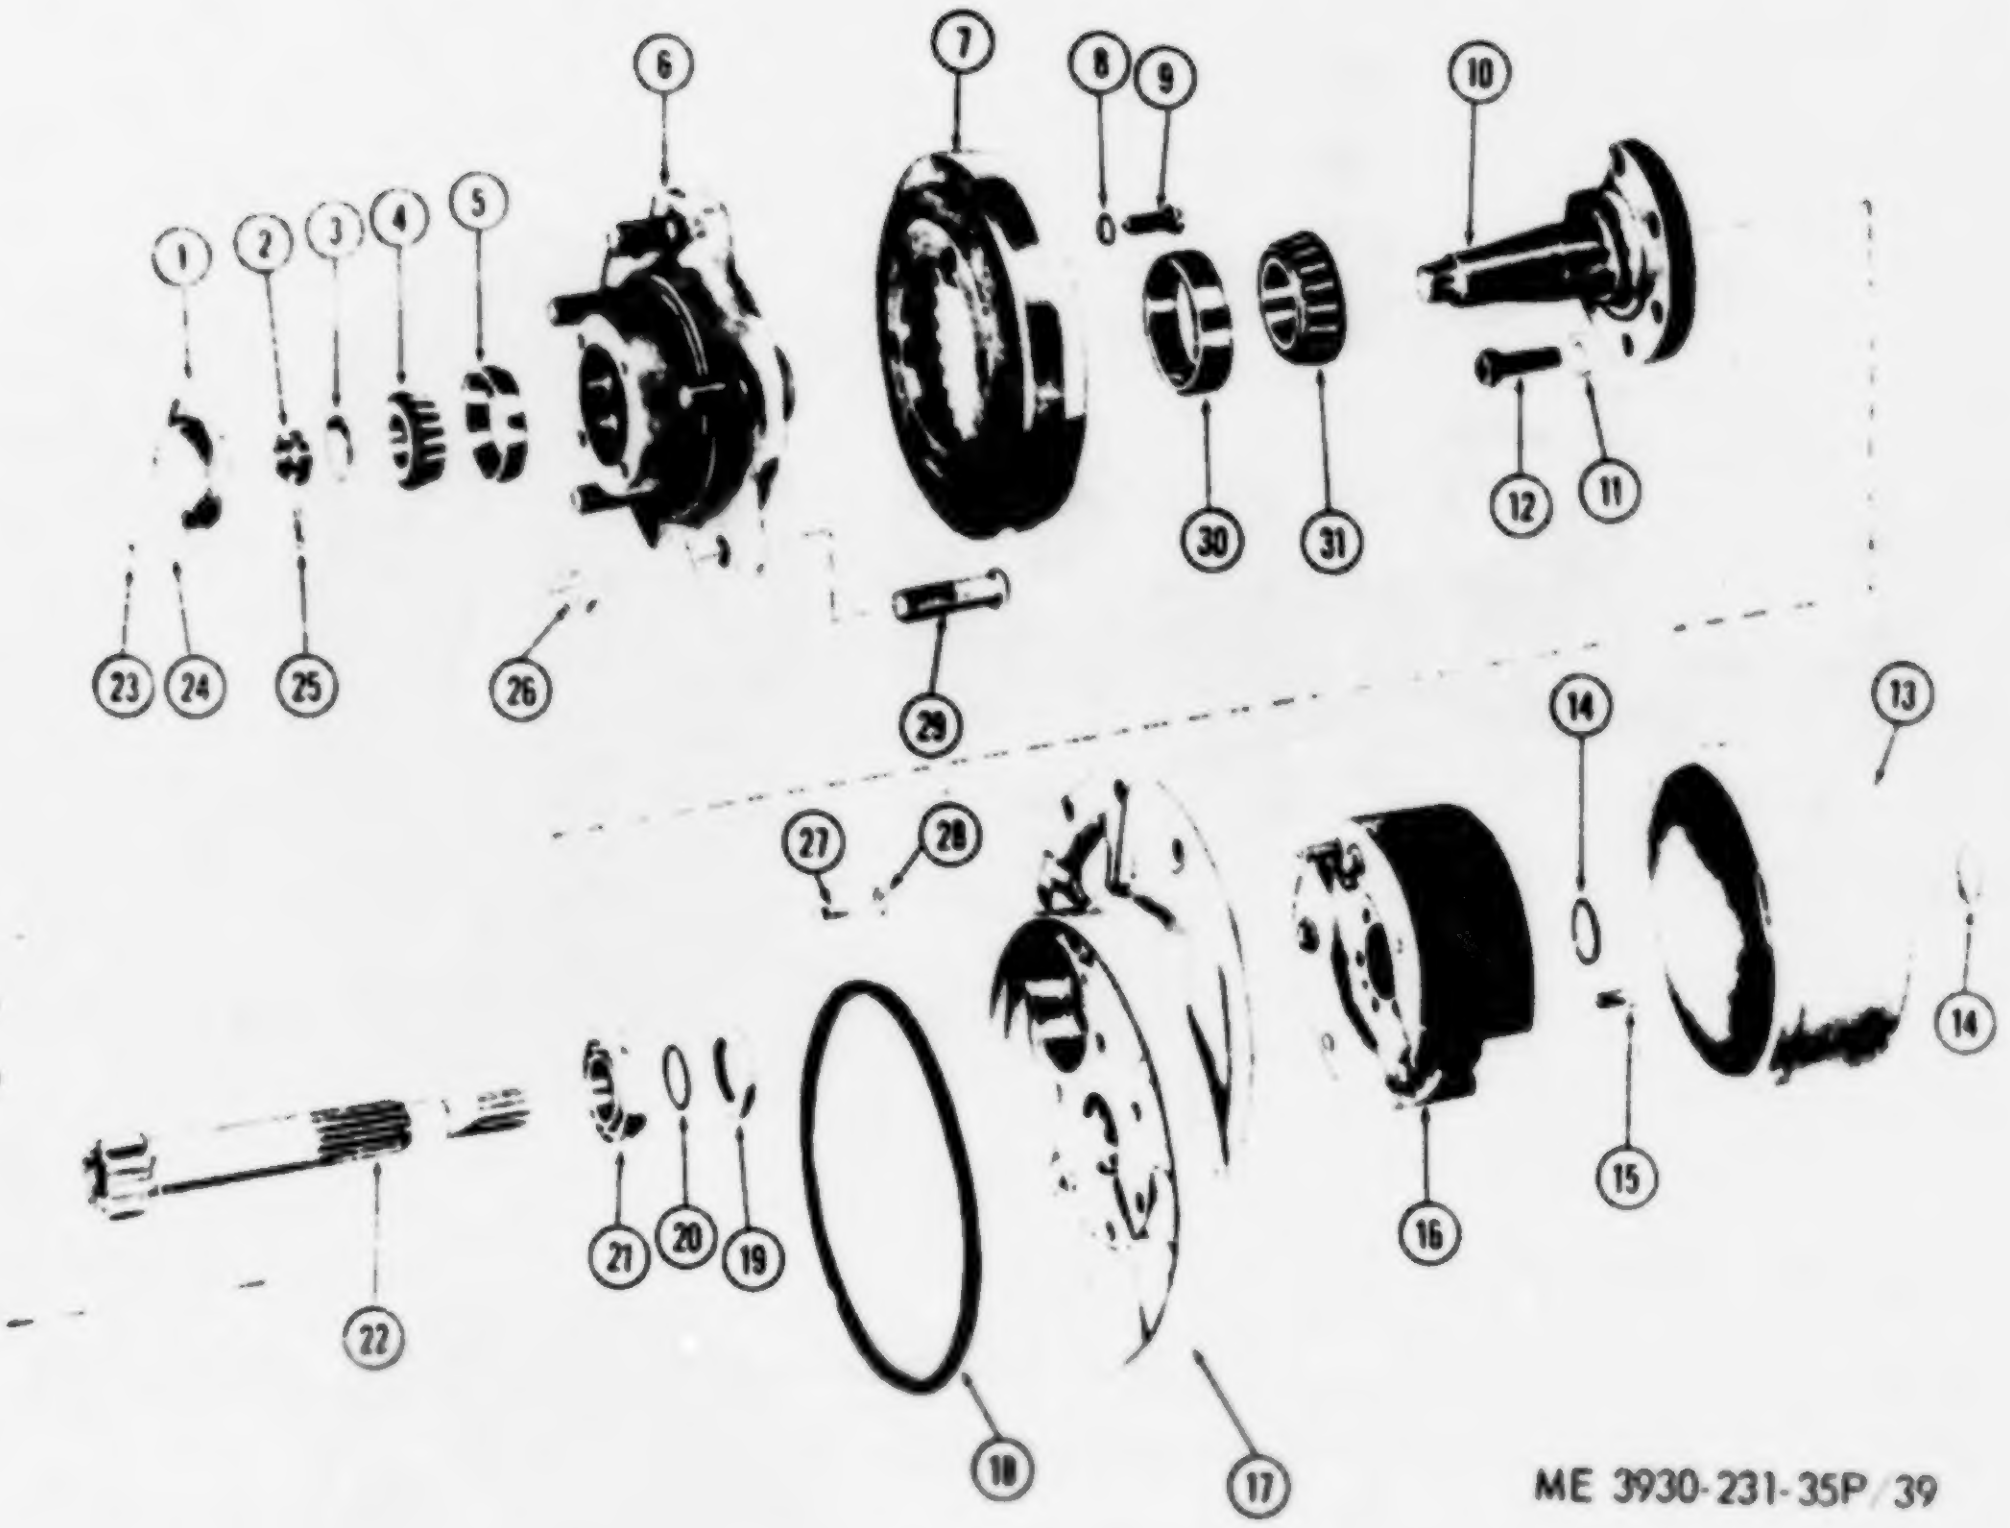
6
7
8
9
10
1
2
3
4
5
12
11
30
31
23
24
25
26
29
14
13
27
28
14
15
16
21
20
19
22
18
17
ME 3930-231-35P/39

Figure 39. Front Drive Axle.

INDEX TO PARTS, FIGURE 39

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	1311	CAP	17	1003	SUPPORT
2	1311	NUT	18	1003	SEAL
3	1311	WASHER	19	1003	SEAL
4	1311	CONE	20	1003	RING
5	1311	CUP	21	1003	BEARING
6	1311	HUB	22	1003	SHAFT
7	1311	GEAR	23	1311	SCREW
8	1311	WASHER	24	1311	WASHER
9	1311	SCREW	25	1311	PIN
10	1000	SPINDLE	26	1311	NUT
11	1000	WASHER	27	1003	SCREW
12	1000	BOLT	28	1003	WASHER
13	1311	BRAKE	29	1311	BOLT
14	1311	RING	30	1000	CUP
15	1311	SCREW	31	1000	CONE
16	1202	BRAKE			

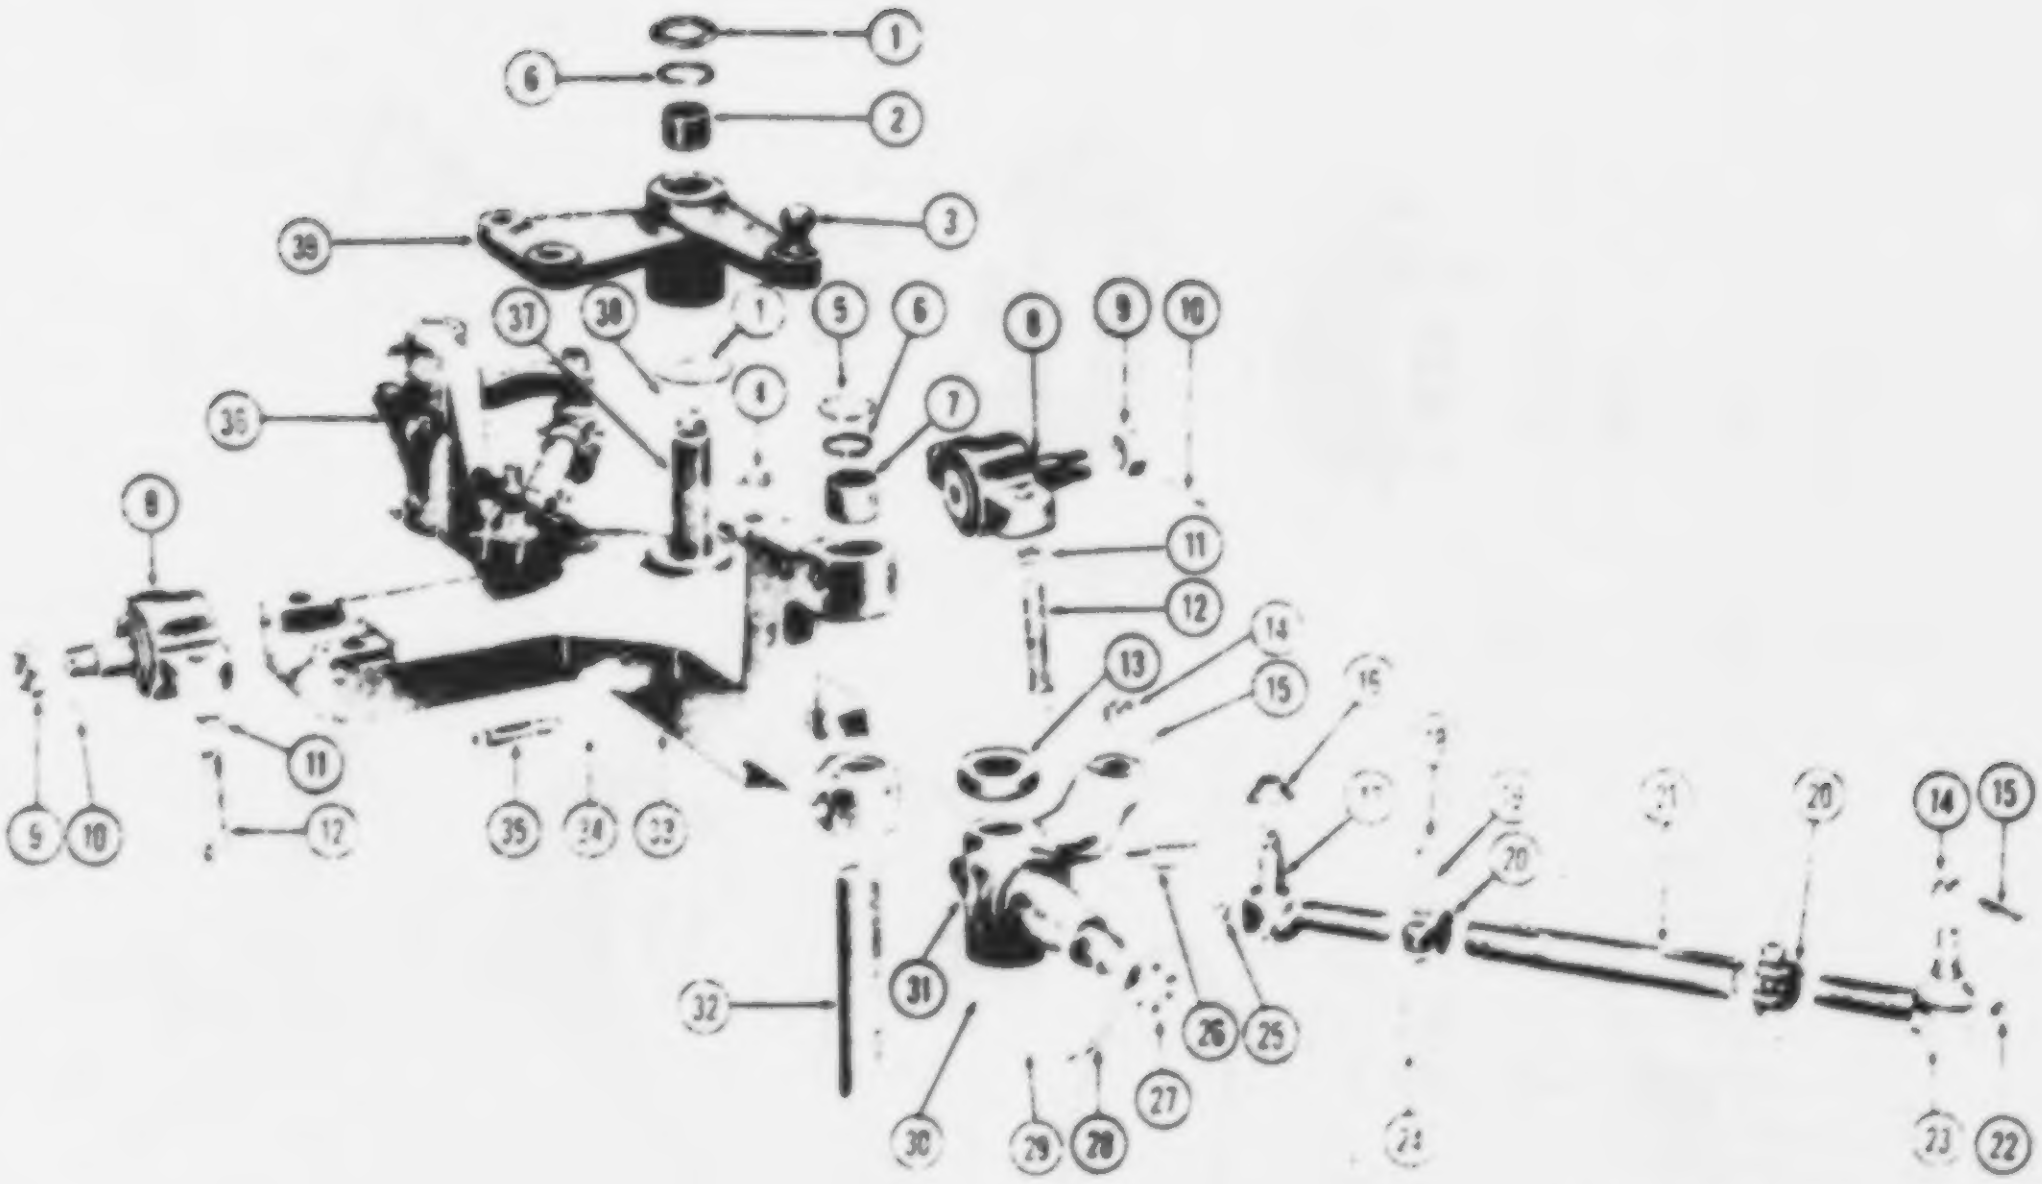
1
6
2
39
3
37
38
1
5
6
4
7
8
9
10
36
8
11
12
13
14
15
16
11
9
10
12
35
34
33
17
19
18
21
20
20
14
15
32
31
26
25
27
30
29
28
24
23
22

ME 3930-231-35P/40

Figure 40. Rear Steering Axle.

INDEX TO PARTS, FIGURE 40

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	1104	WASHER	21	1401	TIE ROD
2	1104	BEARING	22	1401	FITTING
3	1104	STUD	23	1401	END
4	1104	FITTING	24	1401	SCREW
5	1104	PLUG	25	1401	FITTING
6	1104	GASKET	26	1104	KEY
7	1104	BEARING	27	1311	NUT
8	1104	BLOCK	28	1311	PIN
9	1104	NUT	29	1104	WASHER
10	1104	PIN	30	1104	SHIM
11	1104	WASHER	31	1104	SPINDLE
12	1104	SCREW	32	1104	PIN
13	1104	BEARING	33	1104	AXLE
14	1104	NUT	34	1104	NUT
15	1104	PIN	35	1104	SETSCREW
16	1104	CUP	36	1104	SPINDLE
17	1401	END	37	1104	PIN
18	1401	NUT	38	1104	WASHER
19	1401	WASHER	39	1104	SPIDER
20	1401	CLAMP			

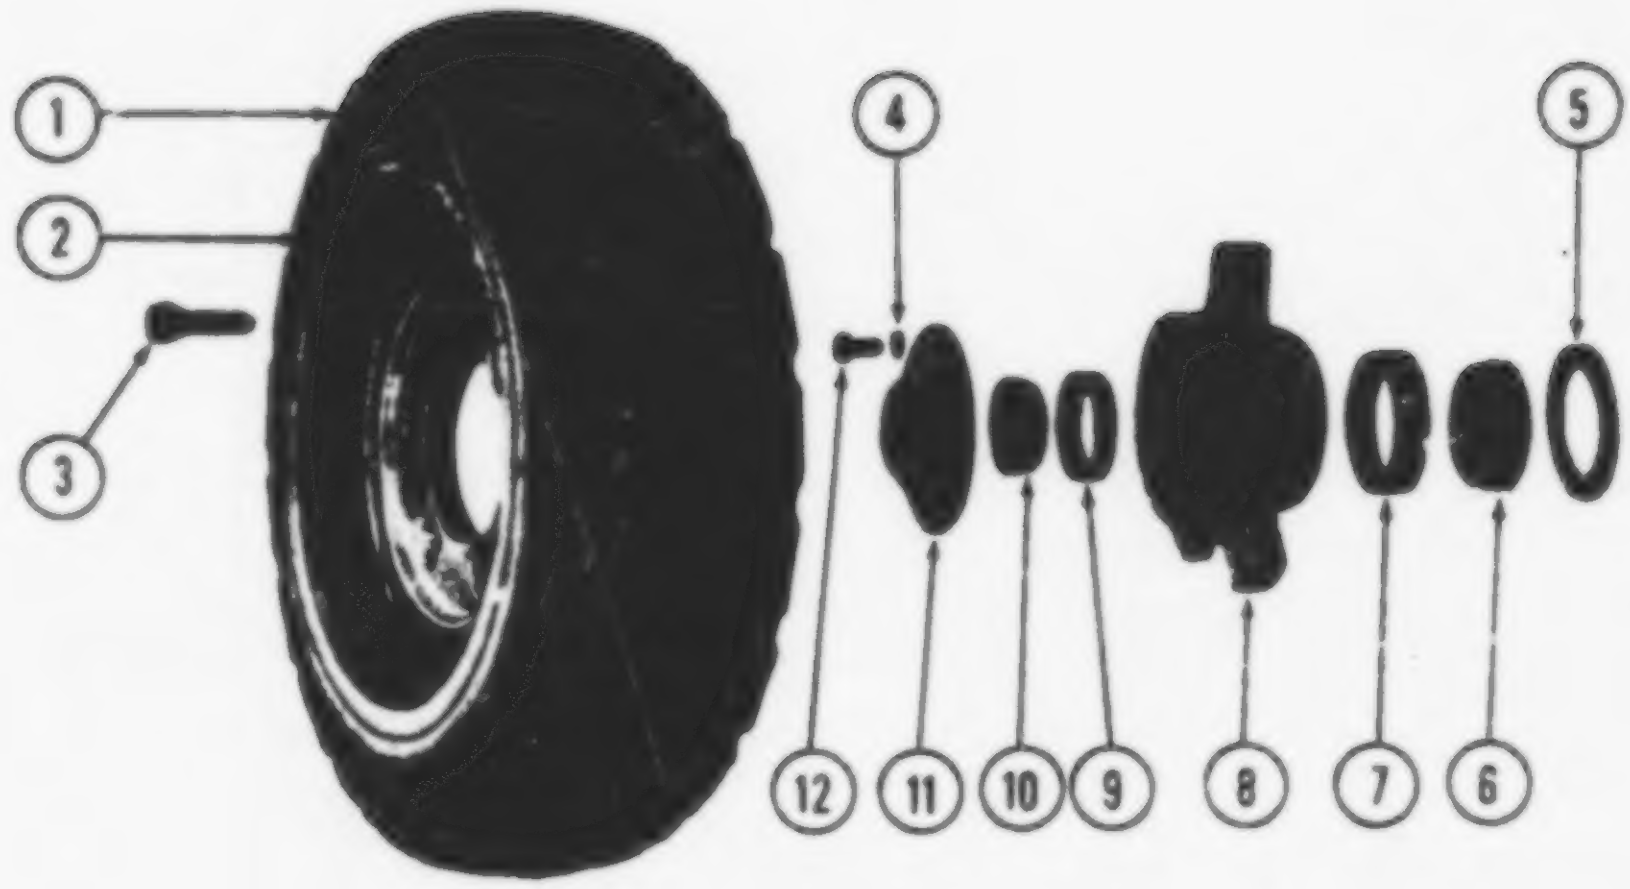

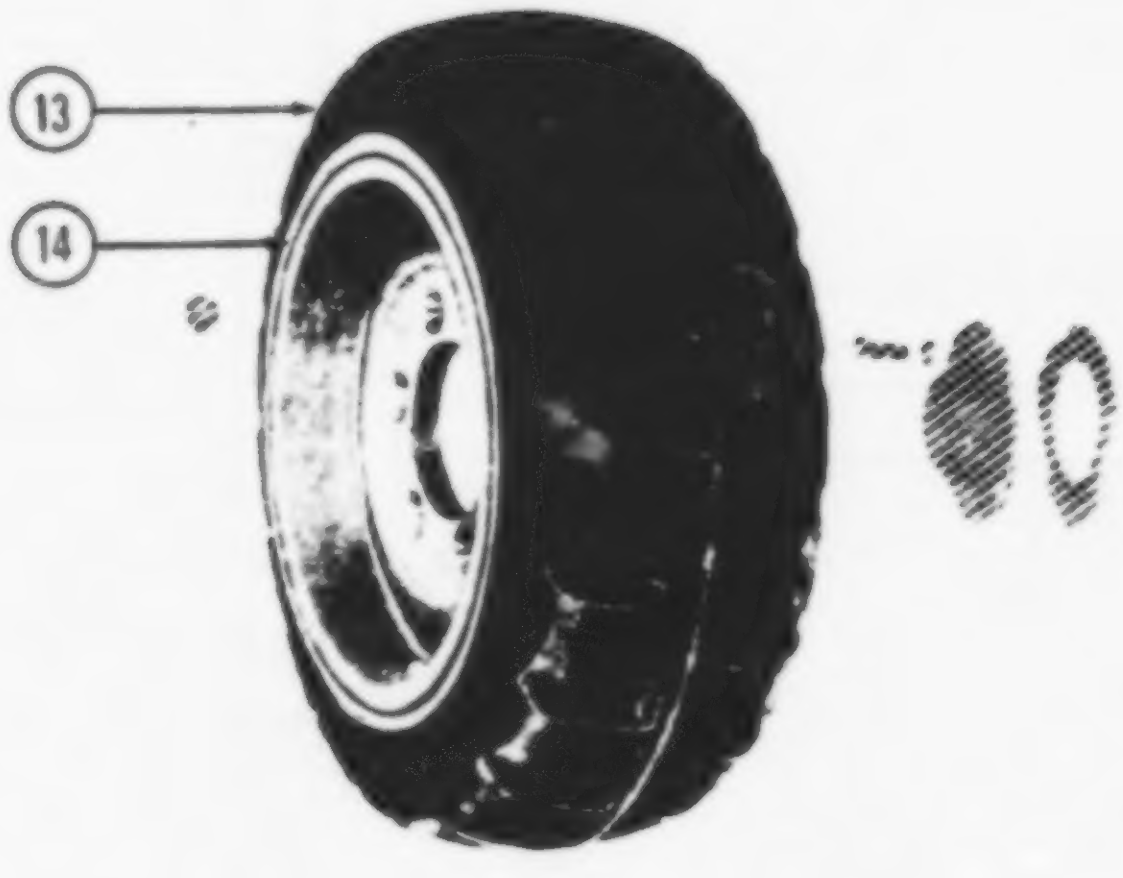

INDEX TO PARTS, FIGURE 41

Reference Number	Functional Group	Item Name
1	1313	TIRE
2	1311	WHEEL
3	1311	BOLT
4	1311	WASHER
5	1311	SEAL
6	1311	CONE
7	1311	CUP
8	1311	HUB
9	1311	CUP
10	1311	CONE
11	1311	CAP
12	1311	SCREW
13	1313	TIRE
14	1311	WHEEL

ME 3930-231-35P/41

Figure 41. Wheels and Tires.

INDEX TO PARTS, FIGURE 42

Reference Number	Functional Group	Item Name
1	1201	BRAKE
2	1201	PIN
3	1201	PIN
4	1201	LEVER
5	1201	PIN
6	1201	NUT
7	1201	PIN

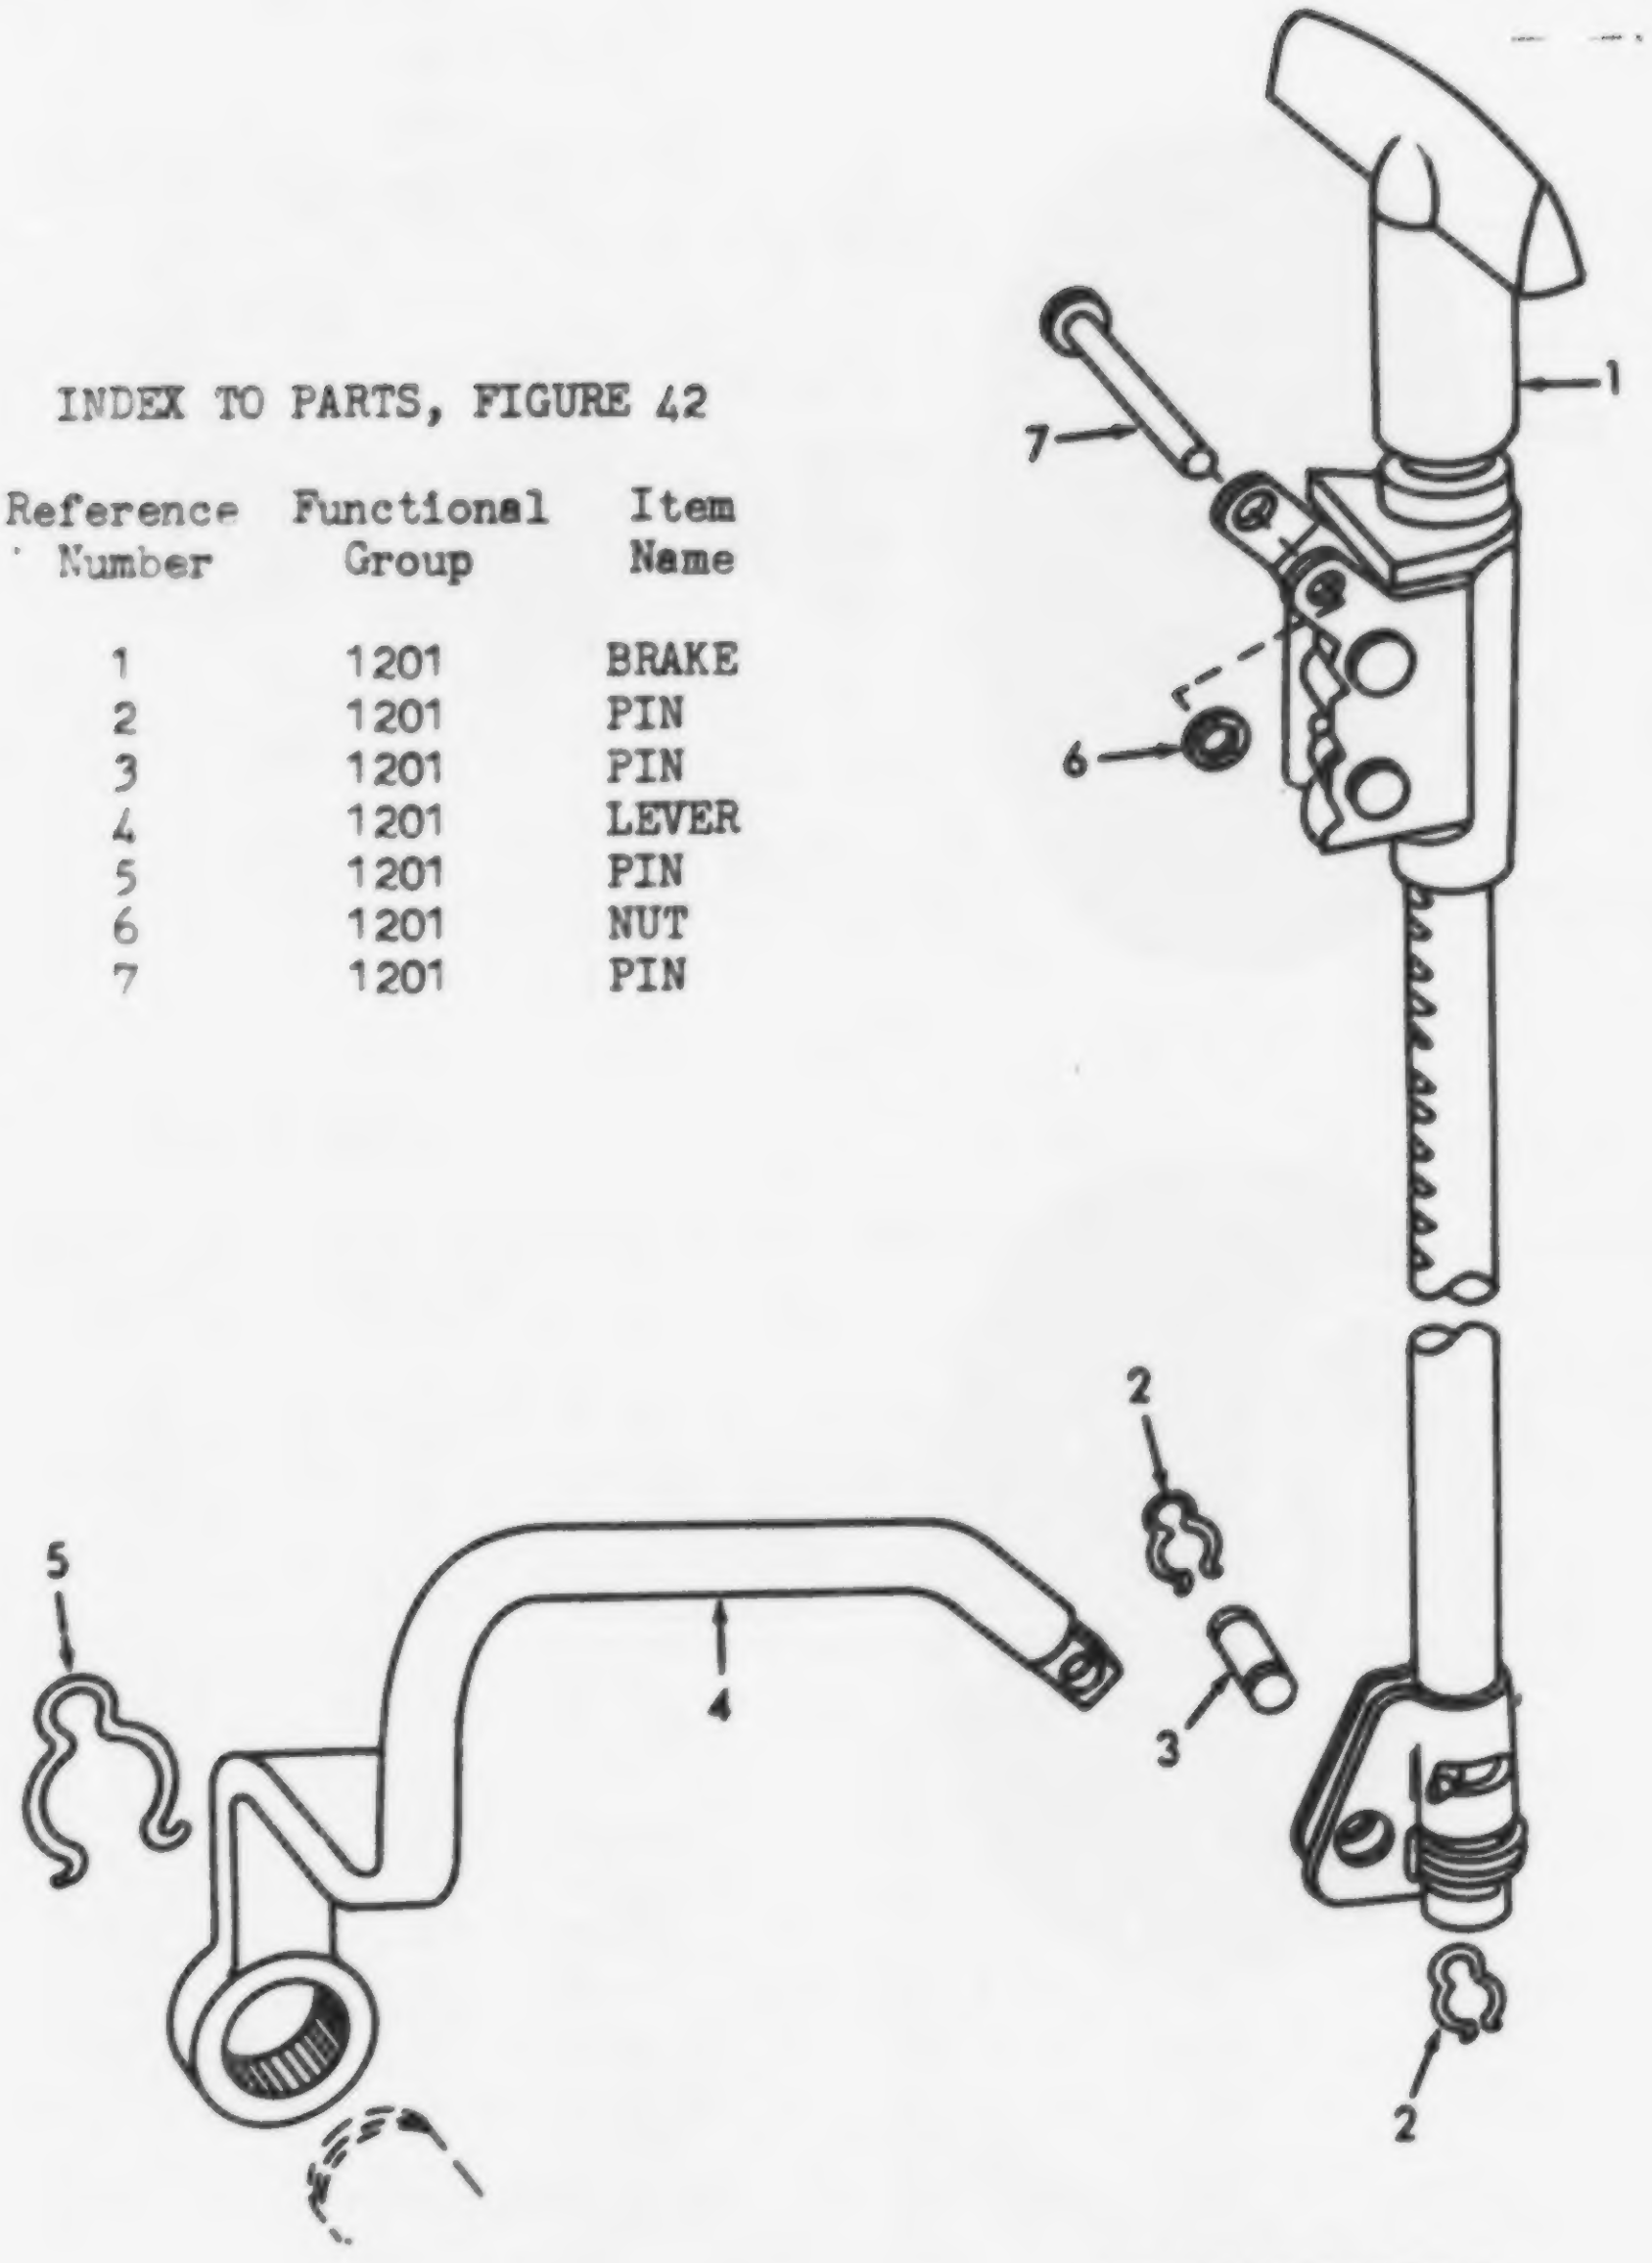

ME 3930-231-35P/42

Figure 42. Parking Brake Lever.

242-451

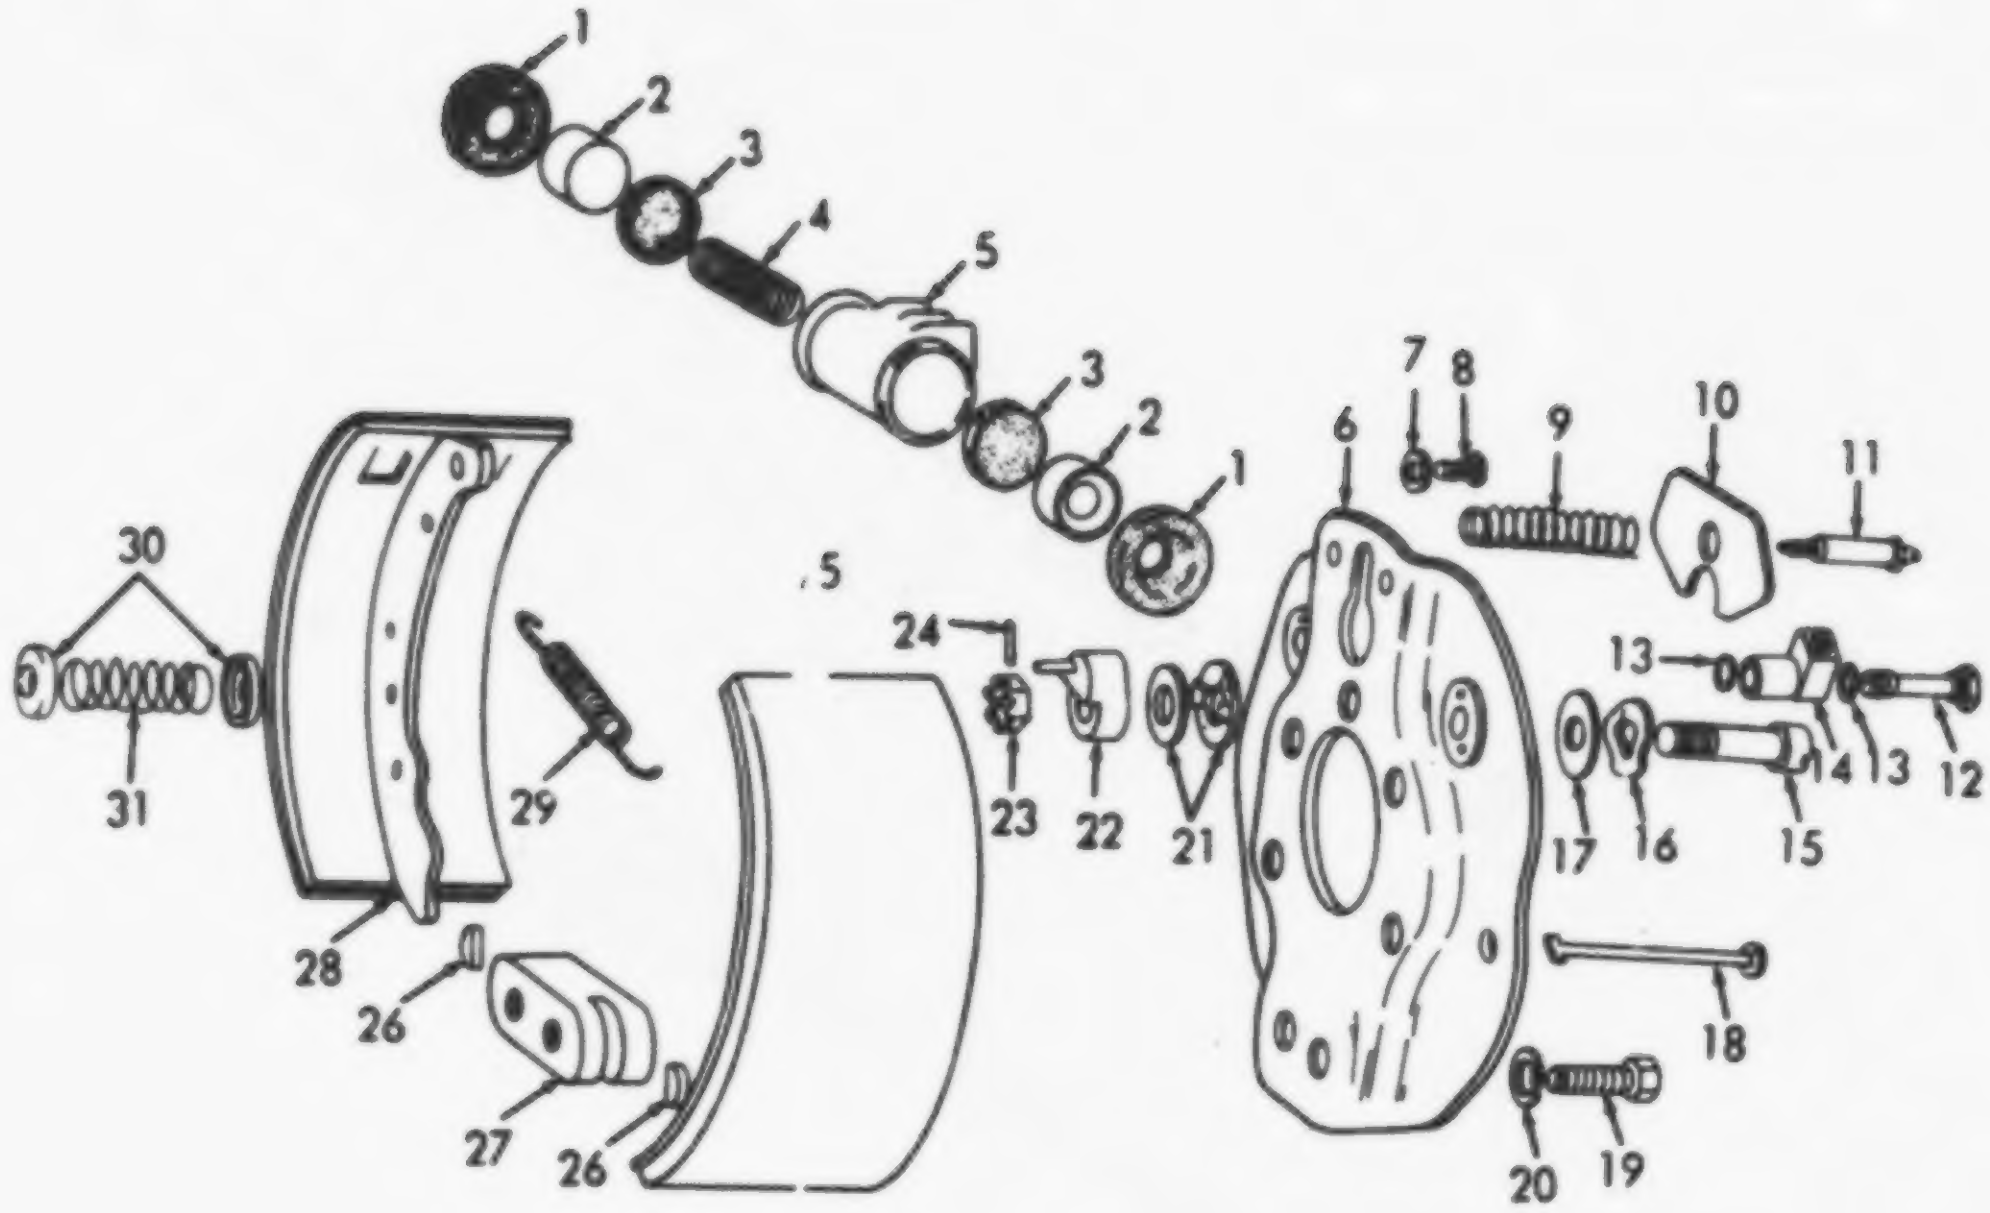
1
2
3
4
5
3
2
1
7
8
6
9
10
11
30
31
29
25
24
23
22
21
13
14
13
12
17
16
15
28
26
27
26
18
20
19

ME 3930-231-35P/43

Figure 43. Service Brake.

INDEX TO PARTS, FIGURE 43

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	1204	BOOT	17	1202	WASHER
2	1204	PISTON	18	1202	PIN
3	1204	CUP	19	1202	BOLT
4	1204	SPRING	20	1202	WASHER
5	1204	CYLINDER	21	1202	WASHER
6	1202	DISC	22	1202	ARM
7	1204	WASHER	23	1202	NUT
8	1204	SCREW	24	1202	PIN
9	1202	SPRING	25	1202	LINING
10	1202	SHEILD	26	1202	KEY
11	1204	SCREW	27	1202	BLOCK
12	1204	BOLT	28	1202	BRAKE
13	1204	GASKET	29	1202	SPRING
14	1204	FITTING	30	1202	CUP
15	1202	BOLT	31	1202	SPRING
16	1202	WASHER			

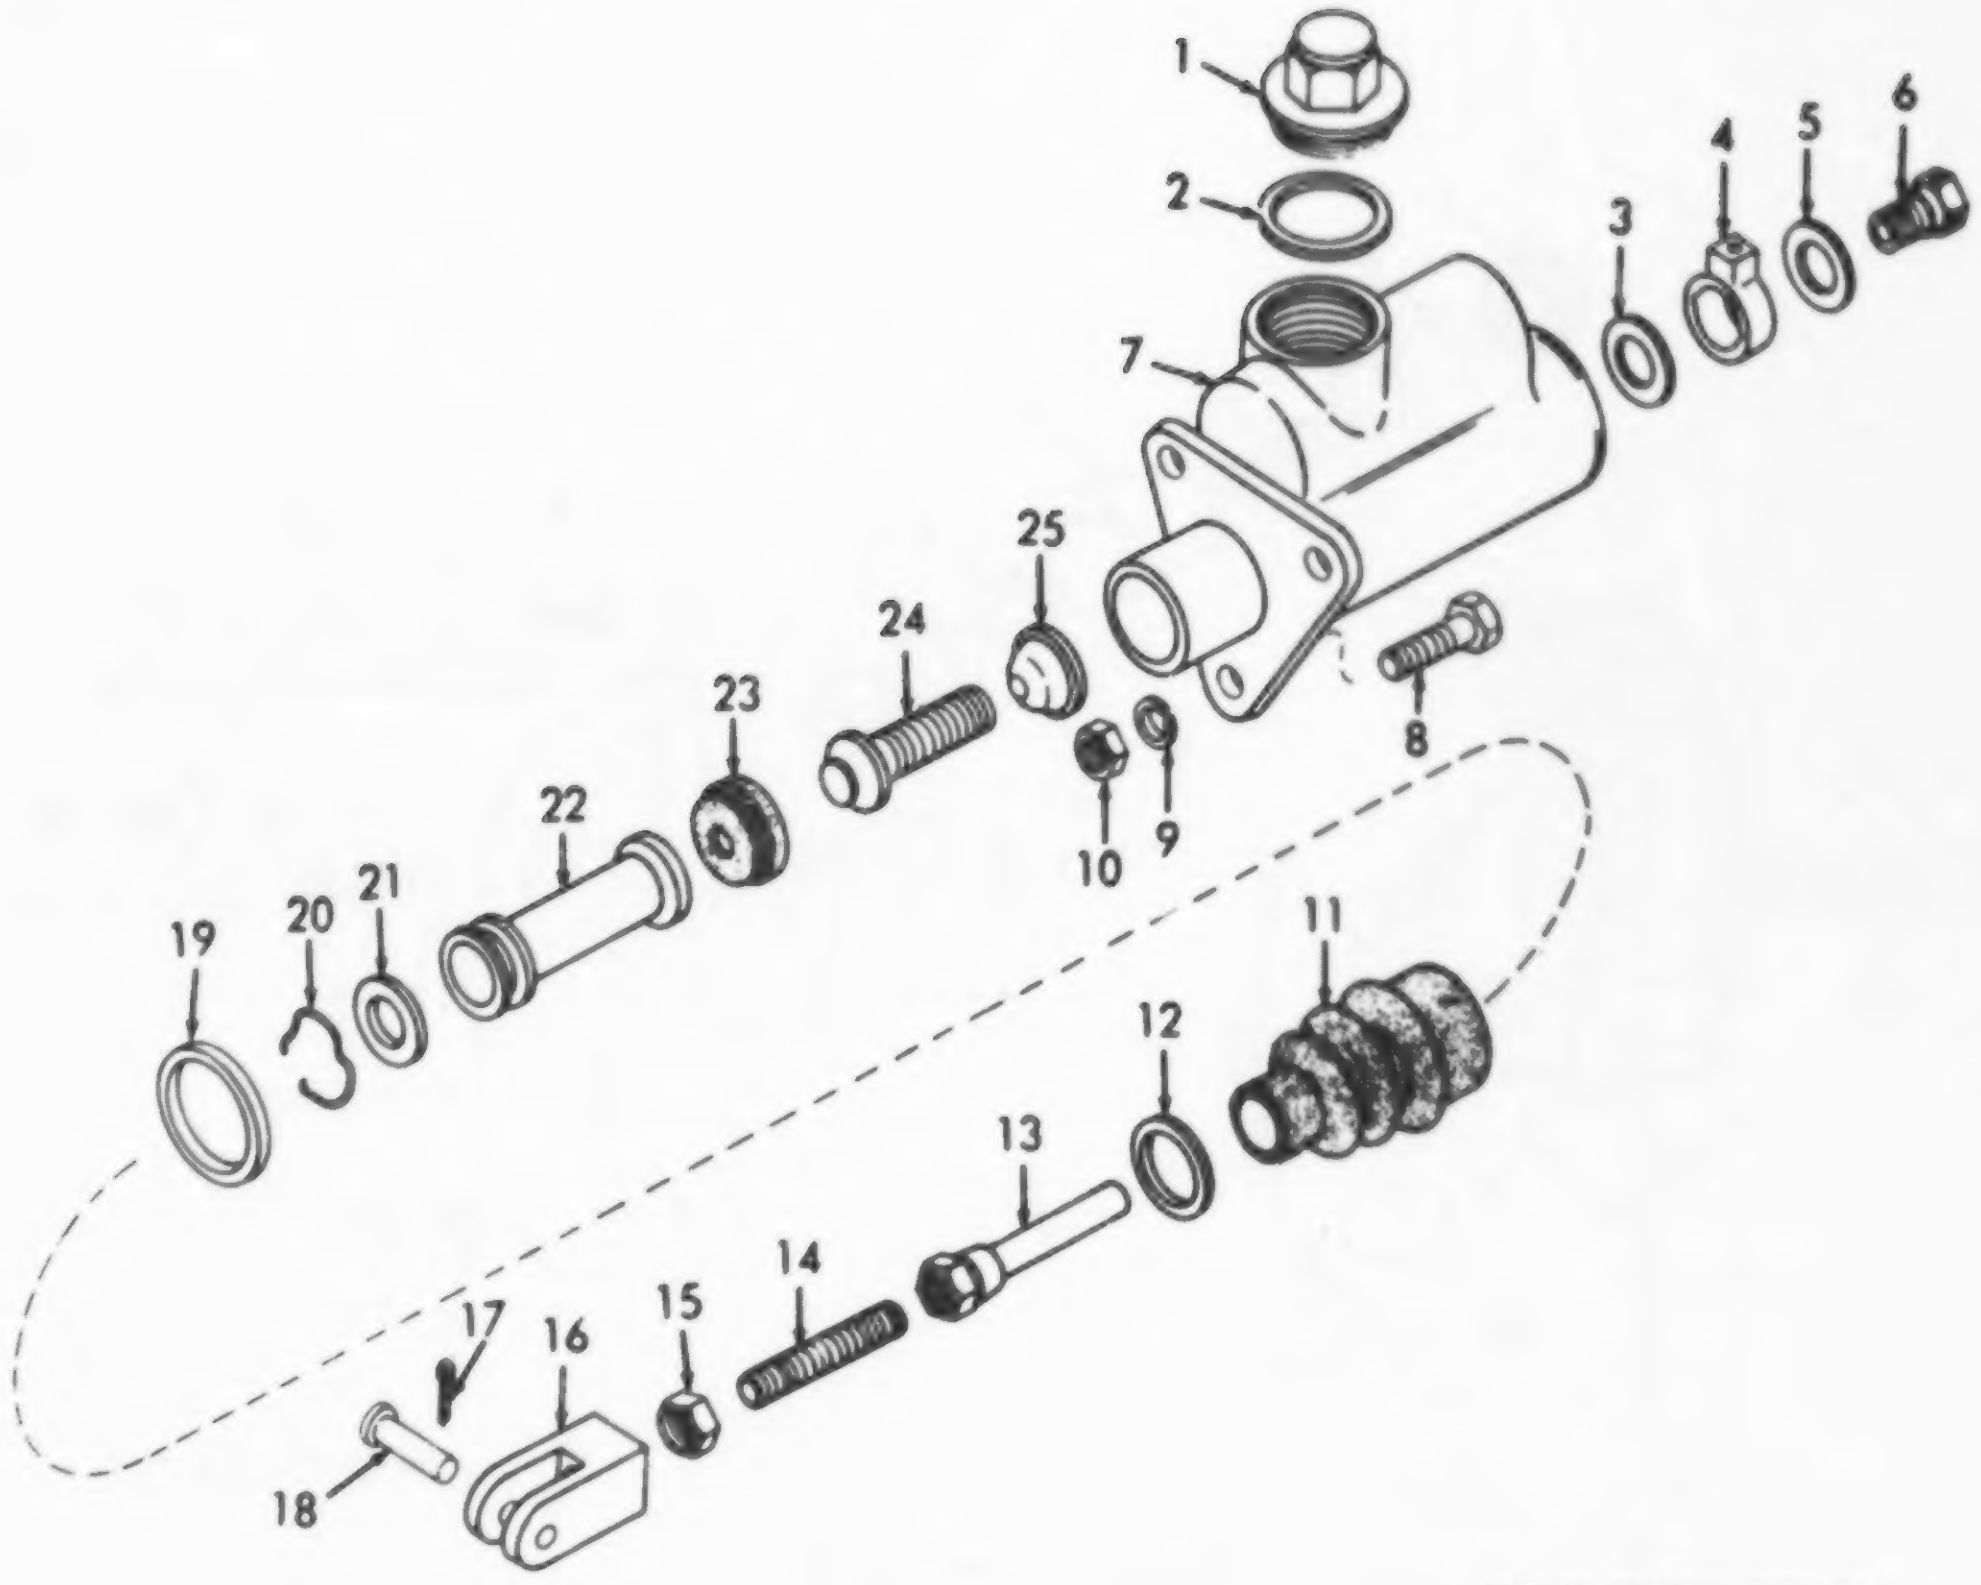

ME 3930-231-35P/44

Figure 44. Master Brake Cylinder.

INDEX TO PARTS, FIGURE 44

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	1204	CAP	14	1204	STUD
2	1204	WASHER	15	1204	NUT
3	1204	GASKET	16	1204	YOKE
4	1204	FITTING	17	1204	PIN
5	1204	GASKET	18	1204	PIN
6	1204	BOLT	19	1204	RING
7	1204	CYLINDER	20	1204	WIRE
8	1204	SCREW	21	1204	WASHER
9	1204	WASHER	22	1204	PISTON
10	1204	NUT	23	1204	CUP
11	1204	BELLOWS	24	1204	SPRING
12	1204	RING	25	1204	VALVE
13	1204	ROD			

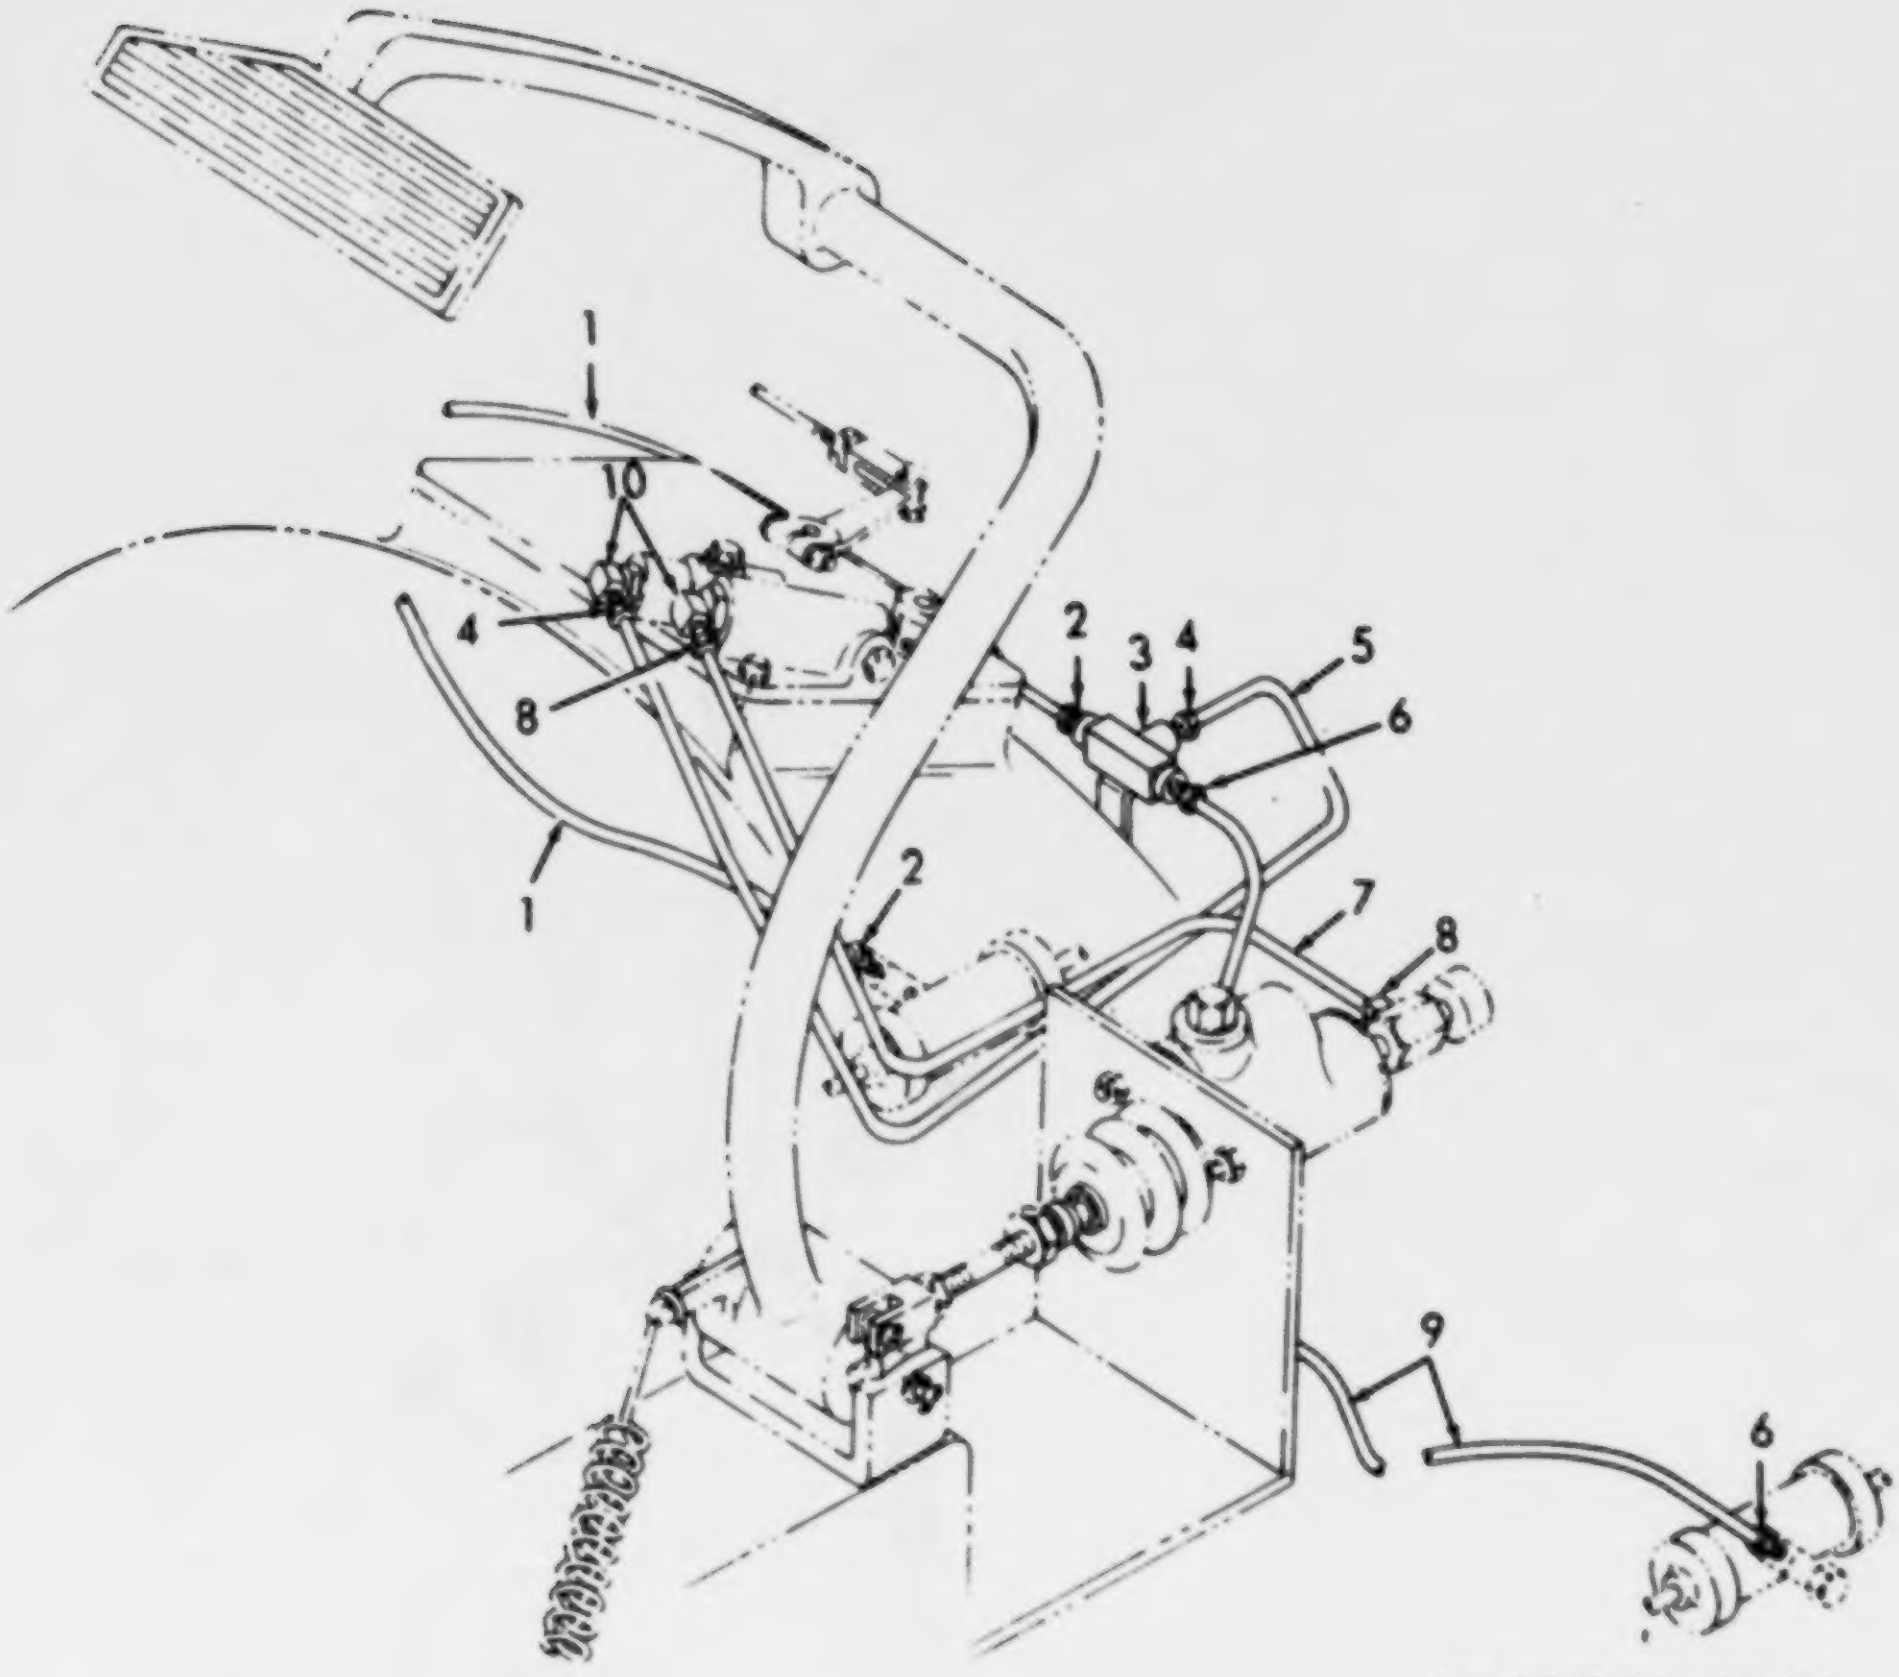
1
10
4
8
1
2
3
4
5
6
2
7
8
9
6
ME 3930-231-35P/45

Figure 45. Brake Lines and Fittings.

INDEX TO PARTS, FIGURE 45

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	1204	LINE	6	1204	INVERTED NUT
2	1204	INVERTED NUT	7	1204	LINE
3	1204	TEE	8	1204	INVERTED NUT
4	1204	INVERTED NUT	9	1204	LINE
5	1204	LINE	10	1204	ELBOW

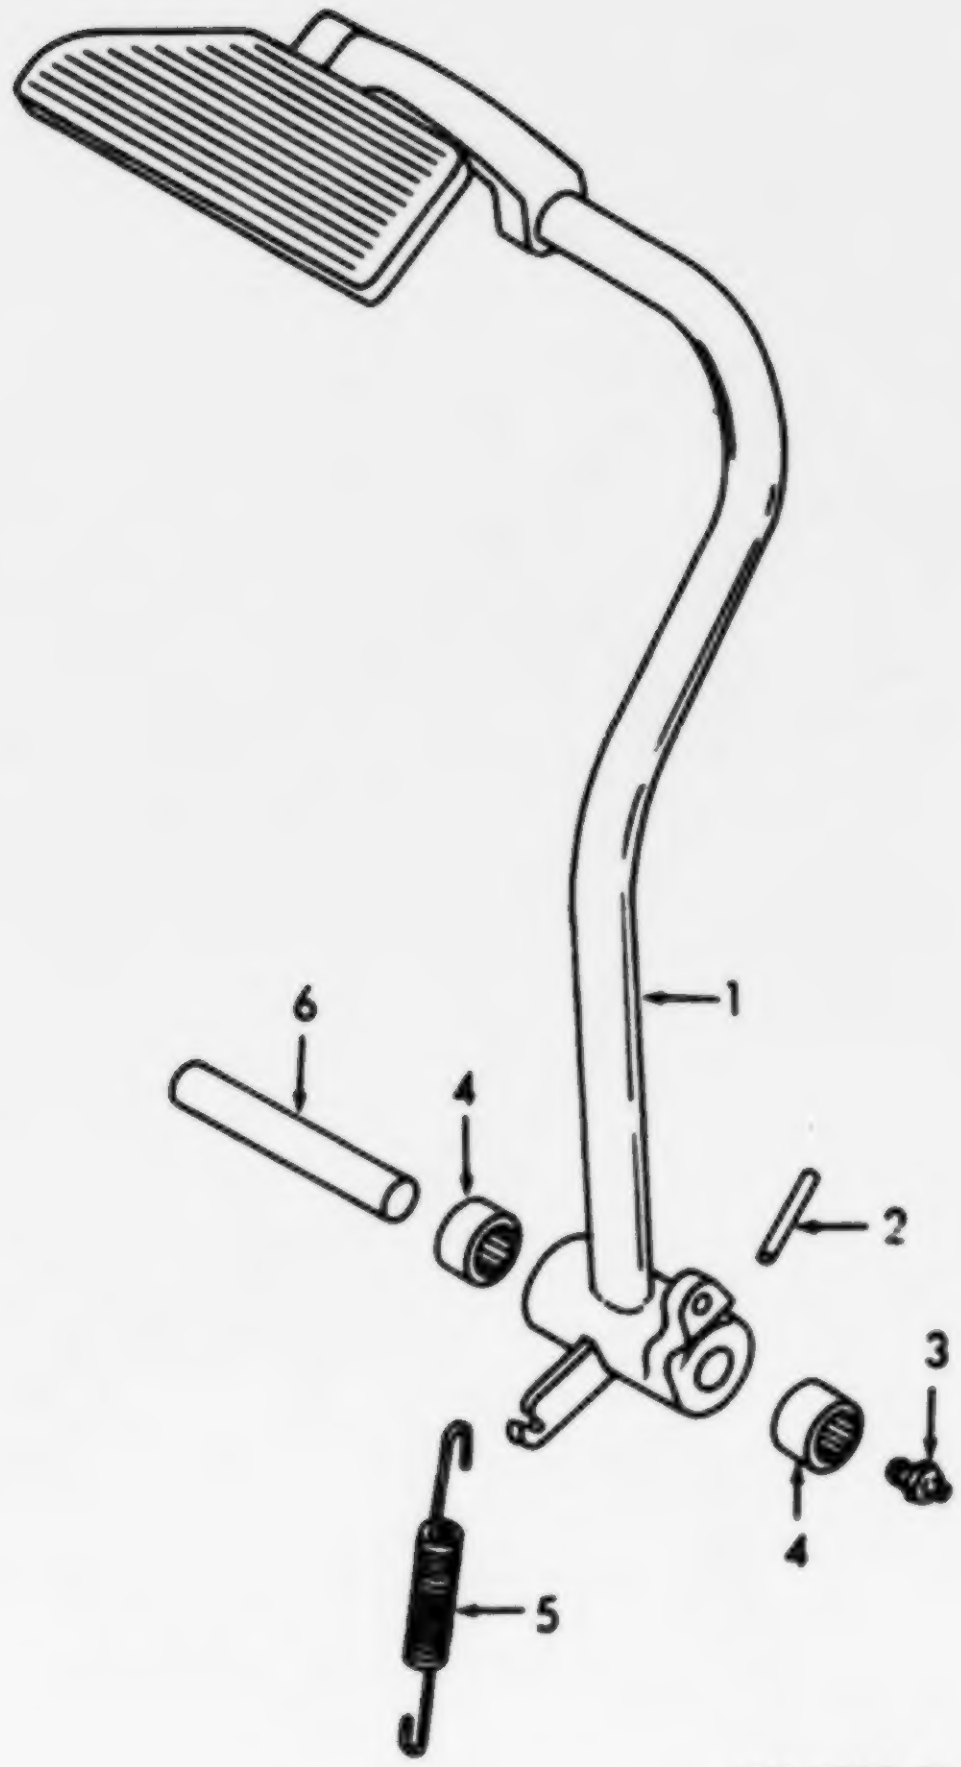

ME 3930-231-35P/46

Figure 46. Brake Pedal and Linkage.

INDEX TO PARTS, FIGURE 46

Reference Number	Functional Group	Item Name
1	1206	ARM
2	1206	PIN
3	1206	FITTING
4	1206	BEARING
5	1206	SPRING
6	1206	PIN

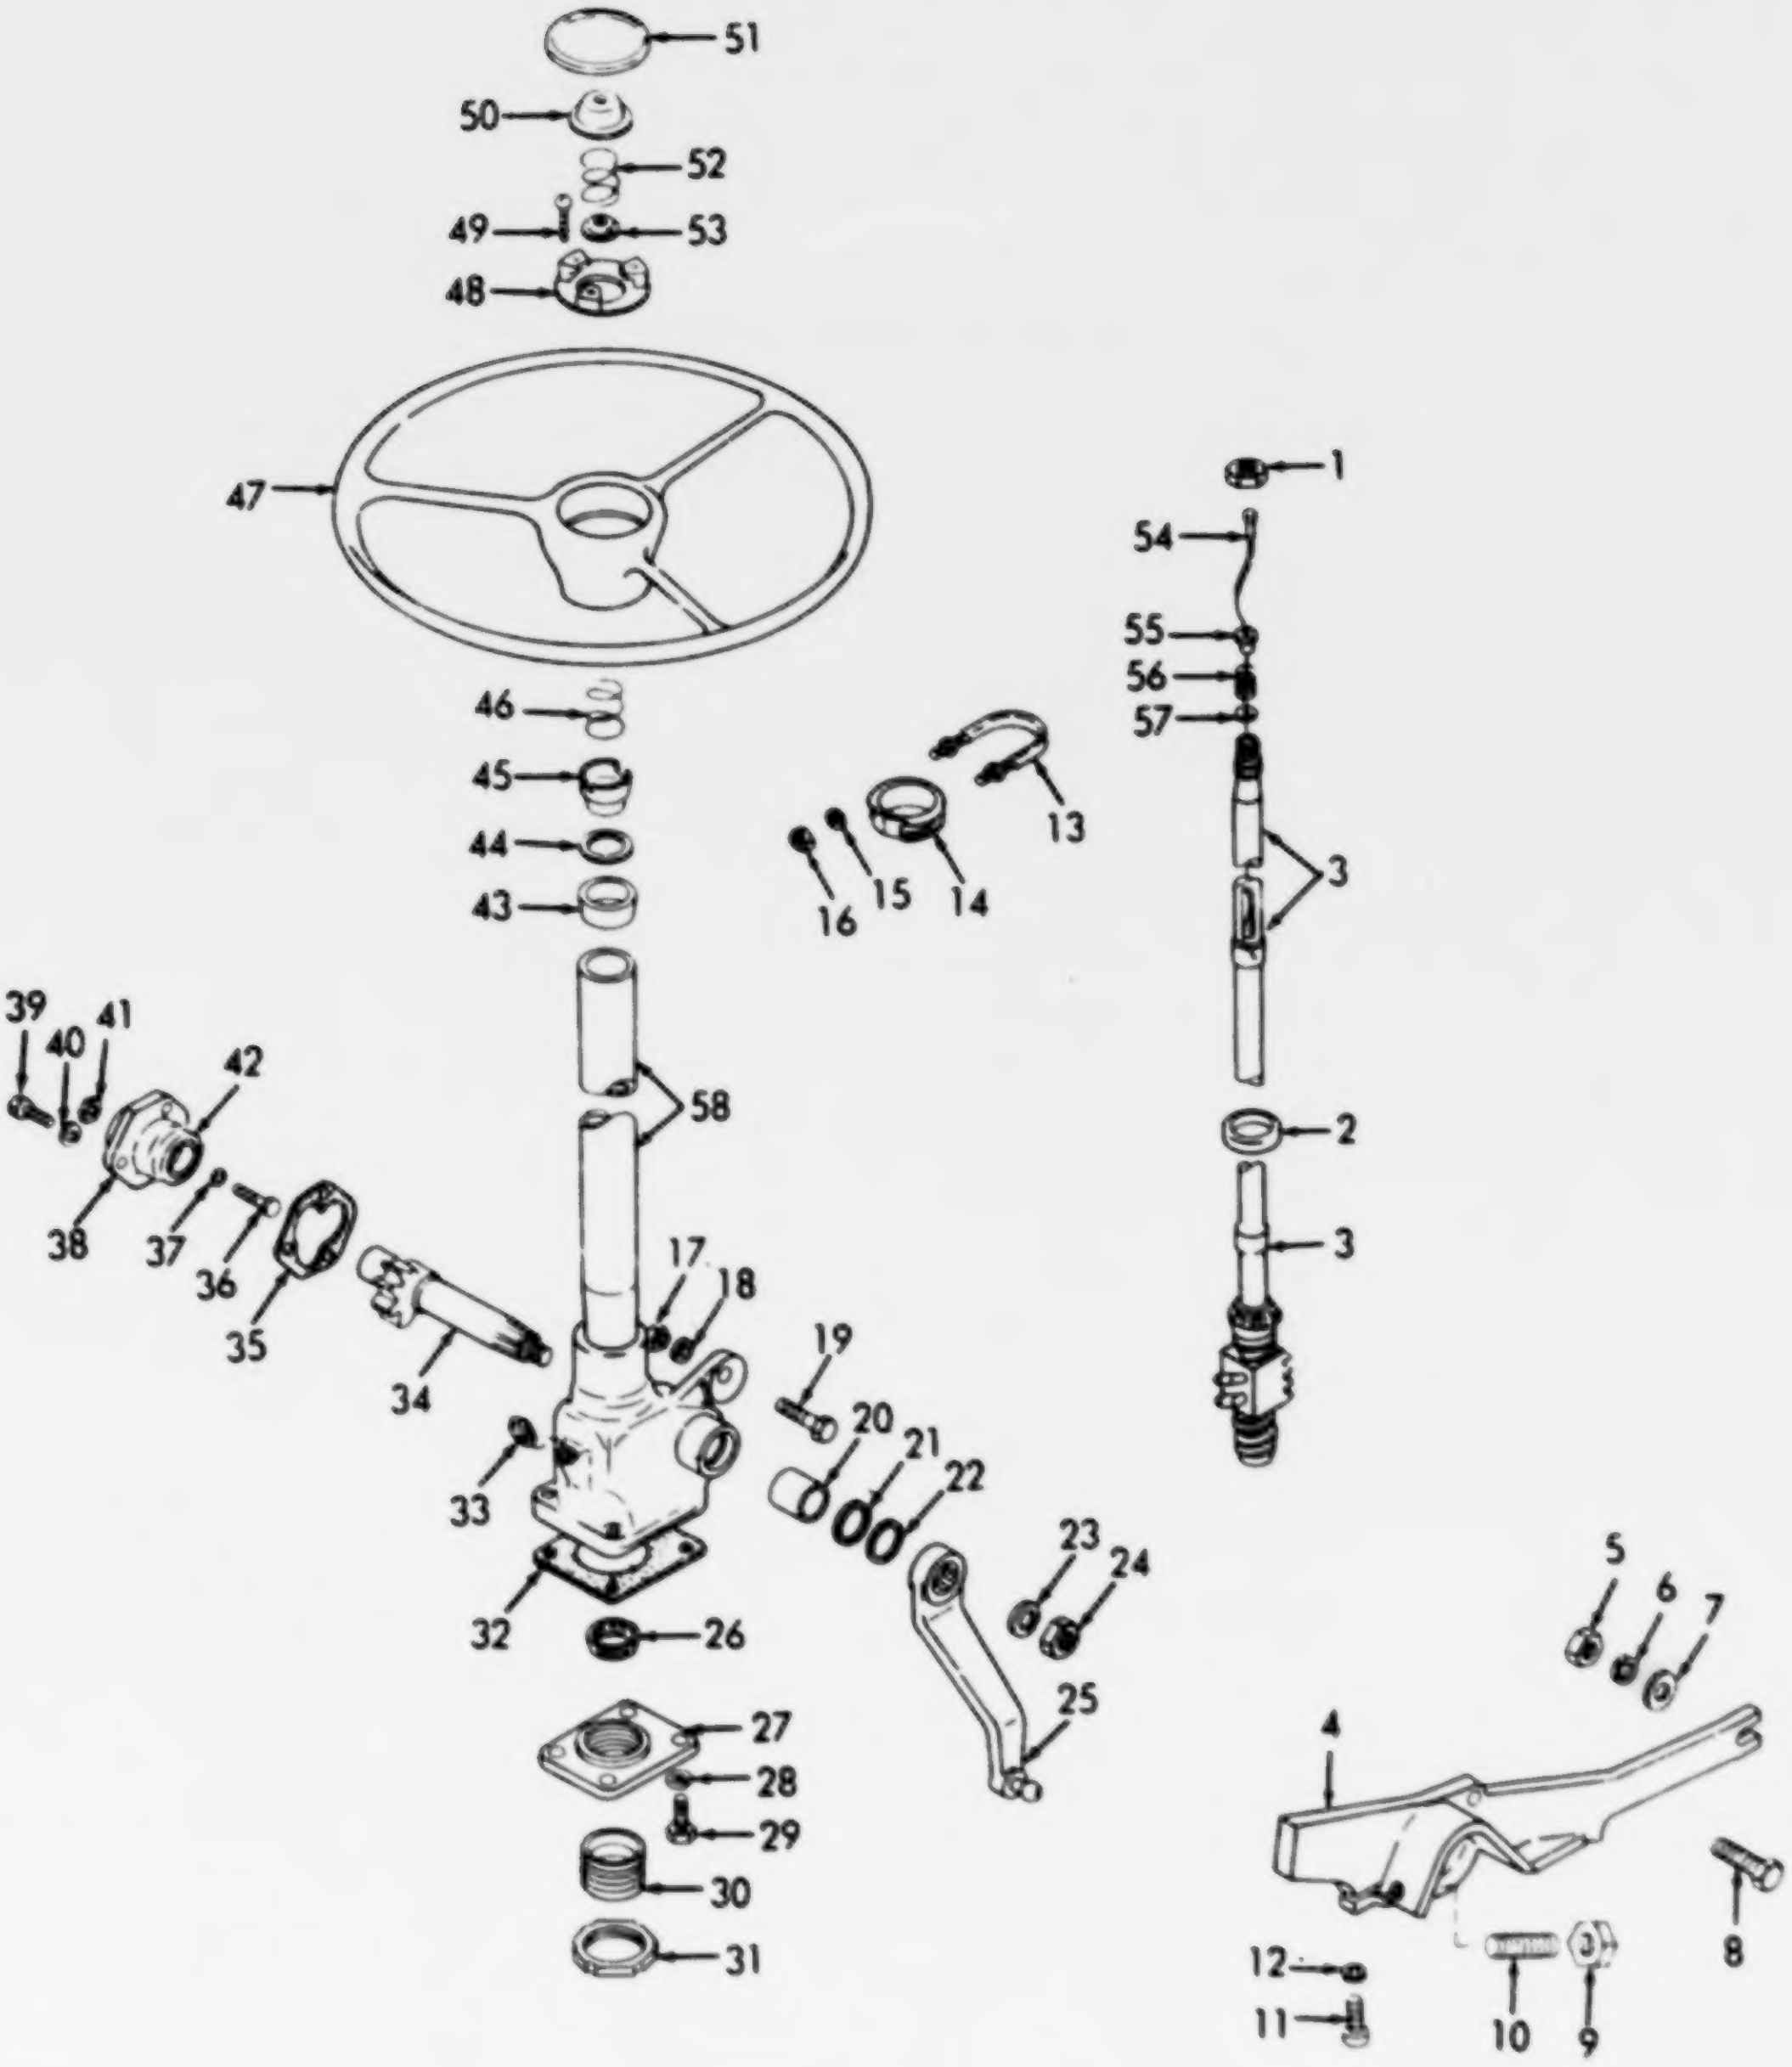
51
50
52
49
53
48
47
1
54
55
56
57
13
3
16
15
14
46
45
44
43
39
40
41
42
58
2
38
37
36
35
34
17
18
19
20
21
22
33
32
26
23
24
25
27
28
29
30
31
5
6
7
4
8
12
11
10
9

ME 3930-231-35P/47

Figure 47. Steering Gear.

INDEX TO PARTS, FIGURE 47

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	1401	NUT	30	1401	ADJUSTER
2	1401	RING	31	1401	NUT
3	1401	SHAFT	32	1401	GASKET
4	1401	SUPPORT	33	1401	PLUG
5	1401	NUT	34	1401	SHAFT
6	1401	WASHER	35	1401	GASKET
7	1401	WASHER	36	1401	ADJUSTER
8	1401	SCREW	37	1401	SHIM
9	1401	NUT	38	1401	COVER
10	1401	SETSCREW	39	1401	SCREW
11	1401	SCREW	40	1401	WASHER
12	1401	SPACER	41	1401	NUT
13	1401	BOLT	42	1401	BUSHING
14	1401	CUSHION	43	1401	ADAPTER
15	1401	WASHER	44	1401	WASHER
16	1401	NUT	45	1401	BEARING
17	1401	NUT	46	1401	SPRING
18	1401	WASHER	47	1401	STEERING WHEEL
19	1401	SCREW	48	0611	PLATE
20	1401	BEARING	49	0611	SCREW
21	1401	WASHER	50	0611	CUP
22	1401	RETAINER	51	0611	BUTTON
23	1401	WASHER	52	0611	SPRING
24	1401	NUT	53	0611	CONTACT
25	1401	ARM	54	0611	CABLE
26	1401	RETAINER	55	0611	FERRULE
27	1401	COVER	56	0611	SPRING
28	1401	WASHER	57	0611	WASHER
29	1401	SCREW	58	1401	HOUSING

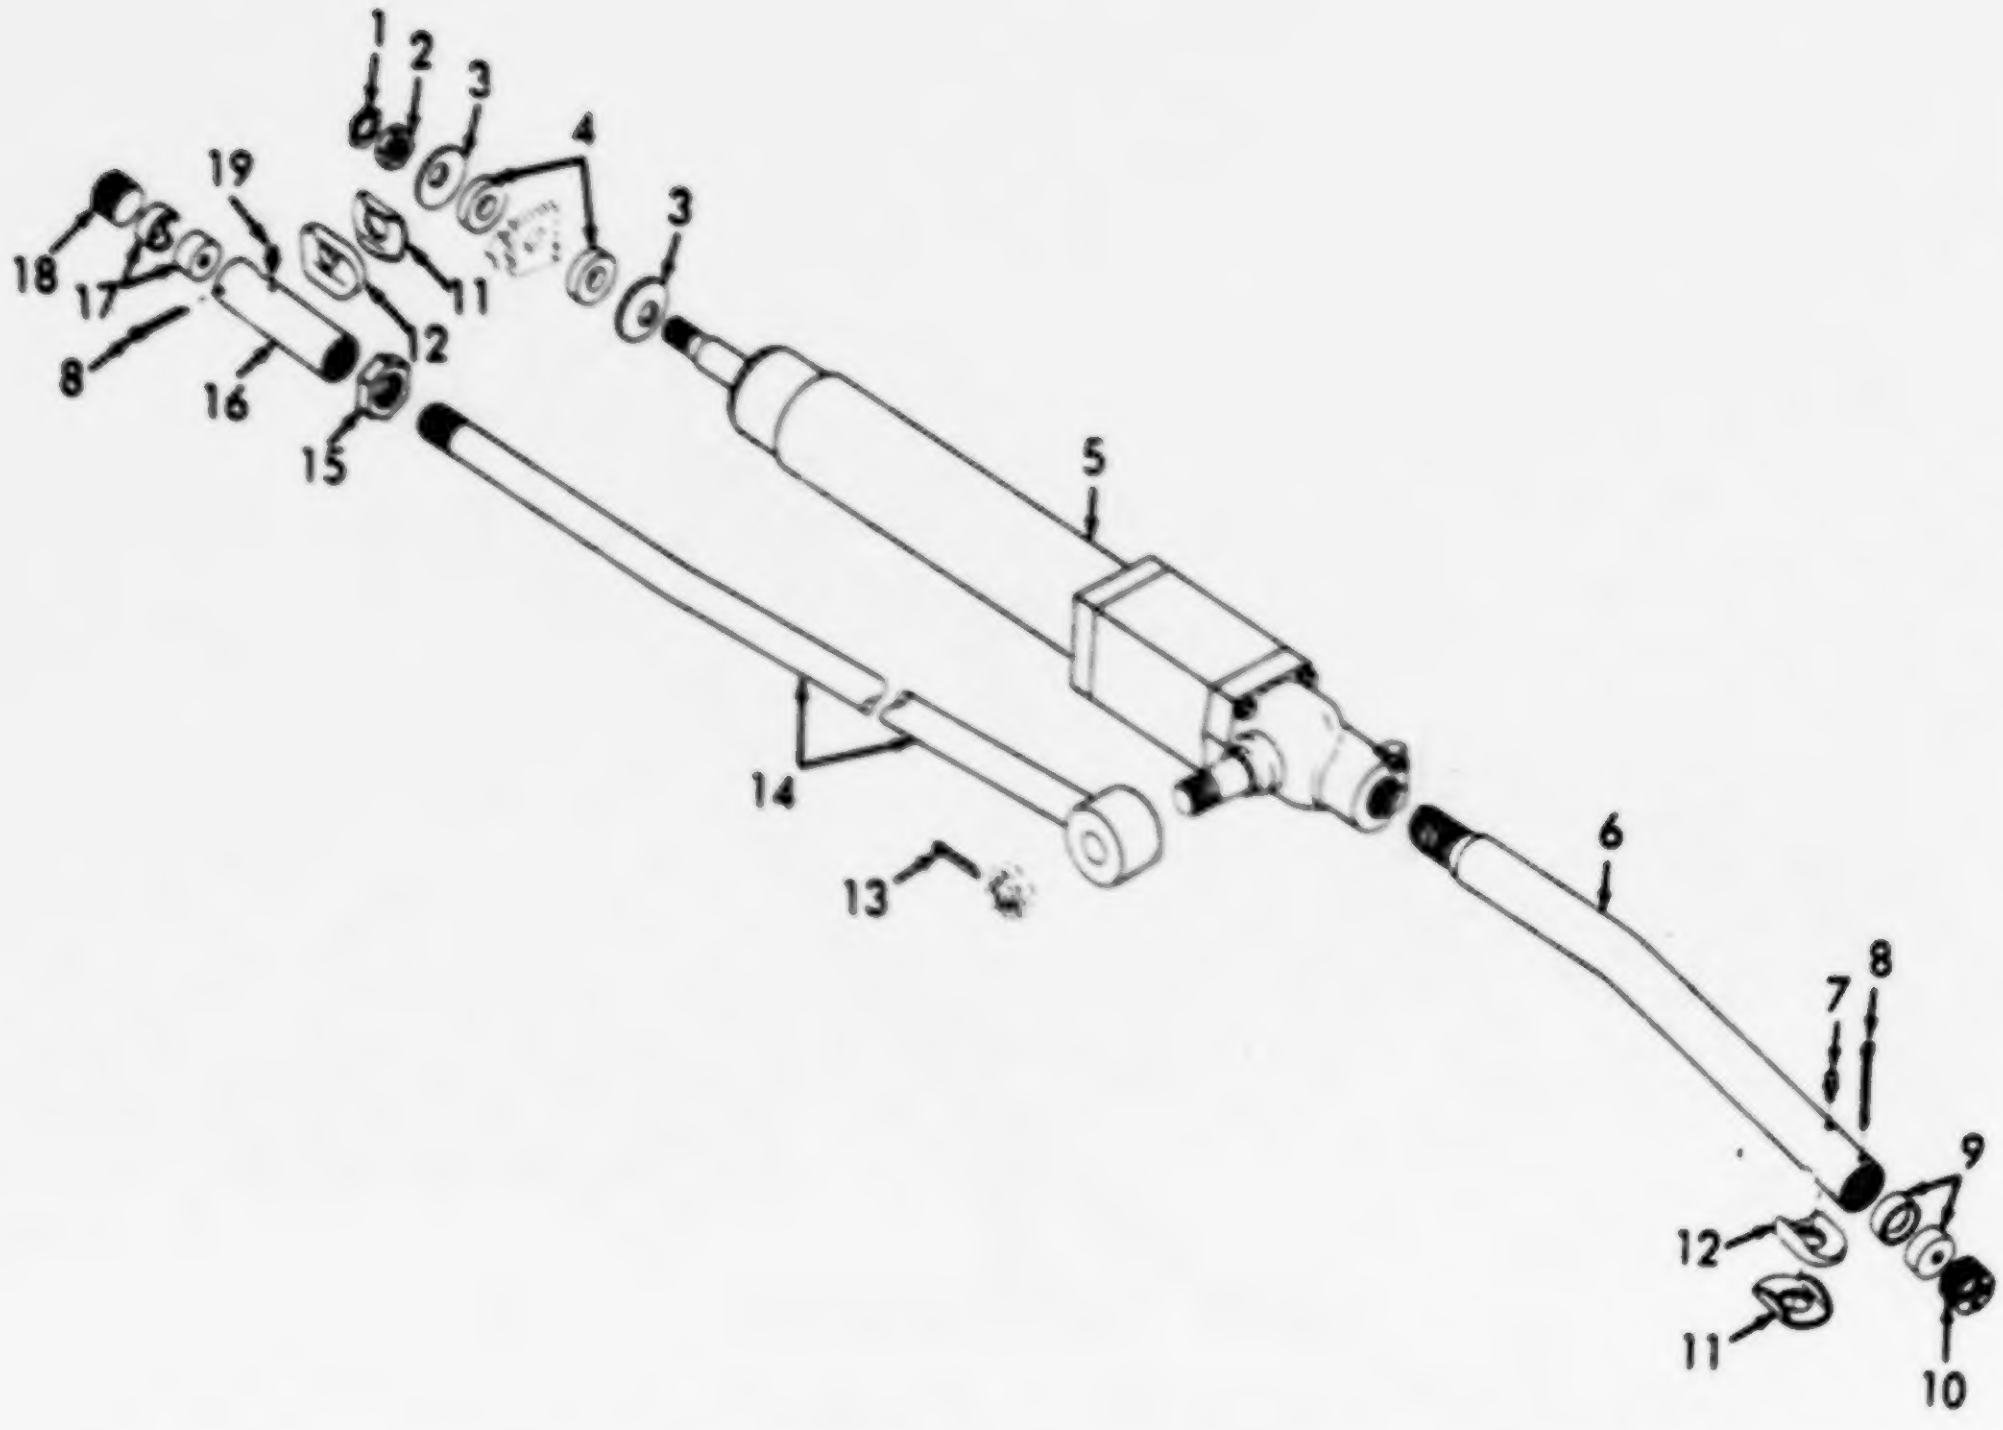

ME 3930-231-35P/48

Figure 48. Steering Drag Links.

INDEX TO PARTS, FIGURE 48

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	1401	NUT	11	1401	SHIELD
2	1401	NUT	12	1401	CAGE
3	1401	INSULATOR	13	1401	PIN
4	1401	WASHER	14	1401	ROD
5	1412	CYLINDER	15	1401	NUT
6	1401	ROD	16	1401	SOCKET
7	1401	FITTING	17	1401	SEAT
8	1401	PIN	18	1401	PLUG
9	1401	SEAT	19	1401	FITTING
10	1401	PLUG			

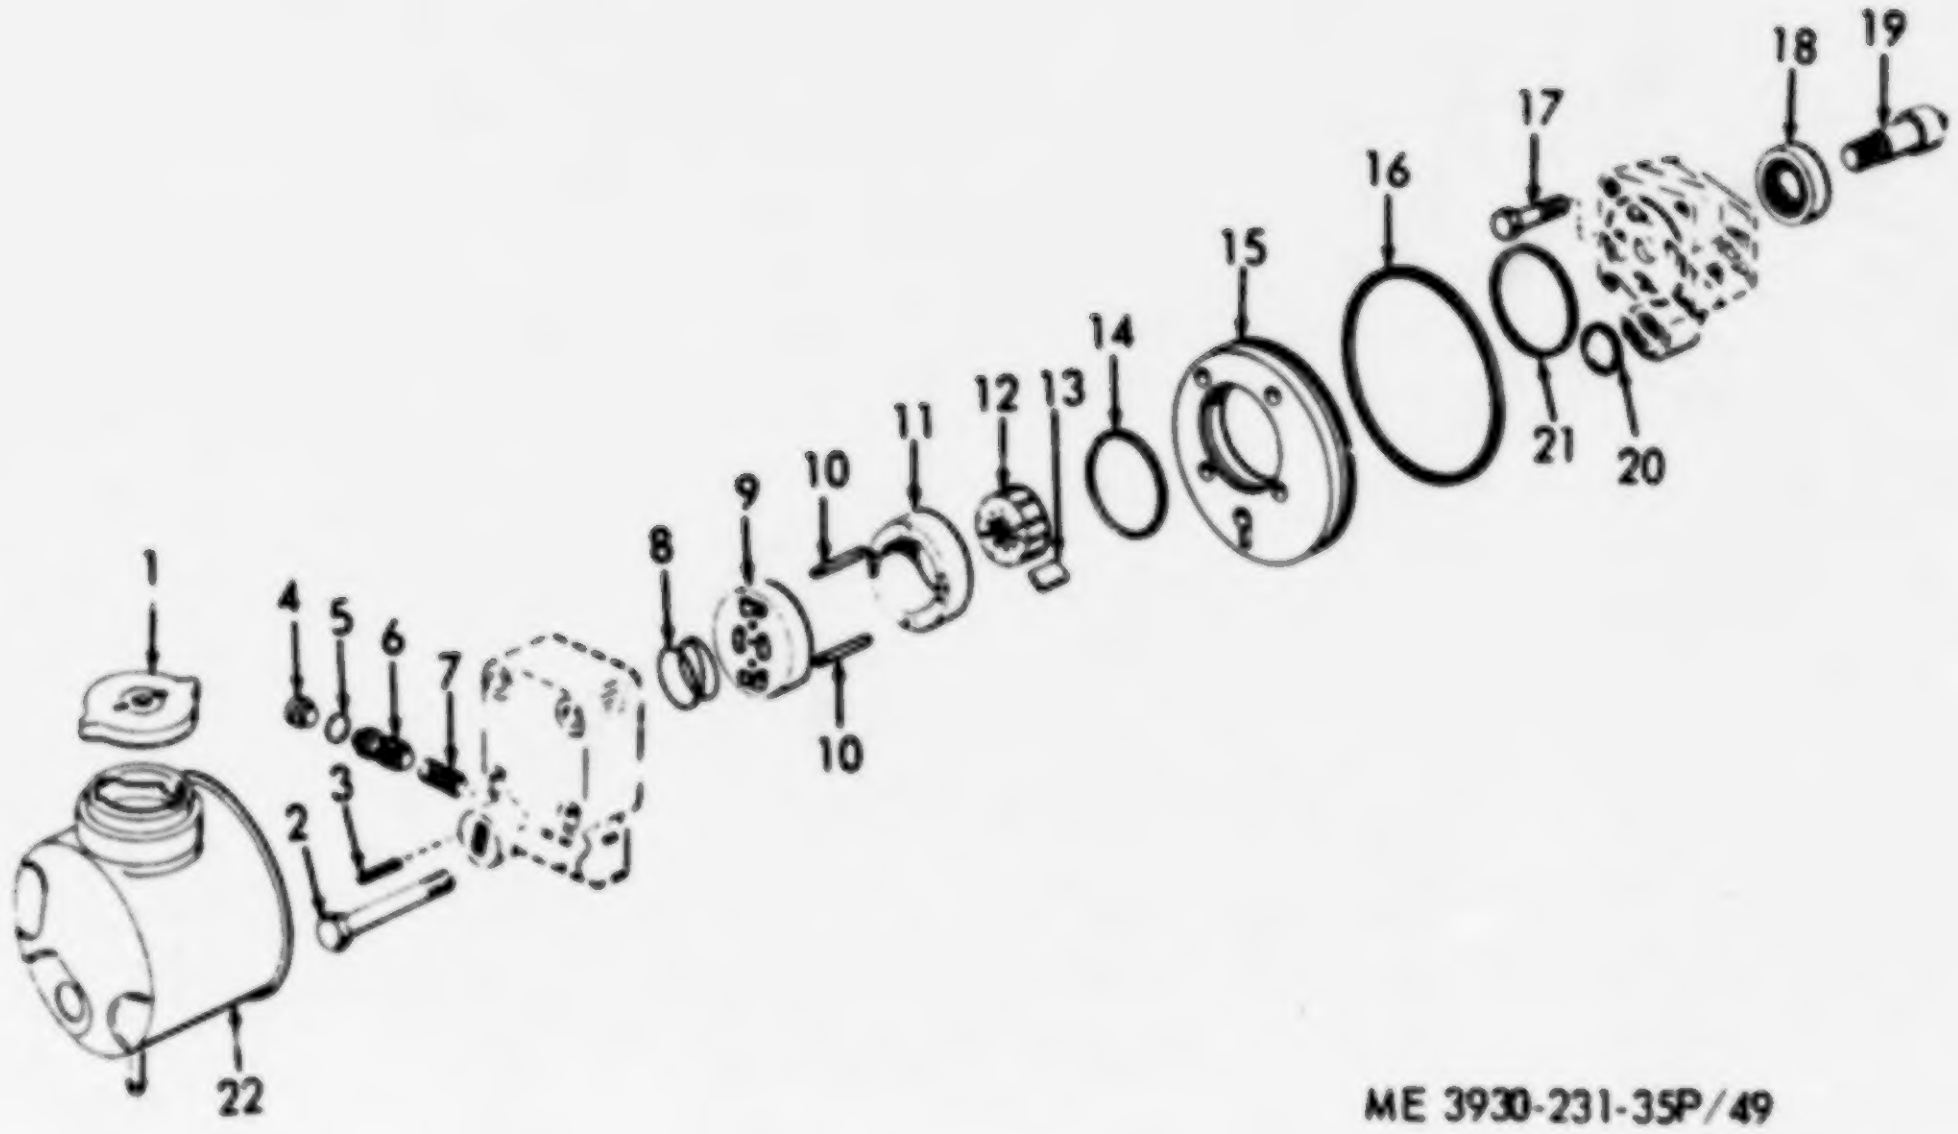
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
10
ME 3930-231-35P/49

Figure 49. Power Steering Pump.

INDEX TO PARTS, FIGURE 49

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	1410	CAP	12	1410	ROTOR
2	1410	SCREW	13	1410	VANE
3	1410	PIN	14	1410	PACKING
4	1410	PLUG	15	1410	ADAPTER
5	1410	PACKING	16	1410	PACKING
6	1410	VALVE	17	1410	SCREW
7	1410	SPRING	18	1410	SEAL
8	1410	PLATE	19	1410	SHAFT
9	1410	PLATE	20	1410	PACKING
10	1410	PIN	21	1410	PACKING
11	1410	RING	22	1410	RESERVOIR

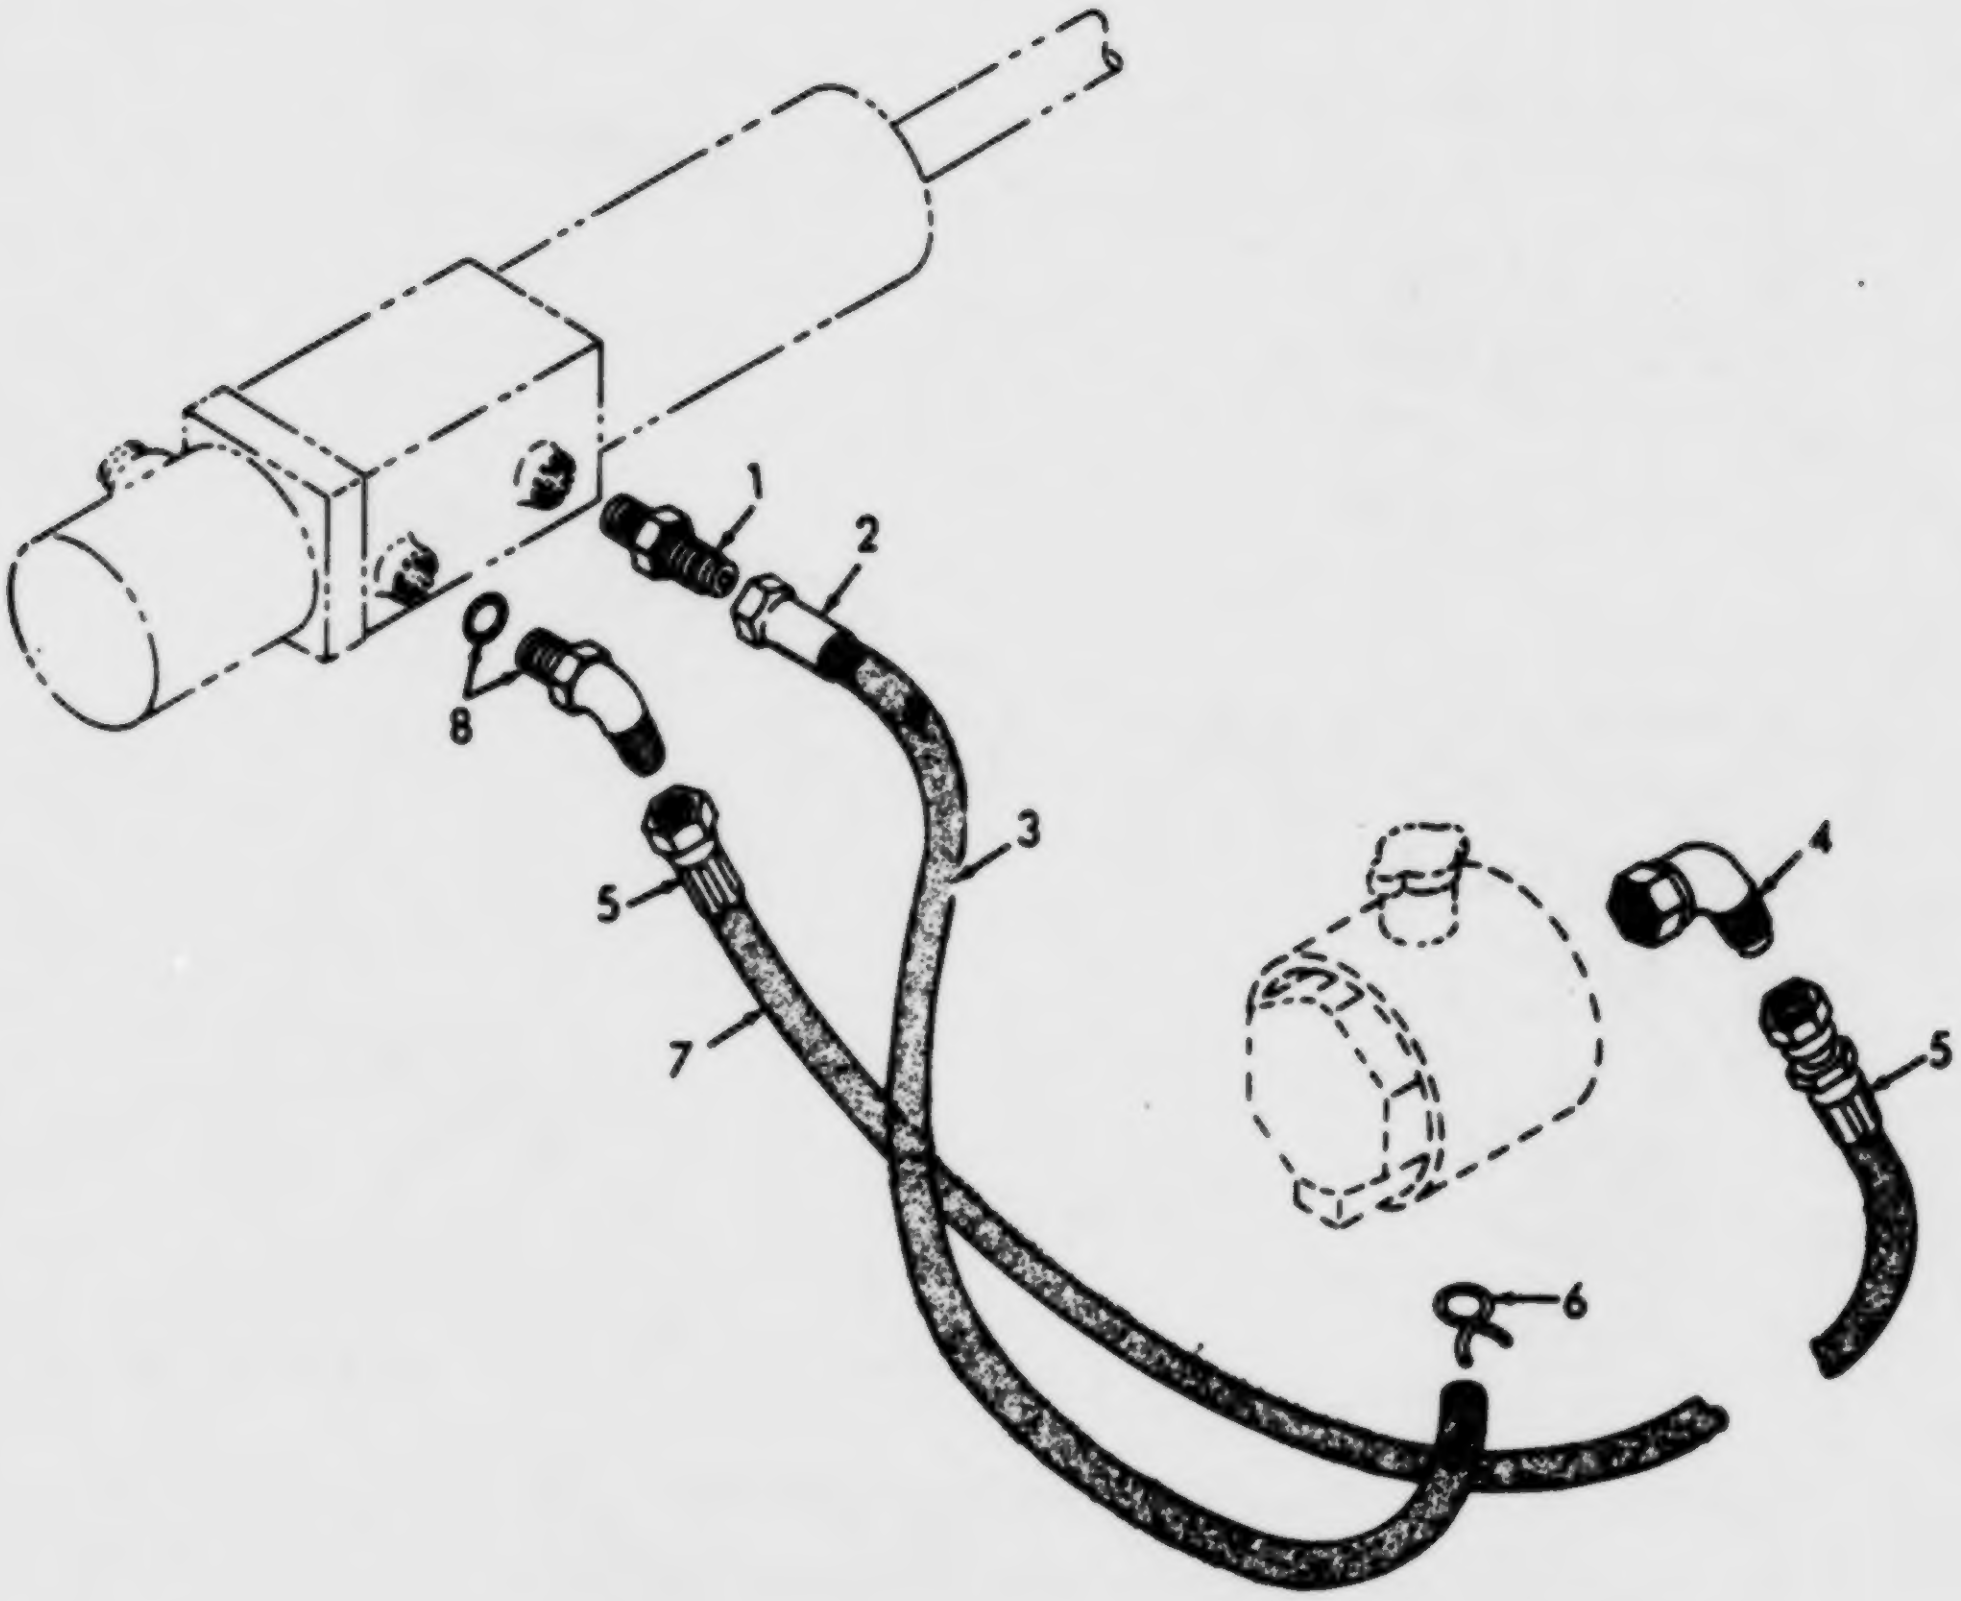
1
2
3
4
5
5
6
7
8
ME3930-231-35P/50

Figure 50. Steering Lines and Fittings.

INDEX TO PARTS, FIGURE 50

Reference Number	Functional Group	Item Name
1	1411	CONNECTOR
2	1411	ADAPTER
3	1411	HOSE
4	1411	ELBOW
5	1411	ADAPTER
6	1411	CLAMP
7	1411	HOSE
8	1411	ELBOW

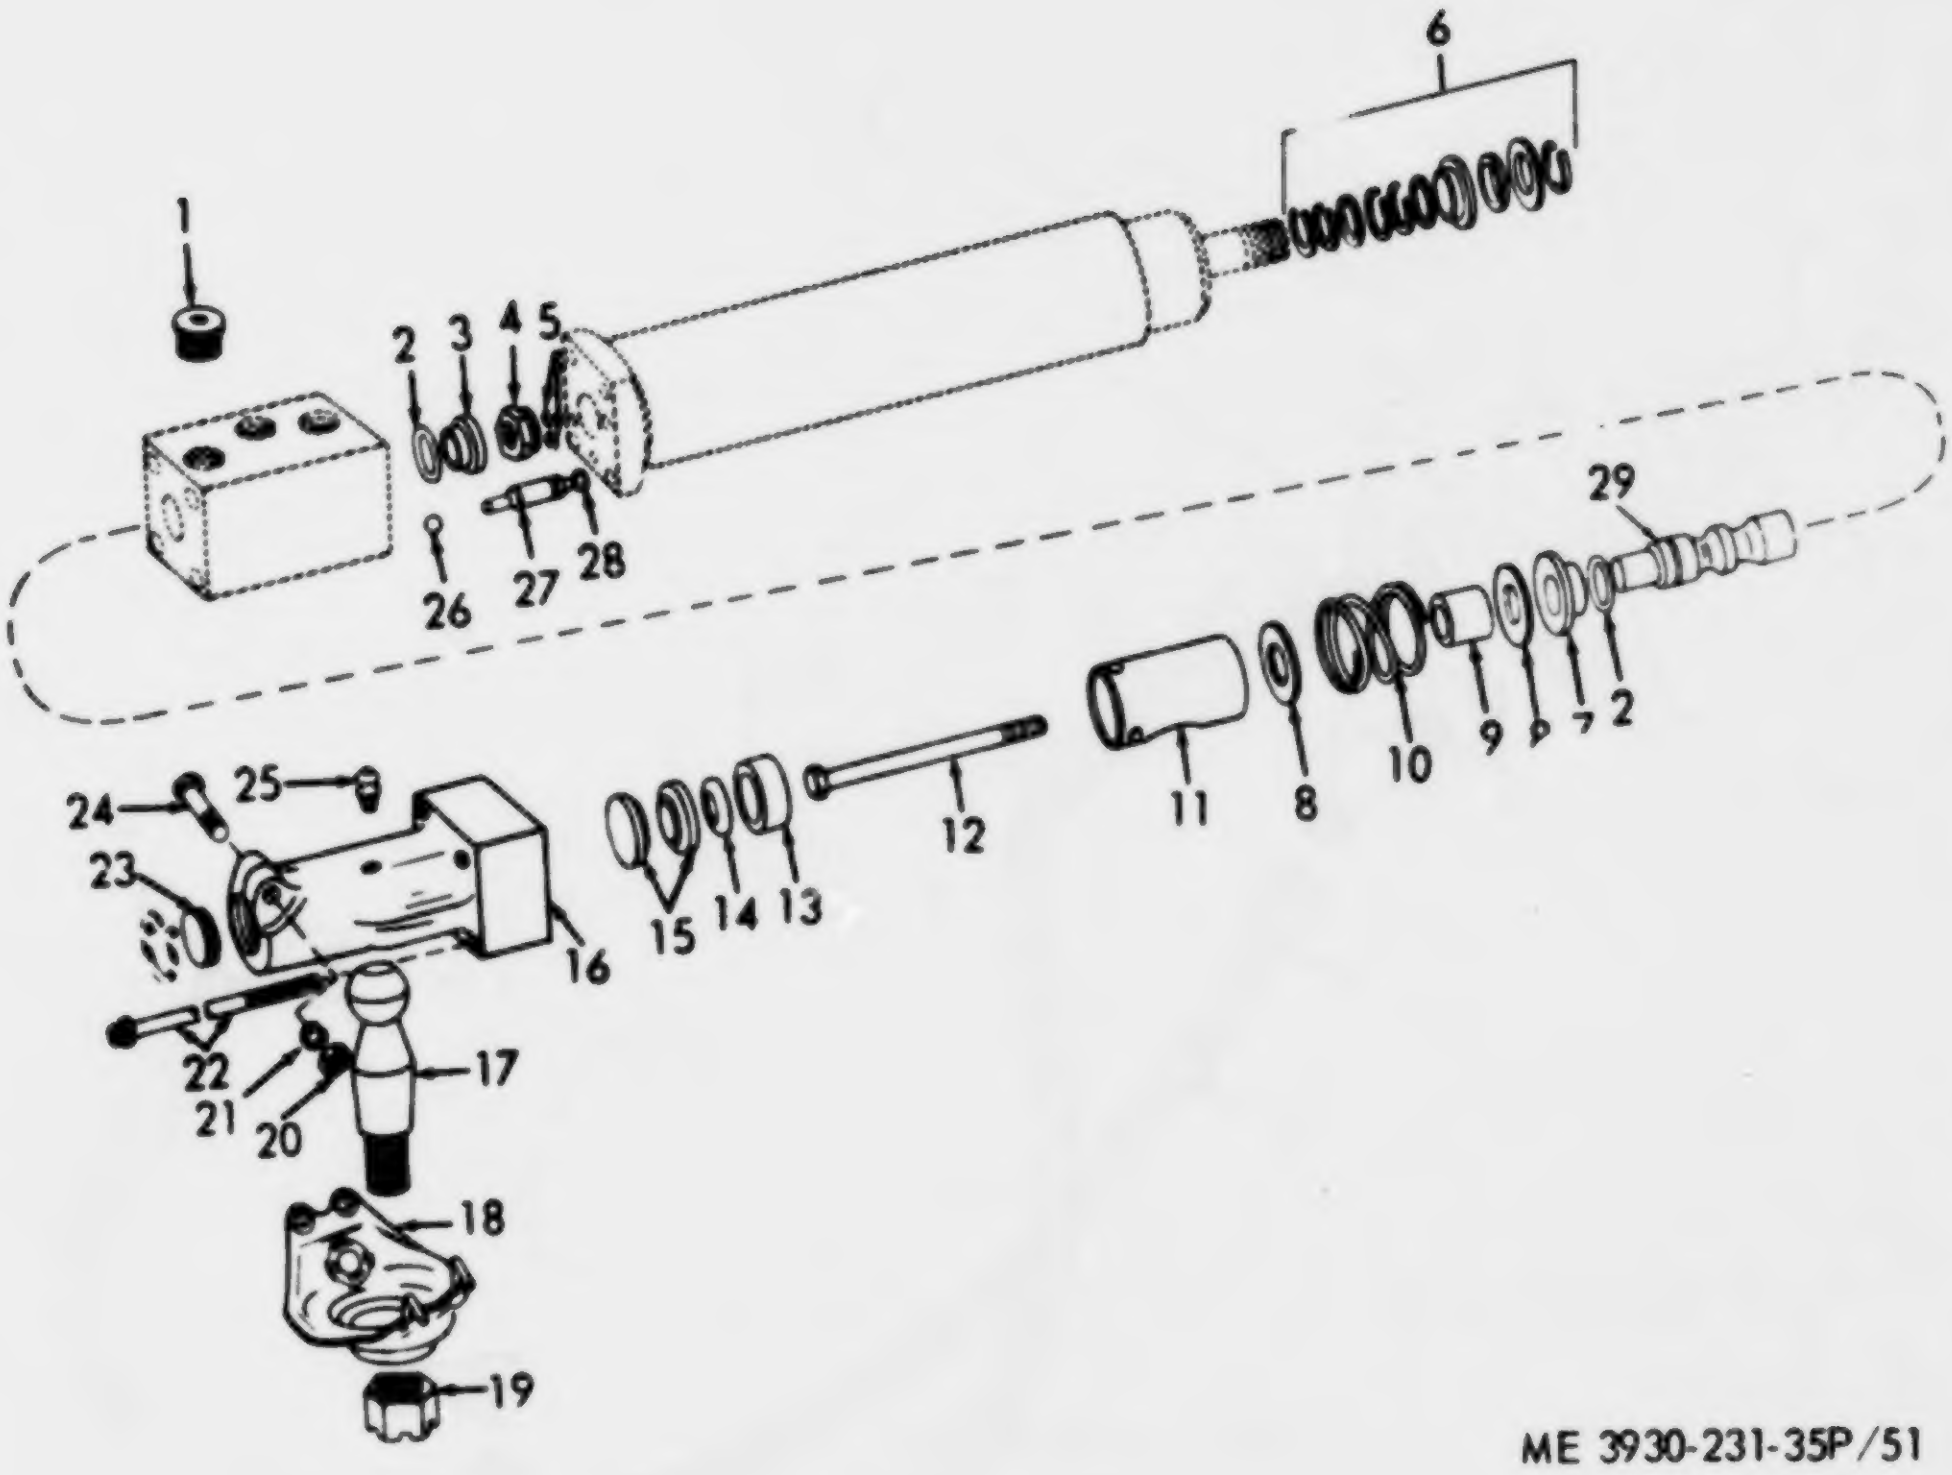
1
2
3
4
5
6
26
27
28
29
2
7
9
10
8
11
12
13
14
15
16
24
25
23
22
21
20
17
18
19
ME 3930-231-35P/51

Figure 51. Power Steering Cylinder.

INDEX TO PARTS, FIGURE 51

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	1412	PLUG	16	1412	HOUSING
2	1412	SEAL	17	1412	STUD
3	1412	RETAINER	18	1412	BOOT
4	1412	NUT	19	1412	NUT
5	1412	PACKING	20	1412	NUT
6	1412	SEAL	21	1412	WASHER
7	1412	RETAINER	22	1412	BOLT
8	1412	WASHER	23	1412	PLUG
9	1412	STOP	24	1412	BOLT
10	1412	SPRING	25	1412	FITTING
11	1412	SLEEVE	26	1412	BALL
12	1412	SCREW	27	1412	VALVE
13	1412	SPACER	28	1412	PACKING
14	1412	WASHER	29	1412	SPOOL
15	1412	SEAT			

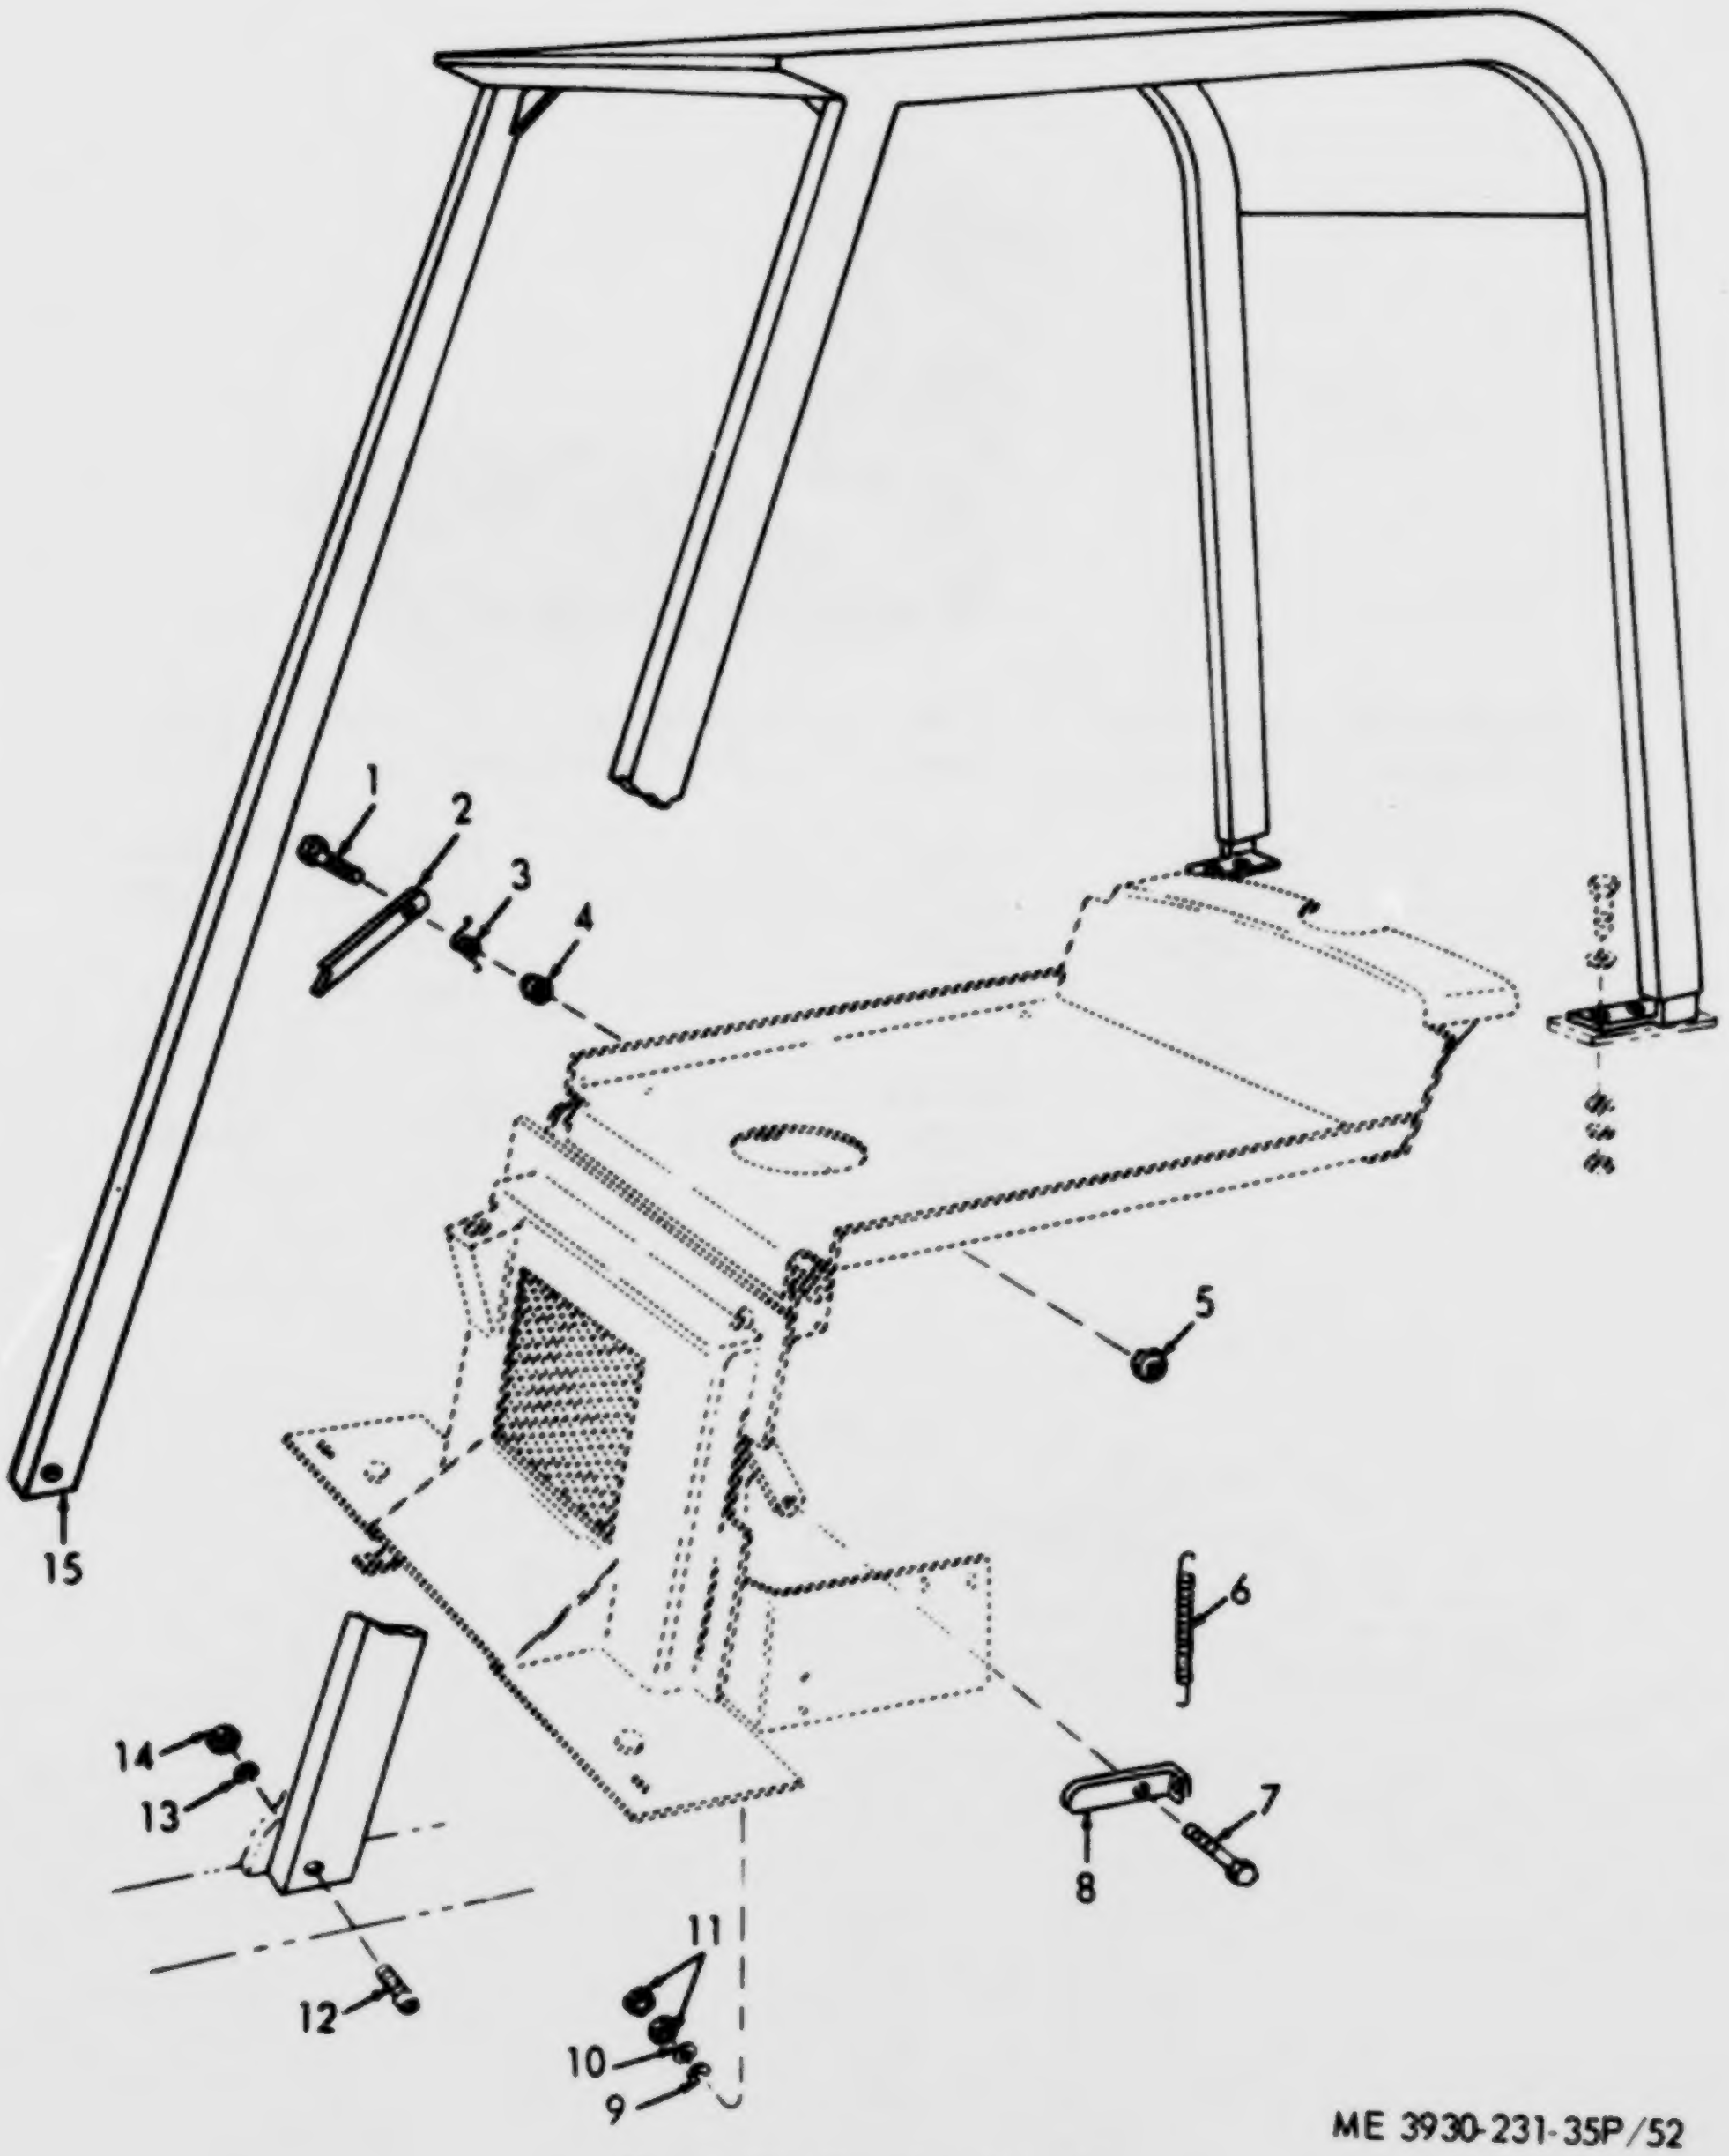
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
ME 3930-231-35P/52

Figure 52. Guard and Hood.

INDEX TO PARTS, FIGURE 52

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	1501	SCREW	9	1501	WASHER
2	1501	LATCH	10	1501	WASHER
3	1501	SPRING	11	1501	NUT
4	1501	SPACER	12	1501	SCREW
5	1501	NUT	13	1501	WASHER
6	1501	SPRING	14	1501	NUT
7	1501	SCREW	15	1501	GUARD
8	1501	LATCH			

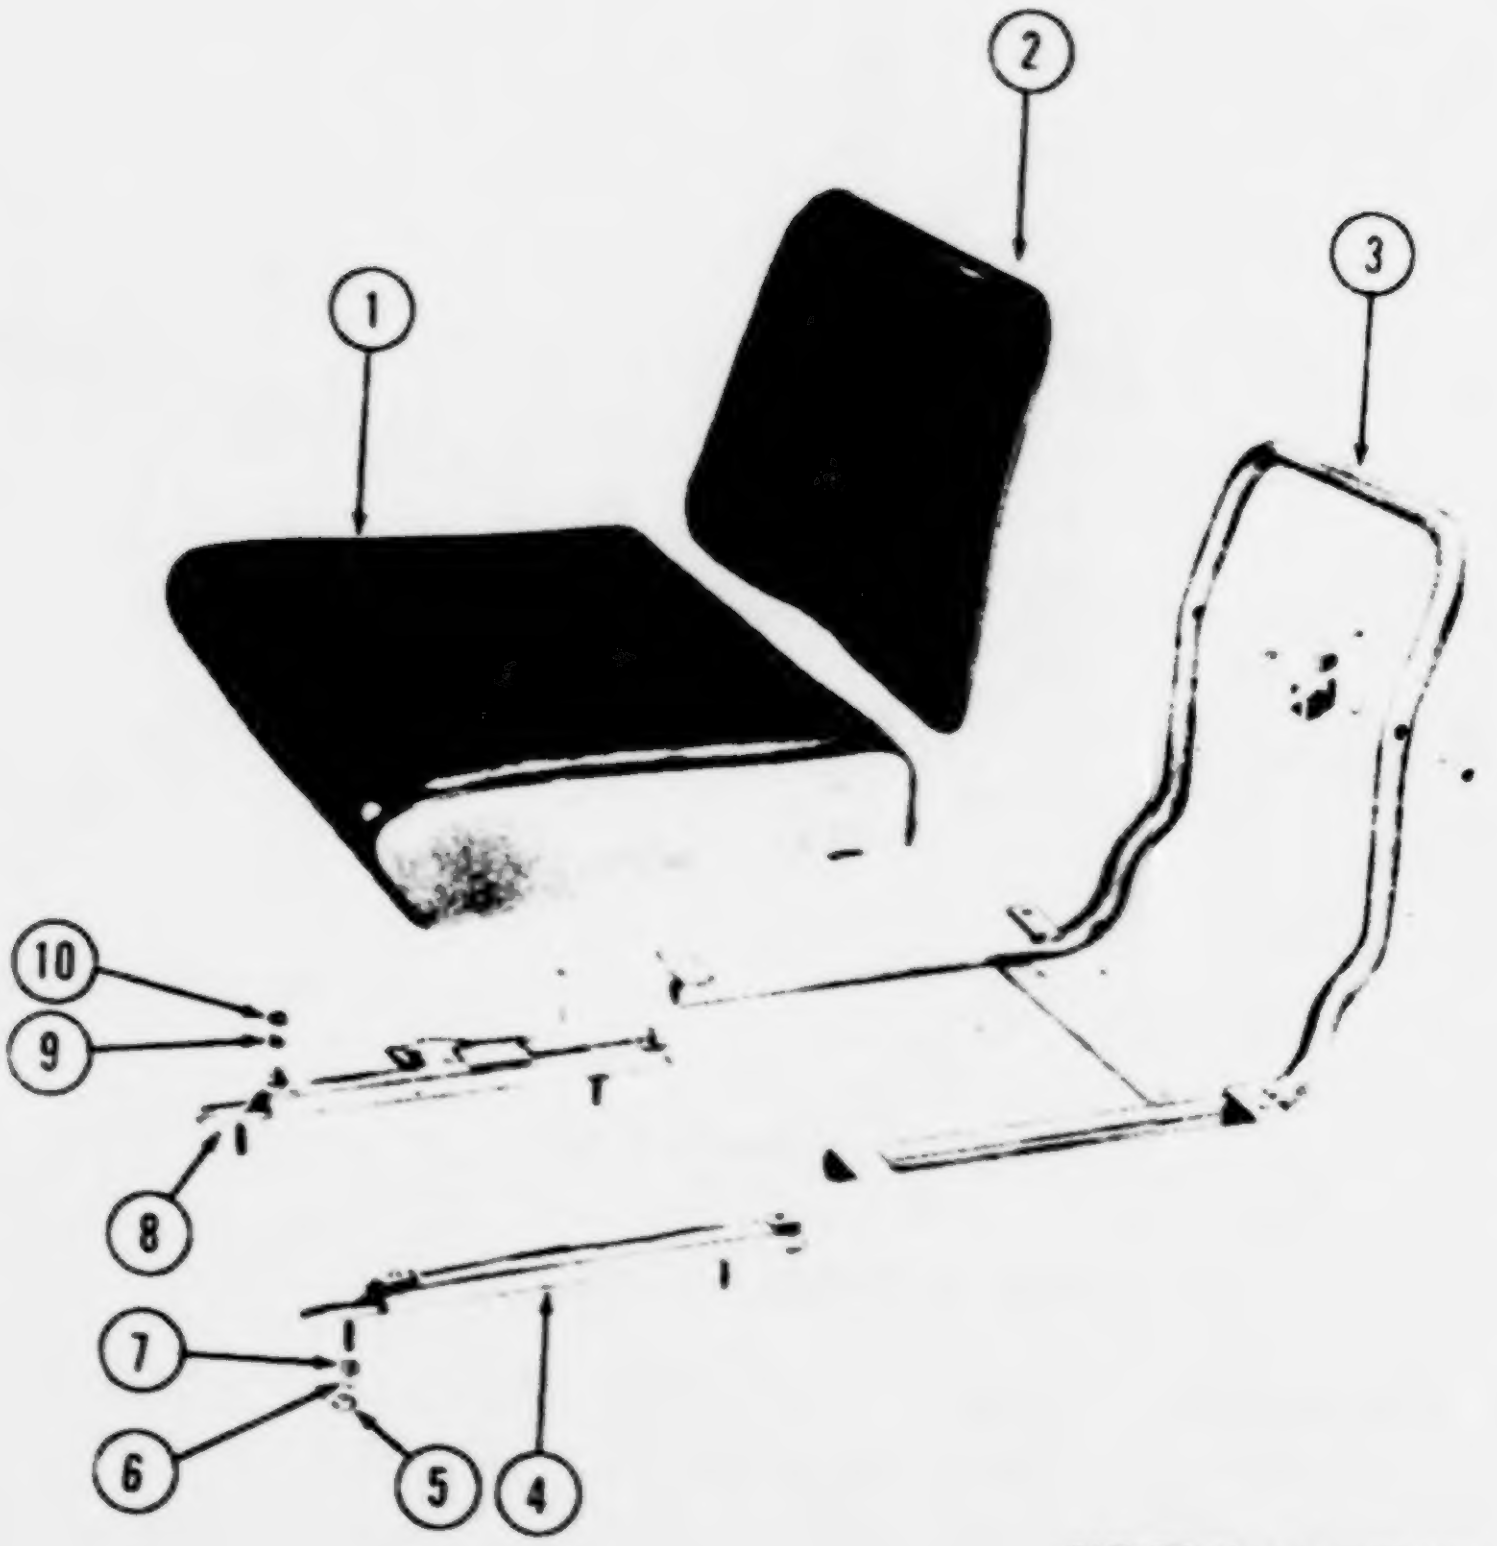

ME 3930-231-35P/53

Figure 53. Seat.

INDEX TO PARTS, FIGURE 53

Reference Number	Functional Group	Item Name
1	1806	CUSHION
2	1806	BACK
3	1806	FRAME
4	1806	ADJUSTER
5	1806	NUT
6	1806	WASHER
7	1806	SPACER
8	1806	ADJUSTER
9	1806	WASHER
10	1806	NUT

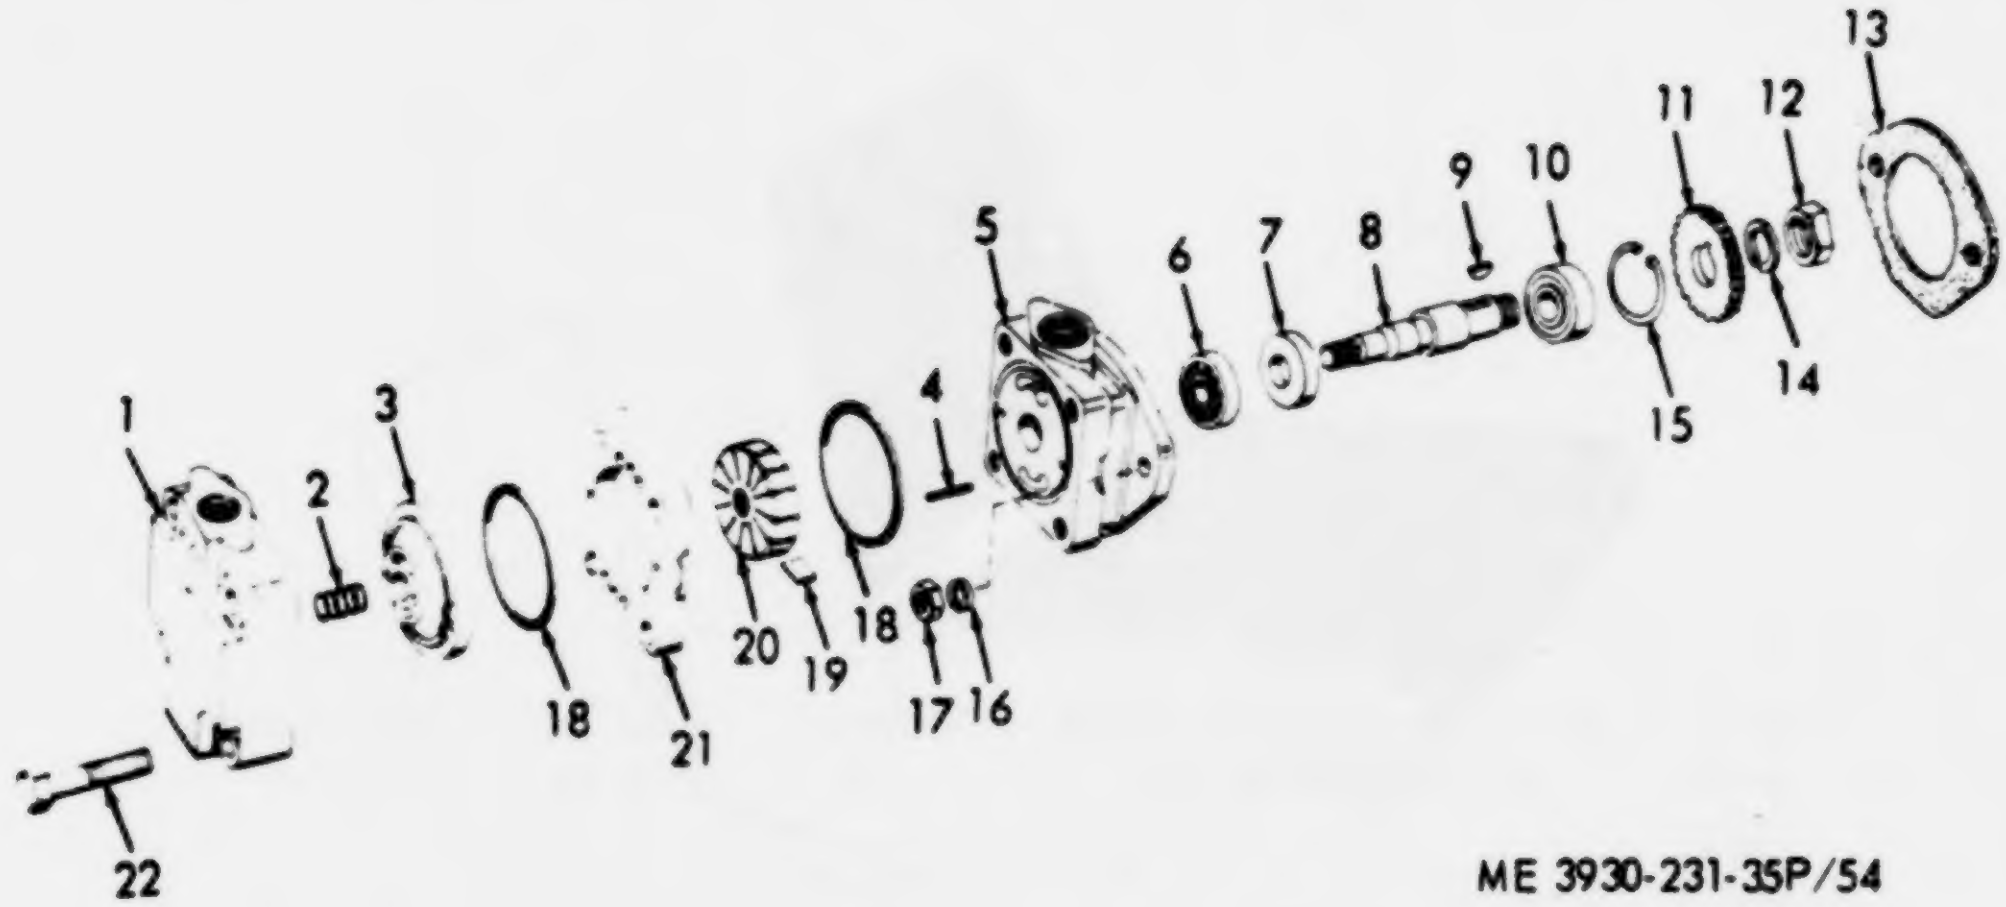
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
18
ME 3930-231-35P/54

Figure 54. Hydraulic Pump.

INDEX TO PARTS, FIGURE 54

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	2401	COVER	12	2401	NUT
2	2401	SPRING	13	2401	GASKET
3	2401	PLATE	14	2401	WASHER
4	2401	PIN	15	2401	RING
5	2401	BODY	16	2401	WASHER
6	2401	BEARING	17	2401	NUT
7	2401	SEAL	18	2401	PACKING
8	2401	SHAFT	19	2401	VANE
9	2401	KEY	20	2401	ROTOR
10	2401	BEARING	21	2401	RING
11	2401	GEAR	22	2401	BOLT

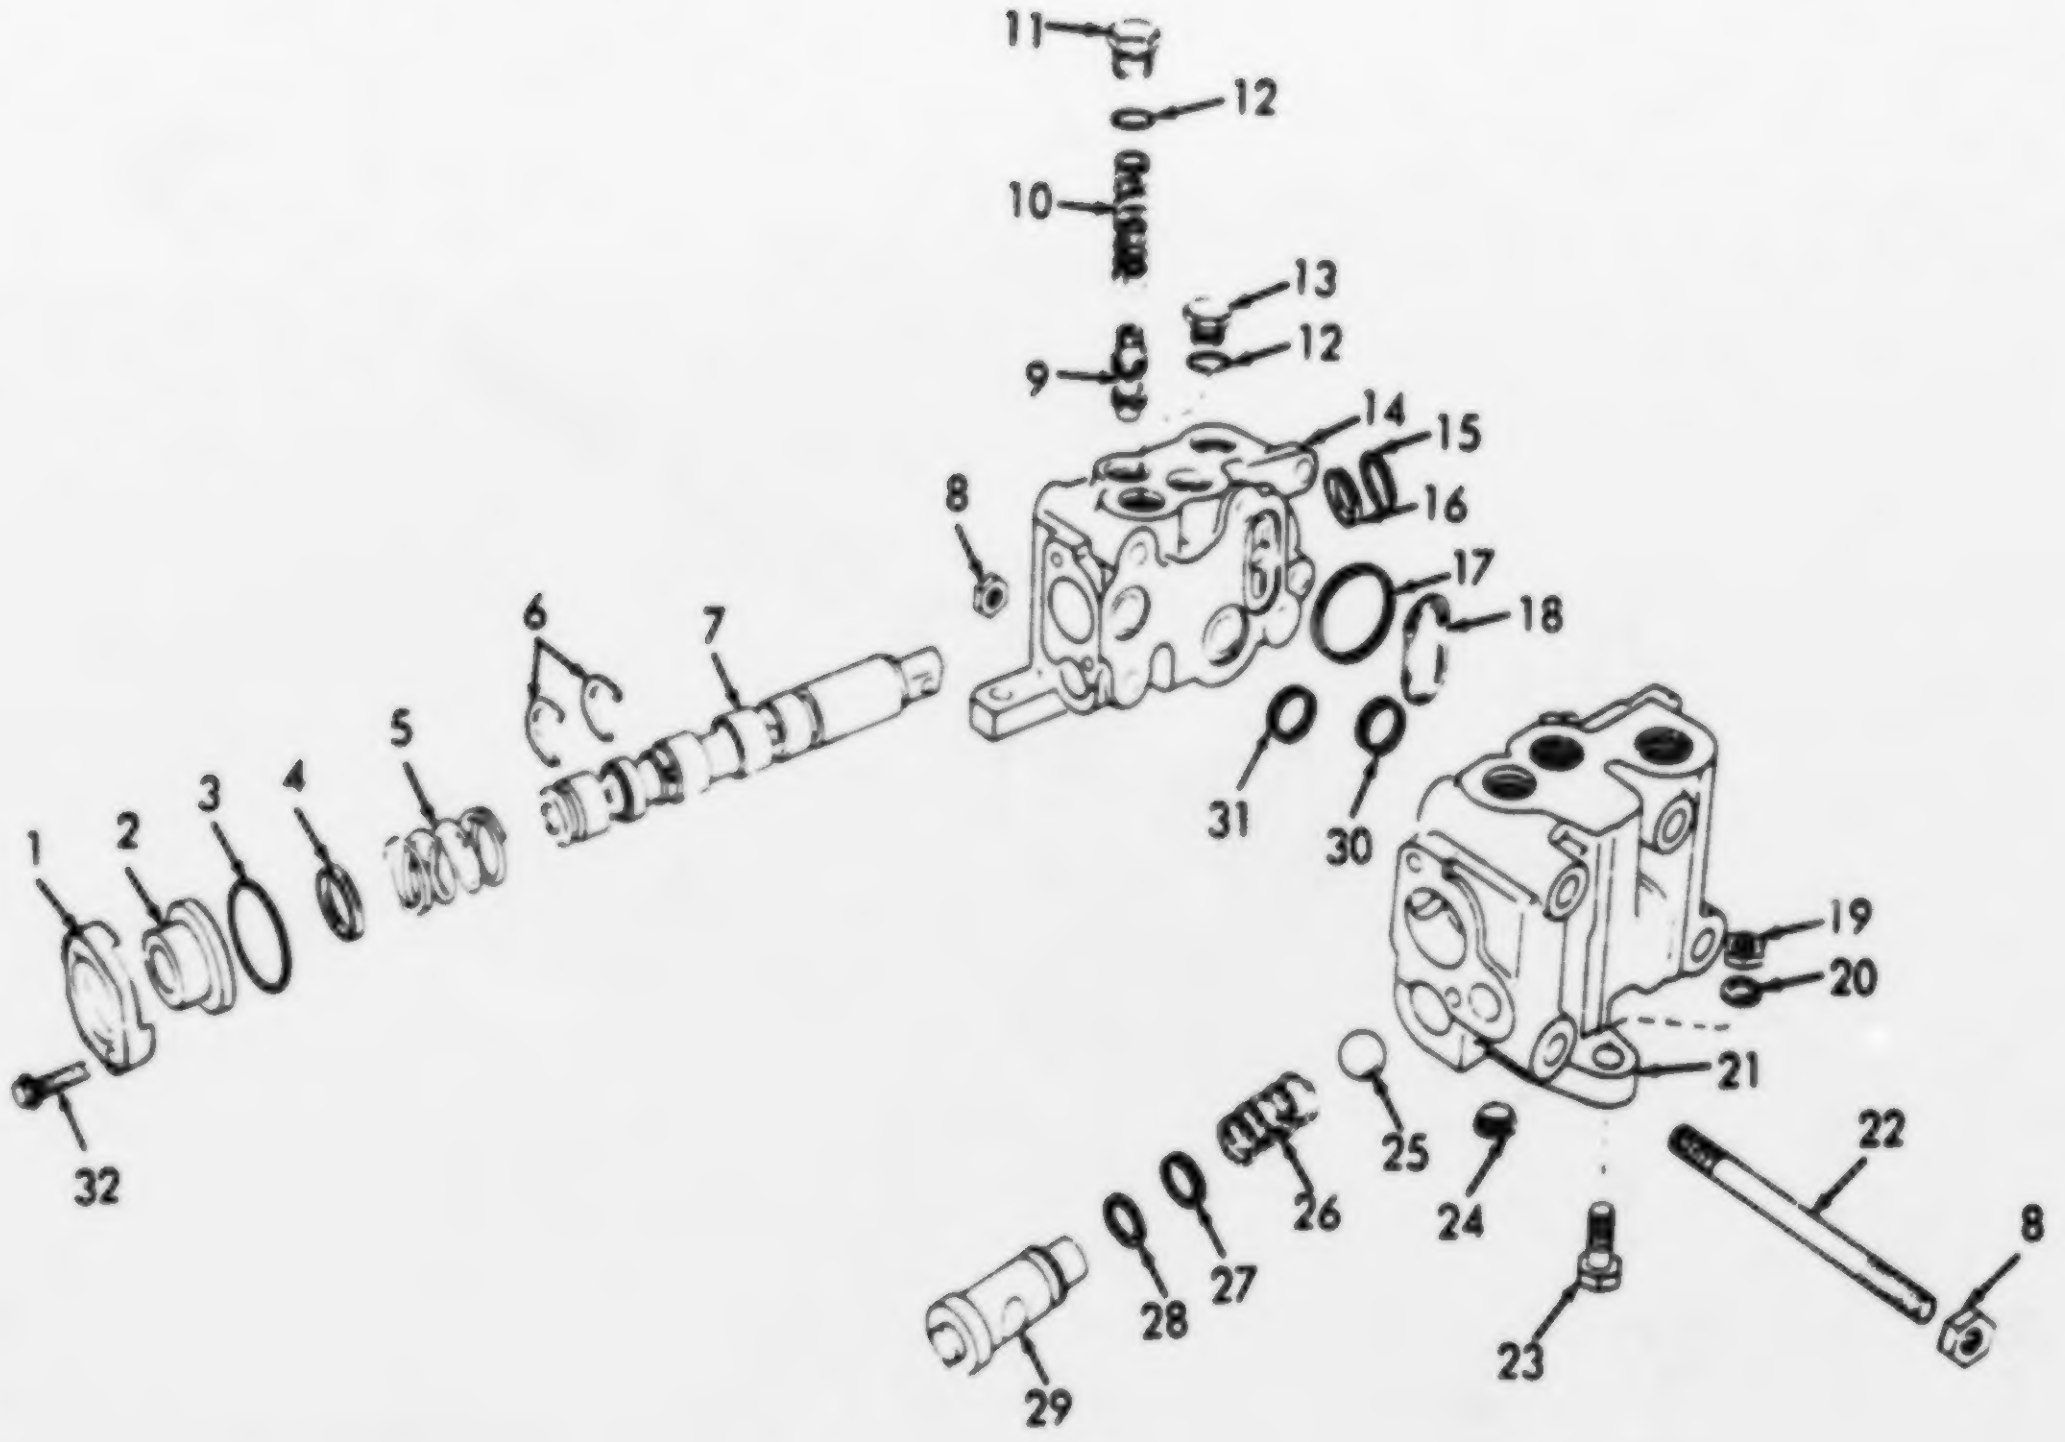
11
12
10
13
12
9
14
15
16
8
17
18
6
7
5
4
3
2
1
31
30
19
20
21
22
32
25
26
24
8
27
28
23
29
ME 3930-231-35P/55

Figure 55. Hydraulic Control Valve.

INDEX TO PARTS, FIGURE 55

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	2402	RETAINER	17	2402	SEAL
2	2402	SLEEVE	18	2402	RETAINER
3	2402	PACKING	19	2402	NUT
4	2402	PACKING	20	2402	WASHER
5	2402	SPRING	21	2402	VALVE
6	2402	WASHER	22	2402	STUD
7	2402	SPOOL	23	2402	SCREW
8	2402	NUT	24	2402	PLUG
9	2402	VALVE	25	2402	BALL
10	2402	SPRING	26	2402	SPRING
11	2402	CAP	27	2402	PACKING
12	2402	PACKING	28	2402	RING
13	2402	PLUG	29	2402	PLUG
14	2402	VALVE	30	2402	SEAL
15	2402	RING	31	2402	PACKING
16	2402	PACKING	32	2402	SCREW

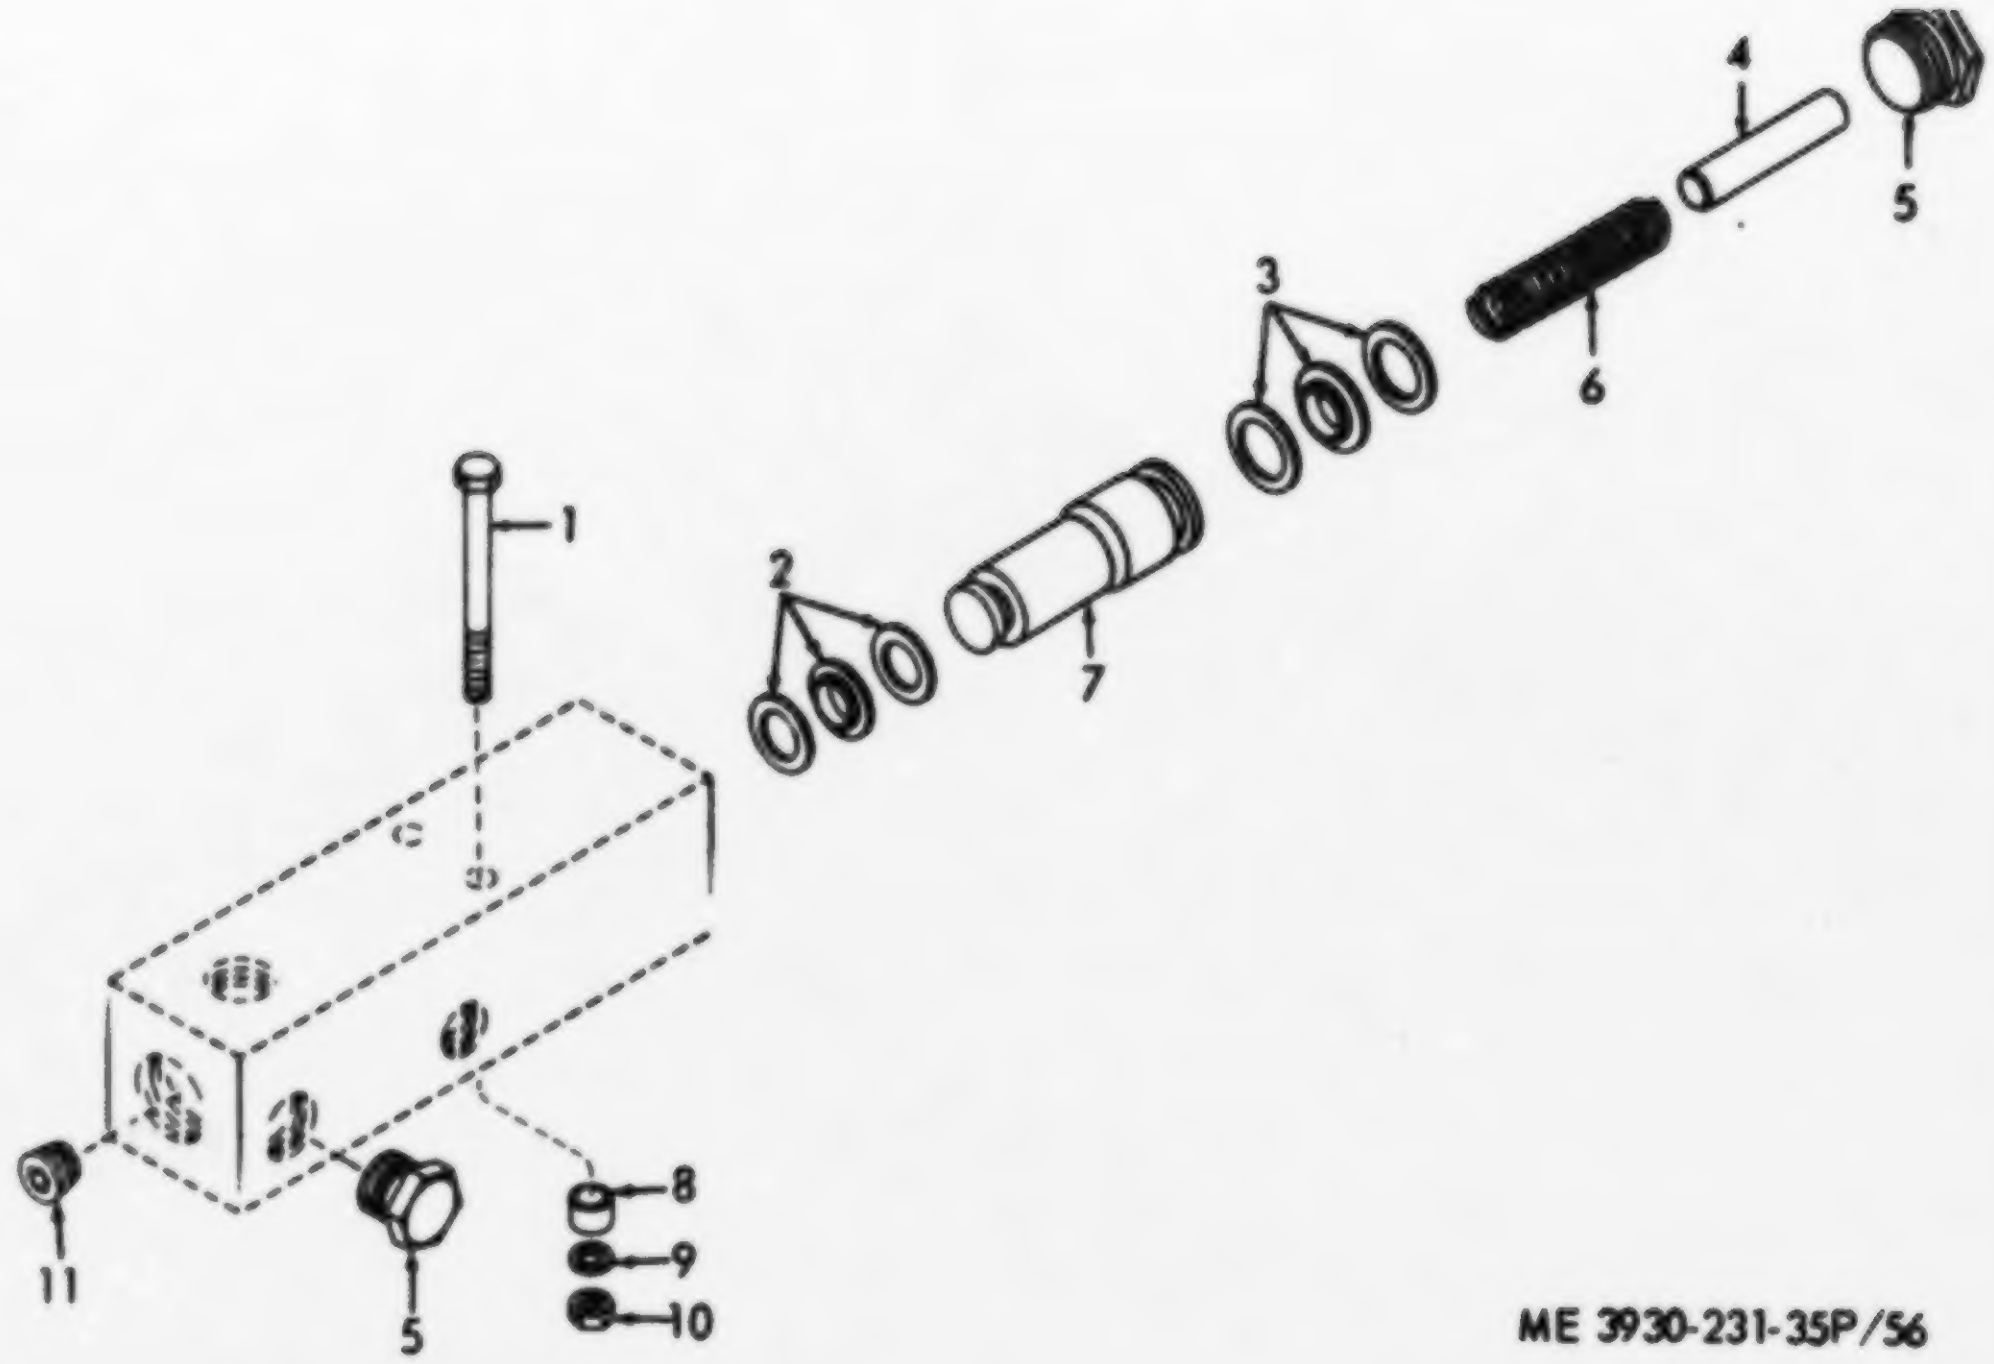
1
2
3
4
5
6
7
8
9
10
11
5
ME 3930-231-35P/56

Figure 56. Tilt Lock Valve.

INDEX TO PARTS, FIGURE 56

Reference Number	Functional Group	Item Name
1	2402	SCREW
2	2402	SEAL
3	2402	SEAL
4	2402	STOP
5	2402	CAP
6	2402	SPRING
7	2402	SPOOL
8	2402	SPACER
9	2402	WASHER
10	2402	NUT
11	2402	ORIFICE

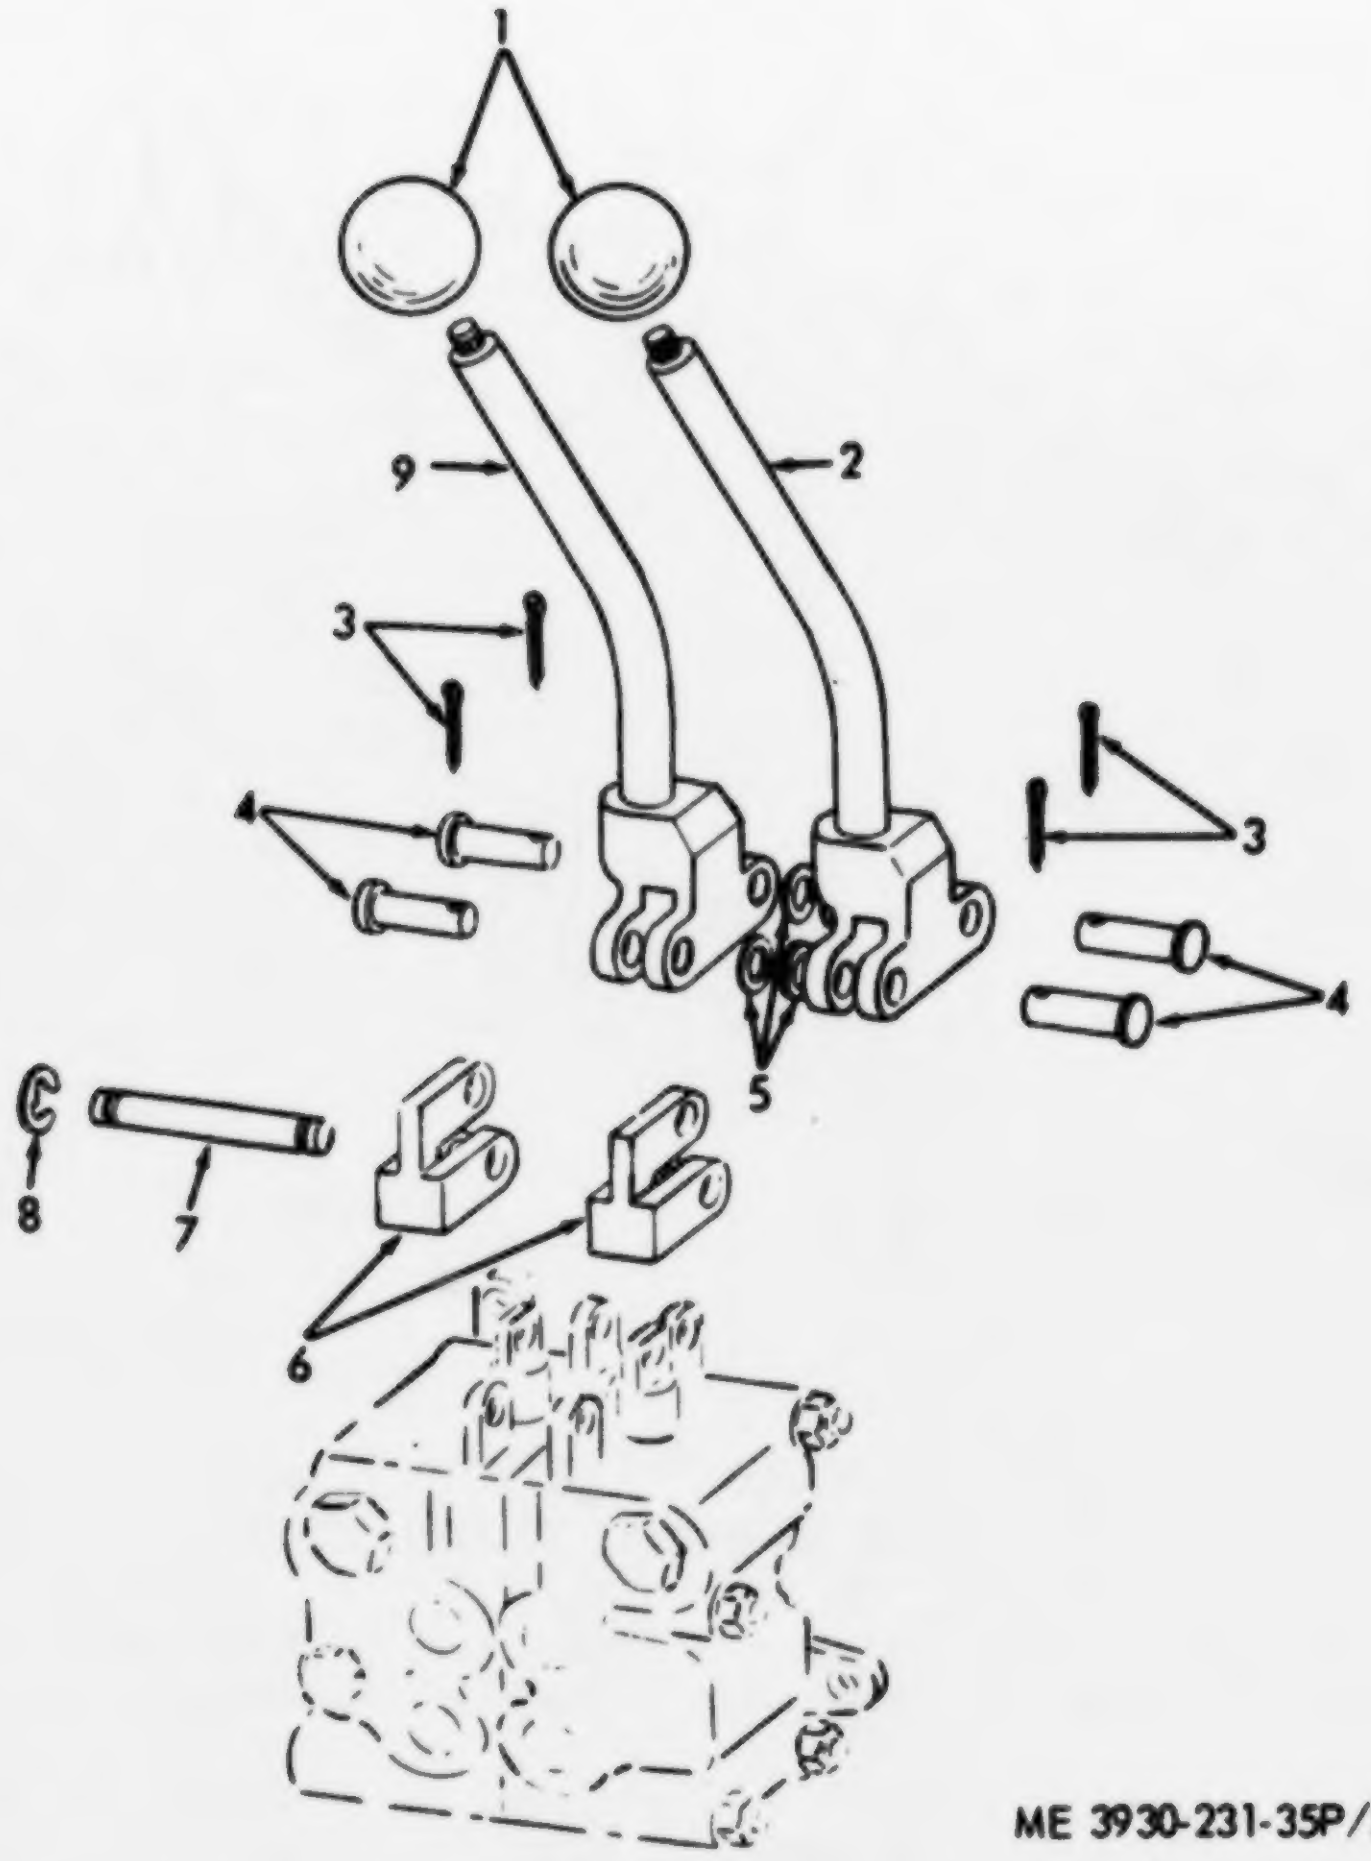

ME 3930-231-35P/57

Figure 57. Hydraulic Valve Control Levers and Linkage.

INDEX TO PARTS, FIGURE 57

Reference Number	Functional Group	Item Name
1	2403	KNOB
2	2403	LEVER
3	2403	PIN
4	2403	PIN
5	2403	WASHER
6	2403	BASE
7	2403	PIN
8	2403	RING
9	2403	LEVER

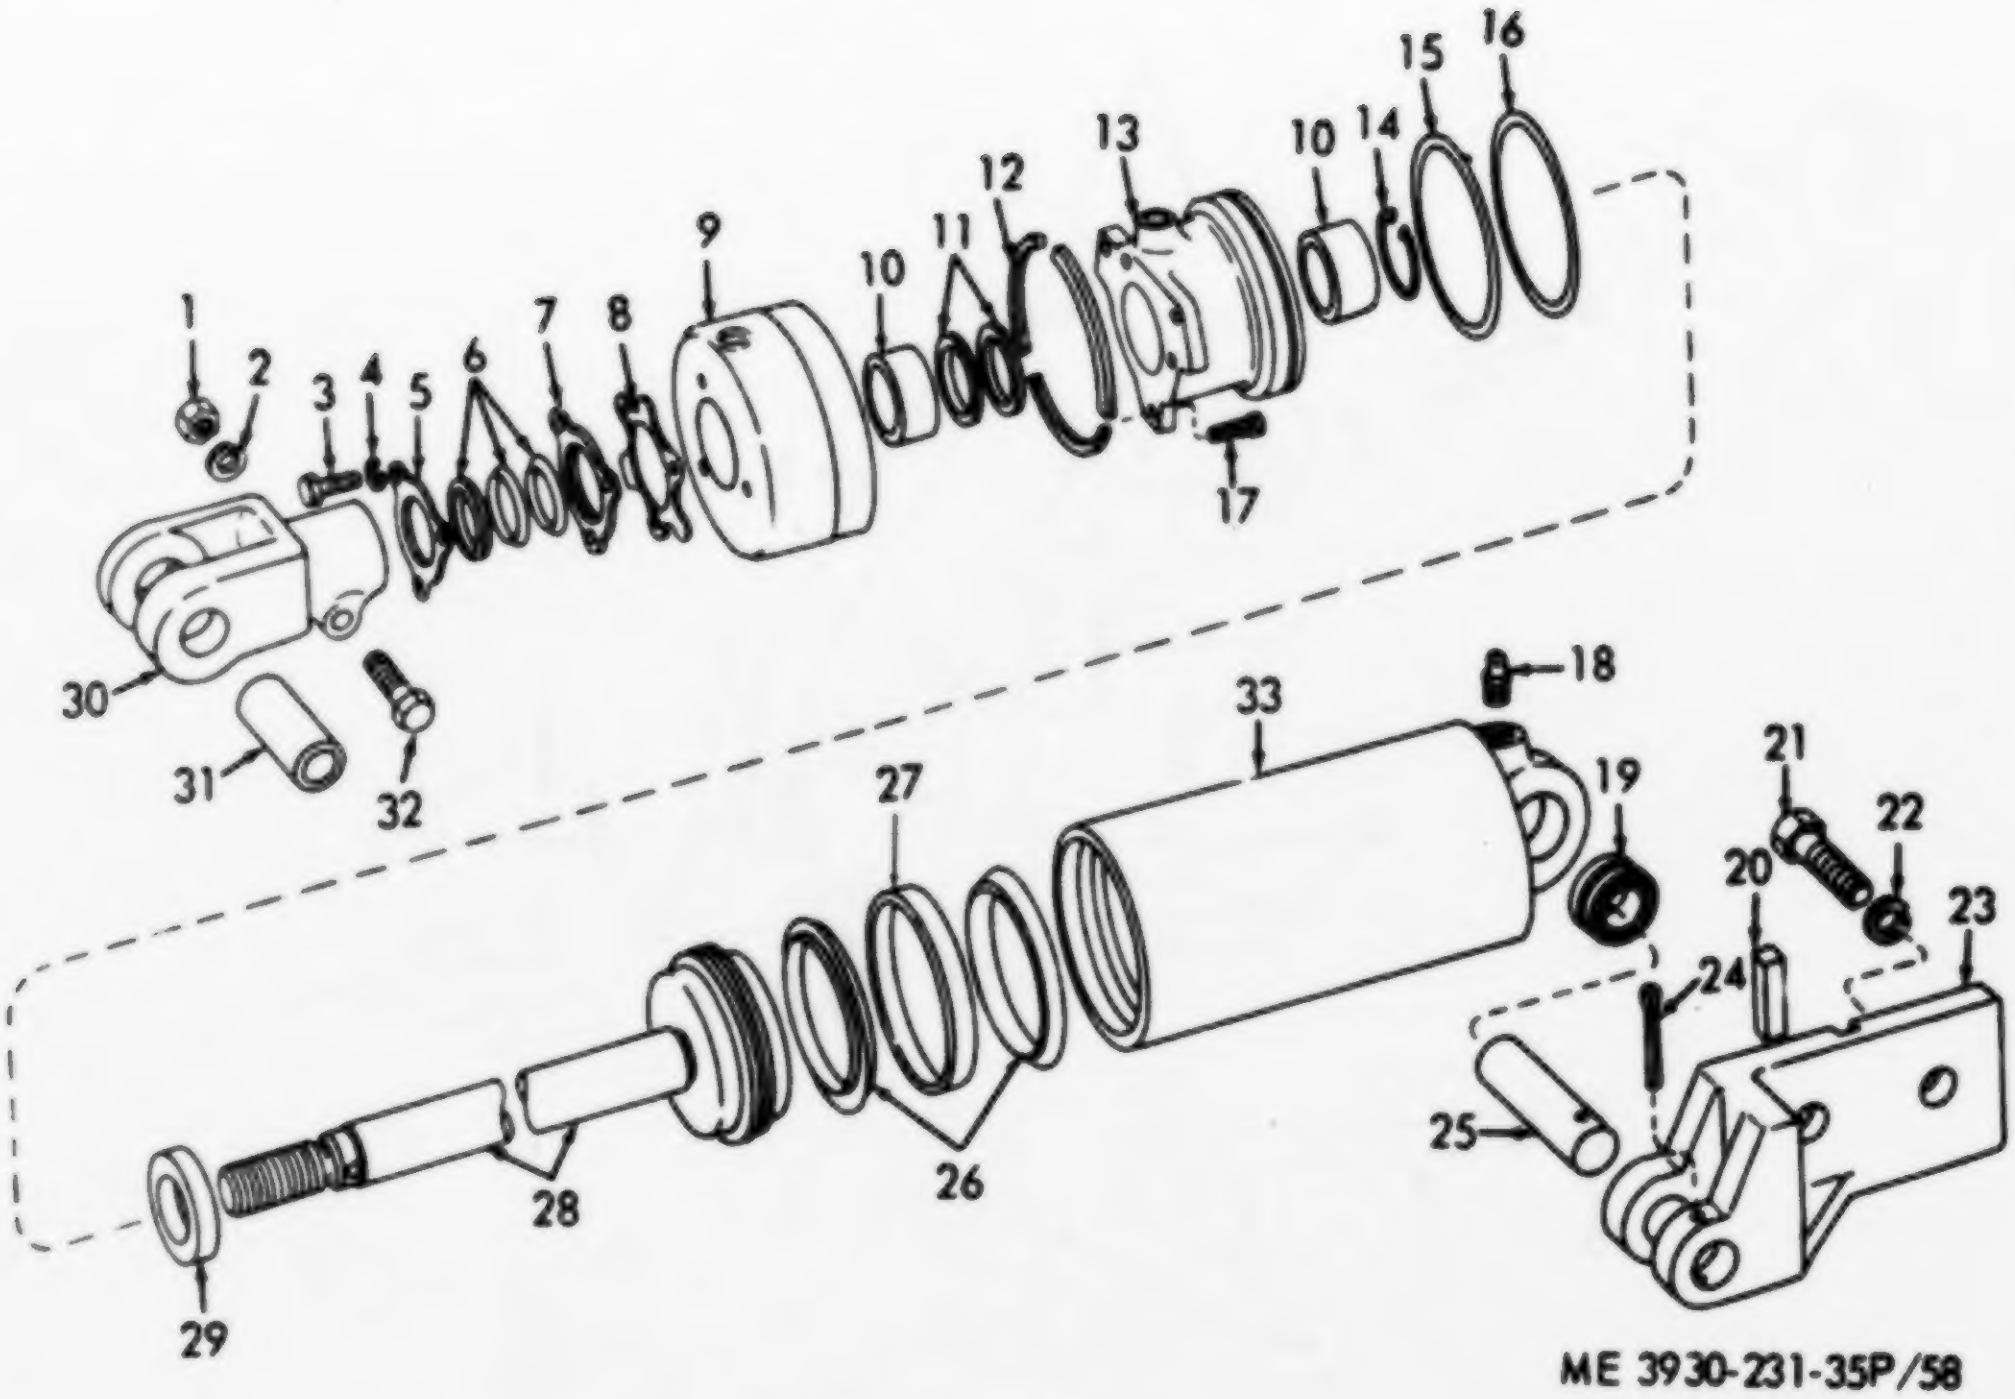
1
2
3
4
5
6
7
8
9
10
11
12
13
10
14
15
16
17
30
31
32
18
33
27
19
21
22
20
23
24
25
26
28
29
ME 3930-231-35P/58

Figure 58. Tilt Cylinders.

INDEX TO PARTS, FIGURE 58

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	2404	NUT	18	2404	FITTING
2	2404	WASHER	19	2404	BEARING
3	2404	SCREW	20	2404	KEY
4	2404	WASHER	21	2404	SCREW
5	2404	RETAINER	22	2404	WASHER
6	2404	KIT	23	2404	MOUNT
7	2404	RETAINER	24	2404	PIN
8	2404	SHIM	25	2404	PIN
9	2404	COVER	26	2404	"U" CUP
10	2404	BUSHING	27	2404	RING
11	2404	PACKING	28	2404	ROD
12	2404	RING	29	2404	SPACER
13	2404	GLAND	30	2404	ROD END
14	2404	RING	31	2404	BUSHING
15	2404	RETAINER	32	2404	SCREW
16	2404	PACKING	33	2404	CYLINDER
17	2404	BOLT			

INDEX TO PARTS, FIGURE 59

Reference Number	Functional Group	Item Name
1	2405	BRACKET
2	2405	SCREW
3	2405	WASHER
4	2405	PAD
5	2405	SHIM
6	2405	SCREW
7	2405	WASHER
8	2405	STOP
9	2405	SCREW
10	2405	WASHER
11	2405	STOP
12	2404	PIN
13	2404	PIN
14	2405	FITTING
15	2405	CAP
16	2405	RING
17	2405	ADAPTER
18	2405	NUT
19	2405	WASHER
20	2405	SCREW
21	2405	SHIM
22	2405	ROLLER
23	2405	CARRIAGE
24	2405	WASHER
25	2405	SCREW

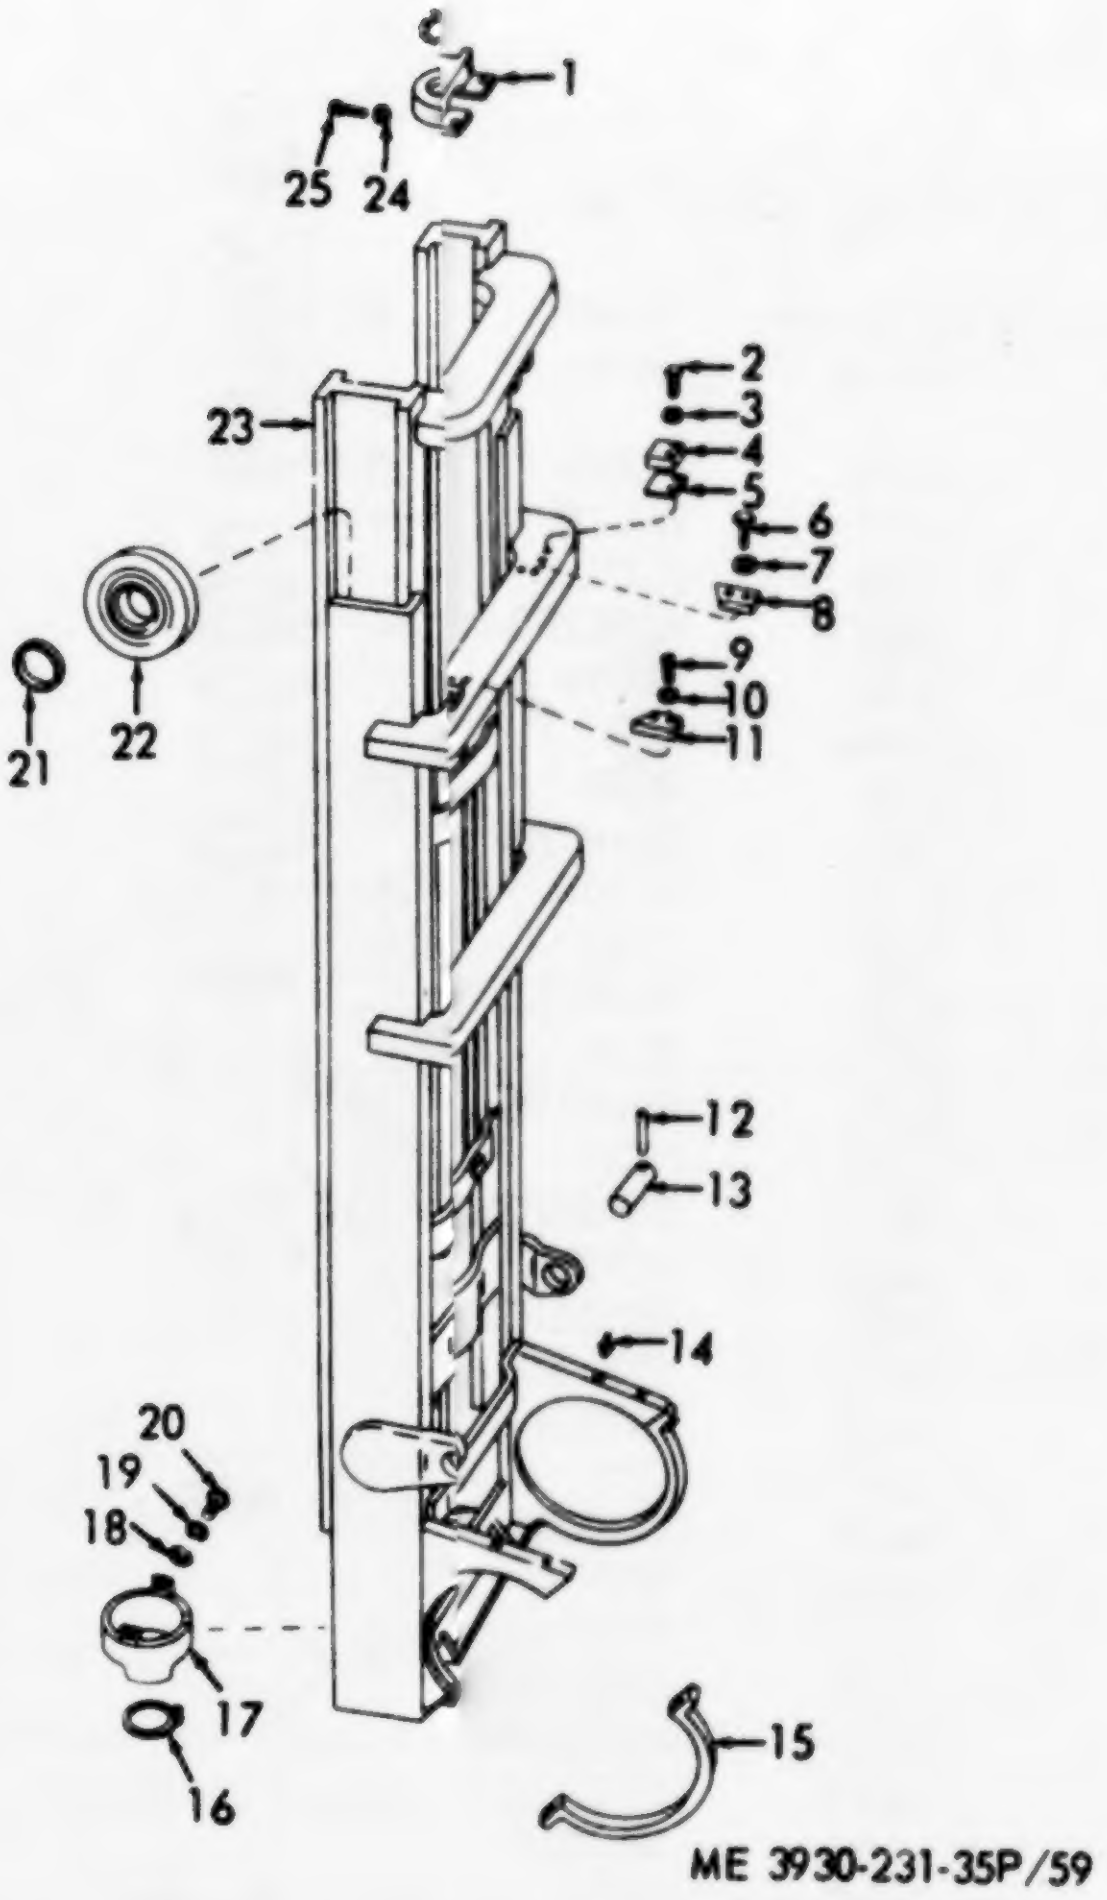
1
25
24
2
3
4
5
6
7
8
23
9
10
11
21
22
12
13
14
20
19
18
17
15
16
ME 3930-231-35P/59

Figure 59. Mast Column and Carriage.

INDEX TO PARTS, FIGURE 60

Reference Number	Functional Group	Item Name
1	2405	SCREW
2	2405	VALVE
3	2405	PLUG
4	2405	PACKING
5	2405	VALVE
6	2405	ROD
7	2406	HOSE
8	2406	ADAPTER
9	2406	ELBOW
10	2406	TUBE
11	2405	PACKING
12	2405	RING
13	2405	BUSHING
14	2405	HEAD
15	2405	SETSCREW
16	2405	SCREW
17	2405	RETAINER
18	2405	SPRING
19	2405	PACKING
20	2405	NUT
21	2405	WASHER
22	2405	ROD
23	2405	BODY
24	2405	RETAINER
25	2405	PACKING
26	2405	NUT
27	2405	WASHER
28	2405	RING
29	2405	RETAINER
30	2405	PACKING
31	2405	NUT
32	2405	WASHER
33	2405	TUBE

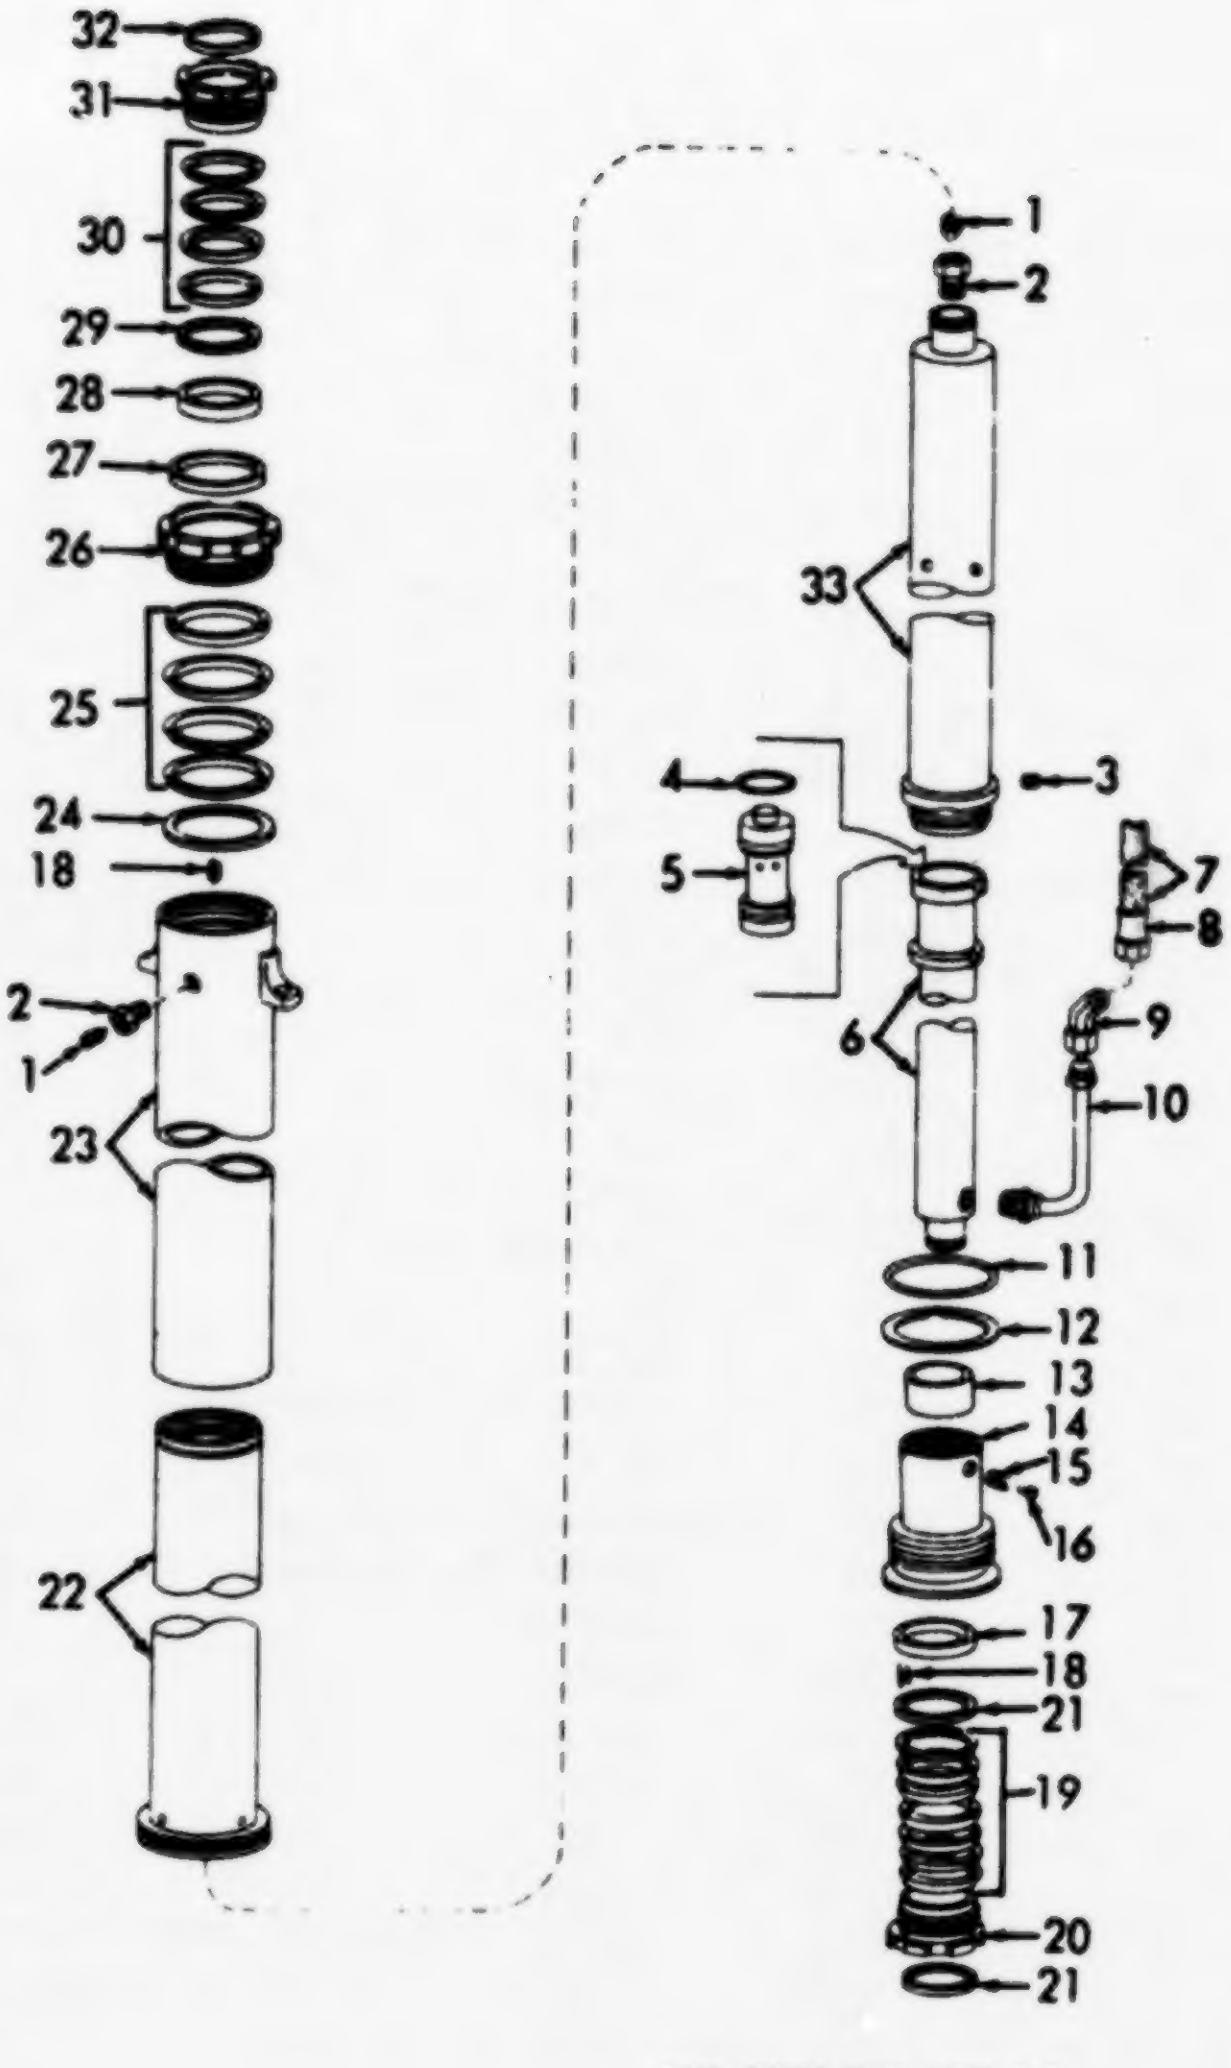
32
31
30
29
28
27
26
25
24
18
2
1
23
22
1
2
33
3
4
5
7
8
6
9
10
11
12
13
14
15
16
17
18
21
19
20
21

ME 3930-231-35P/60

Figure 60. Lift Cylinders.

242-451

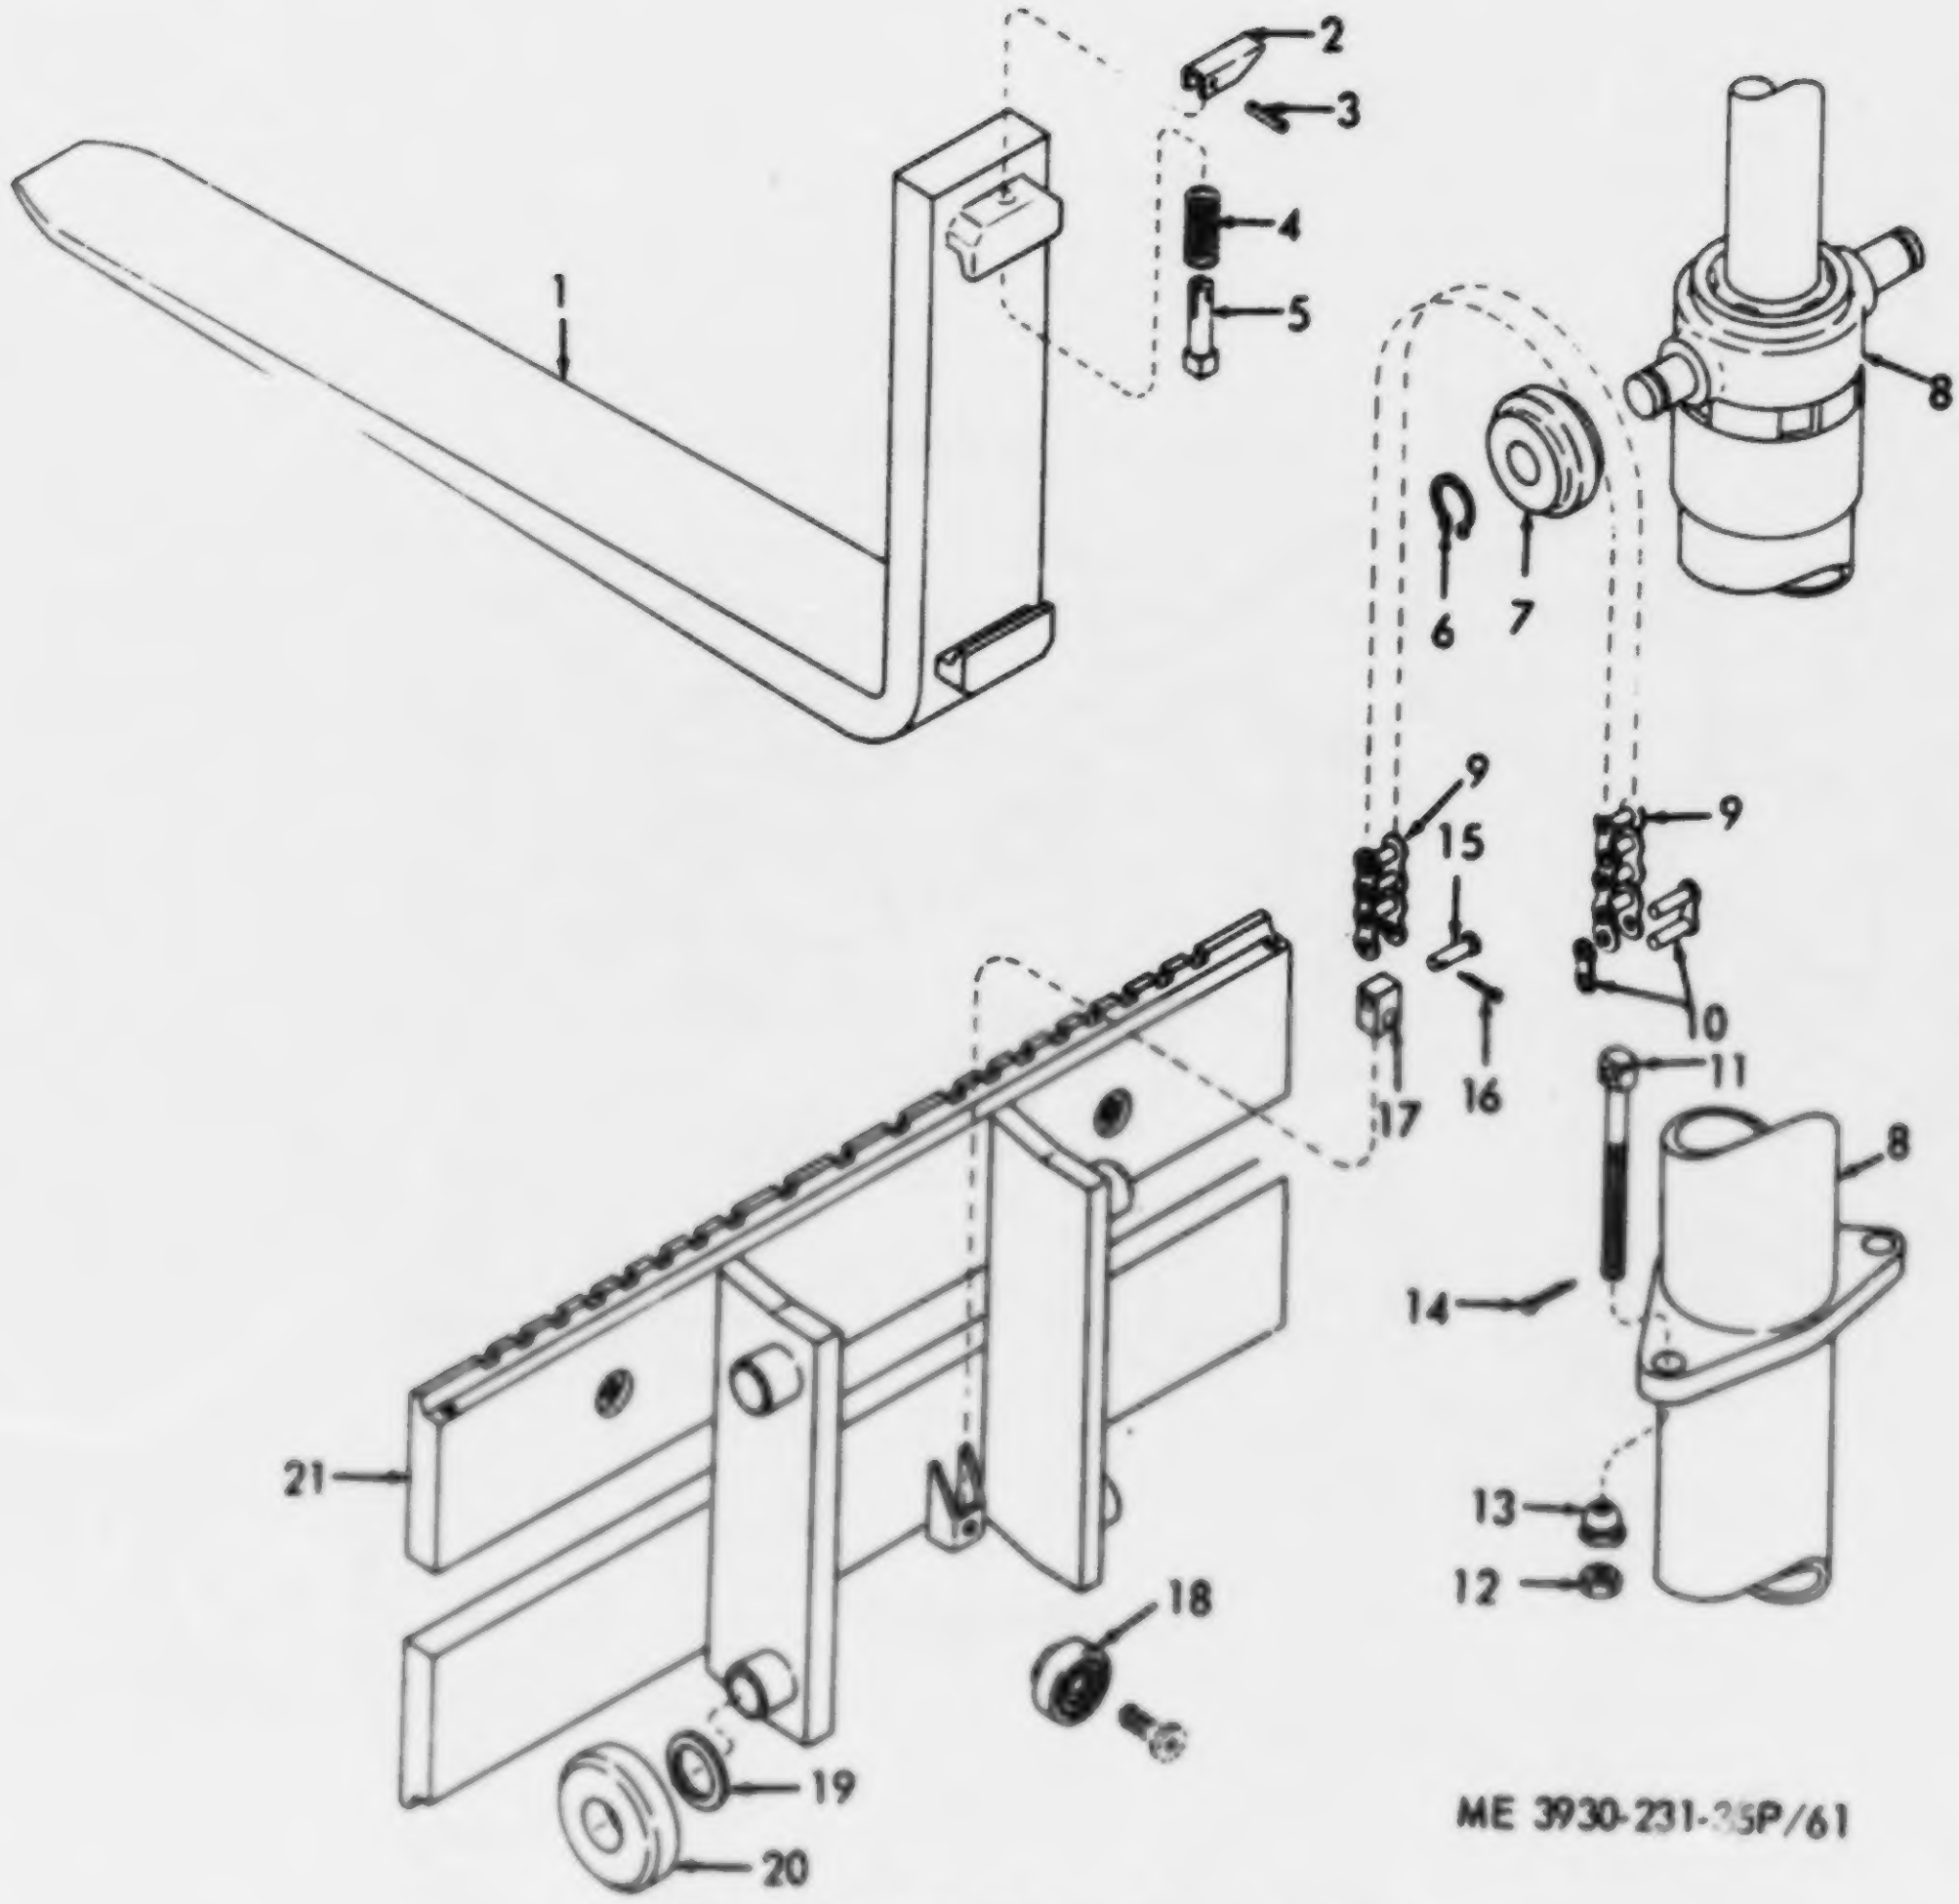
2
3
4
5
1
8
6
7
9
15
9
10
11
17
16
8
14
21
13
12
18
19
20
ME 3930-231-35P/61

Figure 61. Lift Chain, Fork, Back Rest.

INDEX TO PARTS, FIGURE 61

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	2405	FORK	12	2405	NUT
2	2405	LEVER	13	2405	NUT
3	2405	PIN	14	2405	PIN
4	2405	SPRING	15	2405	PIN
5	2405	PIN	16	2405	PIN
6	2405	RING	17	2405	ANCHOR
7	2405	BEARING	18	2405	ROLLER
8	2405	HEAD	19	2405	SHIM
9	2405	CHAIN	20	2405	ROLLER
10	2405	LINK	21	2405	BACK
11	2405	ANCHOR			

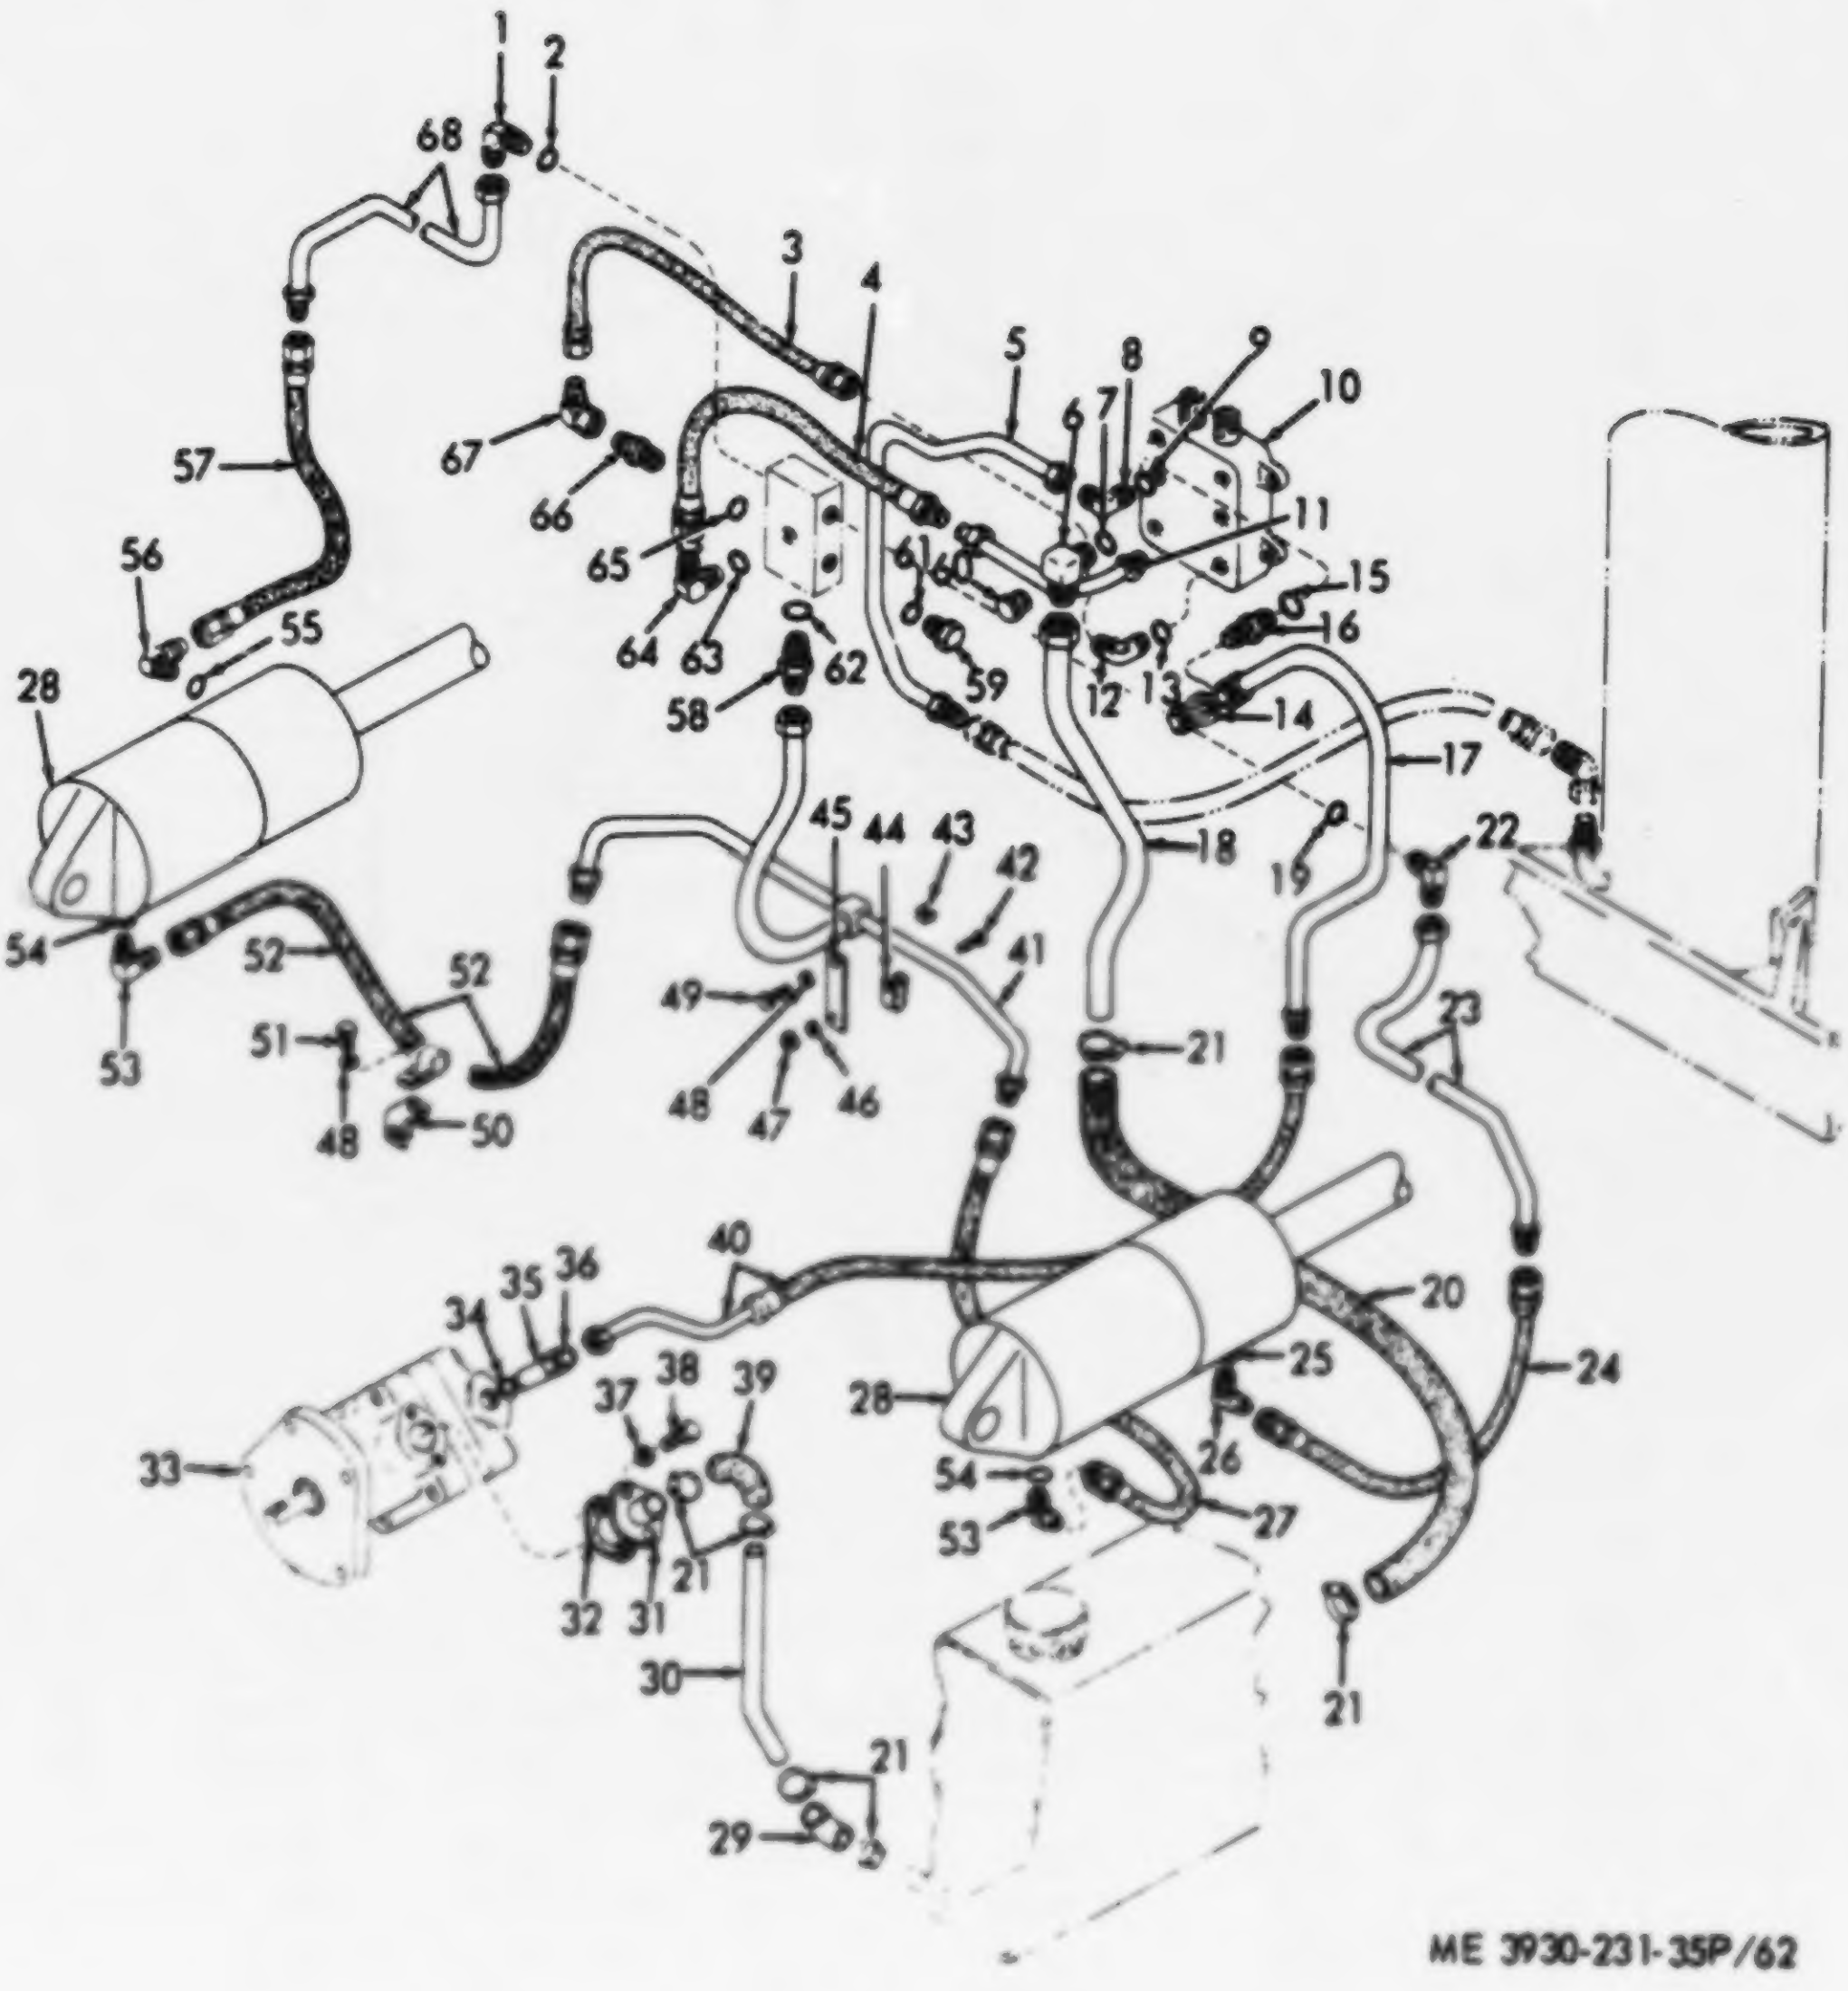
1
2
68
3
4
5
8
9
10
7
6
11
67
66
65
57
56
61
60
15
64
63
62
16
55
12
13
14
28
59
58
17
45
44
43
22
18
19
42
54
52
52
41
49
23
51
48
47
46
21
53
48
50
40
20
35
36
34
37
38
39
25
24
28
33
26
54
27
53
21
32
31
30
21
21
29

ME 3930-231-35P/62

Figure 62. Hydraulic Lines.

INDEX TO PARTS, FIGURE 62

Reference Number	Functional Group	Item Name	Reference Number	Functional Group	Item Name
1	2406	ELBOW	35	2406	TEE
2	2406	PACKING	36	2406	CAP
3	2406	HOSE	37	2401	WASHER
4	2406	HOSE	38	2401	SCREW
5	2406	TUBE	39	2406	HOSE
6	2406	ELBOW	40	2406	LINE
7	2406	PACKING	41	2406	TEE
8	2406	ELBOW	42	2406	BOLT
9	2406	PACKING	43	2406	NUT
10	2402	VALVE	44	2406	CLAMP
11	2406	TUBE	45	2406	BRACKET
12	2406	ELBOW	46	2406	WASHER
13	2406	PACKING	47	2406	NUT
14	2406	ELBOW	48	2406	WASHER
15	2406	PACKING	49	2406	SCREW
16	2406	CONNECTOR	50	2406	BRACKET
17	2406	TUBE	51	2406	SCREW
18	2406	TUBE	52	2406	HOSE
19	2406	PACKING	53	2406	ELBOW
20	2406	HOSE	54	2406	PACKING
21	2406	CLAMP	55	2406	PACKING
22	2406	ELBOW	56	2406	ELBOW
23	2406	TUBE	57	2406	HOSE
24	2406	HOSE	58	2406	CONNECTOR
25	2406	PACKING	59	2406	CAP
26	2406	ELBOW	60	2406	CAP
27	2406	HOSE	61	2406	PACKING
28	2404	CYLINDER	62	2406	PACKING
29	2406	HOSE	63	2406	PACKING
30	2406	TUBE	64	2406	ELBOW
31	2401	FLANGE	65	2406	PACKING
32	2401	GASKET	66	2406	CONNECTOR
33	2401	PUMP	67	2406	ELBOW
34	2406	PACKING	68	2406	TUBE

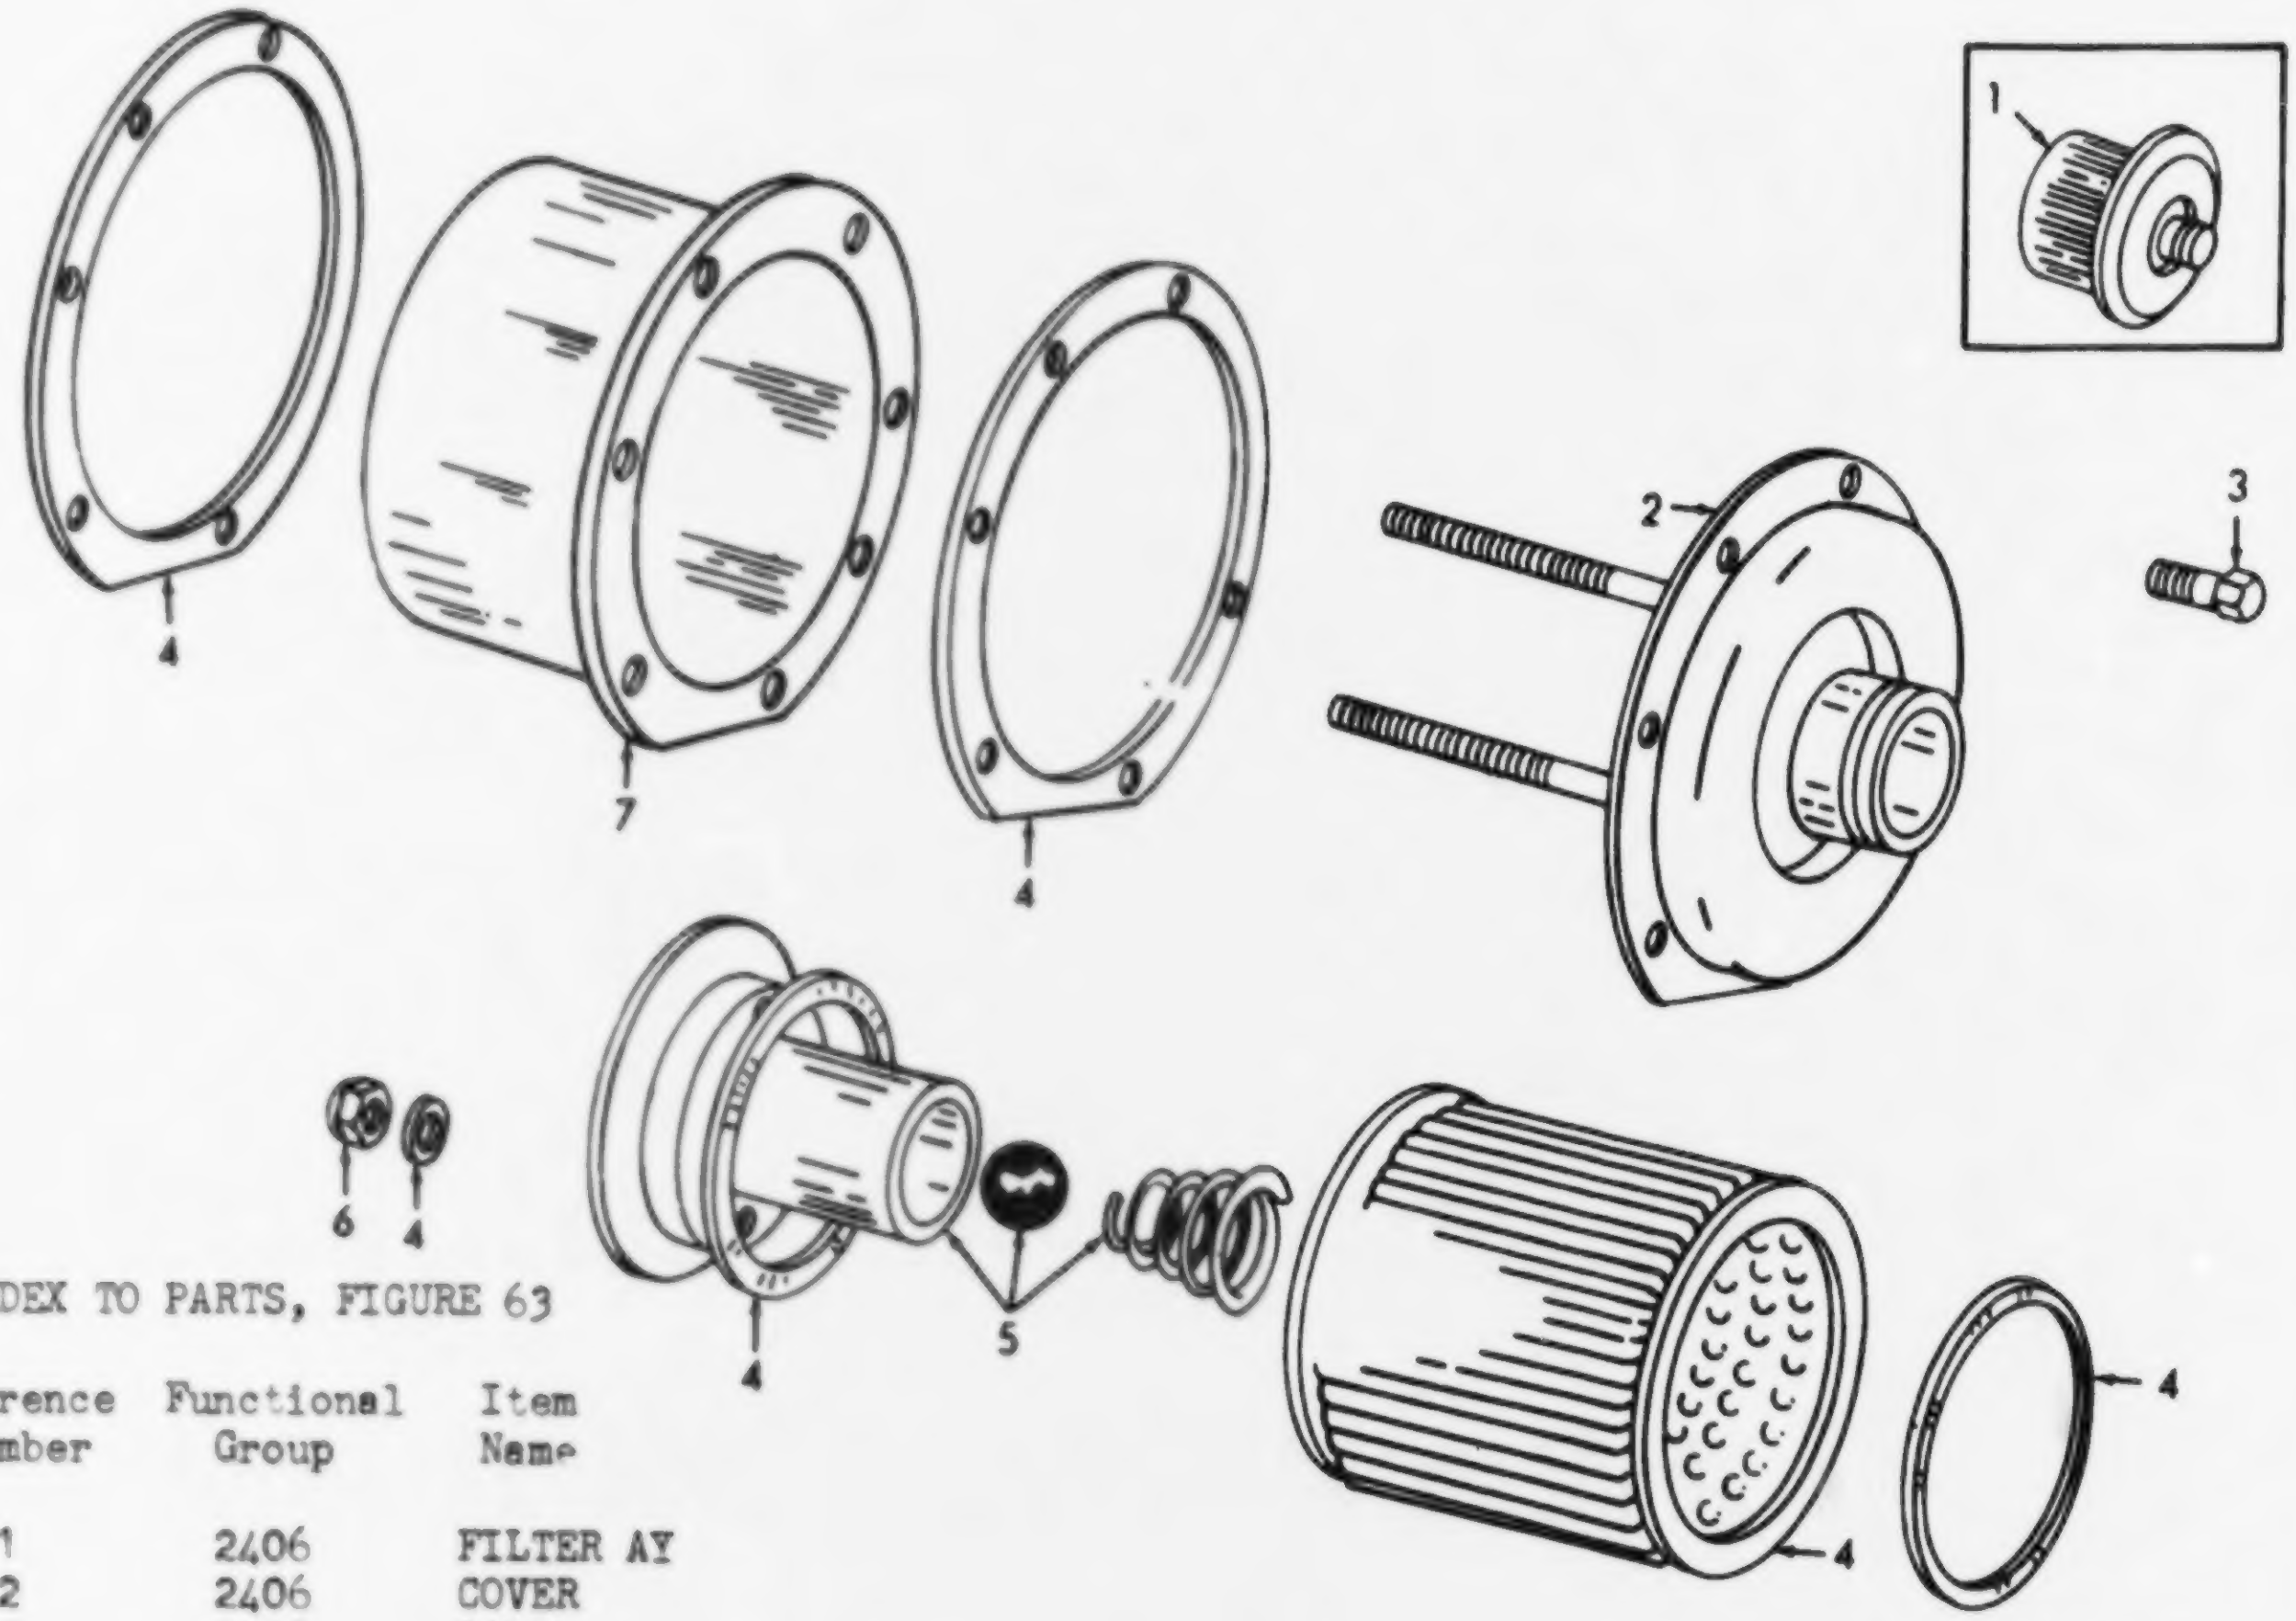

ME 3930-231-35P/63

Figure 63. Sump Filter.

INDEX TO PARTS, FIGURE 63

Reference Number	Functional Group	Item Name
1	2406	FILTER AY
2	2406	COVER
3	2406	BOLT
4	2406	FILTER W/GASKETS
5	2406	VALVE AY
6	2406	NUT
7	2406	COVER

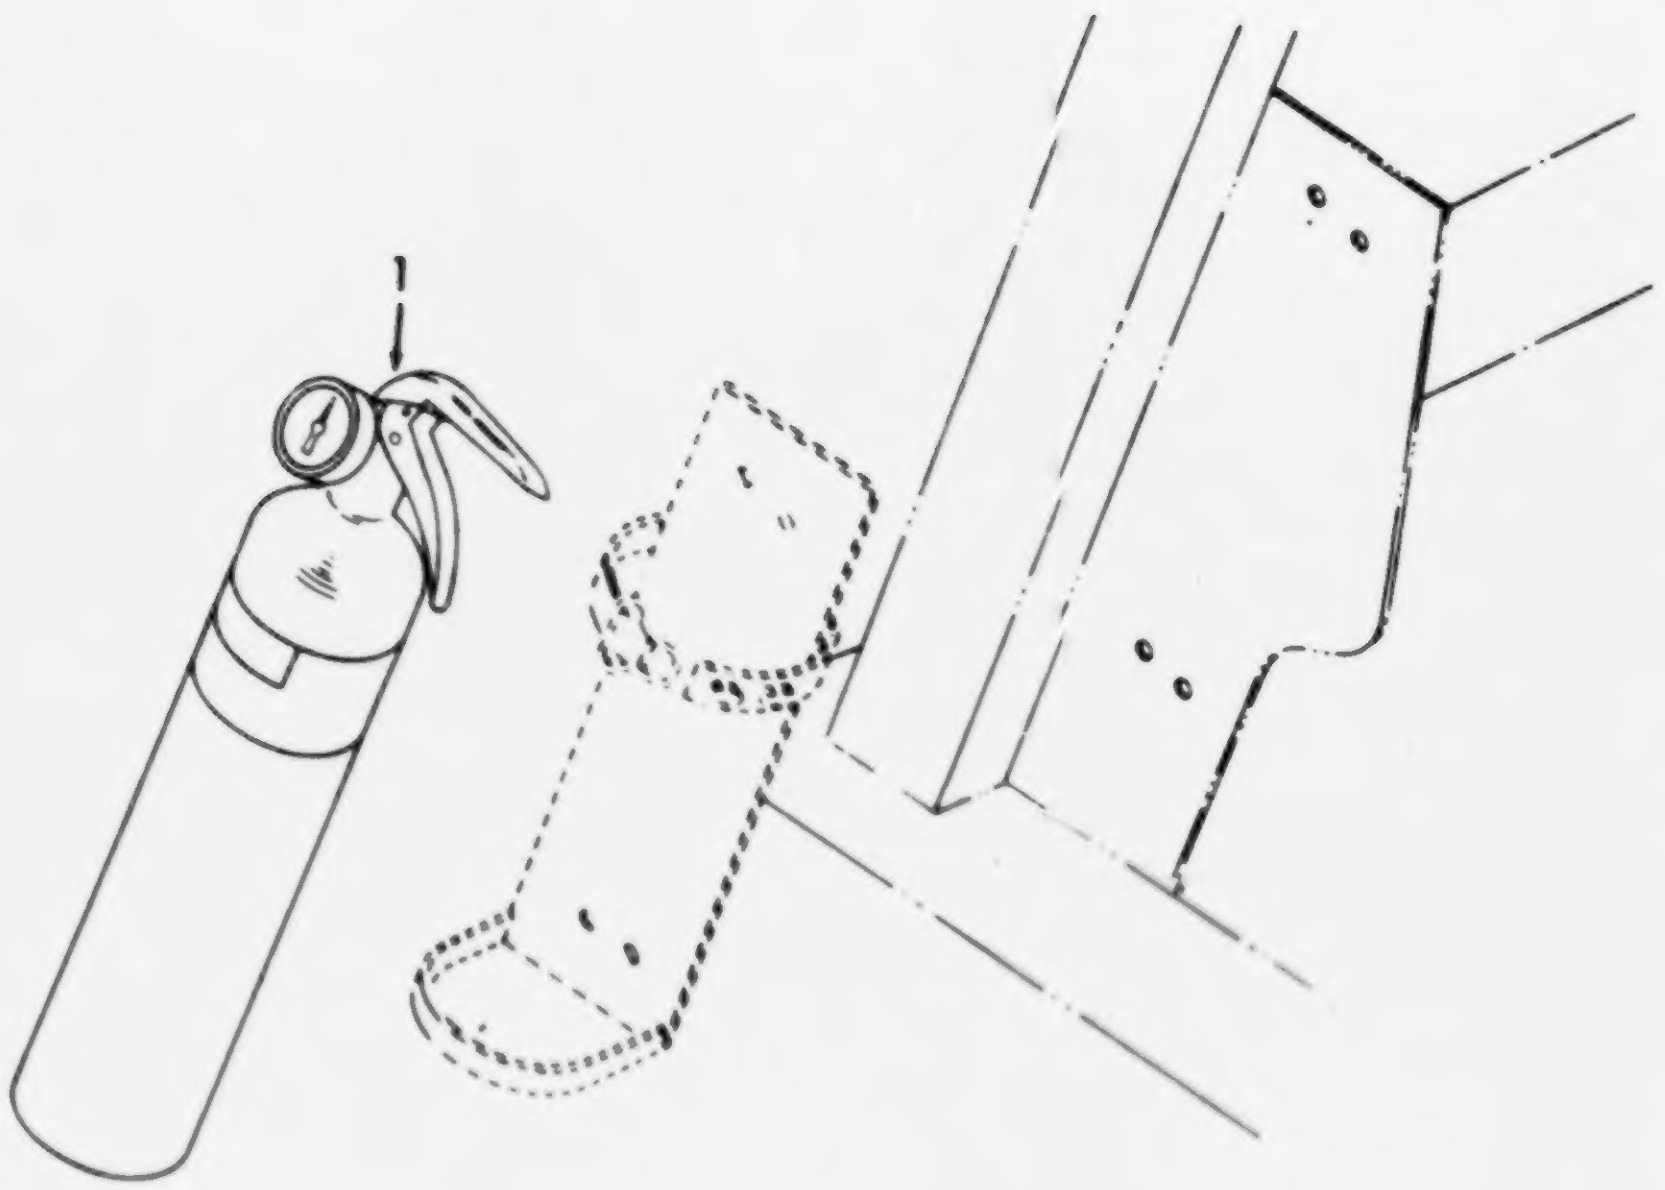

ME 3930-231-35P/64

Figure 64. Fire Extinguisher.

INDEX TO PARTS, FIGURE 64

Reference Number	Functional Group	Item Name
1	7603	EXTINGUISHERS

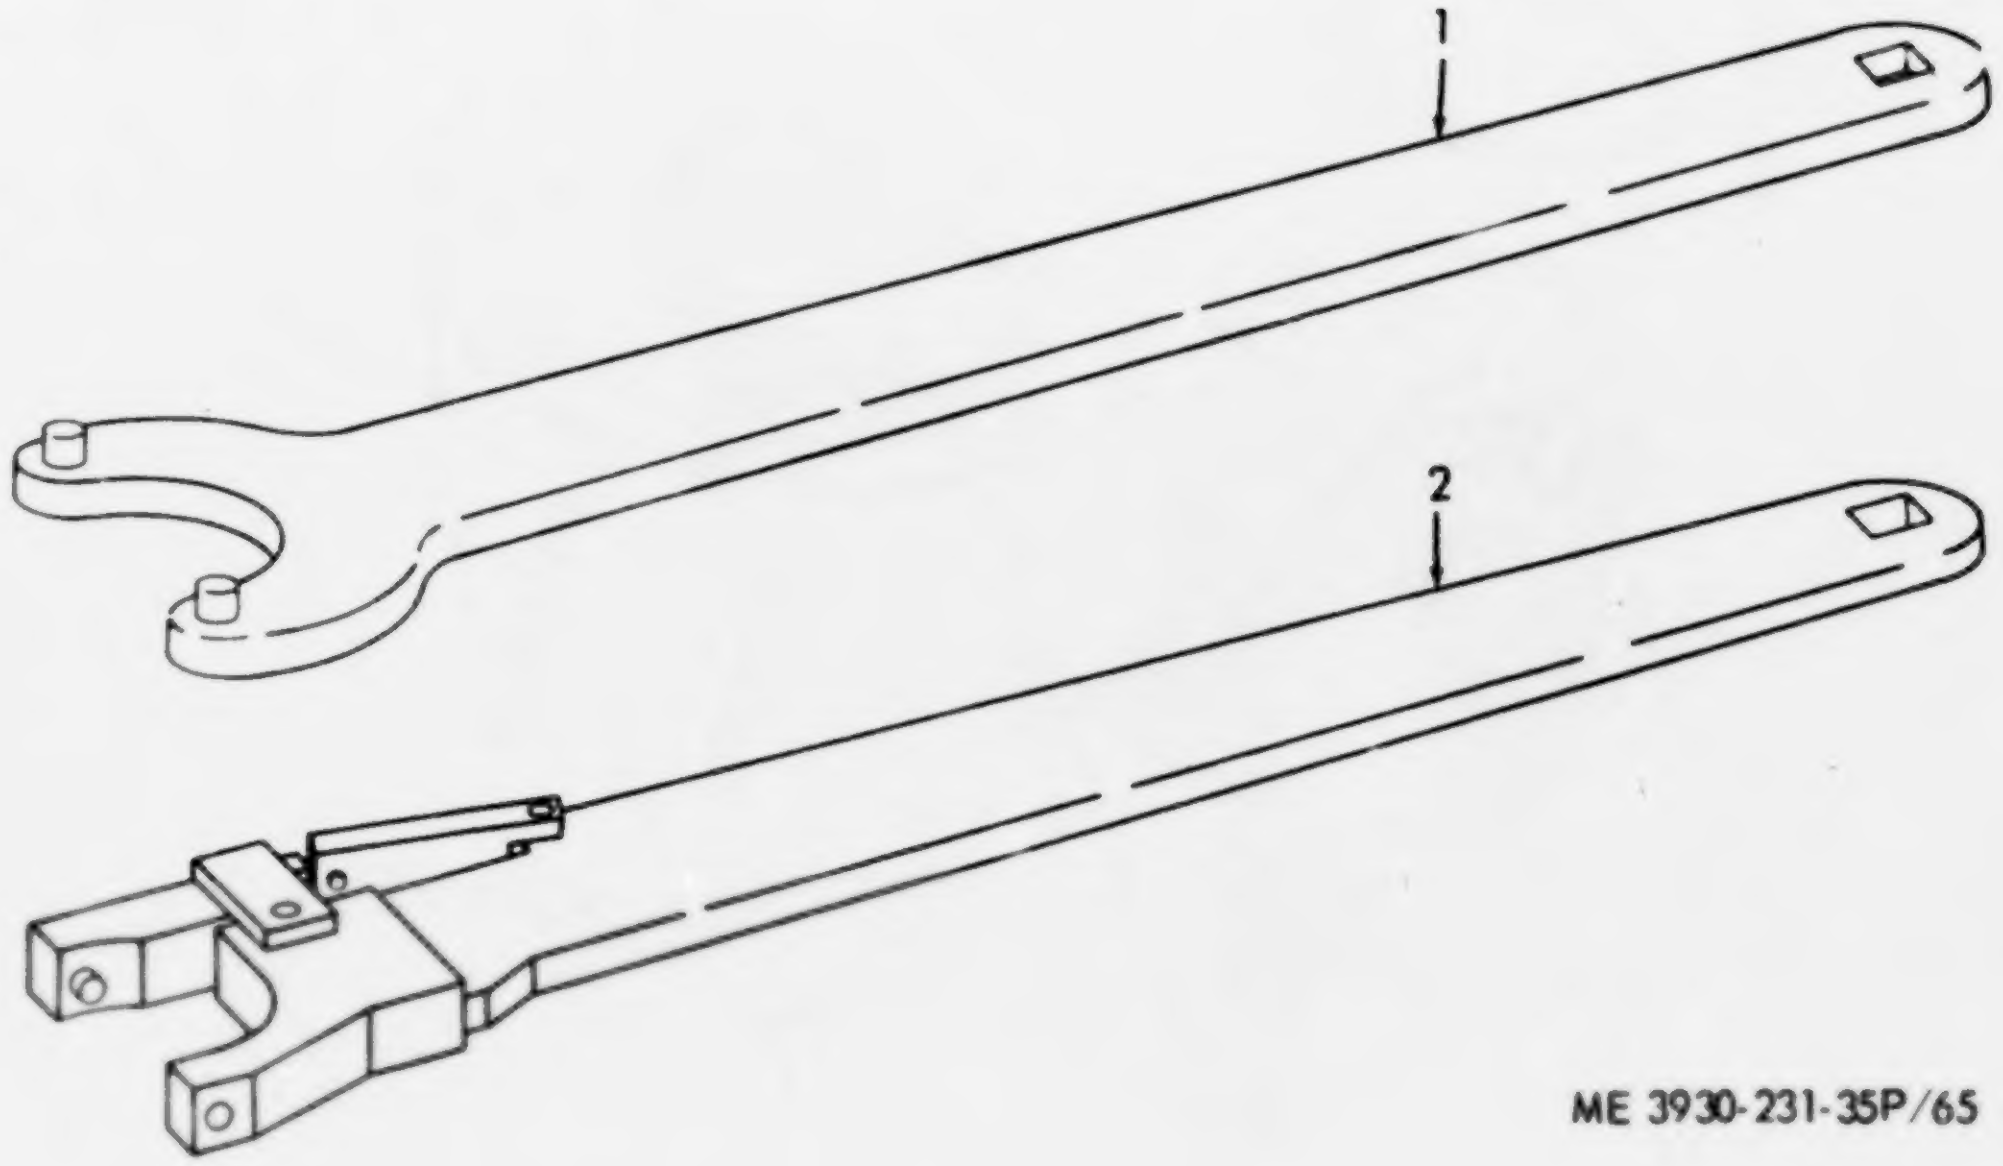
1
2
ME 3930-231-35P/65

Figure 65. Special Tools.

INDEX TO PARTS, FIGURE 65

Reference Number	Functional Group	Item Name
1	2604	WRENCH
2	2604	WRENCH

SECTION IV INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER

STOCK NUMBER	INDEX NUMBER	STOCK NUMBER	INDEX NUMBER
2520-066-2285	00901	2530-152-8458	01263
2520-072-6698	01034	2530-164-3568	01186
2520-072-6699	01035	2530-164-3568	01187
2520-072-6712	01024	2530-164-3573	01257
2520-072-6713	01023	2530-164-3580	01265
2520-072-6721	01193	2530-170-1899	01121
2520-072-6723	01012	2530-217-9725	01239
2520-072-6732	01059	2530-226-1267	01368
2520-073-2134	00905	2530-226-1301	01365
2520-152-8363	00935	2530-226-1922	01351
2520-215-1019	01256	2530-226-8403	01358
2520-273-8492	01137	2530-226-8404	01364
2520-300-0861	01016	2530-255-9669	00904
2520-587-5563	00841	2530-266-1168	01353
2520-587-5575	00816	2530-273-8495	01167
2520-587-5575	00817	2530-276-8676	01275
2520-587-5575	01784	2530-300-0856	00806
2520-587-5579	00815	2530-311-9644	01234
2520-587-5580	00775	2530-343-8161	01123
2520-587-5671	00999	2530-353-2993	01161
2520-587-6281	00776	2530-358-6665	00686
2520-594-3075	00618	2530-358-9654	01080
2520-620-6111	00820	2530-359-1473	01225
2520-713-3752	00819	2530-359-1528	01296
2520-781-4549	00779	2530-359-1529	01295
2520-831-2465	00934	2530-375-0747	01070
2520-833-8959	01348	2530-375-0751	01088
2520-848-2594	00866	2530-375-0954	01261
2520-848-2594	00867	2530-375-0965	01294
2520-848-2594	01788	2530-383-9885	01160
2520-848-2595	00769	2530-384-8776	01266
2520-848-2595	00770	2530-439-9246	01606
2520-848-2595	01768	2530-466-8624	00906
2520-876-2781	01057	2530-466-8624	01126
2520-883-7695	00893	2530-466-8624	01771
2520-883-7698	01025	2530-499-9263	01264
2520-900-6878	00847	2530-534-5565	01380
2520-900-6878	00848	2530-537-0772	01162
2520-983-4231	01018	2530-566-7785	01164
2520-983-4232	00761	2530-737-2340	01165
2530-010-2477	01284	2530-737-3552	01262
2530-014-6804	01255	2530-755-0381	01320
2530-019-2260	01363	2530-764-6604	01322
2530-019-2262	01384	2530-843-5143	01125
2530-019-2265	01357	2530-860-0388	01533
2530-019-2266	01382	2530-876-9629	01135
2530-034-4188	01498	2530-882-5590	00697
2530-072-6736	01108	2530-883-7700	01082
2530-072-6738	01104	2530-883-7702	01083
2530-073-2140	01107	2530-883-7704	01065
2530-073-2158	01068	2530-900-6878	01767
2530-073-2166	01283	2530-929-5332	01281
2530-087-0327	01463	2530-930-4586	01091
2530-087-0327	01485	2530-930-6386	01362
2530-087-0327	01782	2530-940-7854	01346
2530-087-0369	01489	2530-976-3331	01110
2530-087-0369	01490	2530-986-7594	01315
2530-098-2201	01282	2530-986-7595	01318
2530-101-1701	00683	2540-215-4048	00687
2530-152-8453	01258	2540-771-6993	00407

SECTION IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER (Continued)

STOCK NUMBER	INDEX NUMBER
2540-772-5294	00398
2540-929-7093	01416
2590-253-7229	00696
2590-359-4360	01449
2590-374-0826	00685
2590-384-0157	00018
2590-384-0157	01428
2590-678-7259	01433
2590-679-6729	00400
2590-765-4844	01441
2590-765-5638	01443
2590-771-5622	00689
2590-930-5683	01504
2610-849-0609	01217
2610-849-0609	01220
2610-849-0612	01214
2610-849-0612	01219
2805-012-2720	00116
2805-015-3862	00139
2805-024-2095	00124
2805-030-0790	00033
2805-030-0832	00208
2805-069-2952	00052
2805-073-2108	00003
2805-073-2109	00029
2805-097-2653	00142
2805-214-2911	00141
2805-217-8612	00079
2805-217-8638	00049
2805-217-8639	00051
2805-217-8640	00081
2805-246-7611	00217
2805-246-7612	00168
2805-268-8895	00019
2805-286-8895	00034
2805-286-8895	00134
2805-302-1799	00054
2805-305-8265	00149
2805-314-3428	00218
2805-321-2651	00382
2805-326-4858	00381
2805-329-2067	00102
2805-341-1541	00138
2805-358-2284	00127
2805-358-2568	00009
2805-358-2569	00012
2805-358-2569	00030
2805-358-2569	00196
2805-358-2587	00007
2805-358-2587	00131
2805-358-3053	00207
2805-358-3082	00084
2805-358-3134	00156
2805-358-4631	00372
2805-358-4680	00371
2805-362-2046	00183
2805-362-2063	00200
2805-362-2074	00157
2805-362-2115	00006
2805-362-2115	00035
2805-362-2115	00053
2805-362-2208	00187
2805-364-4932	00130
2805-364-6997	00182
2805-371-4990	00086
2805-371-4999	00211
2805-374-4172	00179
2805-374-9710	00110
2805-374-9739	00099
2805-374-9746	00126
2805-374-9751	00170
2805-382-7986	00050
2805-382-8000	00166
2805-382-8027	00167
2805-382-8033	00171
2805-382-8664	00095
2805-382-8665	00025
2805-382-8665	00083
2805-382-8691	00017
2805-382-8699	00159
2805-383-3834	00080
2805-383-8694	00210
2805-383-8733	00010
2805-383-8733	00132
2805-383-8733	00133
2805-383-9028	00180
2805-388-6653	00106
2805-388-6654	00107
2805-388-6655	00108
2805-397-9179	00146
2805-397-9180	00148
2805-399-6935	00011
2805-399-6935	00228
2805-422-5680	00147
2805-516-2699	00100
2805-528-5886	00368
2805-528-6097	00150
2805-535-3737	00219
2805-540-5299	00105
2805-554-9255	00101
2805-554-9822	00104
2805-586-5175	00014
2805-586-5175	00031
2805-586-5175	00198
2805-601-8135	00125
2805-663-4356	00020
2805-663-4356	00036
2805-663-4356	00135
2805-705-9037	00229
2805-710-6126	00343
2805-710-6129	00158
2805-710-6132	00145
2805-844-6398	00092
2805-929-0756	00140
2805-981-2512	00109
2805-981-2513	00114
2910-073-2113	00266
2910-073-2118	00390
2910-105-2684	00276
2910-105-2686	00243

SECTION IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER (Continued)

STOCK NUMBER	INDEX NUMBER
2910-105-6069	00245
2910-171-4268	00258
2910-202-2458	00307
2910-290-8423	00305
2910-290-8424	00306
2910-294-1579	00189
2910-307-6816	00250
2910-326-5128	00302
2910-328-9370	00308
2910-354-4939	00274
2910-354-4946	00287
2910-358-4283	00387
2910-358-4289	00388
2910-358-5057	00299
2910-358-5632	00317
2910-360-4535	00311
2910-360-4548	00277
2910-360-4548	00278
2910-360-4549	00279
2910-364-6863	00300
2910-382-8756	00301
2910-383-4243	00304
2910-395-6810	00275
2910-459-6347	00008
2910-459-6347	00297
2910-464-6725	00273
2910-474-6457	00316
2910-507-2040	00259
2910-569-4499	00248
2910-587-5526	00340
2910-594-2293	00391
2910-652-4446	00389
2910-914-2732	00352
2910-915-2474	00332
2910-983-0911	00237
2920-010-2126	00584
2920-038-4447	00607
2920-064-7737	00565
2920-064-7745	00570
2920-064-7746	00562
2920-064-7750	00644
2920-073-2128	00495
2920-075-4759	00595
2920-217-9112	00635
2920-249-8283	00529
2920-288-3779	00500
2920-293-5219	00617
2920-294-3389	00611
2920-294-3895	00609
2920-358-7028	00608
2920-358-7089	00510
2920-510-5338	00610
2920-585-9859	00557
2920-640-7232	00612
2920-673-7184	00512
2920-696-4270	00544
2920-732-3714	00522
2920-741-9792	00572
2920-775-6242	00596
2920-841-8289	00577
2920-846-4418	00620
2920-848-2208	00626
2920-855-8625	00576
2920-917-5590	00614
2930-073-2122	00480
2930-073-2125	00470
2930-073-2126	00471
2930-353-8897	00028
2930-371-5008	00022
2930-384-8402	00021
2930-384-8402	00469
2930-384-8404	00023
2930-384-8404	00478
2930-628-4287	00487
2930-728-7744	00963
2930-848-3218	00508
2940-456-9733	00193
2940-529-2738	00194
2940-580-6302	00958
2940-604-7793	00323
2990-073-2119	00443
2990-713-2917	00441
2990-768-5352	00976
2990-848-5356	00444
2990-983-4229	00449
2990-983-4230	00445
3020-252-7363	01571
3020-252-7363	01574
3020-252-7363	01745
3030-983-2873	00486
3110-100-0359	01191
3110-100-0376	01011
3110-100-0526	01020
3110-100-0556	01197
3110-100-0747	01190
3110-100-2363	00498
3110-100-3165	01021
3110-100-3553	01188
3110-100-6149	00898
3110-100-6149	01761
3110-117-0757	01067
3110-144-8494	01439
3110-144-8534	00757
3110-144-8534	00758
3110-144-8534	01764
3110-151-6680	00756
3110-151-8140	00499
3110-155-6179	00759
3110-155-6699	01052
3110-156-5212	00117
3110-156-8390	01440
3110-157-0542	01064
3110-159-1359	01276
3110-191-0490	01274
3110-198-2169	01189
3110-198-2170	01198
3110-198-2829	00899
3110-198-2829	00900
3110-198-2829	01763
3110-227-4058	01010

SECTION IV. INDEX–FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS–REFERENCE TO INDEX NUMBER (Continued)

STOCK NUMBER	INDEX NUMBER
3110-277-2924	00118
3110-321-7247	00768
3110-587-6376	00764
3110-587-6404	00767
3110-736-1105	01066
3110-765-1213	00765
3110-807-3185	01260
3110-887-5524	00755
3110-965-0445	01481
3110-965-0445	01482
3110-965-0445	01762
3120-661-4286	00734
3120-661-6764	00582
3120-876-4570	01527
3120-888-6611	01524
3120-892-3910	01523
3930-010-7961	01629
3930-052-7504	01471
3930-066-5544	00705
3930-069-3536	01347
3930-069-3565	00331
3930-069-3625	01556
3930-069-3626	00360
3930-069-3627	01212
3930-069-3629	01671
3930-069-3630	00418
3930-073-2142	01324
3930-073-2143	01307
3930-073-2144	01372
3930-073-2148	01669
3930-073-2149	01543
3930-073-2150	01608
3930-078-2884	01311
3930-078-2917	00335
3930-102-2571	01525
3930-226-1925	01616
3930-226-1926	01609
3930-226-1949	01610
3930-226-1952	01611
3930-226-1953	01706
3930-226-1954	01733
3930-226-1955	01686
3930-226-1958	01690
3930-587-7020	01480
3930-587-7043	01673
3930-612-0767	01704
3930-674-2908	01603
3930-699-9435	01572
3930-699-9435	01575
3930-733-9716	01713
3930-733-9716	01715
3930-733-9716	01716
3930-733-9716	01719
3930-733-9716	01720
3930-733-9716	01779
3930-733-9731	01546
3930-805-9977	01548
3930-848-3229	00846
3930-860-9916	01544
3930-867-1464	01488
3930-884-5552	01615
3930-886-2402	00889
3930-886-2410	00739
3930-886-2412	00736
3930-886-2442	00886
3930-886-2469	00547
3930-886-2788	01693
3930-886-2794	01506
3930-886-3161	01528
3930-888-2451	01446
3930-918-1920	01494
3930-933-3762	00[illegible]53
3930-953-5206	01474
3930-953-5207	01475
3930-953-5208	01465
3930-960-9326	01495
3930-960-9326	01496
3930-960-9326	01789
3930-960-9331	01499
3930-974-1947	01330
3930-983-4269	01702
3930-983-4270	01703
3930-983-4305	01550
3930-983-4311	01549
3930-998-6164	01589
3950-805-9976	01545
4210-889-2221	01742
4310-988-0965	00959
4320-781-4553	00780
4320-995-6231	01448
4520-891-3780	00456
4710-277-5527	01149
4710-277-5527	01152
4710-277-5527	01155
4710-277-5527	01158
4710-277-5527	01752
4720-054-3825	01679
4720-054-3825	01751
4720-067-0454	01344
4720-067-0454	01682
4720-067-0454	01748
4720-067-0954	01689
4720-203-6527	00201
4720-203-6527	00202
4720-203-6527	01773
4720-274-1156	00966
4720-274-1156	00969
4720-274-1156	00972
4720-274-1156	01341
4720-274-1156	01747
4720-274-1157	00347
4720-274-1157	00351
4720-274-1157	00355
4720-274-1157	01750
4720-288-9840	01685
4720-288-9840	01692
4720-288-9840	01695
4720-288-9840	01698
4720-288-9840	01701
4720-288-9840	01749

SECTION IV. INDEX–FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS–REFERENCE TO INDEX NUMBER (Continued)

STOCK NUMBER	INDEX NUMBER	STOCK NUMBER	INDEX NUMBER
4720-542-4433	01705	4730-467-3514	00328
4720-542-4933	01746	4730-467-3514	00329
4730-010-0597	01334	4730-467-3514	00465
4730-010-0597	01654	4730-467-3514	01652
4730-010-0597	01655	4730-542-2807	00965
4730-010-0597	01766	4730-542-2807	00968
4730-010-3867	01273	4730-542-2807	00971
4730-018-9566	00813	4730-542-2807	01340
4730-018-9566	01359	4730-542-2807	01757
4730-019-1202	01360	4730-674-6831	01483
4730-019-1452	01229	4730-674-6831	01651
4730-042-8988	00232	4730-674-6834	01649
4730-044-4593	00060	4730-674-6836	01337
4730-044-4660	00357	4730-674-6836	01664
4730-044-4687	00814	4730-674-6836	01666
4730-044-4691	00919	4730-674-6844	01665
4730-044-4849	00921	4730-674-6845	01663
4730-044-4854	00920	4730-695-0095	00446
4730-044-4854	00922	4730-711-6295	00954
4730-044-5671	00985	4730-737-5440	01122
4730-050-4203	01176	4730-765-5711	01336
4730-050-4203	01227	4730-788-5959	00251
4730-050-4203	01601	4730-838-3555	00349
4730-051-4674	01678	4730-838-3555	00353
4730-052-3972	01661	4730-838-3555	01759
4730-052-3972	01662	4730-852-4065	01335
4730-052-3972	01769	4730-853-1183	01656
4730-054-7608	01226	4730-857-0960	01586
4730-073-2151	00346	4730-883-8448	01657
4730-073-2151	00350	4730-883-8448	01658
4730-073-2151	00354	4730-883-8448	01659
4730-073-2151	01760	4730-883-8448	01770
4730-172-0028	01069	4730-891-7059	01228
4730-193-0875	00048	4730-891-7059	01530
4730-215-7390	00213	4730-897-5932	01684
4730-221-2136	00231	4730-897-5932	01691
4730-221-6215	00467	4730-897-5932	01694
4730-249-2028	00994	4730-897-5932	01697
4730-277-8268	00952	4730-897-5932	01700
4730-277-8268	00953	4730-897-5932	01758
4730-277-8269	01146	4730-897-5933	01688
4730-277-8273	00192	4730-897-6271	01343
4730-278-2965	00059	4730-897-6271	01681
4730-278-4645	00190	4730-897-6271	01687
4730-278-5551	01148	4730-897-6271	01756
4730-278-5551	01151	4810-953-5205	01492
4730-278-5551	01154	4810-953-5205	01493
4730-278-5551	01157	4810-953-5205	01787
4730-278-5754	00505	4820-012-2261	01502
4730-278-5758	00506	4820-034-1614	01600
4730-279-0354	01352	4820-359-4050	00358
4730-287-1649	00191	4820-359-4054	00797
4730-288-9440	00341	4820-849-1220	00072
4730-293-7716	00212	4820-849-1220	00466
4730-359-0440	01124	5305-018-0129	00481
4730-359-3872	01031	5305-018-0129	01452
4730-384-8763	01232	5305-018-1639	01170
4730-384-8763	01237	5305-018-1648	00450
4730-384-8763	01783	5305-021-3825	00831
4730-467-3514	00327	5305-021-7043	01300

SECTION IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER (Continued)

STOCK NUMBER	INDEX NUMBER	STOCK NUMBER	INDEX NUMBER
5305-022-3640	00558	5305-269-4511	01451
5305-042-6417	01046	5305-273-5251	00215
5305-045-1988	00832	5305-274-2568	01395
5305-050-1076	00833	5305-291-6785	00163
5305-053-8993	00838	5305-297-0697	00216
5305-057-1100	01249	5305-349-1246	00164
5305-058-5018	01079	5305-358-3477	00061
5305-068-0500	00633	5305-358-3477	00062
5305-068-0501	00836	5305-360-4539	00313
5305-068-0505	00312	5305-429-5225	00247
5305-068-0505	00422	5305-543-2271	01631
5305-068-0505	00750	5305-543-4302	00564
5305-068-0505	01723	5305-543-5962	00421
5305-068-0510	00693	5305-559-9202	01141
5305-068-8202	01633	5305-687-7011	01477
5305-069-5574	00096	5305-723-9387	00752
5305-069-5574	00891	5305-723-9387	01596
5305-069-5574	00892	5305-725-4183	01251
5305-071-2239	01393	5305-725-4187	01558
5305-071-2506	01724	5305-727-8815	01557
5305-071-2506	01725	5305-762-6041	01250
5305-103-3035	01594	5305-782-9495	01194
5305-103-3036	00359	5305-810-8431	01630
5305-103-6891	00085	5305-810-8431	01632
5305-104-5250	00527	5305-846-3875	00460
5305-105-1207	00523	5305-854-6690	00695
5305-164-0938	00840	5305-855-0974	00592
5305-207-1144	00252	5305-893-6610	01349
5305-207-4420	01252	5305-900-3253	00694
5305-207-5344	00613	5305-926-1813	01047
5305-208-6291	00525	5305-959-7121	01078
5305-208-6291	00590	5305-983-5338	01323
5305-225-7773	00751	5305-989-0839	00591
5305-226-7768	01278	5305-989-5627	00589
5305-267-8975	00927	5306-042-3570	00760
5305-267-8976	00926	5306-072-6714	01017
5305-269-2804	01454	5306-072-6724	01009
5305-269-2805	01476	5306-072-9450	01184
5305-269-2808	00043	5306-104-2831	00395
5305-269-3208	01054	5306-104-2831	00396
5305-269-3209	01206	5306-207-8351	00120
5305-269-3209	01277	5306-207-8351	00121
5305-269-3211	00378	5306-208-5080	01350
5305-269-3211	00835	5306-208-9102	00119
5305-269-3211	00839	5306-225-8494	00977
5305-269-3211	01279	5306-225-8497	00494
5305-269-3211	01316	5306-225-8507	00123
5305-269-3212	00563	5306-225-9084	00948
5305-269-3213	00160	5306-225-9086	00606
5305-269-3213	00377	5306-225-9087	00325
5305-269-3213	00837	5306-225-9087	00949
5305-269-3213	00929	5306-225-9087	01646
5305-269-3214	00524	5306-225-9089	01394
5305-269-3214	00545	5306-272-3725	00047
5305-269-3214	00928	5306-281-5325	00090
6305-269-3218	00161	5306-298-1414	01100
5305-269-3218	00482	5306-356-1605	00185
5305-269-3218	00834	5306-358-3463	00122
5305-269-3218	01453	5306-358-5907	00477
5305-269-4511	00162	5306-359-2761	01442

STOCK NUMBER	INDEX NUMBER	STOCK NUMBER	INDEX NUMBER
5306-362-2085	00111	5310-054-1844	00431
5306-599-0474	00184	5310-073-2159	01085
5306-616-1287	00186	5310-080-6004	00234
5306-616-1287	00488	5310-088-1251	01674
5306-709-0813	00379	5310-088-6572	01370
5306-709-2123	01183	5310-109-0965	00875
5306-753-4009	00369	5310-167-0721	00173
5306-753-4310	00681	5310-167-0721	00175
5306-833-9055	00725	5310-167-0721	00223
5306-833-9088	01670	5310-167-0721	00224
5306-879-4602	00571	5310-167-0721	00992
5306-879-4603	00567	5310-167-0721	01304
5306-960-9314	01526	5310-167-0822	00077
5306-992-0439	00439	5310-167-1304	00744
5307-072-6701	01036	5310-167-1304	00790
5307-164-3531	01084	5310-187-0145	00364
5307-214-3028	00066	5310-187-0145	00715
5307-297-8305	00065	5310-188-4233	00172
5307-317-3039	00063	5310-188-4233	00483
5307-317-3040	00069	5310-194-2738	00075
5307-317-3043	00067	5310-194-9214	00176
5307-317-3048	00064	5310-209-0965	00221
5307-358-5845	00451	5310-209-0965	00336
5307-383-9306	00295	5310-209-0965	00946
5307-384-8477	00070	5310-209-0965	01119
5307-422-6081	00068	5310-209-0965	01301
5307-422-9627	00294	5310-221-4695	01356
5310-011-3111	00265	5310-222-7234	00055
5310-011-5949	00097	5310-222-7255	00543
5310-011-7049	00042	5310-262-3000	00962
5310-011-7049	00457	5310-262-9717	00246
5310-012-0214	00363	5310-269-3209	01207
5310-012-0368	00708	5310-274-7861	00532
5310-012-0370	01297	5310-274-8323	01392
5310-012-0380	01737	5310-276-2946	00538
5310-012-0381	01210	5310-282-0541	00318
5310-012-0384	00874	5310-285-7037	00289
5310-012-0423	00174	5310-297-3250	01268
5310-012-1734	00519	5310-302-1801	00113
5310-012-1932	00094	5310-359-1665	01298
5310-012-1932	01159	5310-359-1938	01285
5310-012-1932	01242	5310-362-6765	00533
5310-012-1932	01355	5310-383-4675	00791
5310-012-1932	01460	5310-383-4677	01200
5310-012-1932	01461	5310-383-4677	01201
5310-012-2166	00403	5310-384-8807	01270
5310-012-4934	01243	5310-391-3307	00153
5310-013-0148	01409	5310-391-3586	01199
5310-017-3128	00550	5310-407-9566	00222
5310-018-0447	01195	5310-407-9566	00225
5310-021-7216	01043	5310-407-9566	00337
5310-021-9760	01236	5310-407-9566	00428
5310-027-2342	01004	5310-407-9566	00429
5310-027-7216	01405	5310-407-9566	00430
5310-042-6894	00573	5310-407-9566	00434
5310-044-6548	00549	5310-407-9566	00489
5310-045-1425	01042	5310-407-9566	00534
5310-045-1523	01072	5310-407-9566	00553
5310-045-3294	00537	5310-407-9566	00599
5310-050-3383	00448	5310-407-9566	00619

SECTION IV INDEX–FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS–REFERENCE TO INDEX NUMBER (Continued)

STOCK NUMBER	INDEX NUMBER	STOCK NUMBER	INDEX NUMBER
5310-407-9566	00668	5310-637-9541	01641
5310-407-9566	00698	5310-637-9541	01642
5310-407-9566	00716	5310-637-9541	01739
5310-407-9566	00888	5310-638-2880	01455
5310-407-9566	00973	5310-639-6884	00230
5310-407-9566	01005	5310-680-5384	01114
5310-407-9566	01006	5310-685-8308	01400
5310-407-9566	01421	5310-698-4460	00461
5310-407-9566	01422	5310-698-4460	01303
5310-407-9566	01538	5310-700-0667	01269
5310-407-9566	01738	5310-703-2100	00427
5310-422-8265	00551	5310-710-6128	00554
5310-512-2082	01209	5310-711-2297	01086
5310-527-3288	00600	5310-732-0558	00205
5310-527-3288	00679	5310-732-0558	00374
5310-527-3288	00700	5310-732-0558	00542
5310-550-3503	00945	5310-732-0558	01432
5310-582-5965	00433	5310-732-0558	01462
5310-584-5272	00880	5310-732-0559	01027
5310-584-5272	01049	5310-732-0560	01041
5310-584-5272	01560	5310-732-0560	01542
5310-584-7888	01305	5310-734-8749	00535
5310-584-7888	01559	5310-734-8749	00601
5310-584-7889	01050	5310-740-7417	01399
5310-587-5272	00881	5310-754-1686	00220
5310-595-9816	00872	5310-754-2005	01286
5310-595-9867	01132	5310-761-6882	00151
5310-596-2516	01444	5310-761-6882	00447
5310-628-3952	01302	5310-761-6882	00690
5310-637-9541	00045	5310-763-8905	01390
5310-637-9541	00177	5310-768-0319	00375
5310-637-9541	00226	5310-768-0319	00376
5310-637-9541	00384	5310-768-0319	00405
5310-637-9541	00432	5310-768-0319	00556
5310-637-9541	00452	5310-768-0319	00908
5310-637-9541	00453	5310-768-0319	01391
5310-637-9541	00484	5310-768-0319	01707
5310-637-9541	00552	5310-774-7308	00876
5310-637-9541	00560	5310-774-7308	00877
5310-637-9541	00603	5310-774-7308	00879
5310-637-9541	00604	5310-774-7308	00944
5310-637-9541	00642	5310-782-0558	00152
5310-637-9541	00646	5310-791-7640	01245
5310-637-9541	00699	5310-791-7740	00356
5310-637-9541	00729	5310-791-7967	01288
5310-637-9541	00878	5310-791-8092	00717
5310-637-9541	00887	5310-791-8300	01272
5310-637-9541	00943	5310-807-5254	00873
5310-637-9541	01144	5310-813-0407	01371
5310-637-9541	01172	5310-820-6653	01087
5310-637-9541	01211	5310-820-6653	01401
5310-637-9541	01287	5310-823-8803	00039
5310-637-9541	01289	5310-833-3340	01521
5310-637-9541	01369	5310-833-3340	01640
5310-637-9541	01456	5310-835-2036	01127
5310-637-9541	01457	5310-836-2458	00288
5310-637-9541	01458	5310-842-9131	00154
5310-637-9541	01510	5310-842-9169	01271
5310-637-9541	01511	5310-842-9220	00406
5310-637-9541	01605	5310-842-9552	00087

SECTION IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER (Continued)

STOCK NUMBER	INDEX NUMBER	STOCK NUMBER	INDEX NUMBER
5310-842-9822	00701	5315-674-9484	01624
5310-843-0588	01060	5315-775-2523	01445
5310-843-0647	01013	5315-791-9113	00408
5310-846-0343	01643	5315-791-9190	01555
5310-846-0343	01644	5315-791-9243	01623
5310-853-9335	00402	5315-791-9244	01552
5310-853-9335	01417	5315-800-6936	00574
5310-853-9335	01418	5315-816-1794	00412
5310-853-9535	00742	5315-816-1794	01168
5310-853-9535	00743	5315-839-2325	00410
5310-867-1465	01501	5315-839-2325	00411
5310-880-7744	00298	5315-839-2325	00413
5310-880-7744	00404	5315-839-2325	00910
5310-880-7744	00472	5315-839-2325	00911
5310-880-7744	00663	5315-839-2326	00745
5310-880-7744	01244	5315-839-5820	00409
5310-880-7745	00203	5315-839-5822	01203
5310-880-7745	00333	5315-839-5822	01248
5310-880-7746	00204	5315-839-5822	01622
5310-880-7746	00334	5315-839-8362	00747
5310-880-7746	00541	5315-842-3044	00112
5310-880-7746	00616	5315-842-3044	01519
5310-880-7746	01708	5315-844-5836	00746
5310-891-1709	00709	5315-845-4232	00416
5310-894-9407	00233	5315-889-5822	01621
5310-904-0923	00598	5315-893-5934	00912
5310-934-9758	00585	5315-966-4924	01518
5310-957-0789	01073	5330-064-7777	01613
5310-959-4679	00178	5330-064-7777	01712
5310-959-4679	00319	5330-064-7777	01714
5310-959-4679	00475	5330-064-7777	01777
5310-960-9327	01500	5330-080-0001	01379
5310-995-8921	00073	5330-088-6512	01381
5310-995-8921	00074	5330-127-3231	00290
5310-995-8921	00076	5330-171-3619	00539
5315-010-2125	00586	5330-171-7573	00540
5315-011-0409	00521	5330-176-4123	00256
5315-012-1222	00801	5330-176-4123	00257
5315-013-7214	00800	5330-176-4123	00293
5315-013-7214	01074	5330-190-4224	00015
5315-013-7214	01202	5330-190-4224	00199
5315-013-7238	01247	5330-199-5878	00013
5315-013-8082	00415	5330-199-5878	00032
5315-052-0147	01554	5330-199-5878	00197
5315-059-2285	00144	5330-226-1948	01619
5315-072-6703	00802	5330-226-1950	01617
5315-073-2156	01071	5330-226-1951	01618
5315-105-4082	00517	5330-226-1962	01676
5315-217-9420	01407	5330-231-4107	01028
5315-276-4778	00587	5330-231-4107	01434
5315-298-1480	01246	5330-251-8839	01722
5315-298-4077	00520	5330-258-1332	00027
5315-311-2298	01431	5330-285-1332	00380
5315-353-8627	00082	5330-291-2942	00269
5315-358-5055	00414	5330-291-4639	00602
5315-360-8582	00310	5330-291-6658	01133
5315-375-0735	01075	5330-291-9923	00291
5315-382-8675	00155	5330-292-1631	01551
5315-616-5520	00786	5330-298-0654	01208
5315-616-5525	00143	5330-327-4042	00005

SECTION IV. INDEX–FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS–REFERENCE TO INDEX NUMBER (Continued)

STOCK NUMBER	INDEX NUMBER
5330-350-9013	00792
5330-350-9013	00793
5330-350-9013	00796
5330-350-9013	00909
5330-350-9013	01778
5330-351-6356	00016
5330-351-6356	00209
5330-353-8706	00024
5330-353-8706	00206
5330-358-5265	00004
5330-358-5265	00370
5330-358-5683	00292
5330-359-1698	01290
5330-449-6532	00672
5330-526-0055	00026
5330-526-0055	00165
5330-558-0721	00931
5330-587-5568	00844
5330-587-5892	00845
5330-537-7049	01505
5330-599-1056	00195
5330-674-6843	01429
5330-684-3123	00511
5330-714-5265	01467
5330-714-5265	01709
5330-714-5265	01710
5330-714-5265	01711
5330-714-5265	01717
5330-714-5265	01718
5330-714-5265	01721
5330-714-5265	01776
5330-733-2992	01055
5330-737-2312	01138
5330-757-8464	01427
5330-776-0580	00795
5330-791-8261	00798
5330-811-0589	00930
5330-876-9494	01056
5330-890-3398	01612
5330-960-9332	01464
5330-972-8204	00794
5340-010-3896	01076
5340-027-0982	00423
5340-027-1059	01536
5340-027-1633	01376
5340-054-1406	00056
5340-061-8531	01000
5340-072-6734	01113
5340-072-6737	01112
5340-072-9465	01077
5340-092-9423	00169
5340-162-3549	01143
5340-164-2772	00655
5340-217-9234	00643
5340-254-1372	00314
5340-281-6655	01625
5340-282-0060	01129
5340-348-6620	00286
5340-353-2994	01128
5340-358-5269	00383
5340-359-0980	01142
5340-359-4042	01447
5340-359-4359	01450
5340-368-6691	00058
5340-374-9707	00103
5340-375-0966	01293
5340-391-3827	00654
5340-422-7302	00821
5340-439-4147	00826
5340-439-8147	00924
5340-533-1162	00330
5340-598-5496	00057
5340-598-7786	00254
5340-674-9483	01638
5340-714-5255	00923
5340-776-3782	01383
5340-803-7309	00986
5340-803-9981	01053
5340-803-9981	01204
5340-803-9981	01626
5340-803-9981	01785
5340-804-9666	00588
5340-827-0802	01650
5340-842-7655	01354
5340-844-0073	00824
5340-844-0073	00825
5340-844-0073	01786
5340-844-0074	00823
5340-845-8939	00828
5340-889-5209	01486
5340-889-5209	01487
5340-927-4863	01367
5355-765-5688	00740
5355-765-5688	01514
5355-765-5688	01774
5905-710-5363	00720
5910-050-2023	00719
5920-280-4007	00649
5930-073-2135	00650
5930-581-6526	00645
5930-679-9956	00651
5930-857-1066	00675
5940-020-0346	00518
5940-272-2171	00622
5940-272-2171	00629
5940-272-2175	00627
5940-500-6905	00621
5940-530-6905	00628
5940-500-6905	01765
5940-651-7868	00531
5945-665-9895	00692
5970-358-7312	00516
5970-501-2328	00515
5970-633-6537	00514
5970-782-7249	00583
5975-656-7401	00324
5975-951-8272	00615
5975-951-8272	00623
5975-951-8272	01775
5977-337-8112	00568

SECTION IV. INDEX–FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS–REFERENCE TO INDEX NUMBER (Continued)

STOCK NUMBER	INDEX NUMBER
5977-578-6495	00682
5977-628-7457	00513
5977-675-1765	00579
5977-730-7586	00502
5977-776-9967	00594
5977-893-0088	00580
5977-918-5576	00497
6140-164-2966	00710
6140-264-5446	00703
6140-799-7733	00707
6145-845-1861	00625
6145-845-1861	00630
6145-845-1861	01753
6150-284-1369	00507
6240-012-7934	00640
6240-155-7900	00661
6240-809-4977	00658
6240-946-4802	00659
6620-382-8827	00646
6620-605-1177	00473
6620-773-9418	00641
6620-774-4704	00657
6620-776-9962	00634
6625-075-4763	00632
6645-836-1985	00642
6680-073-2131	00676
6680-383-4118	00214
6680-778-6312	00638
6685-776-9964	00639
6685-776-9965	00677
6685-776-9968	00678
6810-249-9354	00713

REFERENCE NO.	MFG. CODE	INDEX NO.
AAX0418	78225	00456
AF108-19	80713	00201
AF108-19	80713	00202
AF108-19	80713	01773
A1084-4	12603	00736
A600C204	14351	00086
A672	11583	00618
A694-3	12204	00734
A722H1214	78500	00761
BP1061-334-1	78422	00653
BRG3044	60038	01191
B2020	60380	01066
B3-116-3	79960	00242
B3226-86	95953	01319
B38-71-21	79960	00255
CHIPL	73370	00958
CR109-60	79960	00244
CR37-1X1	79960	00277
CR37-1X1	79960	00278
CT57-2	79960	00269
CT91-3	79960	00276
C101-68	79960	00249
C108-177-3	79960	00241
C108-177-3	79960	00253
C109-60	79960	00243
C110-7	79960	00245
C111-9	79960	00286
C112-6	79960	00254
C116-2X2	79960	00280
C120-59	79960	00267
C131-4X2	79960	00279
C135-29	79960	00260
C135-29	79960	00268
C138-24	79960	00250
C141-4-6	79960	00258
C142-65	79960	00261
C142-65	79960	00270
C148-9	79960	00285
C21-185	79960	00239
C3	73370	00194
C400B226	14351	00089
C400K215	14351	00021
C400K215	14351	00469
C400K217	14351	00025
C400K217	14351	00083
C400L231	14351	00016
C400L231	14351	00209
C46-54	79960	00275
C52-7-25	79960	00273
C55-22-12	79960	00272
C66-100-60	79960	00271
C77-18-21	79960	00274
C81-1-35	79960	00287
C85-115	79960	00248
D600B207	14351	00130
D600B305	14351	00200
D600B340	14351	00182
D600B406	14351	00183
D600L2120	14351	00211
D600L3000	14351	00214
D600S209	14351	00383
ER2-200	79960	00238
FC11143	63477	01163
FC12103	63477	01123
FC13090	63477	01166
FC14422	63477	01164
FC1499	63477	01167
FC1511	63477	01138
FC16148	63477	01139
FC21476	63477	01140
FC2400	63477	01137
FC24199	63477	01136
FC2927	63477	01145
FC2930	63477	01161
FC2931	63477	01128
FC3024	63477	01143
FC4158	63477	00904
FC4515	63477	01130
FC5381	63477	01165
FC5394	63477	01160
FC6019	63477	01133
FC603	63477	01125

SECTION IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER (Continued)

REFERENCE NO.	MFG. CODE	INDEX NO.
FC939	63477	01129
FD2108	63477	01162
FD22902	63477	01135
FE1476	63477	01121
FHIPLOE	73370	00955
F124A201	14351	00020
F124A201	14351	00036
F124A201	14351	00135
F124G200	14351	00118
F124H200	14351	00138
F124H201	14351	00180
F162A229	14351	00103
F162A230	14351	00102
F162A230-005	14351	00100
F162A341	14351	00054
F162A3610	14351	00129
F162B505	14351	00093
F162E506	14351	00229
F162I201	14351	00171
F162I202	14351	00170
F162I203	14351	00150
F162I204	14351	00126
F162K2930	14351	00474
F162K36519	14351	00480
F162U109	14351	00033
F209H201	14351	00137
F209H2011	14351	00136
F209H203	14351	00139
F209K313	14351	00084
F209M308	14351	00544
F218D3022	14351	00109
F218D3032	14351	00114
F218I2030	14351	00149
F218K202	14351	00464
F226G227	14351	00147
F226K358	14351	00479
F3CL	73370	00193
F400A288-010	14351	00166
F400A336	14351	00006
F400A336	14351	00035
F400A366	14351	00053
F400A5285S	14351	00052
F400B225	14351	00014
F400B227	14351	00010
F400B227	14351	00133
F400B245	14351	00127
F400B251	14351	00005
F400B255	14351	00031
F400B255	14351	00198
F400B338	14351	00009
F400B338	14358	00132
F400B366	14351	00051
F400B367	14351	00049
F400B368	14351	00050
F400B427	14351	00007
F400B427	14351	00131
F400B4330	14351	00158
F400B442	14351	00012
F400B442	14351	00030
F400B442	14351	00196
F400B4450	14351	00207
F400B5321	14351	00128
F400C377	14351	00092
F400C5070	14351	00091
F400E303	14351	00011
F400E303	14351	00228
F400G503	14351	00081
F400H207	14351	00159
F400I228	14351	00167
F400I229	14351	00141
F400I230	14351	00142
F400I322	14351	00125
F400K340	14351	00023
F400K340	14351	00478
F400K399	14351	00022
F400K425	14351	00468
F400S3330	14351	00373
F400S347	14351	00367
F400S4140	14351	00381
F400S480	14351	00371
F400T181	14351	00145
F400T230	14351	00079
F400V300	14351	00018
F400V300	14351	01428
F400V408	14351	01425
F4162U127	14351	00003
F600A3990	14351	00116
F600B241	14351	00024
F600B241	14351	00206
F600C205	14351	00157
F600H317	14351	00140
F600H318	14351	01430
F600L4131	14351	00108
GC1172I	05776	00989
GC1173I	05776	00981
GC1174	05776	00978
GC1430I1	05776	00990
GC1448	05776	00987
GC1549	05776	00991
GC219	05776	00986
GC3562	05776	00983
GC4506I	05776	00979
GC4508I	05776	00980
G157K214	14351	00473
G157S202	14351	00027
G157S202	14351	00380
G157S203	14351	00004
G157S203	14351	00370
HM88511	60038	00767
HM88547	60038	00764
HM89411	60038	00768
HM89449	60038	00765
H260S201	14351	00368
KD860T12	75175	00657
K11894	79960	00266
MI961	74400	00642
MS13957-1	96906	00101
MS13957-2	96906	00104
MS13957-3	96906	00105
MS13963-1	96906	00110

SECTION IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER (Continued)

REFERENCE NO.	MFG. CODE	INDEX NO.
MS13994-1	96906	00099
MS15001-1	96906	01176
MT208	43991	01052
M1670	74400	00675
NSS	12603	01299
N62K211	14351	00028
PA4949	05776	00984
PA7510	05776	00982
PA8542	05776	00976
PL21-101	13445	00641
P2706	18265	00324
P7409	18265	00323
P8242	18265	00322
RC3612	56118	00689
RSMS13957-1	96906	00106
RSMS13957-2	96906	00107
RSMS13957-3	96906	00108
SFE14	71400	00649
T113	60038	01067
T21S8	79960	00246
T315S5-4	79960	00282
T315S5-4	79960	00284
T41-5	24617	00288
T5557	76700	00445
T56-12	79960	00290
T56-23	79960	00256
T56-23	79960	00257
T56-23	79960	00264
T56-23	79960	00293
T56-24	79960	00263
T56-24	79960	00292
T56-4	79960	00262
T56-4	79960	00291
T8S8-8	79960	00247
WBE131EAMEND1TYPE3EE	81348	00703
WB108	14351	00013
WB108	14351	00032
WB108	14351	00197
XD16	11583	00617
X13099A	14351	00117
X1555	14351	00026
X1555	14351	00165
X17033	14351	00155
X1824	14351	01241
X19004C	14351	00070
X1955	14351	00065
X2216	14351	01076
X334	14351	00019
X334	14351	00034
X334	14351	00134
X35187	16764	00644
X365	14351	00015
X365	14351	00199
X4256	14351	00068
X4730	14351	00071
Y112S208	14351	00382
Y400G231	14351	00146
Y400G232	14351	00148
Y400I203	14351	00179
Y400I215	14351	00168
Y400L266	14351	00218
Z120S2220	14351	00372
0-11894	79960	00237
0S801	81348	00713
029031	77640	00685
029037	77640	00687
1-2-15	12603	00970
1-2-34	12603	00967
1-2-40	12603	00964
1C16112	12603	01403
1C624	12603	00524
10EL230	14351	00217
10G616	12603	01634
10J06	12603	00898
10J06	12603	01348
10J06	12603	01761
10J12	12603	00899
10J12	12603	00900
10J12	12603	01763
10J20	12603	01481
10J20	12603	01482
10J20	12603	01762
100194	12603	01080
100202	12603	01077
100366	73370	00993
1011	73370	00961
101362	12603	01183
101364	12603	01199
103404	12603	01293
103405	12603	01296
103406	12603	01295
103861	12603	01208
103884	12603	01070
103890	12603	01075
103951	12603	01088
104224	12603	00812
104595	12603	01186
104595	12603	01187
105CAWG4	77449	00662
106330	12603	01239
106880	73370	00956
106885	73370	00959
107135	12603	01292
107137	12603	01081
107141	12603	01216
107218	12603	01057
107219	12603	01012
107224	12603	01185
107237	12603	01196
107311	12603	01105
107312	12603	01102
107313	12603	01117
107315	12603	01116
107317	12603	01110
107323	12603	01113
107324	12603	01103
107325	12603	01106
107327	12603	01108
107328	12603	01112
107330	12603	01104

REFERENCE NO.	MFG. CODE	INDEX NO.	REFERENCE NO.	MFG. CODE	INDEX NO.
107334	12603	01099	1304266	12603	00704
107403	12603	01118	134038	12603	01373
107783	12603	01111	134039	12603	01377
107806	12603	01109	134041	12603	01375
108130	12603	01101	134042	12603	01374
108794	12603	01063	134052	12603	01384
108796	12603	01065	134054	12603	01363
108797	12603	01083	134055	12603	01362
108798	12603	01082	134056	12603	01357
108829	12603	01193	134057	12603	01364
109157	12603	01192	134059	12603	01365
109160	12603	01213	134060	12603	01368
109975	12603	01205	134070	12603	01346
109975	62983	01447	134078	12603	01354
11E145	12603	01619	134119	12603	01367
11E21	12603	01617	134269	12603	01353
11E46	12603	01618	134289	12603	01382
11K7	12603	01663	134290	12603	01381
1102335	16764	00495	134368	12603	01509
110381	12603	01059	134370	12603	01502
1107244	16764	00565	134375	12603	01504
11111	63477	01142	134430	12603	01366
1112604	16764	00608	134438	12603	01505
1114302	16764	00562	134455	12603	01358
1115043	16764	00607	134544	12603	01503
111563	12603	01294	134588	12603	01508
1116858	16764	00692	136801	12603	01378
1118932	16764	00557	136802	12603	01372
114139	62983	01450	136803	12603	01507
116655	62983	01441	137782	12603	01347
1176	24455	00661	137806	12603	01351
12K6	12603	01335	14D10J	12603	00673
12K7	12603	01660	142062	12603	01675
120037	62983	01449	147493	24617	00755
120214	24617	00534	15J2020	12603	01313
120214	24617	00599	15K6	12603	01334
120361	24617	00585	15K6	12603	01654
121743	16764	00519	15K6	12603	01655
121744	24617	00289	15K6	12603	01766
121801	24617	00600	15LG202	14351	00080
124545	16764	00517	15SL211	14351	00219
13XX1720	14351	00156	1503-8	00624	01344
13XX1918	14351	00064	1503-8	01276	01682
13XX1952	14351	00066	1503-8	01276	01689
13XX19828	14351	00069	1509-8	01276	01679
13XX304A	14351	00095	1509326	70040	00634
13XX4036	14351	00063	15123	60038	01189
13XX4200	14351	00067	1513282	70040	00639
13XX4228	14351	00548	1513314	70040	00678
13000635	12603	01497	1518587	70040	00638
1300286	12603	01728	1521287	70040	00310
1300504	12603	01668	1521288	70040	00318
1300641	12603	01517	1521361	70040	00300
1301361	12603	00731	1521424	70040	00301
1302141	12603	00665	1521475	70040	00311
1302145	12603	00664	1521479	70040	00316
1302370	12603	01580	1521612	70040	00313
1302391	12603	01615	1522058	70040	00304
1302462	12603	01648	15245	08162	01198
1302605	12603	01094	1525-4	00624	00347

SECTION IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER (Continued)

REFERENCE NO.	MFG. CODE	INDEX NO.
1525-4	00624	00351
1525-4	00624	00355
1525-8	00624	00966
1525-8	00624	00969
1525-8	00624	00972
1525-8	00624	01341
1537405	70040	00312
1537710	70040	00388
1538227	70040	00315
16DB29	59875	01234
16DP6	59875	01232
16DP6	59875	01237
1611621	12603	01291
1612	73370	00957
1613758	12603	01726
1614023	12603	01230
16150	60038	01021
1615189	12603	00636
1615317	12603	01254
1615327	12603	01174
1615443	12603	01567
1615474	12603	00420
1615529	12603	01238
1615703	12603	00741
1615764	12603	01235
1619241	12603	01231
1619242	12603	01233
16284	60038	01020
165749	12603	00660
16633	70523	01091
17EL204	14351	00017
17EL204	14351	00210
17H11	12603	01653
17H12	12603	00950
17H12	12603	01333
17K6	12603	01337
17K6	12603	01664
17K6	12603	01666
175049	62983	01330
179290	52788	01276
179291	52788	01274
18C584	12603	01361
18K5	12603	01661
18K5	12603	01662
18K5	12603	01769
18K6	12603	01336
1810141	12603	01669
1810143	12603	01673
1810208	12603	01608
1810209	12603	01543
1839345	16764	00582
1880641	16764	00506
1885090	16764	00515
1886685	16764	00501
1903862	16764	00507
1906945	16764	00568
1907136	16764	00719
1911119	16764	00611
1912073	16764	00516
1913625	16764	00623

REFERENCE NO.	MFG. CODE	INDEX NO.
1913635	16764	00615
1913960	16764	00525
1913960	16764	00590
1914123	16764	00535
1914123	16764	00601
1914194	16764	00540
1914198	16764	00500
1914213	16764	00532
1914579	16764	00538
1914580	16764	00523
1914583	16764	00533
1914843	16764	00587
1916324	16764	00529
1923056	16764	00530
1926618	16764	00579
1926648	16764	00592
1928021	16764	00596
1928022	16764	00588
1928023	16764	00598
1933765	16764	00578
1934457	16764	00522
1934458	16764	00511
1939970	16764	00567
1940467	16764	00583
1940469	16764	00593
1940474	16764	00586
1940475	16764	00594
1940477	16764	00580
1940478	16764	00584
1940974	16764	00576
1941045	16764	00597
1941097	16764	00573
1941109	16764	00577
1941110	16764	00571
1941113	16764	00575
1941114	16764	00574
1941115	16764	00572
1943529	16764	00569
1944373	16764	00497
1944437	16764	00508
1946306	16764	00570
1946405	16764	00502
1949653	16764	00591
1952331	16764	00610
1952331	16764	00614
1958220	16764	00581
1958222	16764	00566
1958224	16764	00595
1958536	16764	00509
1958538	16764	00496
1998757	52788	00682
2C514	12603	01535
2C518	12603	00493
2C524	12603	00394
2D10	12603	01606
2J5204	12603	00738
20CL2010	14351	00187
20CL2020	14351	00189
200024	12603	01024
200027	12603	01029

REFERENCE NO.	MFG. CODE	INDEX NO.
200028	12603	01030
200346	16764	00518
202702-10-10S	01276	01656
203647	12603	00935
204NNF4G75	43991	01440
205890	12603	01034
205891	12603	01035
2062-6-6	01276	01657
2062-6-6	01276	01658
2062-6-6	01276	01659
2062-6-6	01276	01770
206770	12603	01037
207S	76062	00757
207S	76062	00758
207S	76062	01764
207WG	21335	00756
208761	12603	00822
208761	12603	00861
208761	12603	00862
208762	12603	00788
208784	12603	00811
208786	12603	00902
208791	12603	00779
209781	12603	00820
209902	62983	01446
209915	12603	00044
209959	12603	00939
209961	12603	00942
209968	12603	00913
21C1056	12603	00038
21K7	12603	01727
21RM215	14351	00169
211-6	98441	01685
211-6	98441	01692
211-6	98441	01695
211-6	98441	01698
211-6	98441	01701
213987	62983	01315
215880	12603	01039
215881	12603	01040
217308	62983	01314
2200558	12603	00870
220107	12603	01002
220114	12603	00998
220136	12603	00866
220136	12603	00867
220136	12603	01788
220137	12603	00807
220137	12603	00808
220137	12603	01781
220556	12603	00841
220557	12603	00774
220561	12603	00775
220563	12603	00809
220564	12603	01018
220566	12603	00853
220567	12603	00854
220568	12603	00855
220580	12603	00851
220584	12603	00776
220586	12603	00830
220592	12603	00995
220594	12603	01000
220595	12603	01003
220596	12603	00999
220600	12603	00781
220605	12603	01001
220612	12603	00850
220618	12603	00816
220618	12603	00817
220618	12603	01784
220620	12603	00884
220620	12603	00885
220620	12603	01790
220623	12603	00905
220652	12603	00863
220655	12603	00782
220657	12603	00860
220697	12603	00901
220708	12603	00882
220727	05776	00975
220760	12603	00766
220766	12603	00997
220769	12603	00852
220828	12603	00894
220854	12603	00780
220891	12603	00933
220940	12603	00996
221017	12603	00856
221018	12603	00857
221019	12603	00858
221023	12603	00798
221192	12603	00806
221938	12603	00805
222387	12603	00771
222388	12603	00772
222390	12603	00803
222390	12603	00804
222390	12603	01780
222391	12603	00847
222391	12603	00848
222391	12603	01767
222399	12603	00773
222418	12603	01032
222419	12603	00883
222422	12603	00754
222423	12603	00762
222424	12603	00777
222424	12603	00778
222424	12603	01772
222435	12603	01022
222436	12603	01038
222458	12603	00829
222459	12603	00787
222461	12603	00783
222469	12603	01026
222480	12603	00895
222482	12603	00896
222483	12603	00974
222490	12603	00914

SECTION IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER (Continued)

REFERENCE NO.	MFG. CODE	INDEX NO.
222492	12603	00784
222493	12603	00763
222494	12603	00815
222501	12603	00846
222503	12603	00849
222510	12603	00799
222514	12603	00859
222515	12603	00789
222583	12603	00937
222585	12603	00864
222586	12603	00869
222587	12603	00941
222605	12603	00769
222605	12603	00770
222605	12603	01768
222640	62983	01463
222640	62983	01485
222640	62983	01782
222675	12603	00918
222698	12603	00917
222981	12603	00940
223388	62983	01492
223388	62983	01493
223388	62983	01787
223489	62983	01474
223493	62983	01475
223612	12603	00868
223812	12603	00932
223813	12603	00938
223815	12603	00936
223816	12603	00916
223818	12603	00925
223821	12603	00907
223823	12603	00903
223891	12603	00827
223944	12603	00923
223946	12603	00824
223946	12603	00825
223946	12603	01786
223968	12603	00828
224047	12603	00821
224052	12603	00819
224095	12603	00826
224095	12603	00924
224109	12603	00823
224338	12603	00726
224339	12603	00727
224375	12603	00723
224494	12603	00842
224505	12603	00893
224801	12603	00865
224850	12603	01019
224869	12603	01023
225247	62983	01317
225577	16764	00526
226161	62983	01465
229235	62983	01448
229999	12603	01491
232796	62983	01320
232799	62983	01498
237736	62983	01471
23921	61038	01427
239434	62983	01321
239457	62983	01322
240431	62983	01312
245507	62983	01318
246632	62983	01495
246632	62983	01496
246632	62983	01789
25K20010	12603	01380
25K20014	12603	01379
25K20104	62983	01470
25K30014	62983	01466
25K30016	12603	00792
25K30016	12603	00793
25K30016	12603	00796
25K30016	12603	00909
25K30016	12603	01778
25K30020	12603	00795
25K30022	12603	01383
25K40100	12603	00797
25K40116	12603	00358
25K40308	12603	01028
25K40308	12603	01434
25K40324	12603	01545
25K40504	12603	01612
259871	62983	01494
2609	77915	01284
262156	52788	01275
266W118MI	80201	01055
266034	52788	01262
266052	52788	01266
266674	52788	01265
266678	52788	01257
267102	52788	01261
267387	52788	01264
267689	52788	01258
267690	52788	01263
26882	60038	01188
26822	60038	01197
268298	52788	00686
270289	52788	01290
274738	16764	00589
27571-5306	73680	01056
2793	60038	01190
281028	12603	00753
282027	62983	01488
282971	62983	01468
283856	62983	01469
284W2T8	80201	00843
284154	62983	01486
284154	62983	01487
284155	62983	01489
284155	62983	01490
286W124T8	80201	00845
286669	62983	01472
286669	62983	01473
2962447	77060	00666
2962646	77060	00656
3CK35	53781	00818

SECTION IV. INDEX–FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS–REFERENCE TO INDEX NUMBER (Continued)

REFERENCE NO.	MFG. CODE	INDEX NO.
300483	19728	00624
305049	12603	00458
31H27	12603	00706
316448	12603	00417
317450	12603	01416
317453	12603	01223
317760	12603	00040
317795	12603	00459
3202	43334	01439
326292	12603	00041
326332	12603	00037
328614	12603	01513
328722	12603	01387
329347	12603	01414
329676	12603	01068
329789	12603	01092
329808	12603	00332
329809	12603	00326
329810	12603	00331
329812	12603	00335
330804	12603	01479
330821	12603	01499
330824	12603	01480
335351	12603	00732
335352	12603	00737
335672	12603	00749
335747	12603	01515
335748	12603	01516
336493	12603	01732
338984	12603	01639
342270	12603	01569
342626	12603	01562
342951	12603	01607
342957	12603	01627
342957	12603	01628
342982	12603	01637
343842	12603	01568
37172	81321	00195
3720	60038	01011
3781	60038	01010
390503	12603	01616
390618	12603	01731
390620	12603	01730
390651	12603	01647
391599	12603	01097
393266	12603	01600
393622	12603	01582
394499	12603	01794
394503	12603	01598
394518	12603	01597
394582	12603	01588
394585	12603	01589
394586	12603	01610
394587	12603	01611
394588	12603	01609
394589	12603	01581
394589	12603	01793
397302	12603	01593
397317	12603	01592
397489	12603	01583
397490	12603	01584
397491	12603	01585
397500	12603	01614
397501	12603	01587
397545	12603	01577
397560	12603	01576
397674	12603	01579
397689	12603	01578
397801	12603	01591
397816	12603	01590
398499	12603	01733
398826	12603	01734
4F07115	12603	01169
401081	77640	00696
41G1210	79960	00283
411-6	00624	01684
43209	43334	00759
4411-6	00624	01691
4411-6	00624	01694
4411-6	00624	01700
4411-6	00624	01758
4411-8	00624	01343
4411-8	00624	01681
4411-8	00624	01687
4411-8	00624	01756
4412	24446	00658
4414-8	00624	01688
4422	24455	00659
444613	24617	00251
446679	24617	00252
453HMS2	73842	00486
453289	16764	00536
453294	16764	00537
453355	16764	00505
454458	16764	00527
46G807	79960	00281
46G810	79960	00240
4721-10-8	01276	01678
4738-2-4B	00624	00345
4738-2-4B	00624	00349
4738-2-4B	00624	00353
4738-2-4B	00624	01759
4797-5-4B	01276	00346
4797-5-4B	00624	00350
4797-5-4B	00624	00354
4797-5-4B	00624	01760
4797-8B	01276	00965
4797-8B	01276	00968
4797-8B	01276	00971
4797-8B	01276	01340
4797-8B	01276	01757
480452R	11314	00844
49X5	79470	00341
5-8SC	95760	01650
5N6FJS14-1-2	70434	01696
5N6FJS14-1-2	70434	01699
5N6FJS23	70434	01690
5N6FJS24	70434	01693
5050	13445	00645
506519	70040	00632

SECTION IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER (Continued)

REFERENCE NO.	MFG. CODE	INDEX NO.	REFERENCE NO.	MFG. CODE	INDEX NO.
507695	12603	01533	658336	12603	00739
508797	80201	01033	659977	12603	00951
5100-150	79136	01053	660148	12603	01397
5100-150	79136	01204	660383	12603	01553
5100-150	79136	01785	660407	12603	01342
5100-156	79136	01625	661930	12603	01524
5100-156	79136	01626	661931	12603	01552
510659	12603	01604	662645	12603	00343
5280CK	79150	00443	662647	12603	01484
5590044	70040	00306	662655	12603	01635
5590046	70040	00305	662655	12603	01636
5590152	70040	00387	663263	12603	00963
5590699	70040	00299	663983	12603	01048
5591830	70040	00308	664131	12603	01115
5592956	70040	00302	664131	12603	01178
5593866	70040	00317	664403	12603	00667
5622320	70040	00303	664421	12603	01736
5662829	52788	01256	664735	12603	00471
5670205	52788	00683	664832	12603	01704
5670212	52788	01267	664833	12603	00691
5670215	52788	01281	664852	12603	01215
5670219	52788	00697	664901	12603	01134
5670281	52788	01259	664923	12603	00442
57	24455	00640	664924	12603	00444
6F8FJS34	70434	01339	664948	12603	00398
6F8FJS55	70434	01683	664970	12603	00188
6N8MJS8FJS	70434	01686	664975	12603	00419
600580	11314	00794	664976	12603	00425
602428	12603	00451	664978	12603	00393
603985	12603	01478	664980	12603	00401
605142	52788	01282	664982	12603	00399
6063E21	18265	00321	664983	12603	00407
613750	12603	00906	664987	12603	00733
613750	12603	01126	664991	12603	00748
613750	12603	01771	665106	12603	01217
616650	12603	01575	665106	12603	01220
616659	12603	01572	665119	12603	01045
616776	12603	00426	665120	12603	01044
616781	12603	00361	665135	12603	01406
616827	12603	00871	665138	12603	00707
617961	12603	01225	665199	12603	01523
619028	12603	01408	665208	12603	01426
620313	12603	00651	665209	12603	01429
625568	12603	01214	665687	12603	00735
625568	12603	01219	665755	12603	01564
626787	12603	01419	666354	12603	01629
627982	12603	00672	666399	12603	01570
635448	12603	01224	666476	12603	01413
635451	12603	01253	666477	12603	01412
637739	12603	01179	666921	12603	00886
648521	12603	01131	667108	12603	01015
648566	12603	00635	667411	12603	00676
650736	12603	00487	667430	12603	01398
653785	12603	00740	667432	12603	00710
653785	12603	01514	667509	12603	00705
653785	12603	01774	668772	12603	00711
654385	12603	01175	668840	12603	01706
654389	12603	01064	668988	12603	00362
654841	12603	01554	671945	12603	01171
658160	12603	00546	674850	12603	00339

SECTION IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER (Continued)

REFERENCE NO.	MFG. CODE	INDEX NO.	REFERENCE NO.	MFG. CODE	INDEX NO.
674906	12603	00397	749112	12603	00365
675632	00624	00348	749115	12603	01180
675781	12603	01420	752044	12603	01602
675804	12603	00669	753757	12603	00438
693-539	70355	01107	755854	01276	00344
7J1005	12603	00785	755855	12603	01376
7J5302	12603	01539	756446	12603	01603
7000-7-8	45681	00930	756447	12603	01624
704518	12603	01031	756991	12603	01638
71X7013	73680	00931	757153	12603	01096
710706	12603	00441	757757	12603	01550
711613	12603	00449	757758	12603	01531
712716	12603	00889	757760	12603	01527
713380	12603	01620	757761	12603	01551
713405	12603	00712	757762	12603	01536
713623	12603	00915	757763	12603	01532
717787	12603	01150	757764	12603	01547
717788	12603	01156	757766	12603	01528
717993	12603	00620	757892	12603	00728
717996	12603	00626	759424	12603	01529
723192	12603	01177	762166	12603	01565
725784	12603	00424	762272	12603	01671
727218	12603	01438	762682	12603	01599
729213	12603	00352	763532	12603	01093
73F2	12603	00072	763818	12603	01667
73F2	12603	00466	766826	12603	01573
730335	12603	00810	768387	12603	00559
730505	12603	01537	771886	12603	01095
730618	12603	00342	772964	12603	00724
730622	12603	00440	776150	12603	01729
730981	12603	01595	776798	12603	01415
731844	12603	01396	776925	12603	01676
732562	12603	01556	784071	12603	00674
732736	12603	01520	785995	12603	00492
733011	12603	00360	787102	12603	00418
733037	12603	00547	788951	12603	01534
733101	12603	01240	789401	12603	01566
733138	12603	01389	790224	12603	01404
733229	12603	01147	790654	12603	01525
733255	12603	01153	790844	12603	00934
733290	12603	01672	793560	12603	00340
733635	12603	01703	797545	12603	01311
733636	12603	01702	797550	12603	00637
733637	12603	01735	8C10FJS27	70434	01677
733687	12603	00897	8D08	12603	00790
734231	12603	01540	8PFJS	99879	01338
734635	12603	01563	8PK214	14351	00124
734680	12603	00720	800855	12603	01025
737318	12603	00437	801140	12603	01016
737989	12603	01388	802	79550	00622
741556	12603	01184	802	79550	00629
742895	12603	00423	8055HR173	72902	01506
743156	12603	00670	809062	16764	00520
743343	12603	01546	809593	16764	00521
743810	12603	01544	809961	16764	00539
743816	12603	01548	813265	16764	00602
745991	12603	00714	819105	16764	00510
745993	12603	01541	820445	16764	00612
746081	12603	01212	824	79550	00627
748536	12603	00470	824735	16764	00609

SECTION IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER (Continued)

REFERENCE NO.	MFG. CODE	INDEX NO.
8356	79470	00400
835683	70040	00008
835683	70040	00297
851297	70040	00307
854336	70040	00386
54347	70040	00389
54389	70040	00391
54475	70040	00390
55906	70040	00314
356108	70040	00309
359373	12603	00528
3670205	52788	01255
871034	12603	00684
871035	12603	01260
871038	12603	01283
871153	05776	00988
871538	12603	00514
871970	73370	00960
872358	12603	00503
873966	12603	00688
873970	12603	01280
874195	33525	01742
878703	12603	00531
878705	12603	00504
878710	12603	00512
878711	12603	00513
880858	12603	00677
881285	12603	01549
881558	12603	01058
885894	12603	00648
904751	16764	00498
91F5	12603	01713
91F5	12603	01715
91F5	12603	01716
91F5	12603	01719
91F5	12603	01720
91F5	12603	01779
91F6	12603	01709
91F6	12603	01710
91F6	12603	01711
91F6	12603	01717
91F6	12603	01718
91F6	12603	01721
91F6	12603	01776
91F7	12603	01613
91F7	12603	01712
91F7	12603	01714
91F7	12603	01777
91F8	12603	01722
9162	13445	00650
922519-1	62983	01437
922519-2	62983	01435
922519-3	62983	01436
922637	62983	01307
922637-1	62983	01310
922637-2	62983	01308
922637-3	62983	01309
922709	62983	01324
922709-1	62983	01325
922709-2	62983	01326
922709-3	62983	01327
922709-4	62983	01328
922709-5	62983	01329
922709-6	62983	01331
922906	62983	01464
925537	62983	01433
9410281	24617	01665
954378	16764	00499
954618	12603	01623

By Order of the Secretary of the Army:

W. C. WESTMORELAND,
General, United States Army,
Chief of Staff.

Official:
KENNETH G. WICKHAM,
Major General, United States Army,
The Adjutant General.

Distribution:

To be distributed in accordance with DA Form 12-25, Section I (qty rqr block No. 195) Direct and General Support maintenance requirements for Truck, Forklift, Gasoline.

* U. S. GOVERNMENT PRINTING OFFICE: 1989 -242-451/ 5108 07-16-1989

best copy available